



## HONDA PIONEER 700-2

### Slotted Lexan Back Panel Kit

**Step 1:** Remove your 3SI UTV Polycarbonate Back Panel kit from the shipping box. **DO NOT REMOVE PROTECTIVE PLASTIC PAPER FROM THE BACK PANEL AT THIS TIME. THIS SHOULD BE YOUR LAST INSTALLATION STEP.**

- Contents:
- 1-Pc Polycarbonate Back Panel
  - 4 – 10” QUICK ATTACH STRAPS (Top & Bottom)
  - 4 – 12” QUICK ATTACH STRAPS (Sides)
  - Canvas Lower Back Panel
  - Adhesive Hook Kit


**Step 2:** Raise the bed. Install the Canvas Panel. The chart below details the length and placement of the Velcro strips used for install.

REFERENCE	QUANTITY	PLACEMENT
A	1-12	ON THE LEXAN PANEL
B	2-6”	ON THE OUTSIDE OF THE REAR HEAD REST BARS
C	4-6”	WRAP THESE STRIPS AROUND THE ROLL BAR FOR THE DOUBLE SIDED STRAPS
D	2-4”	ON THE ROLL BAR FACING THE FRONT OF THE UTV NEAR THE DOOR
E	2-2”	PLACE A SMALL SQUARE ON THE OUTSIDE OF THE REAR HEAD REST





STEP 3: Install polycarb back panel. Insert strap through the outside of the panel, around the roll bar and pull through the plastic clip. Then pull the strap tight and attach it to itself. Do this for all straps.

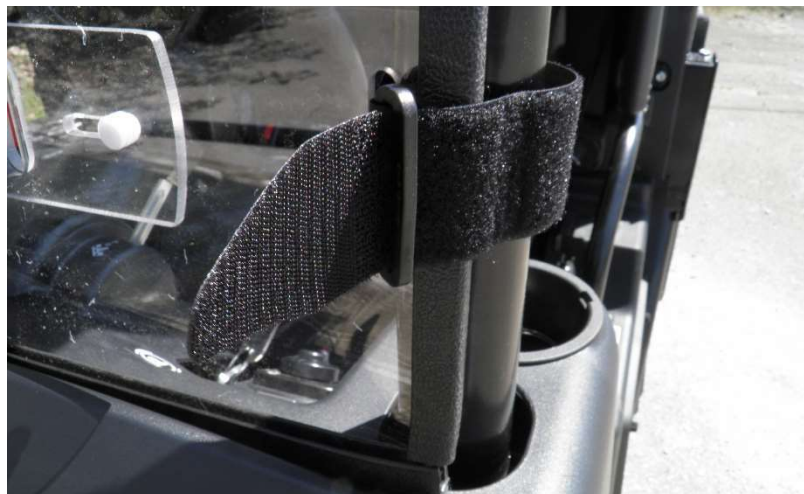



Periodic cleaning using correct procedures can help to prolong service life. For care and cleaning, it is recommended that the following instructions be adhered to:

## Lexan Cleaning Recommendations

- Gently wash Lexan with a solution of mild soap and lukewarm water, using a soft, grid-free cloth or sponge to loosen any dirt or grime.
- Fresh paint splashes, grease and smeared glazing compounds can be removed easily before drying by rubbing lightly with a soft cloth using petroleum ether (BP65), hexane or heptanes. Afterwards, wash the sheet using mild soap and lukewarm water.
- Scratches and minor abrasions can be minimized by using a mild automobile polish. We suggest that a test be made on a small area of the Lexan sheet with the polish selected and that the polish manufacturer's instructions be followed, prior to using the polish on the entire sheet.
- Finally, thoroughly rinse with clean water to remove any cleaner residue and dry the surface with a soft cloth to prevent water spotting.

## Important Instructions

- Never use abrasive or highly alkaline cleaner on Lexan polycarbonate materials.
- Never use aromatic or halogenated solvents like toluene, benzene, gasoline, acetone or carbon tetrachloride on Lexan polycarbonate materials.
- Use of incompatible cleaning materials with Lexan sheet can cause structural and/or surface damage.
- Contact with harsh solvents such as methyl ethyl ketone (MEK) or hydrochloric acid can result in surface degradation and possible crazing of Lexan sheet.
- Never scrub with brushes, steel wool or other abrasive materials.
- Never use squeegees, razorblades or other sharp instruments to remove deposits or spots.
- Do not clean Lexan polycarbonate in direct sunlight or at high temperatures as this can lead to staining.
- For all mentioned chemicals consult the manufacturer's material safety datasheet (MSDS) for proper safety precautions.