



Installation Instructions

Thank you for purchasing a UTV enclosure manufactured in the USA with pride by 3SI UTV. Your enclosure is made of heavy duty fabric that is water repellent and resistant to mildew, ultra-violet rays and abrasion. With proper installation and care you can expect many years of service from your 3SI UTV enclosure.

SOME IMPORTANT NOTES BEFORE GETTING STARTED....

- The enclosure attaches to your UTV's cab frame with Velcro. The technical term for Velcro is hook and loop. Loop is the soft side and hook, the rough side. Loop has been sewn into the enclosure at various points. Adhesive hook has been supplied to attach to your cab frame, corresponding to the sewn-in loop. If you struggle with placement of the adhesive hook, with the enclosure held to the cab frame, note the locations of the sewn-in loop. The adhesive hook is attached to the cab frame at those locations.
- The adhesive hook should be applied at a temperature of 60 degrees or above. **For maximum adhesion, when the adhesive hook is in place, allow the adhesive to cure for 24 hours before attaching the loop to the hook.**
- Clean the surfaces the adhesive hook will be attached to before beginning installation. A light cleaning with mild soap and water is best. A little Windex works great. Do NOT wax or clean with a compound that leaves the frame slick. The adhesive hook will not stick to a slick surface. Again, a light cleaning is best.
- Your enclosure is not a "one size fits all" product. The enclosure was designed and manufactured specifically for your model UTV. As a result, the enclosure should fit square and snug to the cab frame.
- Periodic cleaning of your enclosure with mild soap and water is recommended to minimize accumulations of dirt.
- Clean the vinyl windows with mild soap, water, and a soft cloth to avoid scratches. DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS OR CHEMICALS TO CLEAN VINYL WINDOWS.
- Clean your enclosure and allow it to dry before removing for storage. **Never fold your enclosure to store.** Roll the enclosure to avoid creasing the vinyl windows. Creases in the vinyl windows cannot be removed. **CREASING THE VINYL WINDOWS VOIDS ALL WARRANTIES AND GUARANTEES.**
- The only enclosures manufactured by 3SI UTV that can be hauled when installed are Lexan windshields, full cab enclosures, and door/rear window combos with top and windshield installed. However, the enclosures should be tied down before hauling. Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. REMOVE ALL OTHER ENCLOSURES BEFORE HAULING.

PLEASE READ AND FOLLOW THE DETAILED INSTRUCTIONS THAT ARE ATTACHED.



Honda Big Red Rear Window Enclosure Installation

You have just purchased the best Enclosure for your Utility Terrain Vehicle available on the market today. Your Enclosure is made of Heavy-Duty Fabric that is Water Repellent and resistant to Mildew, Ultra-Violet Sun Rays and Abrasion. With proper installation and care you can expect many years of long-lasting fit, color and service life from your **3SI UTV Rear Window Enclosure**.



Step 1: Remove your 3SI UTV Rear Window Enclosure and Velcro kit from the shipping box.

Contents: 1 - Honda Big Red Rear Window Enclosure
 1 - Velcro Kit

Note: Before applying adhesive Velcro Strips to your vehicle, surfaces should be free of dust, dirt and oil.

Note: It will be necessary to remove your hardtop prior to installing your Rear Window Enclosure

Adhesive Hook Kit Contents/Placement		
Back Panel		
Reference	Qty-Size	Placement
A	2 – 8”	Rear roll bar upright
No Ref	2 – 16”	Lower rear cab frame (behind seats)
C	1 – 37”	Top rear roll bar cross-member
D	6 – 6”	Placed around rear roll bars corresponding to 9” double-sided velcro straps (3 on each side)

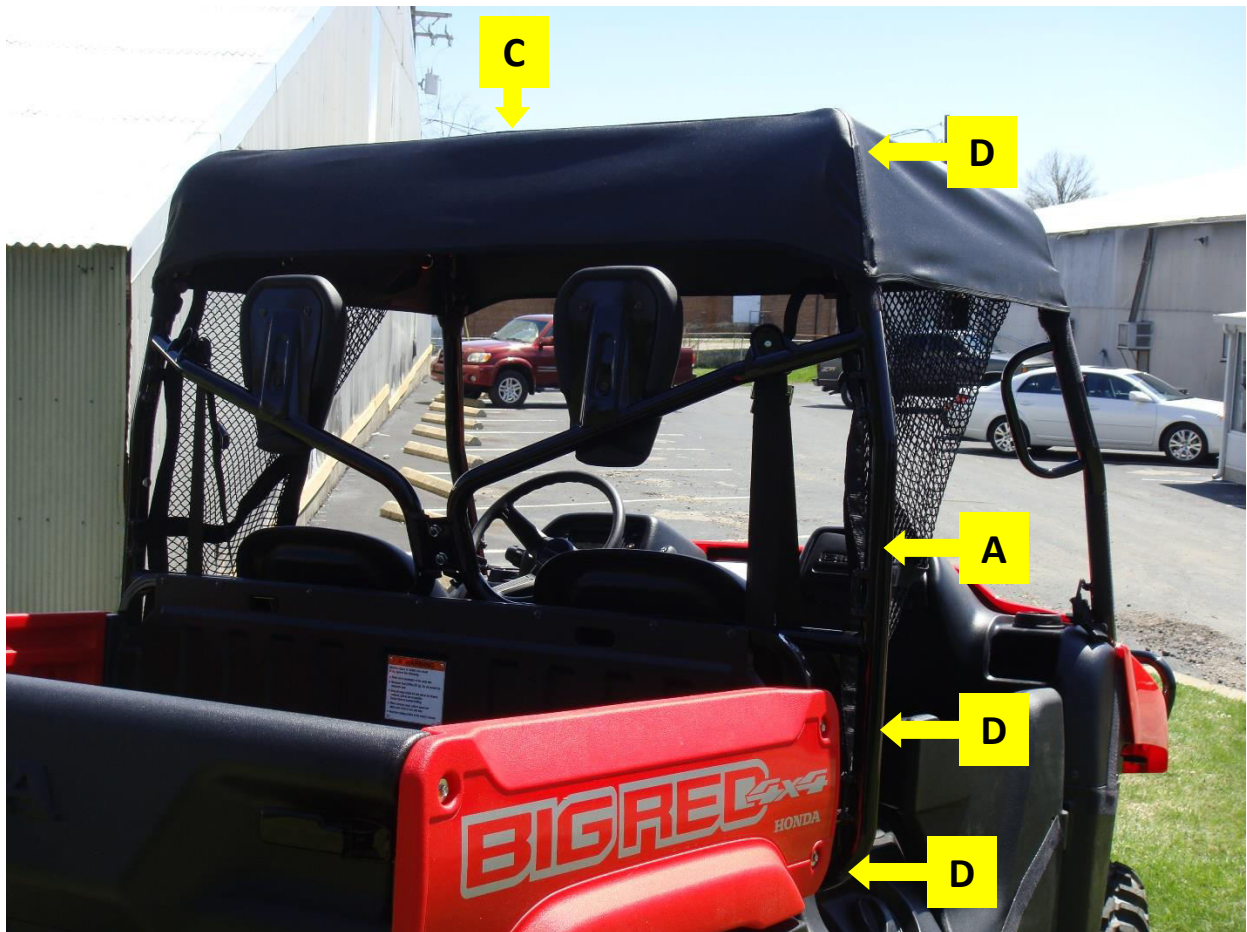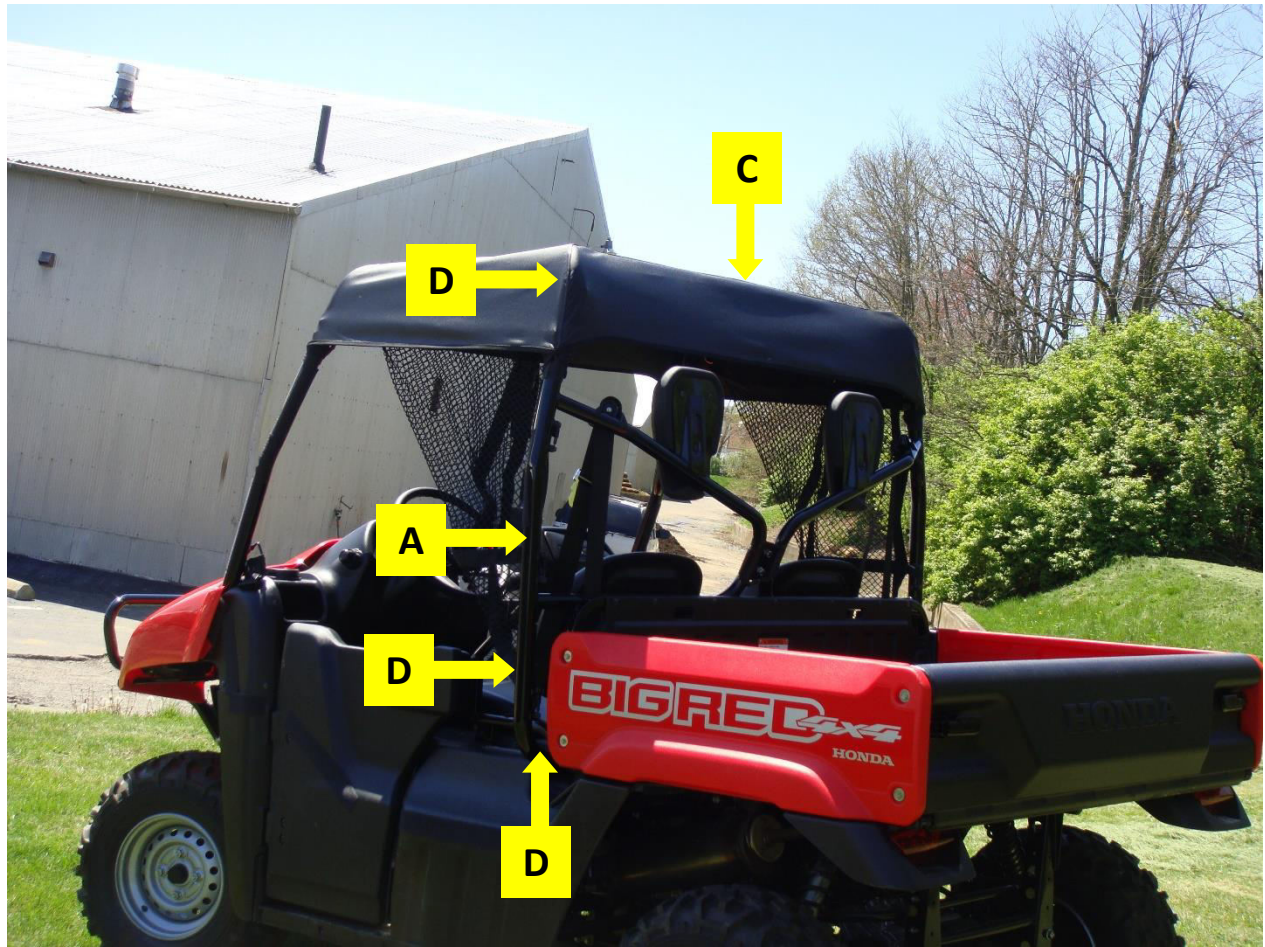

Step 2: Place Rear Window Enclosure on top of Roll Bar Cage and align corner seams with outside center of roll bars.

Step 3: Place each Velcro Strip on its corresponding Velcro Tab on the Enclosure. DO NOT REMOVE PLASTIC BACKING FROM VELCRO STRIPS AT THIS TIME.

Step 4: Pull the Enclosure down tightly and align outside corner seams with the center of each Roll Bar. At this point Velcro Strips can be removed from Enclosure Velcro Tabs and attached to the Vehicle in the order shown below. Note Velcro Strips should be oriented to match its corresponding Enclosure Velcro Tab.

Step 5: Begin attaching Enclosure by first squaring the back of the Enclosure to the Rear of the Cab frame and attaching the Lower Rear Cab Frame Enclosure Velcro tabs to the 16" Velcro strips behind the seats.

Step 6: Pulling upward & outward on the 8" Rear Roll Bar upright Enclosure Velcro Tabs (Ref A on velcro table), attach Rear Roll Bar upright Enclosure tabs to installed 8" Velcro Strips and also attach 37" Velcro Tab (Ref C on velcro table) to installed Top Rear Roll Bar Cross-member Velcro strip. This should straighten the back window section of the Enclosure.

Step 7: Repeat Steps 4, 5, & 6 until the Enclosure fits snugly to the Vehicle Roll Bar structure and the rear window is tight.

Step 8: Wrap 6" velcro strips (Ref D on velcro table) around roll bars corresponding to the 9" double-sided strips sewn into back panel

Step 9: Replace hard top and hard windshield

See enclosed Product Care sheet for instructions on how to properly care for your 3SI UTV Enclosure.



Care Instructions

Heavy Duty Marine and Mil-Spec Military Fabric Cleaning

All 3SI UTV Enclosure Heavy Duty Marine and Military Camo fabrics are guaranteed against excessive loss of color or strength under normal exposure and use conditions. Periodic cleaning with a solution of 4 ounces of bleach and 2 ounces of soap (NOT DETERGENTS) in one gallon of water is recommended to minimize accumulations of dirt, bird droppings and other contaminants which can support surface mildew and stain fabric.

Soft Vinyl Window Cleaning

3SI UTV Enclosure Vinyl Windows will remain clear and provide great visibility under normal exposure conditions if properly cleaned. Periodic cleaning with a solution of 1 ounce of soap in one gallon of water is all that is needed to maintain good window cleanliness and visibility. Caution: DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS or CHEMICALS OF ANY KIND TO CLEAN VINYL WINDOWS AS THESE WILL CLOUD THE WINDOWS. ALSO, NEVER RUB WINDOWS WITH A DRY CLOTH OR RAG.

Storage Recommendations

Before removing the 3SI UTV Enclosure from your vehicle for storage, clean the Fabric and Vinyl Windows thoroughly as indicated above. Any dirt remaining on the Enclosure may scratch Vinyl Windows while in storage. Once the Enclosure has been cleaned it should be placed on a large flat surface. Lay the Enclosure out so that Vinyl Windows are in a flat position. Fold the doors over the rear panel first then fold the top and windshield on top of the doors keeping the Vinyl Windows flat. Caution: **FOLDING VINYL WINDOWS WILL CAUSE PERMANENT CREASE DAMAGE AND WILL VOID ALL WARRANTIES.** Once the Enclosure is folded keeping all Vinyl Windows flat, begin rolling the Enclosure into an 8" roll. Place the 8" roll into a box and store at normal room temperature. To ensure long life of your enclosure it is best not to store in extreme temperatures.

Hauling

The ONLY products manufactured by 3SI UTV that can be hauled while installed are the hard windshields, full cab enclosures, and door/rear window combos with top and windshield installed. However, the full cab enclosures and door/rear window combos should be tied down before hauling. Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. NEVER HAUL INSTALLED SOFT TOPS, WINDSHIELD TOP COMBOS, AND SUMMER CABS. REMOVE BEFORE HAULING.