

INTINIDATOR GC1K CREW

BACK PANEL

DO NOT REMOVE PROTECTIVE PAPER FROM WINDSHIELD THIS WILL BE YOUR LAST INSTALLATION STEP!

Part	Qty	Description
	6	1-3/4" Loop Clamps
	6	Neoprene Washer
	6	Wingnut
	6	1 1/2" Bolt
0	6	Small Washer
0	6	Lock Nut

STEP 1

We suggest having a friend help you with this install. Hold back panel to the rear roll bars. On the roll bar mark the location of the pre-cut slots.

STEP 2

Set the back panel aside. Wrap the loop clamps around the rollbar near the crayon marks, squeeze loop clamps closed.

STEP 3

Assembly wingnut, bolt and neoprene washer.



STEP 4


Set back panel over the loop clamps.

STEP 5

Insert wingnut, bolt and neoprene washer assembly through the outside of the back panel, through the holes in the loop clamp, secure with washer and lock nut.



OUTSIDE VIEW

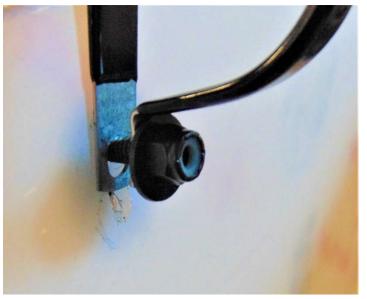

INSIDE VIEW

STEP 6

Repeat steps for all remaining loop clamps. Hand tighten only!!!

STEP 7

When all loop clamps have been installed, push the back panel into place. Then tighten the lock nuts. See photo for correct position.

STEP 8

Remove the protective film from both sides of the windshield.



Cleaning Instructions.

Lexan, which is a brand of polycarbonate, is virtually indestructible. But it is also easily scratched. Please read the cleaning recommendations to limit damage to your product.

Never wipe your polycarb back panel with any just any old cloth. We recommend using micro fleece blanket. This is super soft material you can find at Walmart. Any other cloth even micro fiber will leave scratches on the polycarbonate. If you are unsure about the fabric please give us a call at 859-488-7447 ask for Sam.

Never use any abrasive cleaning products on your polycarb. Windex for example is not ok! This will cause the polycarb to develop a haze. Some chemicals may eat through the polycarb. I do not recommend using any kind of soap but if you must please use dish soap only, like dawn. Pour on and spray off, do not wipe!

Do not try to wipe off mud period! Spray mud and debris off with water hose first! If you have access to a leaf blower or air compressor we recommend using them to dry the windshield. If not, gently use a micro fleece blanket to blot the water away and then air dry.

I recommend using a product called MuddTraxx Ceramic Detailer, to apply a coat of wax that will prevent mud and dust from clinging to your windshield. If you are having trouble finding this product online please call Sam at the number listed above.