



## John Deere Gator 835

### FULL CAB

Your enclosure is made of heavy duty fabric that is water repellent and resistant to mildew, ultra-violet rays and abrasion.

### Surface Preparation Instructions and Guidelines

**Cleaning:** To achieve a strong bond between Velcro adhesive and UTV surface, you must clean the surface. Use a mixture of 50% alcohol and 50% water to remove dirt, mud and dust from roll bars and plastic body components. Let dry. Repeat this process 3 times.

The adhesive hook should be applied at a temperature of 70 degrees or above.

Bond between UTV and adhesive hook is dependent upon the amount of adhesive to surface contact development. Firm application pressure develops a better adhesive contact and improves bond strength.

After application, the bond strength increases and approaches the ultimate bond strength after 72 hours. Bond strength build up: 20 min equals 50% bond strength, 1 hour equals 75% bond strength, one day equals 90% bond strength, and 3 days equals 100% bond strength.

### More tips for installation.

**Two is better than one:** We recommend a second person be involved for the installation process. Getting the panel in the correct position takes some pulling and tugging, we find the process runs smoother when there are two people pulling.

**Test adhesion:** Use a small piece of Velcro, remove backing and adhere to roll bars. Wait 20 minutes, Velcro should already be difficult to remove.

**Still having trouble with adhesion:** If Velcro is still not adhering to the roll bars, use a piece of hook (rough side of Velcro) to "rough up" the surface of your roll bar. We do not recommend this for the plastic body of your UTV, it will scratch.

**Unsure about Velcro placement:** With-out removing the white backing, attach the Velcro to your enclosure panel. Hold panel up to the UTV and note the area that the Velcro should attach. You can use the double-sided straps with-out Velcro to help hold up the panel while you remove the white backing and adhere sticky Velcro. We will send extra Velcro that can be used to hold the enclosure to the cab frame for easy notation of Velcro placement.

**Attaching panel:** Attach the panel top first, then work your way around the panel pulling the tabs and sticking them to the corresponding adhesive Velcro. Attach cab in the following order: back panel, doors and top cap

## Installing with Windshield and Hard Top.

If you have a windshield and or hard top on your UTV, you will need to remove it before installing the door and rear panel. After the installation of your enclosure is complete you will then reinstall the windshield and hard top.

If clamps for the windshield or hard top are interfering with the sewn-on Velcro tabs or straps on your enclosure you can modify the tabs and straps easily by cutting them to fit. Mark where the tabs need to be cut to accommodate your windshield or hard top clamps or bolts. Cut the tabs and burn the edges with a lighter to prevent unraveling. Do not cut in to the binding (darker black trim around your door panel).

### Installation Instructions

**Step 1:** Remove your 3SI UTV Cab Enclosure and Velcro kit from the shipping box.

**Step 2:** Remove existing windshield and hard top.

**Step 3:** Clean all surfaces on which you will be placing the adhesive Velcro according to the surface preparation instructions. Wait until the surfaces are dry.

**Step 4:** Remove the backing from the adhesive hook strips and install as indicated in the following adhesive hook table and pictures. Press firmly.

**Step 5: Wait 72 hours!** This step is very important to the life of your Velcro. Waiting the full 72 hours will ensure that your Velcro and enclosure will stay on in rain, sleet, snow or mud.

**Step 6:** After all adhesive Velcro strips are attached, begin attaching each panel to the cab frame.

**Step 7:** After all panels are attached work your way around the UTV remove, pull, and reattach, each Velcro tab to achieve a tight fit. You may need to do this a few times.

**Step 8:** When your enclosure is in the correct position the binding or trim around the panels will rest in the center of the roll bar. If you have a windshield the binding, will rest along the edge of your windshield.

**Step 9:** Re-install your windshield, and hard top.

**See enclosed Product Care sheet for instructions on how to properly care for your 3SI UTV Enclosure.**

PICTURE SHOWS THE SEWN-ON VELCRO TABS THAT CORRESPOND TO THE VECRO CHART.



### ADHESIVE HOOK CHART

Reference	Qty/Size	Placement
A	4-8"	Attach horizontally to the inside of the rear roll bar. Wrap tabs of back panel over the roll bar and attach the sewn-in loop strip to the adhesive hook strip. (Figure 1)
B	2-3"	Attach horizontally to the inside of the rear roll bar, to the far left and right of the roll bar. Wrap tabs of back panel over the roll bar and attach the sewn-in loop strip to the adhesive hook strip. (Figure 2)
C	2-10"	Attach vertically to the outside of the rear roll bars. Attach tabs to the adhesive hook strips. Use the tabs on either side of the back panel to pull the back panel tight. (Figure 3)
D	2-7"	Attach vertically to the inside of the roll bar, underneath the seat belt bracket. (Figure 4)
E	2-22"	Attach vertically to the inside of the roll bar, starting from the seat belt bracket to just behind the seat belt roller. (Figure 4)
F	2-4"	Attach horizontal to the bottom of the UTV frame below the seat belt roller. (Figure 5)
G	1-34"	Raise the bed and attach horizontally to the flat space behind bed. (Figure 6)



Figure 2: Shows placement of 8" Velcro strips A.

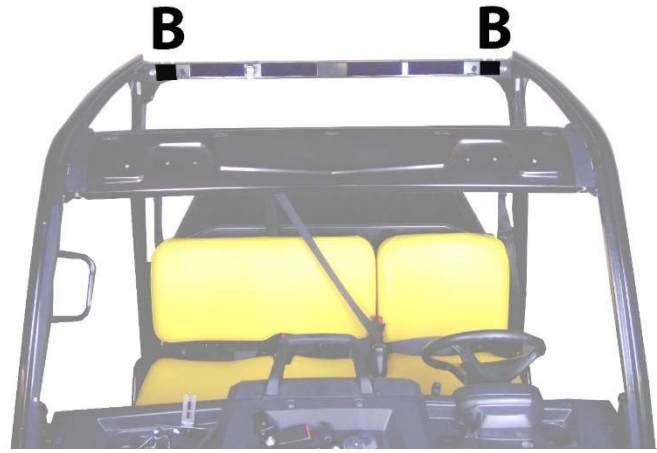


Figure 1: Shows placement of 3" Velcro strips B.



Figure 3: Shows placement of 10" Velcro strip C.



Figure 4: Shows placement of 7" Velcro strip D and 22" Velcro strip E.



Figure 5: Shows placement of 3" Velcro strip F. Raise seat all the way up and place strip under the seat belt roll.



Figure 6: Shows placement of 34" Velcro strip G. Raise bed, attach to the flat bracket behind the seat.

PICTURE SHOW SEWN-ON VELCRO TABS THAT CORRESPOND TO THE VELCRO CHART.



PASSENGER SIDE DOOR



DRIVERS SIDE DOOR

## ADHESIVE HOOK CHART

Reference	Qty/Size	Placement
A	2-27"	Attach horizontally to top inside edge of roll bar. (Figure 1)
B	2-8"	Attach vertically to top left and right sides of factory "visor". (Figure 2)
C	2-18"	Attach vertically to front forward facing roll bars on the inside edge. (Figure 3)
D	2-7"	Attach vertically to bottom of front forward facing roll bars on the inside edge. (Figure 4)
E	2-8"	Attach to roll bar and down on to the side of the UTV. (Figure 5)
F	2-12"	Attach diagonally to body of the UTV. (Figure 5)
G	2-12"	Attach vertically to body of the UTV below Velcro strip F. (Figure 5)
H	2-38"	Attach to vertically from top of rear roll bar to bottom, following the roll bar all the way down. If you have a back panel you will not need this Velcro strip, the Velcro is already sewn on to the back panel, the doors will attach to back panel. (Figure 6)
I	2-9"	Attach vertically to the plastic body of the UTV. On the side. (Figure 7)
J	2-12"	Attach to the upper part of the curve on the side lower body of the UTV. (Figure 8)
K	2-12"	Attach to the lower part of the curve on the side lower body of the UTV. (Figure 8)
L	2-9"	Attach horizontally to the side of the floor of the UTV. (Figure 9)

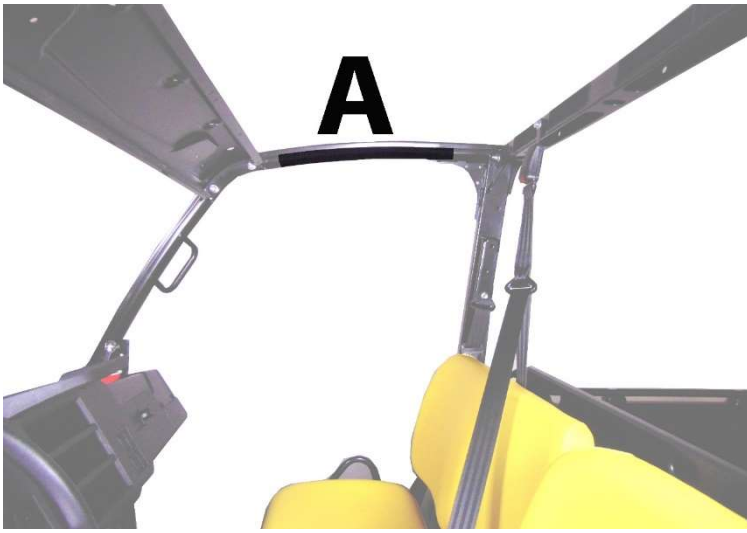


Figure 1: Shows placement for 27" Velcro strip A. Place on either side of the UTV.



Figure 2: Shows placement for 8" Velcro strip B.



Figure 3: Shows placement for 18" Velcro strip C. Strips should rest on inset roll bar fold down on to interior edge.



Figure 4: Shows placement of 7" Velcro strip D. This strip should rest in a similar position to strips in Figure 3. If you have a windshield the strip will set underneath the clamps.



Figure 5: Shows placement of 8", 12" Velcro strips, E, F, and G. Velcro strip E will stick to roll bar and down on to the UTV body.



Figure 6: Shows placement of Velcro on the back panel, if you only purchased a door kit then you will place this strip on the roll bars from the top all the way down the back of the roll bars. If you have a back panel you will not need this Velcro. If you have a lexan back panel, the adhesive Velcro is optional, the lexan back panel will go over the door panels Velcro tabs, tightening the Lexan back panel into place will hold your doors to the UTV frame.



Figure 7: Shows placement of 9" Velcro strip I.

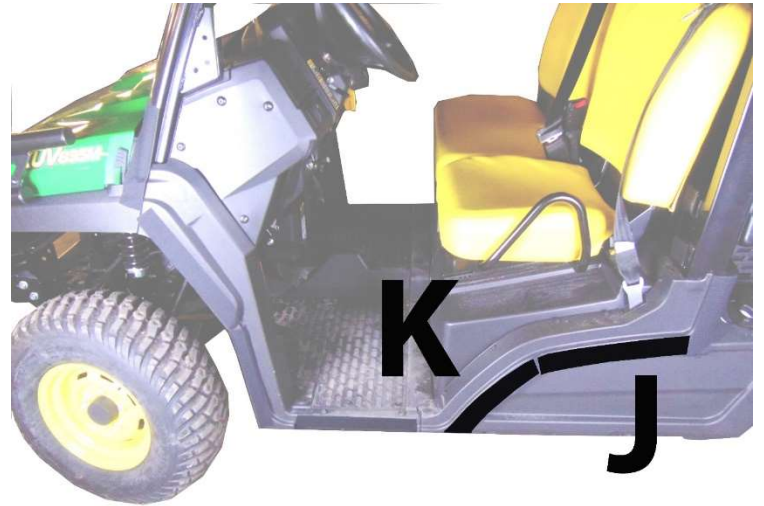


Figure 8: Shows placement of 12" Velcro strips J and K. You will place the other Velcro strips on the opposite side in the same position as drivers side.

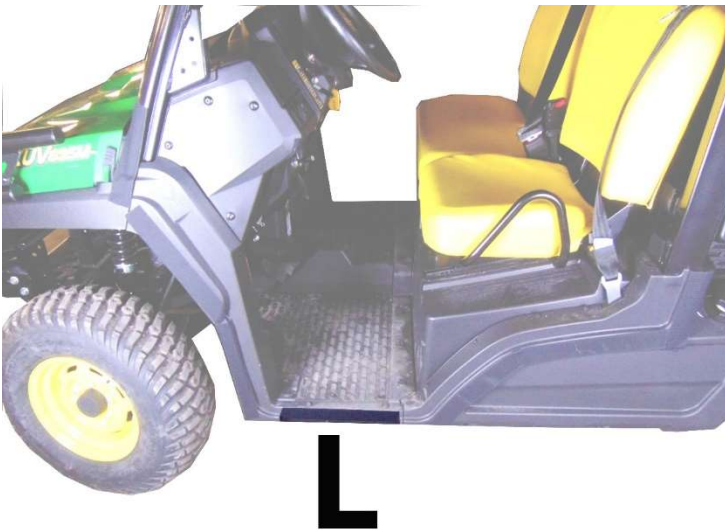


Figure 9: Shows placement of 9" Velcro strip L. Velcro should be facing out, on the side of the floor board. Not facing upwards.



# JOHN DEERE GATOR

## TOP CAP



PICTURE SHOWS THE TENSION STRAPS ATTACHED TO YOUR TOP CAP. PULL THE TENSION STRAPS TO ADJUST THE POSITION OF YOUR TOP CAP.

THE DOUBLE-SIDED STRAP IS CIRCLED  
YOU WILL CONNECT THIS STRAP TO THE  
VELCRO YOU INSTALL ON YOUR MACHINE



# ADHESIVE HOOK TABLE

REFERENCE	QUANTITY/SIZE	PLACEMENT
A	4-6"	WRAP AROUND ROLL BAR, THESE STRIPS ARE FOR THE DOUBLE SIDED STRAPS. (FIGURE 1)
B	2-8"	PLACE HORIZONTALLY ON THE TOP SIDE ROLL BAR FACING THE EXTERIOR OF THE CAB.

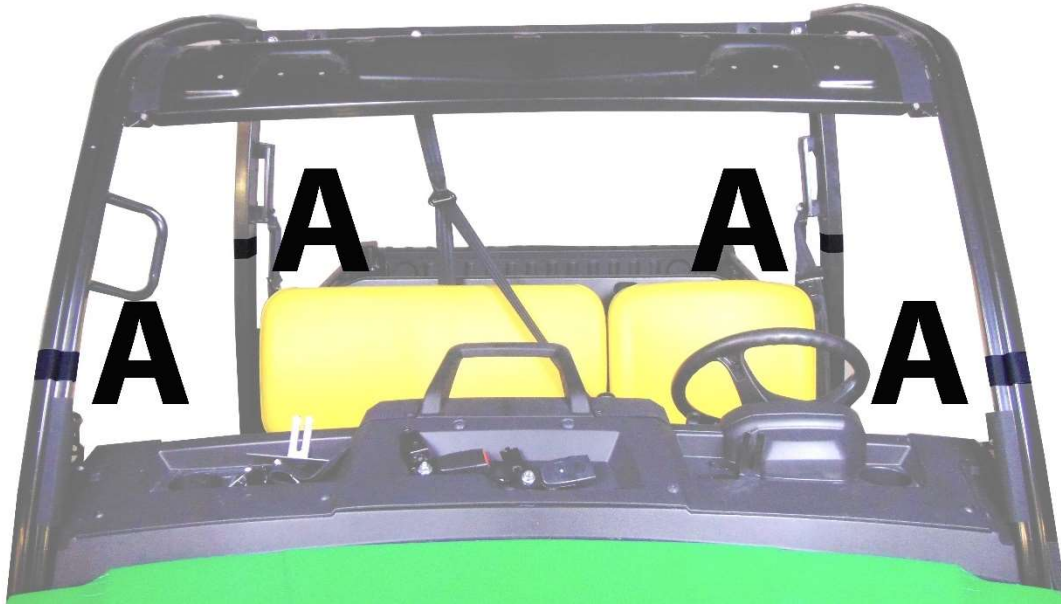


Figure 8: WRAP THESE VELCRO STRIPS AROUND THE ROLL BAR AND ATTACH DOUBLE-SIDED STRAP.

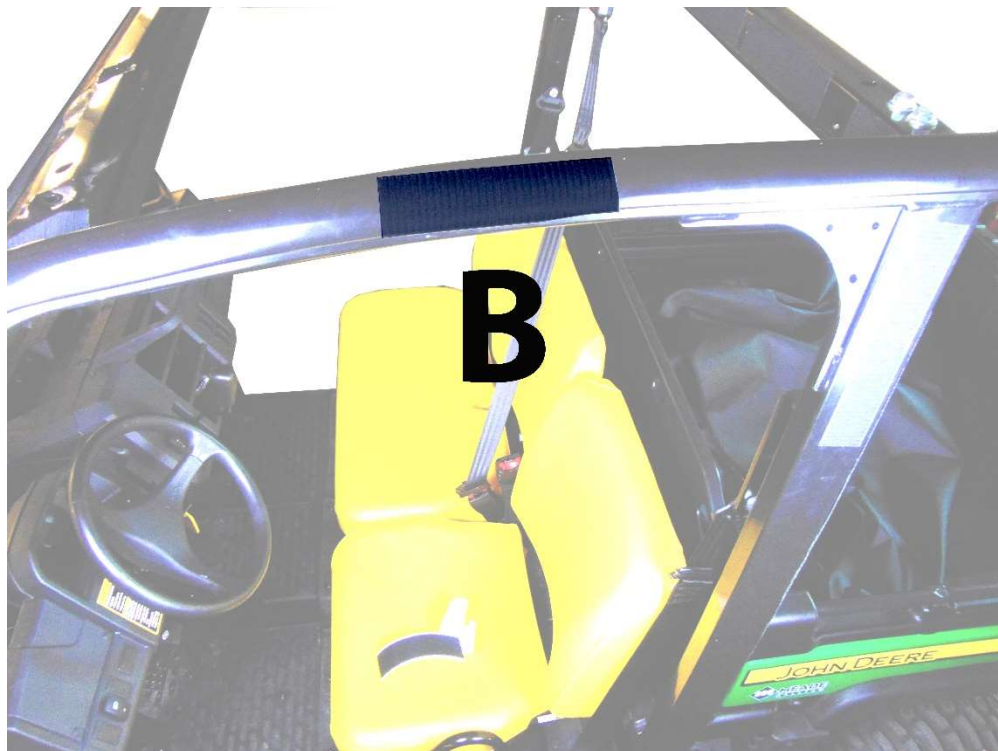


Figure 7: PLACE HORIZONTALLY ON THE TOP SIDE ROLL BAR. THE TAB ON THE SIDE OF THE TOP CAP WILL STRETCH OVER THE TOP OF THE BAR PULLED TIGHT AND ATTACH TO THE VELCRO STRIP.

IF YOU HAVE A WINDSHIELD YOU WILL ATTACH THE DOUBLE-SIDED STRAPS FIRST. REINSTALL THE WINDSHIELD AND THEN ATTACH YOUR TOP CAP. THE TOP CAP WILL FIT DOWN OVER THE WINDSHIELD WITH THE TENSION STRAPS RESTING ALONG THE ROLL BAR OR ON THE WINDSHEILD ITSELF. PICTURED BELOW.



Installation complete. Finished product should resemble photo.



## Care Instructions

### Heavy Duty Marine and Mil-Spec Military Fabric Cleaning

All 3SI UTV Enclosure Heavy Duty Marine and Military Camo fabrics are guaranteed against excessive loss of color or strength under normal exposure and use conditions. Periodic cleaning with a solution of 4 ounces of bleach and 2 ounces of soap (NOT DETERGENTS) in one gallon of water is recommended to minimize accumulations of dirt, bird droppings and other contaminants which can support surface mildew and stain fabric.

### Soft Vinyl Window Cleaning

3SI UTV Enclosure Vinyl Windows will remain clear and provide great visibility under normal exposure conditions if properly cleaned. Periodic cleaning with a solution of 1 ounce of soap in one gallon of water is all that is needed to maintain good window cleanliness and visibility. Caution: DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS or CHEMICALS OF ANY KIND TO CLEAN VINYL WINDOWS AS THESE WILL CLOUD THE WINDOWS. ALSO, NEVER RUB WINDOWS WITH A DRY CLOTH OR RAG.

### Storage Recommendations

Before removing the 3SI UTV Enclosure from your vehicle for storage, clean the Fabric and Vinyl Windows thoroughly as indicated above. Any dirt remaining on the Enclosure may scratch Vinyl Windows while in storage. Once the Enclosure has been cleaned it should be placed on a large flat surface. Lay the Enclosure out so that Vinyl Windows are in a flat position. Fold the doors over the rear panel first then fold the top and windshield on top of the doors keeping the Vinyl Windows flat. Caution: FOLDING VINYL WINDOWS WILL CAUSE PERMANENT CREASE DAMAGE AND WILL VOID ALL WARRANTIES. Once the Enclosure is folded keeping all Vinyl Windows flat, begin rolling the Enclosure into an 8" roll. Place the 8" roll into a box and store at normal room temperature. To ensure long life of your enclosure it is best not to store in extreme temperatures.

### Hauling

The ONLY products manufactured by 3SI UTV that can be hauled while installed are the hard windshields, full cab enclosures, and door/rear window combos with top and windshield installed. However, the full cab enclosures and door/rear window combos should be tied down before hauling. Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. NEVER HAUL INSTALLED SOFT TOPS, WINDSHIELD TOP COMBOS, AND SUMMER CABS. REMOVE BEFORE HAULING.