



Installation Instructions

Thank you for purchasing a UTV enclosure manufactured in the USA with pride by 3SI UTV. Your enclosure is made of heavy duty fabric that is water repellent and resistant to mildew, ultra-violet rays and abrasion. With proper installation and care you can expect many years of service from your 3SI UTV enclosure.

SOME IMPORTANT NOTES BEFORE GETTING STARTED....

- The enclosure attaches to your UTV's cab frame with Velcro. The technical term for Velcro is hook and loop. Loop is the soft side and hook, the rough side. Loop has been sewn into the enclosure at various points. Adhesive hook has been supplied to attach to your cab frame, corresponding to the sewn-in loop. If you struggle with placement of the adhesive hook, with the enclosure held to the cab frame, note the locations of the sewn-in loop. The adhesive hook is attached to the cab frame at those locations.
- The adhesive hook should be applied at a temperature of 60 degrees or above. **For maximum adhesion, when the adhesive hook is in place, allow the adhesive to cure for 24 hours before attaching the loop to the hook.**
- Clean the surfaces the adhesive hook will be attached to before beginning installation. A light cleaning with mild soap and water is best. A little Windex works great. Do NOT wax or clean with a compound that leaves the frame slick. The adhesive hook will not stick to a slick surface. Again, a light cleaning is best.
- Your enclosure is not a "one size fits all" product. The enclosure was designed and manufactured specifically for your model UTV. As a result, the enclosure should fit square and snug to the cab frame.
- Periodic cleaning of your enclosure with mild soap and water is recommended to minimize accumulations of dirt.
- Clean the vinyl windows with mild soap, water, and a soft cloth to avoid scratches. DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS OR CHEMICALS TO CLEAN VINYL WINDOWS.
- Clean your enclosure and allow it to dry before removing for storage. **Never fold your enclosure to store.** Roll the enclosure to avoid creasing the vinyl windows. Creases in the vinyl windows cannot be removed. **CREASING THE VINYL WINDOWS VOIDS ALL WARRANTIES AND GUARANTEES.**
- The only enclosures manufactured by 3SI UTV that can be hauled when installed are Lexan windshields, full cab enclosures, and door/rear window combos with top and windshield installed. However, the enclosures should be tied down before hauling. Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. REMOVE ALL OTHER ENCLOSURES BEFORE HAULING.

PLEASE READ AND FOLLOW THE DETAILED INSTRUCTIONS THAT ARE ATTACHED.



Kawasaki 3010 Mule Full Cab Enclosure with Lexan Windshield Installation

You have just purchased the best Enclosure for your Utility Terrain Vehicle available on the market today. Your Enclosure is made of Heavy Duty Fabric that is Water Repellent and resistant to Mildew, Ultra-Violet Sun Rays and Abrasion. With proper installation and care you can expect many years of long lasting fit, color and service life from your **3SI UTV Enclosure**.

Step 1: Remove your 3SI UTV Enclosure and Velcro Kit from the shipping box. The contents and placement of your adhesive velcro kit is as follows:

Please note....

The technical term for Velcro is hook and loop. Loop is the soft side and hook, the rough side. Loop has been sewn into the enclosure at various points. Adhesive hook has been supplied to attach to your cab frame, corresponding to the sewn-in loop. If you struggle with placement of the adhesive hook, with the enclosure draped over the cab frame, temporarily attach (without removing the adhesive backing) the adhesive hook to the corresponding sewn in strips. The contents of your adhesive hook kit and placement is as follows:



Reference	Qty/Size	Placement
	1-51"	Bottom of back panel-Horizontal
A	2-6"	Bottom of back roll bar uprights-Horizontal wrapped around bar
B	2-8"	Middle of back roll bar uprights-Vertical outside edge
C	2-33"	Bottom of doors-Horizontal
D	2-18"	Outside front fender well-Cut in half to curve
E	2-40"	Inside edge of front roll bar uprights- CUT TO ACCOMMODATE WINDSHIELD CLAMPS
	1-51.5"	Top of windshield corresponding to loop in visor-Horizontal

Note: before applying adhesive Velcro Strips to your vehicle, surfaces should be free of dust, dirt and oil.

Step 2: With chalk, mark the location of your windshield clamps on the front roll bars.

Step 3: Remove your windshield

Step 4: One at a time, remove the adhesive backing from the Velcro hook strips and attach to the cab frame as described above. The following pictures show approximate location of adhesive hook placement.

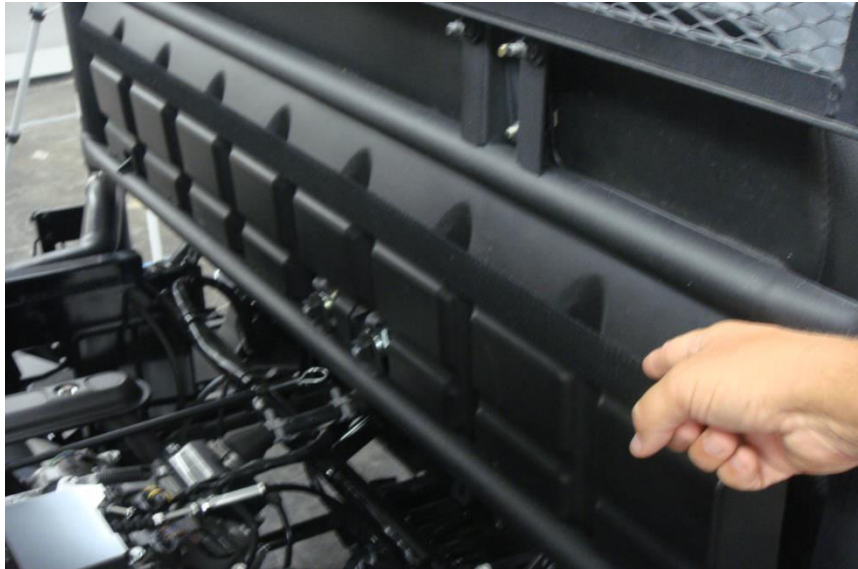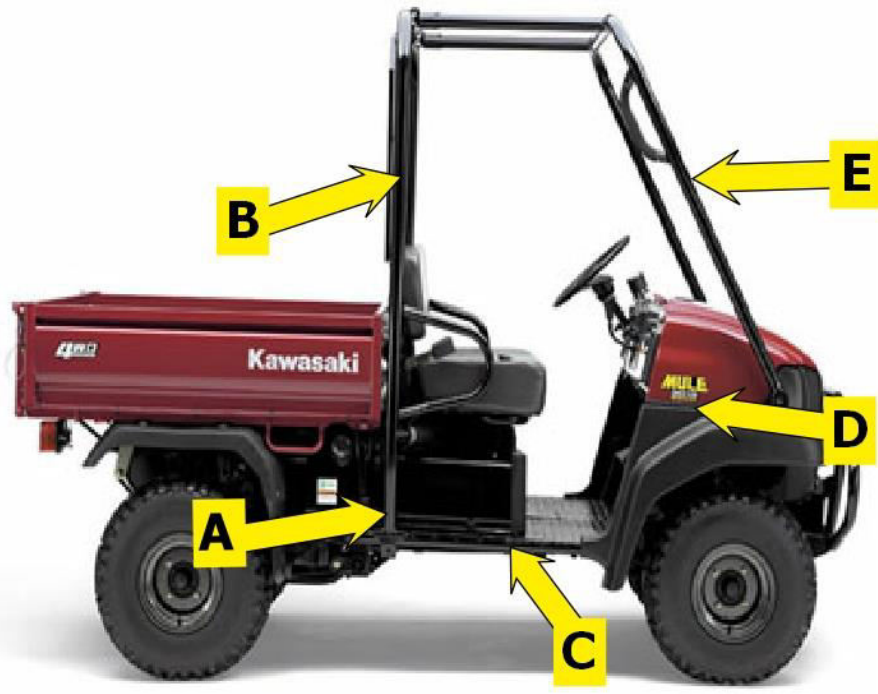

Remove plastic backing and adhere the 51" Velcro Strip horizontally along the top rib of the plastic covering of the Cab Frame below the Rear Window as shown.



Remove plastic backing and place the 18" Velcro Strips along the front Fender Well as shown. Note: you will need to cut the Velcro Strips in 9" and 9" pieces to form to the Fender Well.



Remove plastic backing and adhere the 6" Velcro Strips horizontally around the Bottom of the Rear Roll Bar Post uprights as shown.




Remove plastic backing and adhere the 8" Velcro Strips vertically along the center of the Rear Roll Bar Post uprights app. 23" down from the Top Roll Bar weld as shown.


Step 5: Begin attaching Enclosure by first squaring the back of the Enclosure to the Rear of the Cab frame and attaching the Lower Rear Cab Frame Enclosure Velcro tab to the installed 51" Velcro strip as shown below.



Step 6: Pulling upward & outward on the top Rear corners of the Enclosure, attach Rear Roll Bar Post Enclosure tabs to installed 8" Velcro Strips as shown. Attach Rear Roll Bar Post Bottom Enclosure Tabs around installed Velcro strips as shown below. This will straighten the back window section of the Enclosure.

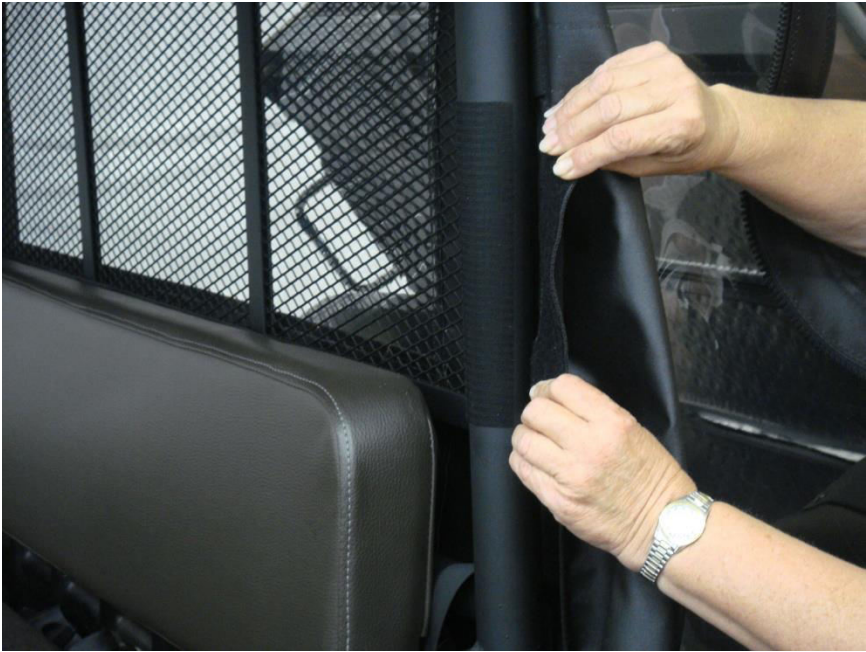

Step 7: Pulling the Enclosure outward and downward toward the front of the vehicle attach the 40" Enclosure Windshield Velcro tabs to the Front Roll Bar Post upright Velcro strip as shown. **Note: you will need to cut out sections of these tabs to accommodate your hard windshield clamps.** Simply mark the position of your hard windshield clamps on the Velcro tab and cut out a 2" section with household scissors being careful not to cut the binding. Using a lighter slightly burn the frayed ends to prevent further fraying.

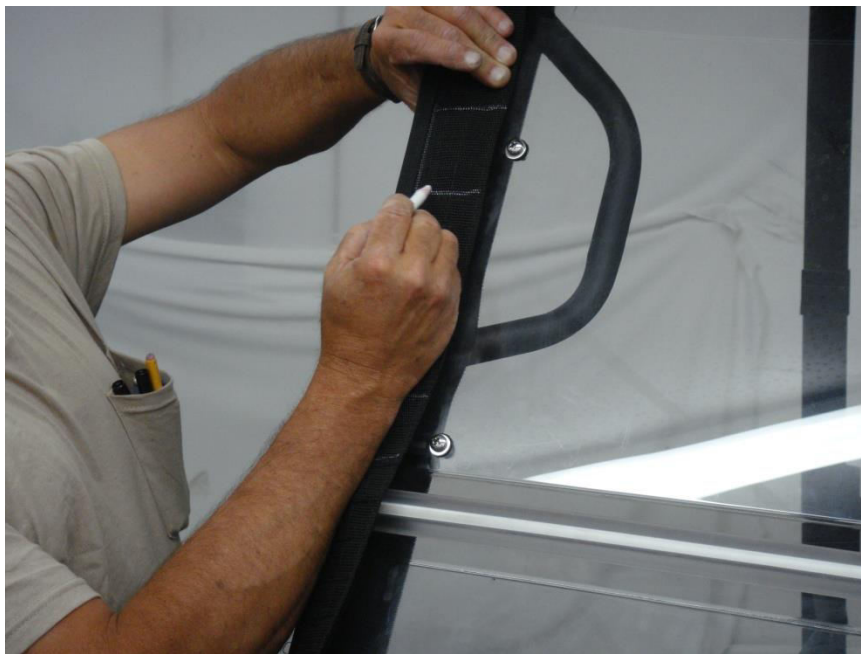

Mark the Windshield Velcro Tabs for hard windshield Clamp locations



Cut a 2" section out around where your clamps will be positioned on the Velcro Tab – be careful not to cut the binding.



Carefully burn the frayed thread around the cut area with a lighter.

Step 8: Zip Doors Closed and attach 18"(cut 9" & 9") enclosure tabs to installed Front Fender Well Velcro Strips and bottom of doors to adhesive Velcro strips.



Step 9: Repeat any steps necessary to achieve a snug fit to the vehicle frame.

Step 10: Re-install you windshield.

See enclosed Product Care sheet for instructions on how to properly care for your 3SI UTV Enclosure.



3 STAR INDUSTRIES

Care Instructions

Heavy Duty Marine and Mil-Spec Military Fabric Cleaning

All 3SI UTV Enclosure Heavy Duty Marine and Military Camo fabrics are guaranteed against excessive loss of color or strength under normal exposure and use conditions. Periodic cleaning with a solution of 4 ounces of bleach and 2 ounces of soap (NOT DETERGENTS) in one gallon of water is recommended to minimize accumulations of dirt, bird droppings and other contaminants which can support surface mildew and stain fabric.

Soft Vinyl Window Cleaning

3SI UTV Enclosure Vinyl Windows will remain clear and provide great visibility under normal exposure conditions if properly cleaned. Periodic cleaning with a solution of 1 ounce of soap in one gallon of water is all that is needed to maintain good window cleanliness and visibility. Caution: DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS or CHEMICALS OF ANY KIND TO CLEAN VINYL WINDOWS AS THESE WILL CLOUD THE WINDOWS. ALSO, NEVER RUB WINDOWS WITH A DRY CLOTH OR RAG.

Storage Recommendations

Before removing the 3SI UTV Enclosure from your vehicle for storage, clean the Fabric and Vinyl Windows thoroughly as indicated above. Any dirt remaining on the Enclosure may scratch Vinyl Windows while in storage. Once the Enclosure has been cleaned it should be placed on a large flat surface. Lay the Enclosure out so that Vinyl Windows are in a flat position. Fold the doors over the rear panel first then fold the top and windshield on top of the doors keeping the Vinyl Windows flat. Caution: **FOLDING VINYL WINDOWS WILL CAUSE PERMANENT CREASE DAMAGE AND WILL VOID ALL WARRANTIES.** Once the Enclosure is folded keeping all Vinyl Windows flat, begin rolling the Enclosure into an 8" roll. Place the 8" roll into a box and store at normal room temperature. To ensure long life of your enclosure it is best not to store in extreme temperatures.

Hauling

The ONLY products manufactured by 3SI UTV that can be hauled while installed are the hard windshields, full cab enclosures, and door/rear window combos with top and windshield installed. However, the full cab enclosures and door/rear window combos should be tied down before hauling. Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. NEVER HAUL INSTALLED SOFT TOPS, WINDSHIELD TOP COMBOS, AND SUMMER CABS. REMOVE BEFORE HAULING.

