



## Installation Instructions

Thank you for purchasing a UTV enclosure manufactured in the USA with pride by 3SI UTV. Your enclosure is made of heavy duty fabric that is water repellent and resistant to mildew, ultra-violet rays and abrasion. With proper installation and care you can expect many years of service from your 3SI UTV enclosure.

### **SOME IMPORTANT NOTES BEFORE GETTING STARTED....**

- The enclosure attaches to your UTV's cab frame with Velcro. The technical term for Velcro is hook and loop. Loop is the soft side and hook, the rough side. Loop has been sewn into the enclosure at various points. Adhesive hook has been supplied to attach to your cab frame, corresponding to the sewn-in loop. If you struggle with placement of the adhesive hook, with the enclosure held to the cab frame, note the locations of the sewn-in loop. The adhesive hook is attached to the cab frame at those locations.
- The adhesive hook should be applied at a temperature of 60 degrees or above. **For maximum adhesion, when the adhesive hook is in place, allow the adhesive to cure for 24 hours before attaching the loop to the hook.**
- Clean the surfaces the adhesive hook will be attached to before beginning installation. A light cleaning with mild soap and water is best. A little Windex works great. Do NOT wax or clean with a compound that leaves the frame slick. The adhesive hook will not stick to a slick surface. Again, a light cleaning is best.
- Your enclosure is not a "one size fits all" product. The enclosure was designed and manufactured specifically for your model UTV. As a result, the enclosure should fit square and snug to the cab frame.
- Periodic cleaning of your enclosure with mild soap and water is recommended to minimize accumulations of dirt.
- Clean the vinyl windows with mild soap, water, and a soft cloth to avoid scratches. DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS OR CHEMICALS TO CLEAN VINYL WINDOWS.
- Clean your enclosure and allow it to dry before removing for storage. **Never fold your enclosure to store.** Roll the enclosure to avoid creasing the vinyl windows. Creases in the vinyl windows cannot be removed. **CREASING THE VINYL WINDOWS VOIDS ALL WARRANTIES AND GUARANTEES.**
- The only enclosures manufactured by 3SI UTV that can be hauled when installed are Lexan windshields, full cab enclosures, and door/rear window combos with top and windshield installed. However, the enclosures should be tied down before hauling. Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. REMOVE ALL OTHER ENCLOSURES BEFORE HAULING.

**PLEASE READ AND FOLLOW THE DETAILED INSTRUCTIONS THAT ARE ATTACHED.**



## Kawasaki 3010 Trans Full Cab Enclosure with Vinyl Windshield Installation

You have just purchased the best Enclosure for your Utility Terrain Vehicle available on the market today. Your Enclosure is made of Heavy Duty Fabric that is Water Repellent and resistant to Mildew, Ultra-Violet Sun Rays and Abrasion. With proper installation and care you can expect many years of long lasting fit, color and service life from your **3SI UTV Full Cab Enclosure and Polycarbonate Windshield**

**Step 1:** Remove your 3SI UTV Full Cab Enclosure and Velcro Kit from the shipping box.

Contents: 1 – Kawasaki 3010 Trans Full Cab Enclosure

1 – Roll of Velcro. This Velcro is pre-marked with lines and measurements, you will cut along the lines to separate the pieces of Velcro needed to attach your enclosure.

**Note:** *before applying adhesive Velcro Strips to your vehicle, surfaces should be free of dust, dirt and oil. Clean vehicle surfaces with water or Windex only. Do not use solvents to prepare your vehicle surfaces for Velcro application.*

**Step 2:** Read the Velcro list below, this list explains where your Velcro needs to be placed for proper installation of your enclosure.

**Step 3:** Place the enclosure on the UTV and note the position of the sewn-on loop. You may want to mark the position of the sewn-on loop on your roll bars with a pencil or crayon, this will help you determine where the hook needs to be placed.

**Step 4:** Remove your cab and start attaching the hook to the UTVs roll bars. Follow the pictures and Velcro list provided as well as any markings you may have made, to ensure proper placement of the hook.

<b>Velcro List</b>		
A	1-47"	Attaches to the cab below the rear window grate. Horizontally in a position that corresponds to the sewn in loop. (Shown in image A)
B	2-14"	Attaches to front wheel fender. Following the rounded shape of the fender. (Placement of Velcro shown in image B, arrow B)
C	14-6 ½"	Attach to various places along the center and rear vertical roll bars, to correspond to the sewn on double sided straps. These pieces are

		wrapped around the roll bar in a horizontal position. (Shown in Image C)
D	2-14"	These pieces of Velcro are for the lower portion of the back door. It attaches to the vertically to the front side of the cargo bed. Place the (Shown in image B, arrow D)
E	2-31"	These pieces are for the very bottom of the front door, they attach to the roll bar that sits on the "floor" of the UTV. Place in a horizontal position on the outside of the roll bar. (Shown in figure D, arrow E)
F	2-26"	These pieces are for the bottom portion of the back door, they attach in the same position as the front door. (Shown in figure D, arrow F)
G	6-8"	These pieces are for the front windshield. 3 pieces are placed on either side of the front roll bars to the out side of the bar. (Shown in figure E, arrows G)
H	2-5"	Place on lower front roll bar to the outside of the cab, in a position corresponding to the sewn in loop inside the front hood cover. (Shown in figure E, arrows H)



**Figure A - install 47" Velcro Strip on Top Raised Panel below rear window**



Figure B – install Velcro along fender and front side of cargo bed.

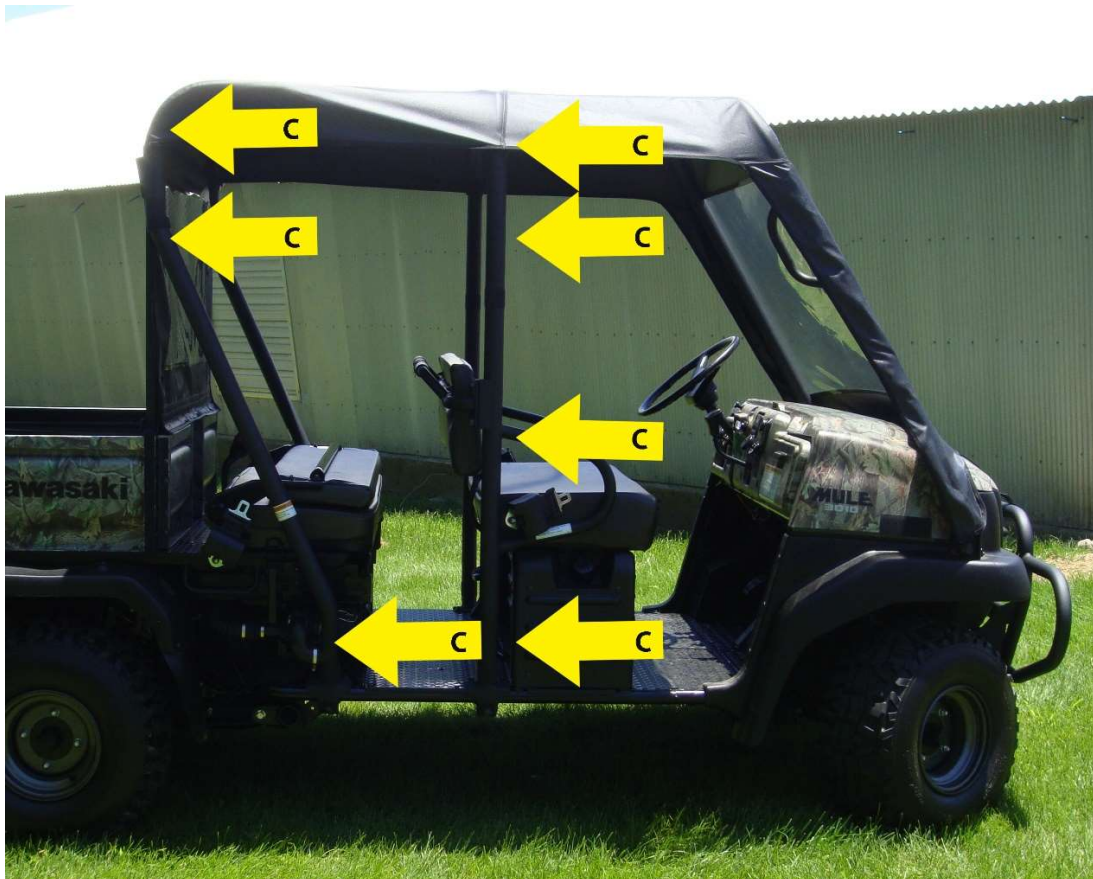


Figure C – Velcro is wrapped around roll bars horizontally in the position indicated above.



Figure D – hook is placed horizontally along the bottom roll bar.



Figure E – hook is placed vertically in relation to sewn on loop.

**Step 5:** After you have placed the Velcro hook on your UTVs roll bars wait 24 hours before attaching your enclosure. Waiting to attach your enclosure is important, this step will ensure a strong adhesion of the hook to the roll bar.

**Step 6:** Un zip the doors and back panel from the windshield and top, this is an optional step but one that we recommend. Unzipping the doors and back panel will make the enclosure lighter and easier to install.

**Step 7:** Place windshield and top on the UTV and begin attaching the sewn-on loop to the hook. Make your way around the enclosure pulling and tugging on the enclosure until it fits tight and is even on the cab frame.

**Step 8:** Zip on the doors and back panel (as shown in figures F, G, and H) and attach the sewn-on loop to the hook. Make your way around the UTV pulling and tugging until you have a tight fit and your enclosure is square on the cab frame. This is the most difficult part of the installation and may take a few turns around the UTV before the enclosure is square.



Figure F



Figure G

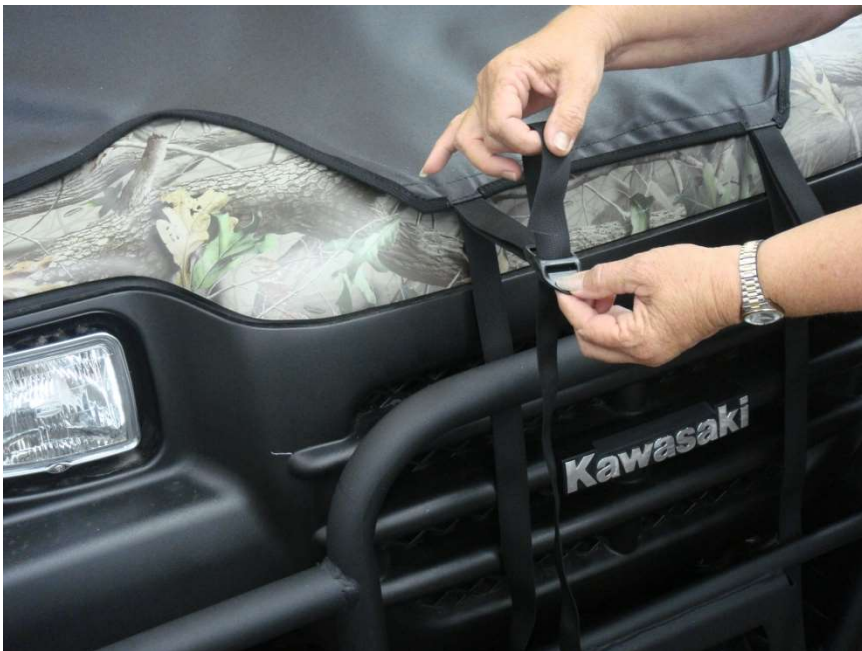


Figure H

**Step 9:** Attach the front hood straps to the cattle guard. Fit the back strap along the guard and up through the first slot of the buckle. Pull the strap down through the second slot. Repeat this step for the other strap. When both straps are slotted through the buckle pull down on both straps to achieve a tight fit of the windshield top.



**Figure I**



**Figure J**



## Care Instructions

### Heavy Duty Marine and Mil-Spec Military Fabric Cleaning

All 3SI UTV Enclosure Heavy Duty Marine and Military Camo fabrics are guaranteed against excessive loss of color or strength under normal exposure and use conditions. Periodic cleaning with a solution of 4 ounces of bleach and 2 ounces of soap (NOT DETERGENTS) in one gallon of water is recommended to minimize accumulations of dirt, bird droppings and other contaminants which can support surface mildew and stain fabric.

### Soft Vinyl Window Cleaning

3SI UTV Enclosure Vinyl Windows will remain clear and provide great visibility under normal exposure conditions if properly cleaned. Periodic cleaning with a solution of 1 ounce of soap in one gallon of water is all that is needed to maintain good window cleanliness and visibility. Caution: DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS or CHEMICALS OF ANY KIND TO CLEAN VINYL WINDOWS AS THESE WILL CLOUD THE WINDOWS. ALSO, NEVER RUB WINDOWS WITH A DRY CLOTH OR RAG.

### Storage Recommendations

Before removing the 3SI UTV Enclosure from your vehicle for storage, clean the Fabric and Vinyl Windows thoroughly as indicated above. Any dirt remaining on the Enclosure may scratch Vinyl Windows while in storage. Once the Enclosure has been cleaned it should be placed on a large flat surface. Lay the Enclosure out so that Vinyl Windows are in a flat position. Fold the doors over the rear panel first then fold the top and windshield on top of the doors keeping the Vinyl Windows flat. Caution: **FOLDING VINYL WINDOWS WILL CAUSE PERMANENT CREASE DAMAGE AND WILL VOID ALL WARRANTIES.** Once the Enclosure is folded keeping all Vinyl Windows flat, begin rolling the Enclosure into an 8" roll. Place the 8" roll into a box and store at normal room temperature. To ensure long life of your enclosure it is best not to store in extreme temperatures.

### Hauling

The ONLY products manufactured by 3SI UTV that can be hauled while installed are the hard windshields, full cab enclosures, and door/rear window combos with top and windshield installed. **However, the full cab enclosures and door/rear window combos should be tied down before hauling.** Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. NEVER HAUL INSTALLED SOFT TOPS, WINDSHIELD TOP COMBOS, AND SUMMER CABS. **REMOVE BEFORE HAULING.**