



## Installation Instructions

Thank you for purchasing a UTV enclosure manufactured in the USA with pride by 3SI UTV. Your enclosure is made of heavy duty fabric that is water repellent and resistant to mildew, ultra-violet rays and abrasion. With proper installation and care you can expect many years of service from your 3SI UTV enclosure.

### SOME IMPORTANT NOTES BEFORE GETTING STARTED....

- The enclosure attaches to your UTV's cab frame with Velcro. The technical term for Velcro is hook and loop. Loop is the soft side and hook, the rough side. Loop has been sewn into the enclosure at various points. Adhesive hook has been supplied to attach to your cab frame, corresponding to the sewn-in loop. If you struggle with placement of the adhesive hook, with the enclosure held to the cab frame, note the locations of the sewn-in loop. The adhesive hook is attached to the cab frame at those locations.
- The adhesive hook should be applied at a temperature of 60 degrees or above. **For maximum adhesion, when the adhesive hook is in place, allow the adhesive to cure for 24 hours before attaching the loop to the hook.**
- Clean the surfaces the adhesive hook will be attached to before beginning installation. A light cleaning with mild soap and water is best. A little Windex works great. Do NOT wax or clean with a compound that leaves the frame slick. The adhesive hook will not stick to a slick surface. Again, a light cleaning is best.
- Your enclosure is not a "one size fits all" product. The enclosure was designed and manufactured specifically for your model UTV. As a result, the enclosure should fit square and snug to the cab frame.
- Periodic cleaning of your enclosure with mild soap and water is recommended to minimize accumulations of dirt.
- Clean the vinyl windows with mild soap, water, and a soft cloth to avoid scratches. DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS OR CHEMICALS TO CLEAN VINYL WINDOWS.
- Clean your enclosure and allow it to dry before removing for storage. **Never fold your enclosure to store.** Roll the enclosure to avoid creasing the vinyl windows. Creases in the vinyl windows cannot be removed. **CREASING THE VINYL WINDOWS VOIDS ALL WARRANTIES AND GUARANTEES.**
- The only enclosures manufactured by 3SI UTV that can be hauled when installed are Lexan windshields, full cab enclosures, and door/rear window combos with top and windshield installed. However, the enclosures should be tied down before hauling. Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. REMOVE ALL OTHER ENCLOSURES BEFORE HAULING.

**PLEASE READ AND FOLLOW THE DETAILED INSTRUCTIONS THAT ARE ATTACHED.**



## Kawasaki Mule SX/610 Full Cab with Vinyl Windshield

### Installation Instructions

You have just purchased the best Enclosure for your Utility Terrain Vehicle available on the market today. Your Enclosure is made of Heavy Duty Fabric that is Water Repellent and resistant to Mildew, Ultra-Violet Sun Rays and Abrasion. With proper installation and care you can expect many years of long lasting fit, color and service life from your **3SI UTV Cab Enclosure**.

The enclosures for the Kawasaki Mule SX/610 were designed to be modular. Each enclosure panel can be installed independent of the other panels. As a result, you choose your level of coverage. For cold weather, you have the option of full coverage. When warm, store the doors and back panel and leave only the top on.

Install your enclosure in the following order:

- Back Panel
- Doors
- Top or Windshield/Top

**Step 1:** Remove your 3SI UTV Cab Enclosure and Velcro kit from the shipping box. Remove the vehicle's windshield and hard top.

**Step 2:** Raise the bed. Hold the back panel to the vehicle's cab frame. Note the location of sewn-in loop strips in the enclosure. Adhesive hook strips will be attached to the cab frame corresponding to the loop strips. Remove the backing from the adhesive hook strips and install as indicated in the adhesive hook table and pictures.

**Step 3:** Hold one of the door panels to the vehicle's cab frame. Note the location of sewn-in loop strips in the enclosure. Adhesive hook strips will be attached to the cab frame corresponding to the loop strips. Remove the backing from the adhesive hook strips and install as indicated in the adhesive hook table and pictures.


<b>Adhesive Hook Kit Contents/Placement</b>		
<b>BACK PANEL</b>		
<b>Reference</b>	<b>Qty-Size</b>	<b>Placement</b>
A	1-30"	Attach horizontally to the inside edge of the rear crossbar corresponding to the sewn in loop at the top of the back panel. Hang the back panel over the cross bar and attach the sewn in loop to the adhesive hook strip.
B	2-6"	Wrap horizontally around the top of the rear roll bars corresponding to the double-side straps. Wrap straps around the adhesive hook strips.
C	2-10"	Attach vertically to the outside edge of the rear roll bar uprights corresponding to the 10" webbing/loop tab. Attach the sewn-in loop on the tab to the adhesive hook strips.
D	2-6"	Wrap horizontally around the top of the rear roll bars corresponding to the double-side straps. Wrap straps around the adhesive hook strips.
E	1-18"	Attach horizontally to the cross bar behind the seats corresponding to the sewn-in loop in the middle of the lower panel. Attach the sewn-in loop to the adhesive hook strip.
F	2-4"	Wrap vertically to the bottom of the side grab handles corresponding to the sewn-in double-sided hook and loop straps near the bottom corners of the back panel. Wrap the double-side straps around the adhesive hook strips.
<b>DOOR PANELS</b>		
A	2-21"	Attach horizontally to the inside edge of the side roll bars corresponding to the sewn-in at the top of the door panels. Wrap the top of the door panels around the roll bar and attach to the adhesive hook strip.
B	2-6"	Wrap horizontally around the top of the rear roll bars corresponding to the double-side straps. Wrap straps around the adhesive hook strips.

C	2-4"	ONLY NEEDED IF BACK PANEL IS NOT INSTALLED. Attach vertically to the back of the rear roll bar uprights corresponding to the 4" strip of sewn-in loop just above the door zipper. Attach the sewn-in loop to the adhesive hook strips. If the back panel is installed, attach the sewn-in loop to the exposed hook along the edge of the rear panel.
D	2-36"	ONLY NEEDED IF BACK PANEL IS NOT INSTALLED. Attach vertically to the back of the rear roll bar uprights corresponding to the 36" strip of sewn-in loop just below the door zipper. Attach the sewn-in loop to the adhesive hook strips. If the back panel is installed, attach the sewn-in loop to the exposed hook along the edge of the rear panel.
E	2-15"	Attach diagonally to the body corresponding to the sewn-in loop along the rear/bottom of the door panels. Attach the sewn-in loop to the adhesive hook strips.
F	2-25"	Attach horizontally to the rocker panel area corresponding to the sewn-in loop strips along the bottom of the door panels. Attach the sewn-in loop to the adhesive hook strips.
G	2-4"	Wrap vertically to the side grab handles corresponding to the sewn-in double-sided hook and loop straps just below the side window. Wrap the double-side straps around the adhesive hook strips.
H	2-17"	Attach to the body corresponding to the sewn-in loop at the bottom of the front panel. Cut the adhesive strip as needed to create a curve matching the sewn-in loop. Attach the sewn-in loop at the bottom of the wing to the adhesive hook strips
I	2-8"	Attach vertically to the inside edge of the front roll bars corresponding to the 8" sewn-in webbing/loop tab near the bottom of the front roll bars. Attach the sewn-in loop on the tab to the adhesive hook strip. If the tab interferes with an existing windshield clamp, simply trim the tab with scissors and cauterize the edges with a lighter as you would with a nylon rope.
J	2-6"	Wrap horizontally around the front roll bars corresponding to the double-side straps. Wrap straps around the adhesive hook strips.
K	2-6"	Wrap horizontally around the front roll bars corresponding to the double-side straps. Wrap straps around the adhesive hook strips.
L	2-12"	Attach vertically to the inside edge of the front roll bars corresponding to the 12" sewn-in webbing/loop tab near the bottom of the front roll bars. Attach the sewn-in loop on the tab to the adhesive hook strip. If the tab interferes with an existing windshield clamp, simply trim the tab with scissors and cauterize the edges with a lighter as you would with a nylon rope.

M	2-8"	Attach vertically to the inside edge of the front roll bars corresponding to the 8" sewn-in webbing/loop tab near the bottom of the front roll bars. Attach the sewn-in loop on the tab to the adhesive hook strip. If the tab interferes with an existing windshield clamp, simply trim the tab with scissors and cauterize the edges with a lighter as you would with a nylon rope.
N	2-6"	Wrap around the front roll bars corresponding to the double-side straps at the top of the front panel. Wrap straps around the adhesive hook strips.
<b>WINDSHIELD TOP</b>		
O	6-8"	You will not need this Velcro for the full cab, Velcro is sewn on the outside of the door kit.
P	2-6"	You will not need this Velcro for the full cab, you have already installed Velcro for you back panel that will work for these straps.


## BACK PANEL



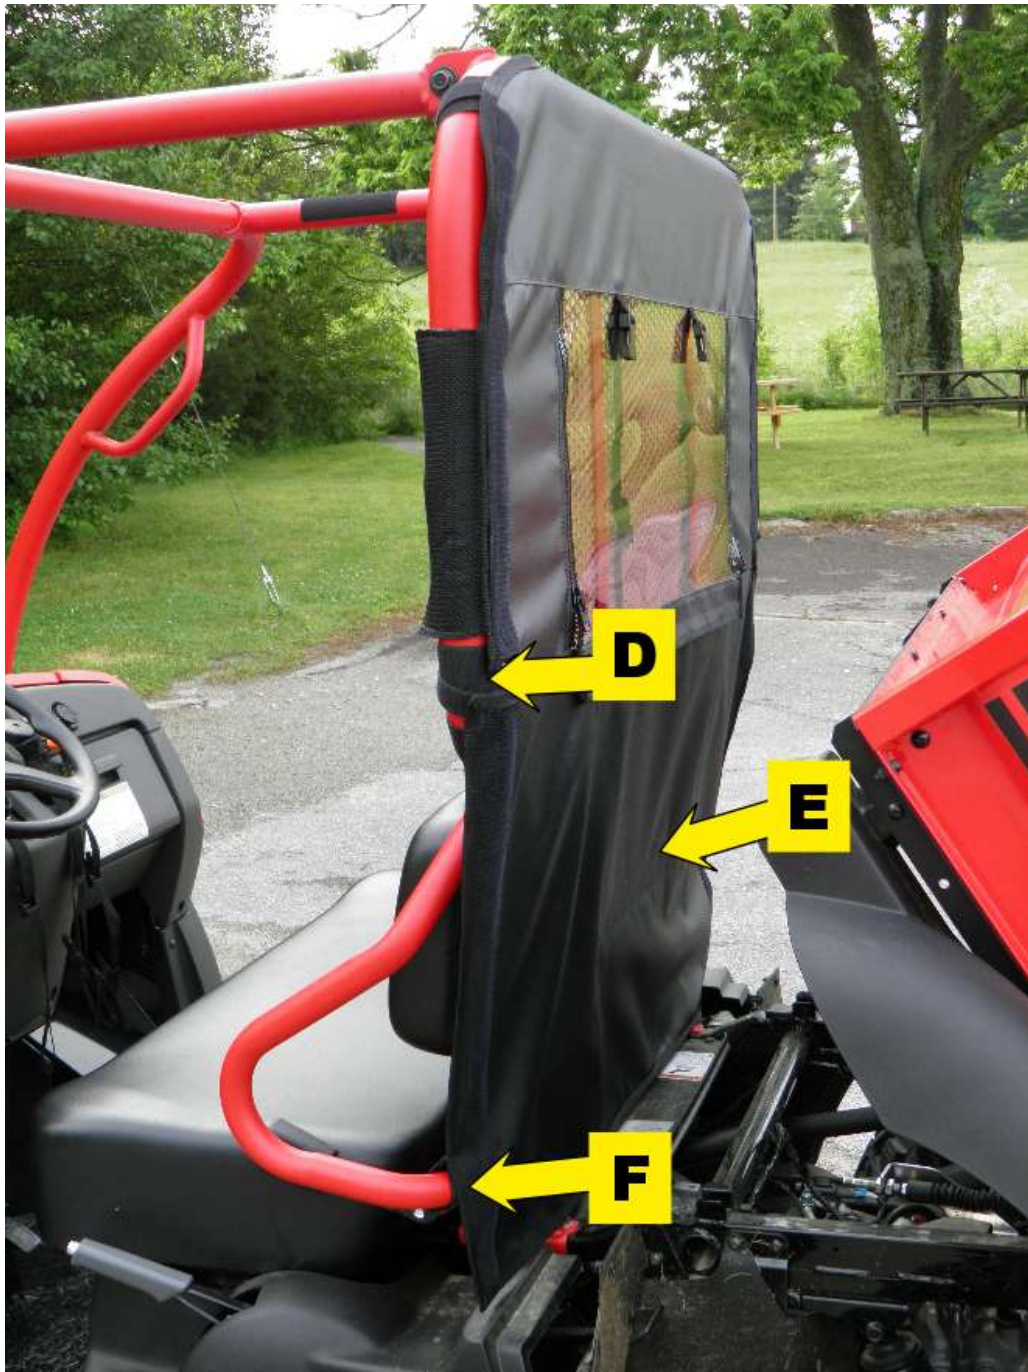

# DOOR PANELS



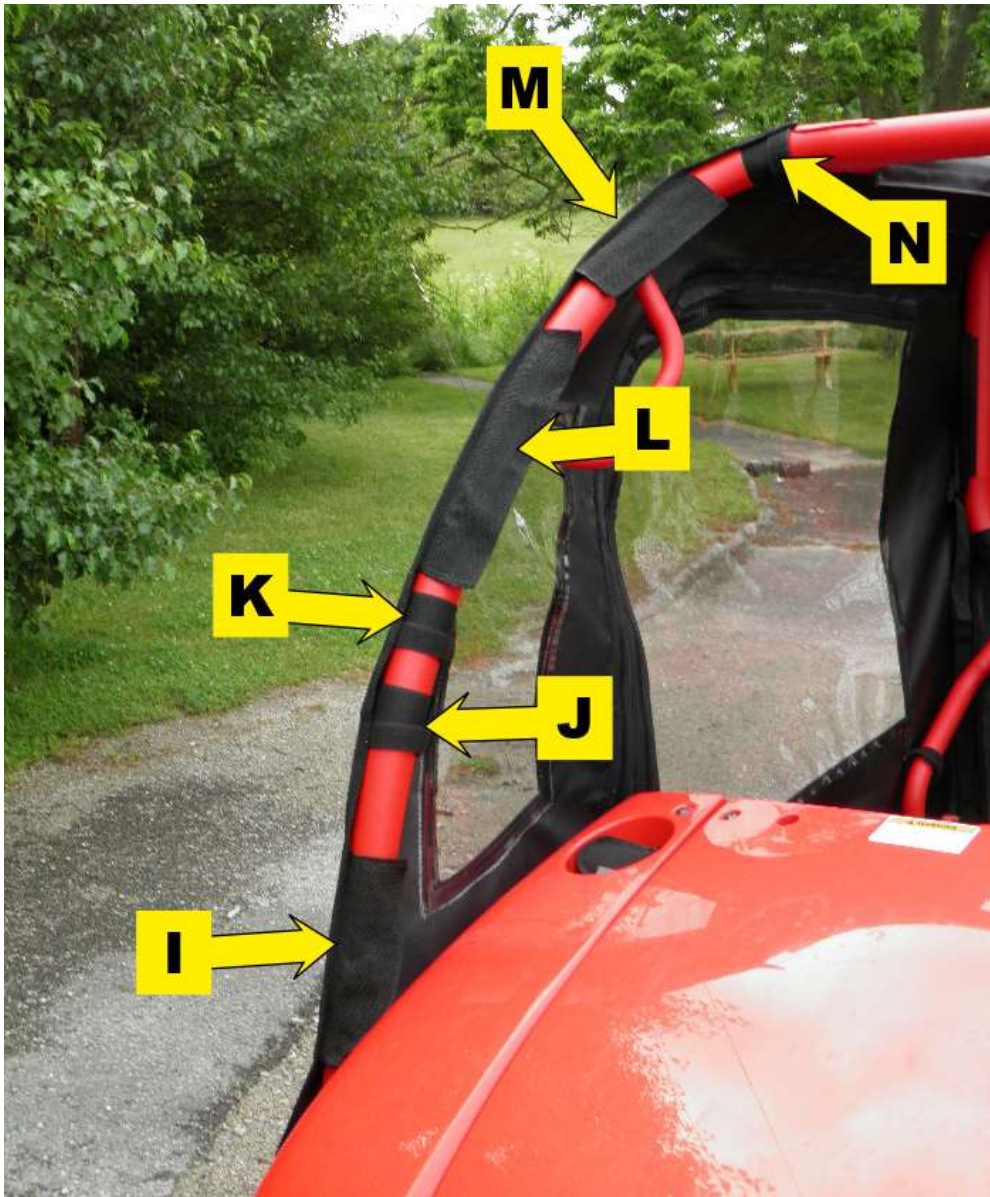

**Step 4:** After all adhesive hook strips are attached, begin attaching the enclosure to the cab frame. As you attach the hook and loop, square each panel to the frame. **PLEASE NOTE, FOR MAXIMUM ADHESION, ALLOW THE ADHESIVE HOOK TO ADHERE TO THE FRAME FOR 24 HOURS BEFORE PULLING AGAINST THE HOOK WITH THE LOOP STRIPS.**

**Step 5:** Install your windshield top. Put windshield top on utv. Install buckle straps in the back, wrap the end of the strap around the roll bar and connect the buckles, leave loose for adjustment.





Arrows point to the 8 inch tabs sewn on the inside of the windshield top. Velcro for these tabs are sewn on to the outside of the door kit. Attach the tabs to the Velcro sewn on the door kit.



The buckle straps in the back are installed by wrapping the end of the straps around the rollbar underneath the back panel and door kit. Insert the end of the straps through the cut outs made in the back panel and door kit. Then connect the buckles.



After you have attach the front buckles, work your way around the UTV tightening all the straps. You need to make more than one trip around to get every thing pulled tight and even.



# 3 STAR INDUSTRIES

## Care Instructions

### Heavy Duty Marine and Mil-Spec Military Fabric Cleaning

All 3SI UTV Enclosure Heavy Duty Marine and Military Camo fabrics are guaranteed against excessive loss of color or strength under normal exposure and use conditions. Periodic cleaning with a solution of 4 ounces of bleach and 2 ounces of soap (NOT DETERGENTS) in one gallon of water is recommended to minimize accumulations of dirt, bird droppings and other contaminants which can support surface mildew and stain fabric.

### Soft Vinyl Window Cleaning

3SI UTV Enclosure Vinyl Windows will remain clear and provide great visibility under normal exposure conditions if properly cleaned. Periodic cleaning with a solution of 1 ounce of soap in one gallon of water is all that is needed to maintain good window cleanliness and visibility. Caution: DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS or CHEMICALS OF ANY KIND TO CLEAN VINYL WINDOWS AS THESE WILL CLOUD THE WINDOWS. ALSO, NEVER RUB WINDOWS WITH A DRY CLOTH OR RAG.

### Storage Recommendations

Before removing the 3SI UTV Enclosure from your vehicle for storage, clean the Fabric and Vinyl Windows thoroughly as indicated above. Any dirt remaining on the Enclosure may scratch Vinyl Windows while in storage. Once the Enclosure has been cleaned it should be placed on a large flat surface. Lay the Enclosure out so that Vinyl Windows are in a flat position. Fold the doors over the rear panel first then fold the top and windshield on top of the doors keeping the Vinyl Windows flat. Caution: **FOLDING VINYL WINDOWS WILL CAUSE PERMANENT CREASE DAMAGE AND WILL VOID ALL WARRANTIES.** Once the Enclosure is folded keeping all Vinyl Windows flat, begin rolling the Enclosure into an 8" roll. Place the 8" roll into a box and store at normal room temperature. To ensure long life of your enclosure it is best not to store in extreme temperatures.

### Hauling

The ONLY products manufactured by 3SI UTV that can be hauled while installed are the hard windshields, full cab enclosures, and door/rear window combos with top and windshield installed. **However, the full cab enclosures and door/rear window combos should be tied down before hauling.** Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. NEVER HAUL INSTALLED SOFT TOPS, WINDSHIELD TOP COMBOS, AND SUMMER CABS. **REMOVE BEFORE HAULING.**