



MAHINDRA ROXOR

FULL CAB

Your enclosure is made of heavy duty fabric that is water repellent and resistant to mildew, ultra-violet rays and abrasion.

Surface Preparation Instructions and Guidelines

Cleaning: To achieve a strong bond between Velcro adhesive and UTV surface, you must clean the surface. Use a mixture of 50% alcohol and 50% water to remove dirt, mud and dust from roll bars and plastic body components. Let dry. Repeat this process 3 times.

The adhesive hook should be applied at a temperature of 70 degrees or above.

Bond between UTV and adhesive hook is dependent upon the amount of adhesive to surface contact development. Firm application pressure develops a better adhesive contact and improves bond strength.

After application, the bond strength increases and approaches the ultimate bond strength after 72 hours. Bond strength build up: 20 min equals 50% bond strength, 1 hour equals 75% bond strength, one day equals 90% bond strength, and 3 days equals 100% bond strength.

More tips for installation.

Two is better than one: We recommend a second person be involved for the installation process. Getting the panel in the correct position takes some pulling and tugging, we find the process runs smoother when there are two people pulling.

Test adhesion: Use a small piece of Velcro, remove backing and adhere to roll bars. Wait 20 minutes, Velcro should already be difficult to remove.

Still having trouble with adhesion: If Velcro is still not adhering to the roll bars, use a piece of hook (rough side of Velcro) to "rough up" the surface of your roll bar. We do not recommend this for the plastic body of your UTV, it will scratch.

Unsure about Velcro placement: With-out removing the white backing, attach the Velcro to your enclosure panel. Hold panel up to the UTV and note the area that the Velcro should attach. You can use the double-sided straps with-out Velcro to help hold up the panel while you remove the white backing and adhere sticky Velcro. We will send extra Velcro that can be used to hold the enclosure to the cab frame for easy notation of Velcro placement.

Attaching panel: Attach the panel top first, then work your way around the panel pulling the tabs and sticking them to the corresponding adhesive Velcro. The Webbing (black trim) of the panel should align to the middle of the roll bar.

Installing with Windshield and Hard Top.

If you have a windshield and or hard top on your UTV, you will need to remove it before installing the door and rear panel. After the installation of your enclosure is complete you will then reinstall the windshield and hard top.

If clamps for the windshield or hard top are interfering with the sewn-on Velcro tabs or straps on your enclosure, you can modify the tabs and straps easily by cutting them to fit. Mark where the tabs need to be cut to accommodate your windshield or hard tops clamps or bolts. Cut the tabs and burn the edges with a lighter to prevent unraveling. Do not cut into the binding (darker black trim around your door panel).

Installation Instructions

Step 1: Remove your 3SI UTV Cab Enclosure and Velcro kit from the shipping box.

Step 2: Remove existing windshield and hard top.

Step 3: Clean all surfaces on which you will be placing the adhesive Velcro according to the surface preparation instructions. Wait until the surfaces are dry.

Step 4: Remove the backing from the adhesive hook strips and install as indicated in the following adhesive hook table and pictures. Press firmly.

Step 5: Wait 72 hours! This step is very important to the life of your Velcro. Waiting the full 72 hours will ensure that your Velcro and enclosure will stay on in rain, sleet, snow or mud.

Step 6: After all adhesive Velcro strips are attached, begin attaching each panel to the cab frame.

Step 7: After all panels are attached work your way around the UTV remove, pull, and reattach, each Velcro tabs to achieve a tight fit. You may need to do this a few times.

Step 8: When your enclosure is in the correct position the binding or trim around the panels will rest in the center of the roll bar. If you have a windshield the binding, will rest along the edge of your windshield.

Step 9: Re-install your windshield, and hard top.

See enclosed Product Care sheet for instructions on how to properly care for your 3SI UTV Enclosure.

BACK PANEL



A

PICTURE
SHOWS
SEWN
TABS
STRAPS



THE
ON
AND
THAT

D

CORRESPOND TO THE VELCRO CHART

ADHESIVE VELCRO CHART

Reference	Quantity/Size	Placement/Usage
A	1-53"	Attach horizontally to the top rear roll bar, facing the inside of the cab. (Figure 1)
B	2-32"	Attach vertically to the back side roll bars facing the outside of the cab. (Figure 2)
C	2-17"	Attach vertically back side roll bars inside the bed of the UTV. (Figure 3)
D	5 ON THE BOTTOM	Magnets are sewn into the bottom of the back panel, they will stick to the bottom of the UTV bed to hold the back panel in place. (NOT PICTURED)

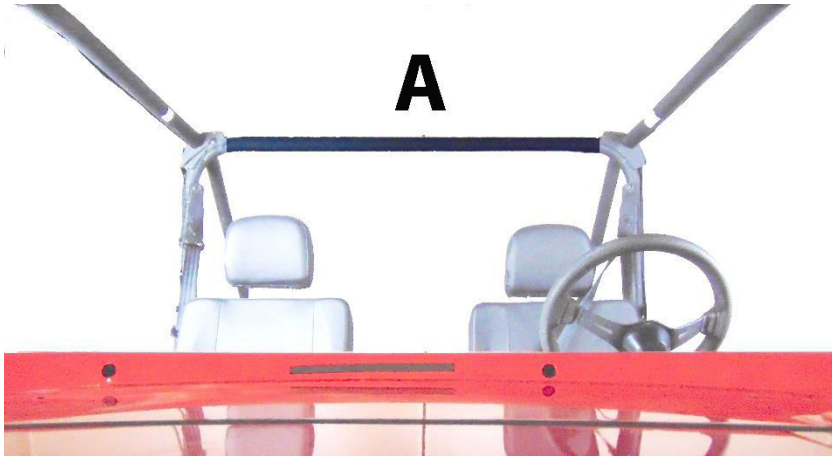


Figure 1: Shows position of 53" Velcro strip A. Wrap the top portion of the back panel around the top of the roll bar and attach sewn on Velcro to adhesive Velcro.

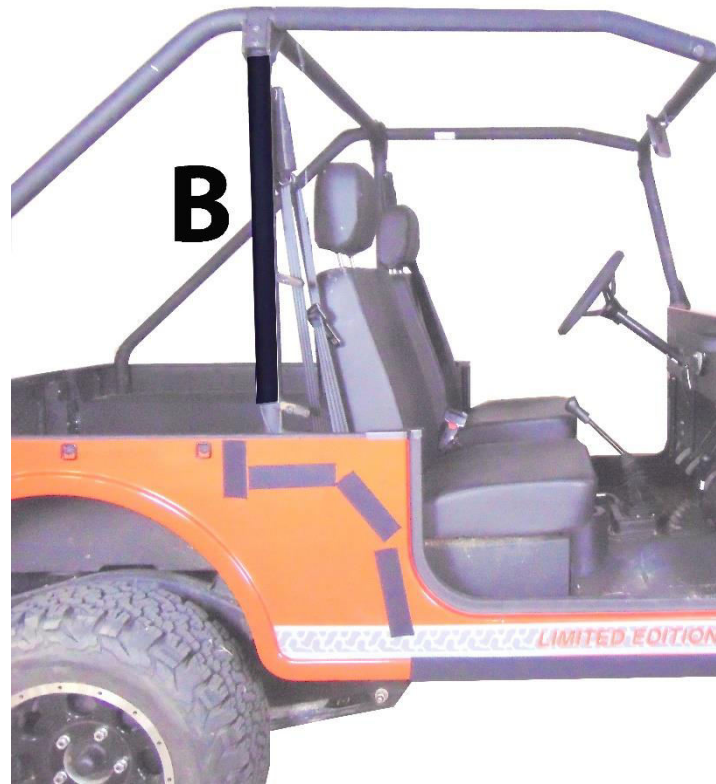


Figure 2: Shows position of 32" Velcro strips B. Wrap the edge of the back panel around the side of the roll bar. The drivers side will get the same strip in the same position.



Figure 3: Shows position of 17" Velcro strip C. The bottom back of the back panel will attach to this Velcro strip.

MAHINDRA ROXOR

Door Panels



Passenger Side (Inside)



Drivers Side (Inside)

Pictures show the sewn on Velcro tabs and straps that correspond to the Velcro chart.



Passenger Side (Inside)



Drivers Side (Inside)

ADHESIVE HOOK TABLE

Door Kit

Reference	Quantity/Size	Placement/Usage
A	2-36"	Attach horizontally to the outside edge of the top side roll bars. A strip of Velcro has been sewn on to the door for this adhesive strip. Line the trim on the door kit up with the top of the machine and attach sewn on strip to adhesive strip. When the door kit is lined up straight you will then wrap the straps around the top of the roll bar and attach to the same adhesive Velcro strip. (Figure 1 and Figure 7)
B	2-21"	Attach vertically to front side roll bars facing the outside of the UTV. A strip of Velcro has been sewn on to the door for this adhesive strip. Line the trim on the door kit up with the forward edge of the roll bar and attach sewn on strip to adhesive strip. When the door kit is lined up straight you will then wrap the straps around the roll bar and attach to the same adhesive Velcro strip. (Figure 2 and Figure 7)
C	2-29"	These strips are included for use of the doors independently from the back panel. When using back panel and door kit you will attach tab C to Velcro already sewn on to the back panel. (Figure 3)
D	2-4"	Attach vertically to the outside body of the UTV. (Figure 4)
E	2-7"	Attach horizontally to the outside body of the UTV at a 90 degree angle to strip D. (Figure 4)
F	2-8"	Attach at an angle to the outside body of the UTV. (Figure 4)
G	2-8"	Attach vertically to the outside body of the UTV. (Figure 4)
H	2-6"	Attach to the metal plate on the side of the UTV (Figure 5)
I	2-8"	Attach between factory bolts on outside of the UTV. (Figure 5)
J	2-7"	Attach below strip I on the outside of the UTV. (Figure 5)
K	2-33"	Attach horizontally across the bottom "floor" outside body of the UTV. (Figure 6)

A



Figure 1: Shows placement of 36" Velcro strips A.

B



Figure 2: Shows placement of 21" Velcro strips B.

C



Figure 3: Shows Velcro sewn on the back panel. The tabs on the back of your doors will wrap around and attach to the sewn on Velcro strip.

D E F G



Figure 4: Shows placement of Velcro strips D E F and G.

H

I

J



Figure 5: Photo shows placement of Velcro strips H I and G.

K



Figure 6: Shows position of Velcro strips K.



Figure 7: Sewn on Velcro strips on the top and front of the door should be lined up first with the door kits binding resting on the edge of the roll bar. Once the door kit is lined up properly you may then wrap the straps around the bar and attach to adhesive Velcro.

Mahindra Roxor

TOP CAP



PICTURE SHOWS THE TENSION STRAPS ATTACHED TO YOUR TOP CAP. PULL THE TENSION STRAPS TO ADJUST THE POSITION OF YOUR TOP CAP.

THE DOUBLE-SIDED STRAP IS CIRCLED
YOU WILL CONNECT THIS STRAP TO THE
VELCRO YOU INSTALL ON YOUR MACHINE



ADHESIVE HOOK TABLE

REFERENCE	QUANTITY/SIZE	PLACEMENT
A	2-6"	PLACE HORIZONTALLY ON THE BACK INSIDE THE CAB FRAME BELOW CENTER CUT OUT (FIGURE 1)
B	N/A	WRAP THROUGH THE LARGE ON THE BUMPER. (FIGURE 2)



Figure 2: WRAP THESE VELCRO STRIPS AROUND THE ROLL BAR AND ATTACH DOUBLE-SIDED STRAP.



Figure 1: WRAP THE DOUBLE SIDED STRAPS THROUGH THE LARGE ROUND HOLE IN THE BUMPER.



Figure 3: When installation is complete your enclosure should resemble the door in the photo.



Figure 4: Reinstall your windshield after the door kit and straps for the top cap have been installed. Set the windshield over the straps on the door and the double sided straps for the top cap. Secure windshield into place and then attach the top caps tension straps to the double side straps. Pull top cap into place with the visor of the top cap pulled down over the windshield. This will be a tight fit, walk around the vehicle pulling the straps down evenly.



Care Instructions

Heavy Duty Marine and Mil-Spec Military Fabric Cleaning

All 3SI UTV Enclosure Heavy Duty Marine and Military Camo fabrics are guaranteed against excessive loss of color or strength under normal exposure and use conditions. Periodic cleaning with a solution of 4 ounces of bleach and 2 ounces of soap (NOT DETERGENTS) in one gallon of water is recommended to minimize accumulations of dirt, bird droppings and other contaminants which can support surface mildew and stain fabric.

Soft Vinyl Window Cleaning

3SI UTV Enclosure Vinyl Windows will remain clear and provide great visibility under normal exposure conditions if properly cleaned. Periodic cleaning with a solution of 1 ounce of soap in one gallon of water is all that is needed to maintain good window cleanliness and visibility. Caution: DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS or CHEMICALS OF ANY KIND TO CLEAN VINYL WINDOWS AS THESE WILL CLOUD THE WINDOWS. ALSO, NEVER RUB WINDOWS WITH A DRY CLOTH OR RAG.

Storage Recommendations

Before removing the 3SI UTV Enclosure from your vehicle for storage, clean the Fabric and Vinyl Windows thoroughly as indicated above. Any dirt remaining on the Enclosure may scratch Vinyl Windows while in storage. Once the Enclosure has been cleaned it should be placed on a large flat surface. Lay the Enclosure out so that Vinyl Windows are in a flat position. Fold the doors over the rear panel first then fold the top and windshield on top of the doors keeping the Vinyl Windows flat. Caution: **FOLDING VINYL WINDOWS WILL CAUSE PERMANENT CREASE DAMAGE AND WILL VOID ALL WARRANTIES.** Once the Enclosure is folded keeping all Vinyl Windows flat, begin rolling the Enclosure into an 8" roll. Place the 8" roll into a box and store at normal room temperature. To ensure long life of your enclosure it is best not to store in extreme temperatures.

Hauling

The ONLY products manufactured by 3SI UTV that can be hauled while installed are the hard windshields, full cab enclosures, and door/rear window combos with top and windshield installed. However, the full cab enclosures and door/rear window combos should be tied down before hauling. Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. NEVER HAUL INSTALLED SOFT TOPS, WINDSHIELD TOP COMBOS, AND SUMMER CABS. REMOVE BEFORE HAULING.