



Installation Instructions

Thank you for purchasing a UTV enclosure manufactured in the USA with pride by 3SI UTV. Your enclosure is made of heavy duty fabric that is water repellent and resistant to mildew, ultra-violet rays and abrasion. With proper installation and care you can expect many years of service from your 3SI UTV enclosure.

SOME IMPORTANT NOTES BEFORE GETTING STARTED....

- The enclosure attaches to your UTV's cab frame with Velcro. The technical term for Velcro is hook and loop. Loop is the soft side and hook, the rough side. Loop has been sewn into the enclosure at various points. Adhesive hook has been supplied to attach to your cab frame, corresponding to the sewn-in loop. If you struggle with placement of the adhesive hook, with the enclosure held to the cab frame, note the locations of the sewn-in loop. The adhesive hook is attached to the cab frame at those locations.
- The adhesive hook should be applied at a temperature of 60 degrees or above. **For maximum adhesion, when the adhesive hook is in place, allow the adhesive to cure for 24 hours before attaching the loop to the hook.**
- Clean the surfaces the adhesive hook will be attached to before beginning installation. A light cleaning with mild soap and water is best. A little Windex works great. Do NOT wax or clean with a compound that leaves the frame slick. The adhesive hook will not stick to a slick surface. Again, a light cleaning is best.
- Your enclosure is not a "one size fits all" product. The enclosure was designed and manufactured specifically for your model UTV. As a result, the enclosure should fit square and snug to the cab frame.
- Periodic cleaning of your enclosure with mild soap and water is recommended to minimize accumulations of dirt.
- Clean the vinyl windows with mild soap, water, and a soft cloth to avoid scratches. DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS OR CHEMICALS TO CLEAN VINYL WINDOWS.
- Clean your enclosure and allow it to dry before removing for storage. **Never fold your enclosure to store.** Roll the enclosure to avoid creasing the vinyl windows. Creases in the vinyl windows cannot be removed. **CREASING THE VINYL WINDOWS VOIDS ALL WARRANTIES AND GUARANTEES.**
- The only enclosures manufactured by 3SI UTV that can be hauled when installed are Lexan windshields, full cab enclosures, and door/rear window combos with top and windshield installed. However, the enclosures should be tied down before hauling. Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. REMOVE ALL OTHER ENCLOSURES BEFORE HAULING.

PLEASE READ AND FOLLOW THE DETAILED INSTRUCTIONS THAT ARE ATTACHED.



Polaris Ranger Mid-Size Crew

Summer Cab

Installation Instructions

You have just purchased the best Enclosure for your Utility Terrain Vehicle available on the market today. Your Enclosure is made of Heavy Duty Fabric that is Water Repellent and resistant to Mildew, Ultra-Violet Sun Rays and Abrasion. With proper installation and care you can expect many years of long lasting fit, color and service life from your **3SI UTV Cab Enclosure**.

Step 1: Remove your 3SI UTV Cab Enclosure and Velcro kit from the shipping box.

Step 2: Place the enclosure over the vehicle's cab frame. Square and align the enclosure to the cab frame. Note the location of sewn-in loop strips in the enclosure. Adhesive hook strips will be attached to the cab frame corresponding to the loop strips. Position the adhesive strips to allow the enclosure to fit tight to the cab frame. Remove the backing from the adhesive hook strips and install as indicated in the following adhesive hook table and picture.

Adhesive Hook Kit Contents/Placement		
Reference	Qty-Size	Placement
No Ref	1-54"	Bottom of rear panel-Horizontal
A	2-6"	Near bottom of rear roll bar uprights corresponding to double side hook and loop straps-Wrap around bar-Horizontal
B	2-8"	Outside edge of rear uprights-Vertical
C	2-6"	Near top of rear roll bar uprights corresponding to double side hook and loop straps-Wrap around bar-Horizontal
D	2-6"	Near top of middle roll bar uprights corresponding to double side hook and loop straps-Wrap around bar-Horizontal
E	2-8"	Inside edge of side roll bar above front seat-Horizontal
F	6-8"	Front roll bar uprights corresponding to webbing/loop strips on either side of windshield-Attach to outside edge-Vertically
G	2-6"	Front roll bar uprights corresponding to webbing/loop strips on either side of windshield-Attach to outside edge-Vertically .



Step 3: After all adhesive hook strips are attached, begin attaching the enclosure to the cab frame. As you attach the hook and loop, square the enclosure to the frame. **PLEASE NOTE, FOR MAXIMUM ADHESION, ALLOW THE ADHESIVE HOOK TO ADHERE TO THE FRAME FOR 24 HOURS BEFORE PULLING AGAINST THE HOOK WITH THE LOOP STRIPS.**

Step 4: Pull the enclosure (each side of the front windshield) downward toward the front of the vehicle and attach the 8" and 6" webbing/loop tabs to the corresponding adhesive hook strips on the front roll bar uprights. Reposition the webbing/loop tabs to square the windshield to the cab frame.



Step 5: Fasten pre-attached enclosure front hood straps around the vehicle front bumper as shown in picture 5.1. Bringing the end of the straps up to the latch buckle, run the end through the back of the top buckle opening first and then thread through the front of the lower buckle opening as shown in picture 5.2. Tighten hood straps firmly as shown in picture 5.3. These steps should straighten out the front windshield.



Figure 5.1 – guide front Hood straps around bumper

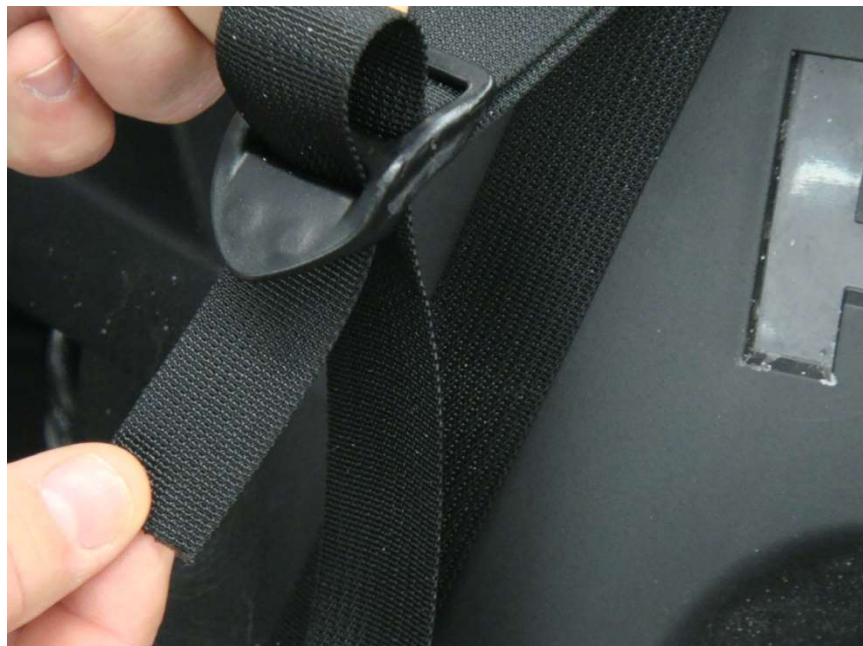


Figure 5.2 – thread straps through Hood Buckles



Figure 5.3 – Tighten Hood Straps by pulling down on the strap below the buckle

Step 6: Repeat any steps necessary to achieve a snug fit on the cab frame.



See enclosed Product Care sheet for instructions on how to properly care for your 3SI UTV Enclosure.



Care Instructions

Heavy Duty Marine and Mil-Spec Military Fabric Cleaning

All 3SI UTV Enclosure Heavy Duty Marine and Military Camo fabrics are guaranteed against excessive loss of color or strength under normal exposure and use conditions. Periodic cleaning with a solution of 4 ounces of bleach and 2 ounces of soap (NOT DETERGENTS) in one gallon of water is recommended to minimize accumulations of dirt, bird droppings and other contaminants which can support surface mildew and stain fabric.

Soft Vinyl Window Cleaning

3SI UTV Enclosure Vinyl Windows will remain clear and provide great visibility under normal exposure conditions if properly cleaned. Periodic cleaning with a solution of 1 ounce of soap in one gallon of water is all that is needed to maintain good window cleanliness and visibility. Caution: DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS or CHEMICALS OF ANY KIND TO CLEAN VINYL WINDOWS AS THESE WILL CLOUD THE WINDOWS. ALSO, NEVER RUB WINDOWS WITH A DRY CLOTH OR RAG.

Storage Recommendations

Before removing the 3SI UTV Enclosure from your vehicle for storage, clean the Fabric and Vinyl Windows thoroughly as indicated above. Any dirt remaining on the Enclosure may scratch Vinyl Windows while in storage. Once the Enclosure has been cleaned it should be placed on a large flat surface. Lay the Enclosure out so that Vinyl Windows are in a flat position. Fold the doors over the rear panel first then fold the top and windshield on top of the doors keeping the Vinyl Windows flat. Caution: **FOLDING VINYL WINDOWS WILL CAUSE PERMANENT CREASE DAMAGE AND WILL VOID ALL WARRANTIES.** Once the Enclosure is folded keeping all Vinyl Windows flat, begin rolling the Enclosure into an 8" roll. Place the 8" roll into a box and store at normal room temperature. To ensure long life of your enclosure it is best not to store in extreme temperatures.

Hauling

The ONLY products manufactured by 3SI UTV that can be hauled while installed are the hard windshields, full cab enclosures, and door/rear window combos with top and windshield installed. **However, the full cab enclosures and door/rear window combos should be tied down before hauling.** Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. NEVER HAUL INSTALLED SOFT TOPS, WINDSHIELD TOP COMBOS, AND SUMMER CABS. **REMOVE BEFORE HAULING.**

