



## **Polaris General Crew**

### **FULL CAB**

Your enclosure is made of heavy duty fabric that is water repellent and resistant to mildew, ultra-violet rays and abrasion.

### **Surface Preparation Instructions and Guidelines**

**Cleaning:** To achieve a strong bond between Velcro adhesive and UTV surface, you must clean the surface. Use a mixture of 50% alcohol and 50% water to remove dirt, mud and dust from roll bars and plastic body components. Let dry. Repeat this process 3 times.

The adhesive hook should be applied at a temperature of 70 degrees or above.

Bond between UTV and adhesive hook is dependent upon the amount of adhesive to surface contact development. Firm application pressure develops a better adhesive contact and improves bond strength.

After application, the bond strength increases and approaches the ultimate bond strength after 72 hours. Bond strength build up: 20 min equals 50% bond strength, 1 hour equals 75% bond strength, one day equals 90% bond strength, and 3 days equals 100% bond strength.

### **More tips for installation.**

**Two is better than one:** We recommend a second person be involved for the installation process. Getting the panel in the correct position takes some pulling and tugging, we find the process runs smoother when there are two people pulling.

**Test adhesion:** Use a small piece of Velcro, remove backing and adhere to roll bars. Wait 20 minutes, Velcro should already be difficult to remove.

**Still having trouble with adhesion:** If Velcro is still not adhering to the roll bars, use a piece of hook (rough side of Velcro) to "rough up" the surface of your roll bar. We do not recommend this for the plastic body of your UTV, it will scratch.

**Unsure about Velcro placement:** With-out removing the white backing, attach the Velcro to your enclosure panel. Hold panel up to the UTV and note the area that the Velcro should attach. You can use the double-sided straps with-out Velcro to help hold up the panel while you remove the white backing and adhere sticky Velcro. We will send extra Velcro that can be used to hold the enclosure to the cab frame for easy notation of Velcro placement.

**Attaching panel:** Attach the panel top first, then work your way around the panel pulling the tabs and sticking them to the corresponding adhesive Velcro. The binding (black trim) of the panel should align to the middle of the roll bar.

## Installing with Windshield and Hard Top.

If you have a windshield and or hard top on your UTV, you will need to remove them before installing the door panels. After the installation of your enclosure is complete you will then reinstall the windshield and hard top.

If clamps for the windshield or hard top are interfering with the sewn-on Velcro tabs or straps on your enclosure you can modify the tabs and straps easily by cutting them to fit. Mark where the tabs need to be cut to accommodate your windshield or hard tops clamps or bolts. Cut the tabs and burn the edges with a lighter to prevent unraveling. Do not cut into the binding (darker black trim around your door panel).

### Installation Instructions

**Step 1:** Remove your 3SI UTV Cab Enclosure and Velcro kit from the shipping box.

**Step 2:** Remove existing windshield and hard top.

**Step 3:** Clean all surfaces on which you will be placing the adhesive Velcro according to the surface preparation instructions. Wait until the surfaces are dry.

**Step 4:** Remove the backing from the adhesive hook strips and install as indicated in the following adhesive hook table and pictures. Press firmly.

**Step 5: Wait 72 hours!** This step is very important to the life of your Velcro. Waiting the full 72 hours will ensure that your Velcro and enclosure will stay on in rain, sleet, snow or mud.

**Step 6:** After all adhesive Velcro strips are attached, begin attaching each panel to the cab frame.


**Step 7:** After all panels are attached work your way around the UTV remove, pull, and reattach each Velcro tab to achieve a tight fit. You may need to do this a few times.

**Step 8:** When your enclosure is in the correct position the binding or trim around the panels will rest in the center of the roll bar. If you have a windshield the binding, will rest along the edge of your windshield.

**Step 9:** Re-install your windshield and hard top.

**See enclosed Product Care sheet for instructions on how to properly care for your 3SI UTV Enclosure.**

## BACK PANEL

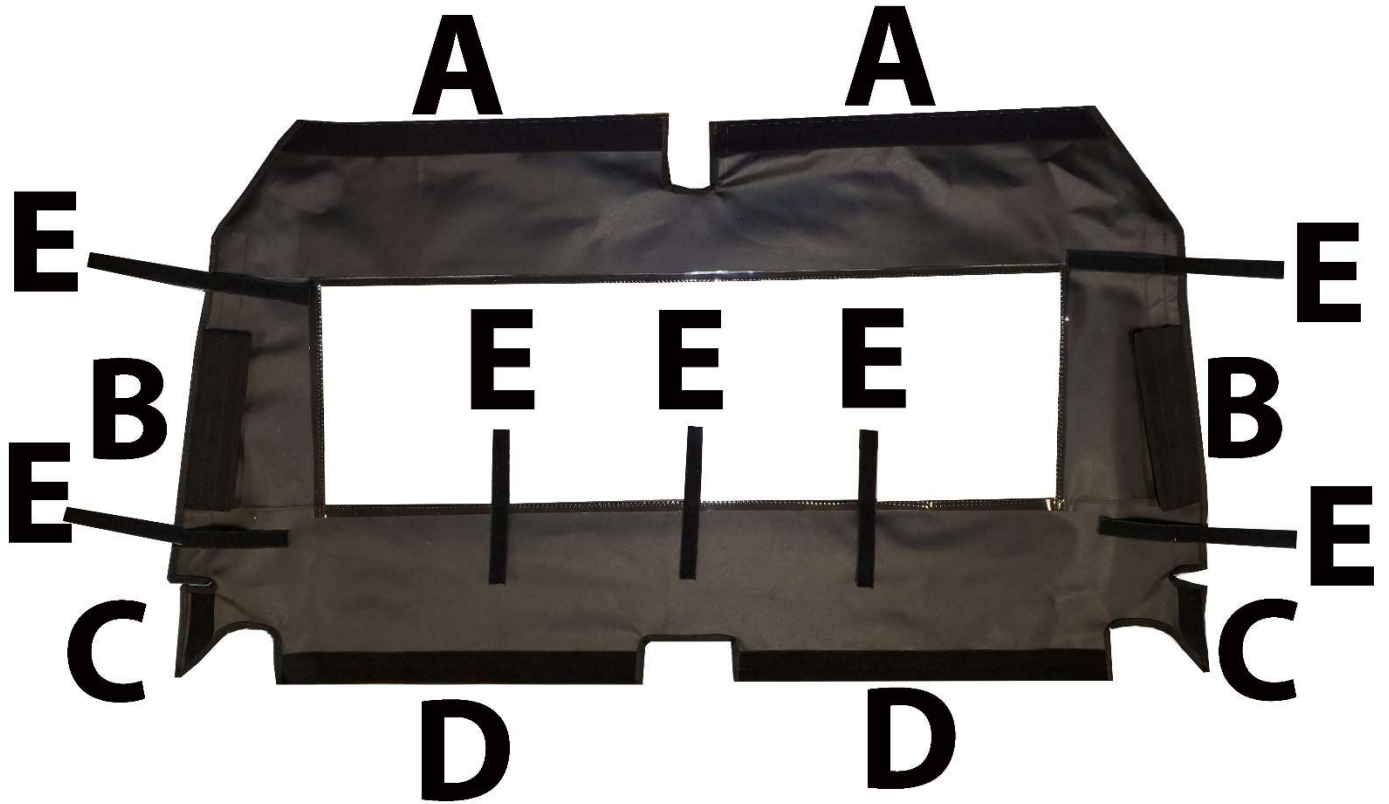

<b>Adhesive Hook Kit Contents/Placement</b>		
<b>Back panel</b>		
<b>Reference</b>	<b>Qty/Size</b>	<b>Placement</b>
A	2-21"	Attach horizontally to the inside edge of the rear cross bar. Wrap top of back panel over the rollbar and attach the sewn-in loop strip to the adhesive hook strip. (Figure 1)
B	2-10"	Attach to the middle the back side roll bar. (Figure 2)
C	2-4"	Attach vertically to the outside of the back side rollbars. (Figure 3)
D	2-21"	Attach across the back of the UTV behind the bed. (Figure 4)
E	9-6"	Wrap around rollbar in various place as shown. (Figures 5 and 6)

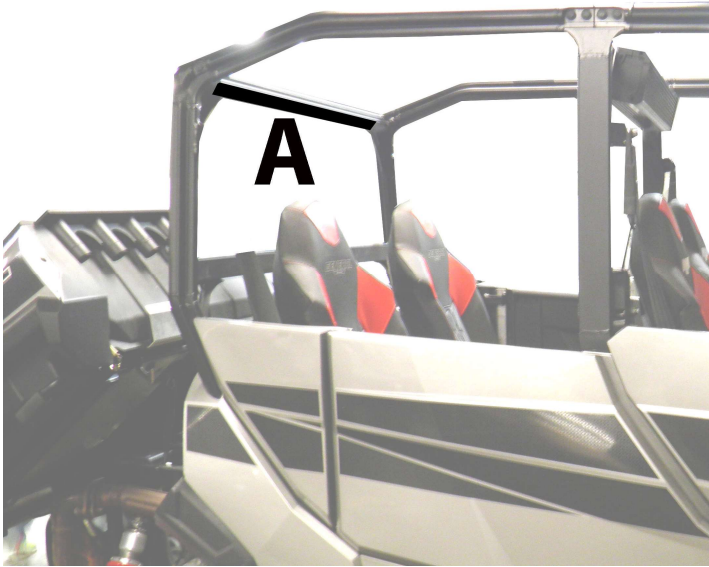


Figure 1: Shows placement of Velcro strip A.

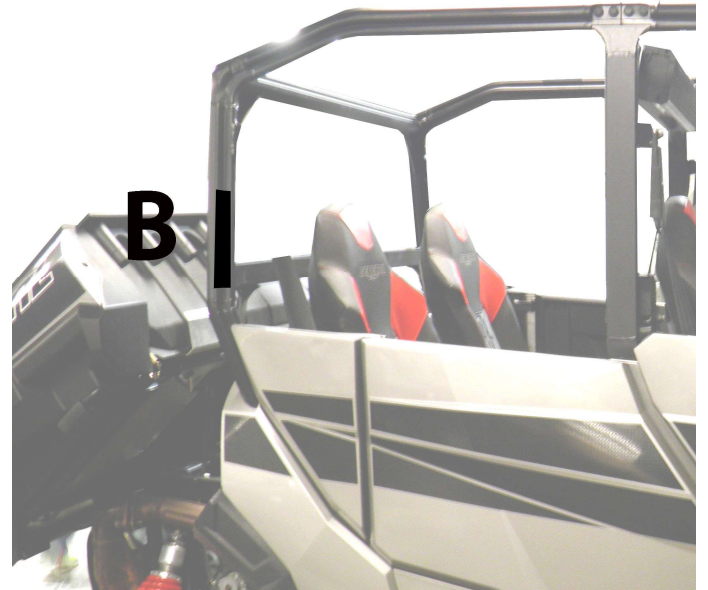


Figure 2: Shows position of Velcro strips B. One strip will be placed on the drivers side of the cab as well.



Figure 3: Shows placement of Velcro strip C, the drivers side will need a strip c as well.

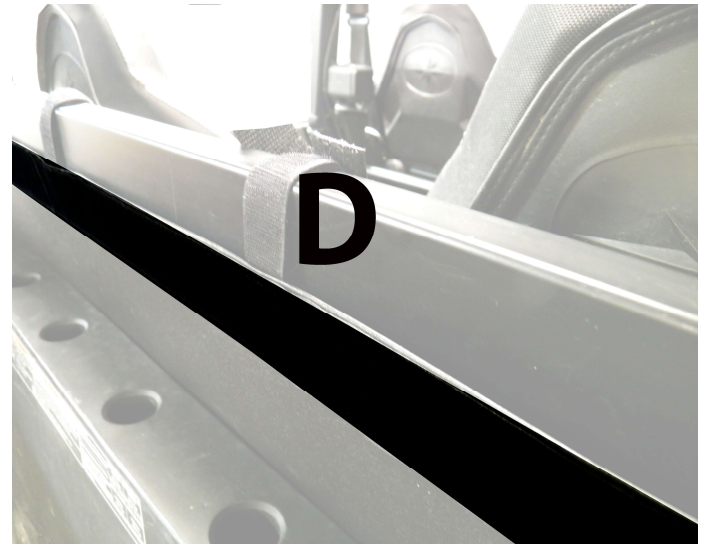


Figure 4: Shows placement of Velcro strip D, all the way across the back of the UTV, behind the bed.



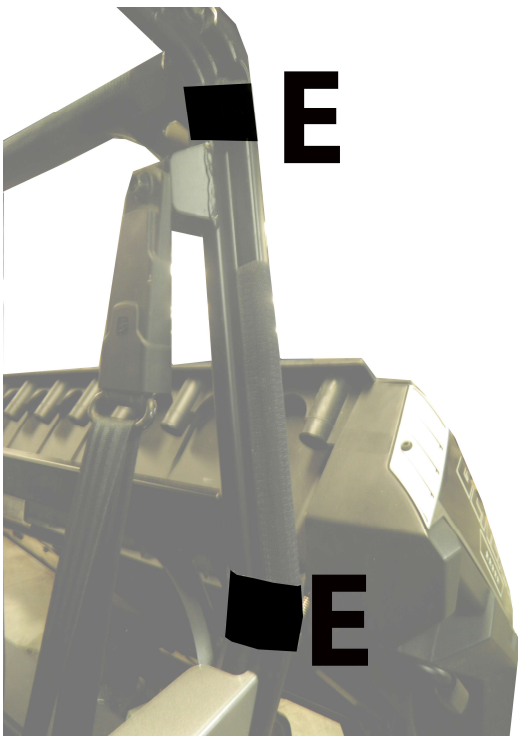


Figure 5: Shows placement of Velcro strips E. Strips E should be placed on the opposite of the UTV.



Figure 6: Shows placement of Velcro strips E.



VELCRO IS SEWN DOWN THE SIDES OF THE BACK PANEL, THE DOOR KIT HAS TABS SEWN ON TO THE DOOR KIT THAT WILL STICK TO THIS VELCRO.

## DOOR PANEL



### ADHESIVE HOOK TABLE

REFERENCE	QUANTITY/SIZE	PLACEMENT
A	2-12"	Inside of the front facing roll bar. (FIGURE 1)
B	2-5"	Top of the front facing roll bar. (FIGURE 1)
C	2-6"	Top of the visor. Arrows are pointing to the area where the Velcro should be attached. (FIGURE 1)
D	2-13"	Inside of the top side roll bar. (FIGURE 2)
E	2-6"	In the center of the top side rollbar towards the inside of the cab. (FIGURE 4)
F	2-18"	Inside of the top side roll bar. (FIGURE 2)
G	2-3"	Back of the top side roll bar. (FIGURE 2)
H	2-5"	Back of the top side roll bar. (FIGURE 2)
I	2-18"	Down the back roll bar. (FIGURE 3)
J	2-37"	Out side of the UTV on the top area of the factory door. (FIGURE 4)
K	2-5"	Diagonally following the angle of the factory door. (FIGURE 4)
L	2-6"	Wrap around the roll bar for the double sided straps. (FIGURE 4)
M	2-6"	Wrap around the roll bar for the double sided straps(FIGURE 4)
N	2-7"	Follow the back angle of the front factory door. (FIGURE 4)
O	2-35"	Across the top of the front factory door. (FIGURE 4)
P	2-7"	Follow the angle of the door kit at the front of the front factory door. (FIGURE 4)
Q	2-6"	Wrap around the bottom of the front facing roll bar, for the double sided strap. For extra hold. (FIGURE 4)



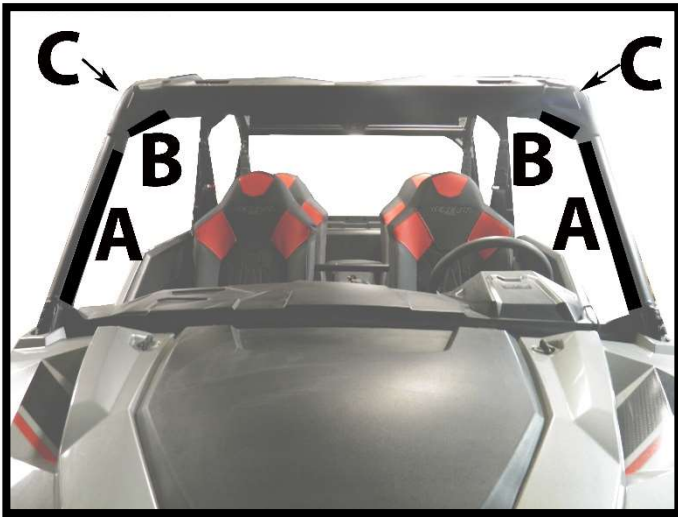


Figure 1: Wrap doors tabs around the roll bar and attach to adhesive Velcro.



Figure 2: these strip should be place facing the inside of the UTV



Figure 3: VELCRO IS SEWN ON TO YOUR BACK PANEL FOR THIS STEP.

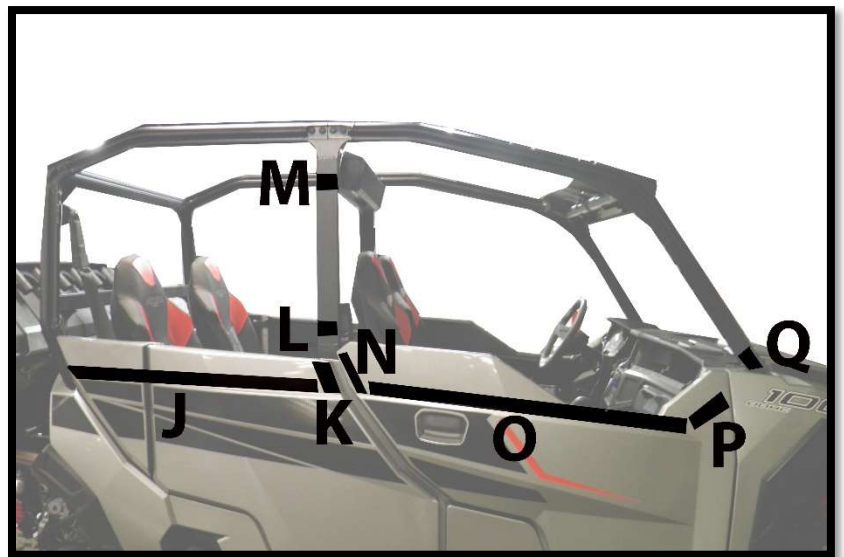


Figure 4: the strips placed along the outside of the door are optional. You may choose to install the snaps instead. Snaps will screw directly into the utv. Snaps should be installed after the doors are installed and are in the desired position. Snaps are permanent.



## TOP CAP



PICTURE SHOWS THE TENSION STRAPS ATTACHED TO YOUR TOP CAP. PULL THE TENSION STRAPS TO ADJUST THE POSITION OF YOUR TOP CAP.

THE DOUBLE-SIDED STRAP IS CIRCLED  
YOU WILL CONNECT THIS STRAP TO THE  
VELCRO YOU INSTALL ON YOUR MACHINE





# ADHESIVE HOOK TABLE

REFERENCE	QUANTITY/SIZE	PLACEMENT
A	2-6"	WRAP AROUND ROLL BAR, FOR DOUBLE SIDED STRAP. (FIGURE 1)
B	2-6"	WRAP AROUND ROLL BAR, FOR DOUBLE SIDED STRAP. (FIGURE 1)
C	2-6"	WRAP AROUND ROLL BAR, FOR DOUBLE SIDED STRAP. (FIGURE 1)
D	1-40"	INSTALL ADHESIVE VELCRO UNDERNEATH THE FRONT VISOR. (FIGURE 2)
E	4-8"	THESE STRIPS ARE TO BE INSTALLED WHEN NOT USING THE DOOR KIT, WHEN DOOR KIT IS INSTALLED WITH THE TOP CAP JUST TUCK THESE TABS UNDER THE TOP CAP. (NOT PICTURED)

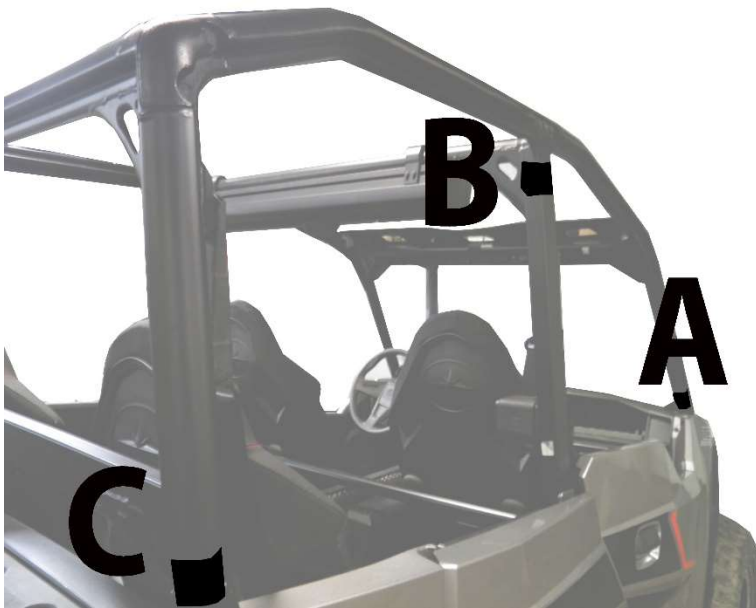


Figure 2: WRAP THESE VELCRO STRIPS AROUND THE ROLL BAR AND ATTACH DOUBLE-SIDED STRAP. THERE ARE CUT OUTS IN THE BACK PANEL AND DOOR KIT THAT ALLOW FOR INSTALLATION OF THE TOP CAPS REAR STRAPS. THE FRONT STRAP WILL BE INSTALLED UNDER THE WINDSHIELD AT THE BOTTOM OF THE SOFT DOOR.



Figure 3: PLACE STRIP ALL THE WAY ACROSS THE VISOR. FOLD THE FRONT OF THE TOP CAP OVER THE FRONT OF THE VISOR AND ATTACH TO THE VELCRO.

*This photo shows the cutouts for the top cap straps.*





## Cleaning instructions

### Heavy Duty Marine and Mil-Spec Military Fabric Cleaning

All 3SI UTV Enclosure Heavy Duty Marine and Military Camo fabrics are guaranteed against excessive loss of color or strength under normal exposure and use conditions. Periodic cleaning with a solution of 4 ounces of bleach and 2 ounces of soap (NOT DETERGENTS) in one gallon of water is recommended to minimize accumulations of dirt, bird droppings and other contaminants which can support surface mildew and stain fabric.

### Soft Vinyl Window Cleaning

3SI UTV Enclosure Vinyl Windows will remain clear and provide great visibility under normal exposure conditions if properly cleaned. Periodic cleaning with a solution of 1 ounce of soap in one gallon of water is all that is needed to maintain good window cleanliness and visibility. Caution: DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS or CHEMICALS OF ANY KIND TO CLEAN VINYL WINDOWS AS THESE WILL CLOUD THE WINDOWS. ALSO, NEVER RUB WINDOWS WITH A DRY CLOTH OR RAG.

### Storage Recommendations

Before removing the 3SI UTV Enclosure from your vehicle for storage, clean the Fabric and Vinyl Windows thoroughly as indicated above. Any dirt remaining on the Enclosure may scratch Vinyl Windows while in storage. Once the Enclosure has been cleaned it should be placed on a large flat surface. Lay the Enclosure out so that Vinyl Windows are in a flat position. Fold the doors over the rear panel first then fold the top and windshield on top of the doors keeping the Vinyl Windows flat. Caution: **FOLDING VINYL WINDOWS WILL CAUSE PERMANENT CREASE DAMAGE AND WILL VOID ALL WARRANTIES.** Once the Enclosure is folded keeping all Vinyl Windows flat, begin rolling the Enclosure into an 8" roll. Place the 8" roll into a box and store at normal room temperature. To ensure long life of your enclosure it is best not to store in extreme temperatures.

### Hauling

The ONLY products manufactured by 3SI UTV that can be hauled while installed are the hard windshields, full cab enclosures, and door/rear window combos with top and windshield installed. **However, the full cab enclosures and door/rear window combos should be tied down before hauling.** Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. NEVER HAUL INSTALLED SOFT TOPS, WINDSHIELD TOP COMBOS, AND SUMMER CABS. REMOVE BEFORE HAULING.