



Installation Instructions

Thank you for purchasing a UTV enclosure manufactured in the USA with pride by 3SI UTV. Your enclosure is made of heavy duty fabric that is water repellent and resistant to mildew, ultra-violet rays and abrasion. With proper installation and care you can expect many years of service from your 3SI UTV enclosure.

SOME IMPORTANT NOTES BEFORE GETTING STARTED....

- The enclosure attaches to your UTV's cab frame with Velcro. The technical term for Velcro is hook and loop. Loop is the soft side and hook, the rough side. Loop has been sewn into the enclosure at various points. Adhesive hook has been supplied to attach to your cab frame, corresponding to the sewn-in loop. If you struggle with placement of the adhesive hook, with the enclosure held to the cab frame, note the locations of the sewn-in loop. The adhesive hook is attached to the cab frame at those locations.
- The adhesive hook should be applied at a temperature of 60 degrees or above. **For maximum adhesion, when the adhesive hook is in place, allow the adhesive to cure for 24 hours before attaching the loop to the hook.**
- Clean the surfaces the adhesive hook will be attached to before beginning installation. A light cleaning with mild soap and water is best. A little Windex works great. Do NOT wax or clean with a compound that leaves the frame slick. The adhesive hook will not stick to a slick surface. Again, a light cleaning is best.
- Your enclosure is not a "one size fits all" product. The enclosure was designed and manufactured specifically for your model UTV. As a result, the enclosure should fit square and snug to the cab frame.
- Periodic cleaning of your enclosure with mild soap and water is recommended to minimize accumulations of dirt.
- Clean the vinyl windows with mild soap, water, and a soft cloth to avoid scratches. DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS OR CHEMICALS TO CLEAN VINYL WINDOWS.
- Clean your enclosure and allow it to dry before removing for storage. **Never fold your enclosure to store.** Roll the enclosure to avoid creasing the vinyl windows. Creases in the vinyl windows cannot be removed. **CREASING THE VINYL WINDOWS VOIDS ALL WARRANTIES AND GUARANTEES.**
- The only enclosures manufactured by 3SI UTV that can be hauled when installed are Lexan windshields, full cab enclosures, and door/rear window combos with top and windshield installed. However, the enclosures should be tied down before hauling. Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. REMOVE ALL OTHER ENCLOSURES BEFORE HAULING.

PLEASE READ AND FOLLOW THE DETAILED INSTRUCTIONS THAT ARE ATTACHED.



Polaris Ranger RZR 4 Full Cab Enclosure for Hard Windshield

Installation Instructions

You have just purchased the best Enclosure for your Utility Terrain Vehicle available on the market today. Your Enclosure is made of Heavy Duty Fabric that is Water Repellent and resistant to Mildew, Ultra-Violet Sun Rays and Abrasion. With proper installation and care you can expect many years of long lasting fit, color and service life from your **3SI UTV Full Cab Enclosure**.

Step 1: Remove your 3SI UTV Full Cab and Velcro kit from the shipping box. Follow the detailed instructions for proper installation of the adhesive Velcro strips. The adhesive Velcro kit consists of the following:

ITEM	Quantity/Size	Placement
Velcro Strips for Top and Rear Panel		
A	1-2" X 40"	Bottom of rear panel-horizontal
B	6-2" x 6"	Bottom and top of rear roll bar uprights-horizontal
C	2-2" x 6"	Top of middle roll bar uprights-horizontal
D	2-2" x 5"	Inside the middle of rear roll bar uprights-vertical
Velcro Strips for Door Panels		
E	2-2" x 4"	Lower portion of middle roll bar uprights-horizontal
F	2-2" x 4"	Middle of rear seat side protection bars- horizontal
G	2-2" x 32"	Edge of rocker panel below front seats-horizontal
H	2-2" x 25.5"	Edge of rocker panel below back seats-horizontal
I	4-2" x 2"	Inside of cowl
J	2-2" x 11.5"	Edge of cowl-vertical
K	4-2" x 2"	Holds straps to inside of cowl area
L	2-2" x 24"	Inside edge of rear door panel
M	2-1" x 4.5"	Bottom of front roll bar uprights

Velcro Strips for Windshield		
N	2-2" x 16"	Front roll bar upright (cut as needed for clamps)
O	1-2" X 29"	OPTIONAL-Top to windshield-horizontal

An additional strip of 2" Velcro has been included in your shipment if needed. The formal name for Velcro is hook and loop. The strips listed above are hook. The corresponding loop strips are sewn into your enclosure. If you struggle with placement of the adhesive hook strips, match the placement of the adhesive hook to the sewn in loop strips.

Note: before applying adhesive Velcro Strips to your vehicle, surfaces should be free of dust, dirt and oil. Clean vehicle surfaces with water or Windex only. Do not use solvents to prepare your vehicle surfaces for Velcro application.

Step 2: With chalk, mark the location of your windshield clamps on the front roll bars. The Velcro tab sewn into the enclosure will require cutting to accommodate the windshield clamps.

Step 3: Remove the windshield.

Step 4: Place the top and back panel loosely over the RZR 4 roll cage. Note the location of Velcro loop strips that are sewn into the top and back panel. Adhesive Velcro hook strips will be installed to correspond to the Velcro loop.

Step 5: Remove the clear plastic backing from the **(A)** 40" Velcro strip and install along the bottom of the Rear Cab Frame as shown in figure 5.1



Figure 5.1 - attach 40" Velcro strips to Rear Cab Frame facing toward the rear of the vehicle

Step 6: Remove the clear plastic backing from the (D) 5" Velcro strips and install vertically near the center of the Rear Roll Bar Uprights as shown in figure 6.1.

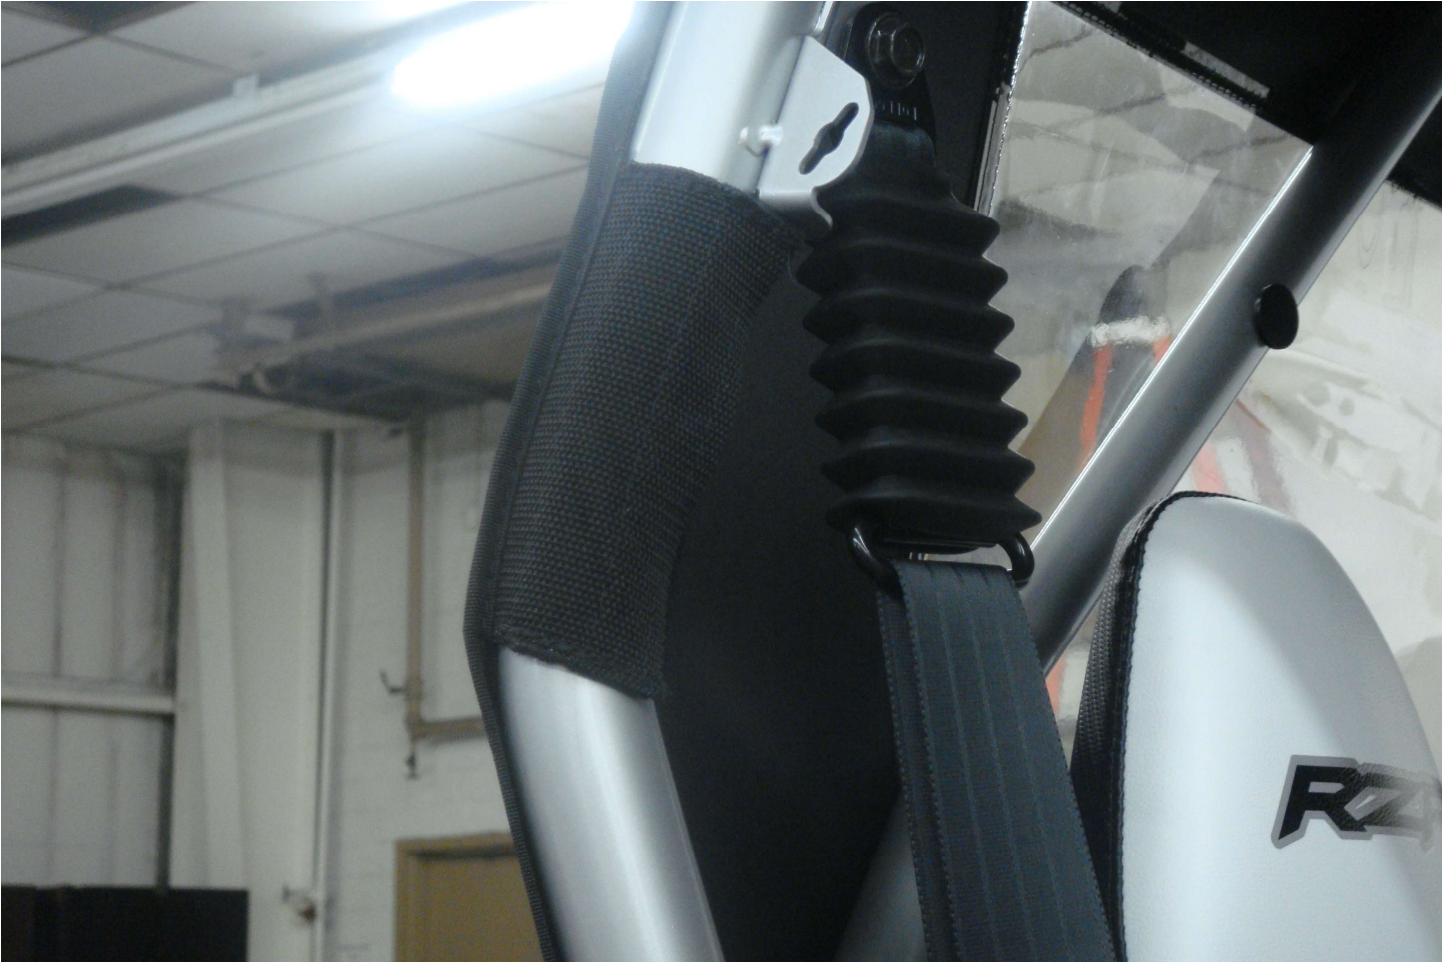


Figure 6.1 attach 5" Velcro strips vertically on the Rear Roll Bar uprights

Step 7: Remove the clear plastic backing from the 6" Velcro strips and install horizontally around the Center Roll Bar Uprights at the top as shown in figure 7.1 and 7.2. Note Velcro Strip seams should face the center of the cab.



Figure 7.1 - install 6" Velcro Strips horizontally around Center Roll Bar uprights in locations indicated below

Velcro Adhesive Hook Strips-2" Wide x 6" Long



Figure 7.2 - install 6" Velcro Strips horizontally around Roll Bar uprights in locations indicated

Step 8: Zip each door panel to the top and back panel. Note the sewn-in Velcro loop locations.


Step 9: One at a time, remove the clear plastic backing from the (E) and (F) 4" Velcro strips and wrap around the middle roll bar uprights and back protection bars as shown below.



Step 10: One at a time, remove the clear plastic backing from the (G) 32" and (H) 25.5" Velcro strips and install horizontally along the rocker panels as shown in the next picture.

Step 11: One at a time, remove the clear plastic backing from the (J) 11.5" Velcro strips and install vertically along the lower edge of the cowl as shown in the next picture.

Step 12: One at a time, remove the clear plastic backing from the (K) 5" Velcro strips and install vertically along the upper edge of the cowl as shown in the next picture.

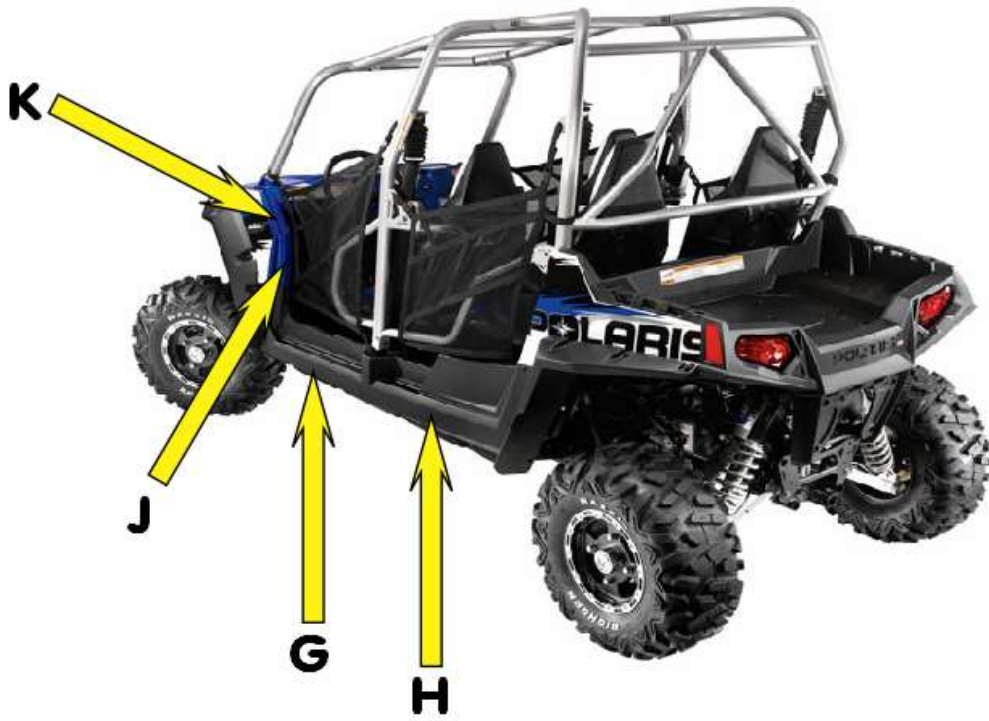

Step 13: One at a time, remove the clear plastic backing from the (L) 24" Velcro strips and install vertically along the back seat door panel corresponding to the sewn-in Velcro loop as shown below.



Step 14: One at a time, remove the clear plastic backing from the (I) 2" Velcro strips and install on the inside of the cowl corresponding to the sewn-in Velcro tab.

Step 15: One at a time, remove the clear plastic backing from the (M) 4.5" Velcro strips and install horizontally on the outside of the front roll bar base as shown below.



Step 16: One at a time, remove the clear plastic backing from the (N) 16" Velcro strips and install vertically along the inside edge of the front roll bar uprights. If needed, cut the Velcro strips to accommodate the windshield clamp locations.

Step 17: Pulling the Enclosure outward and downward toward the front of the vehicle attach the Enclosure Windshield Velcro tabs to the Front Roll Bar Post upright Velcro strips as shown in figure 17.1. Note: you will need to cut out sections of these tabs to accommodate your hard windshield clamps. Simply mark the position of your hard windshield clamps on the Velcro tab and cut out a 2" section with household scissors being careful not to cut the binding. Using a lighter slightly burn the frayed ends to prevent further fraying. See figures 17.1, 17.2, 17.3 and 17.4. Re-attach Velcro Tabs to Front Roll Bars.



Figure 17.1



Figure 17.2 - Mark the Windshield Velcro Tabs for hard windshield Clamp locations



Figure 17.3 – Cut a 2” section out around where your clamps will be positioned on the Velcro Tab – be careful not to cut the binding



Figure 17.4 – Carefully burn the frayed thread around the cut area with a lighter.

Step 18: Attach each of the sewn-in Velcro loop strips to the adhesive strips. Repeat any and all steps necessary to square and tighten the enclosure to the cab frame as shown below.

Step 19: Re-attach the Lexan windshield.



Step 20: OPTIONAL. Peel back the top panel at the top of the windshield and install 29" strip of adhesive Velcro hook to correspond with the sewn in loop in the top panel. The approximate area is shown below in figure 13.1.



See enclosed Product Care sheet for instructions on how to properly care for your 3SI UTV Enclosure.



Care Instructions

Heavy Duty Marine and Mil-Spec Military Fabric Cleaning

All 3SI UTV Enclosure Heavy Duty Marine and Military Camo fabrics are guaranteed against excessive loss of color or strength under normal exposure and use conditions. Periodic cleaning with a solution of 4 ounces of bleach and 2 ounces of soap (NOT DETERGENTS) in one gallon of water is recommended to minimize accumulations of dirt, bird droppings and other contaminants which can support surface mildew and stain fabric.

Soft Vinyl Window Cleaning

3SI UTV Enclosure Vinyl Windows will remain clear and provide great visibility under normal exposure conditions if properly cleaned. Periodic cleaning with a solution of 1 ounce of soap in one gallon of water is all that is needed to maintain good window cleanliness and visibility. Caution: DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS or CHEMICALS OF ANY KIND TO CLEAN VINYL WINDOWS AS THESE WILL CLOUD THE WINDOWS. ALSO, NEVER RUB WINDOWS WITH A DRY CLOTH OR RAG.

Storage Recommendations

Before removing the 3SI UTV Enclosure from your vehicle for storage, clean the Fabric and Vinyl Windows thoroughly as indicated above. Any dirt remaining on the Enclosure may scratch Vinyl Windows while in storage. Once the Enclosure has been cleaned it should be placed on a large flat surface. Lay the Enclosure out so that Vinyl Windows are in a flat position. Fold the doors over the rear panel first then fold the top and windshield on top of the doors keeping the Vinyl Windows flat. Caution: **FOLDING VINYL WINDOWS WILL CAUSE PERMANENT CREASE DAMAGE AND WILL VOID ALL WARRANTIES.** Once the Enclosure is folded keeping all Vinyl Windows flat, begin rolling the Enclosure into an 8" roll. Place the 8" roll into a box and store at normal room temperature. To ensure long life of your enclosure it is best not to store in extreme temperatures.

Hauling

The ONLY products manufactured by 3SI UTV that can be hauled while installed are the hard windshields, full cab enclosures, and door/rear window combos with top and windshield installed. **However, the full cab enclosures and door/rear window combos should be tied down before hauling.** Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. NEVER HAUL INSTALLED SOFT TOPS, WINDSHIELD TOP COMBOS, AND SUMMER CABS. **REMOVE BEFORE HAULING.**