



3 STAR INDUSTRIES

POLARIS RAZOR

BACK PANEL

**DO NOT REMOVE PROTECTIVE PAPER FROM WINDSHIELD
THIS WILL BE YOUR LAST INSTALLATION STEP!**


Part	Qty	Description
	4	1 3/4" Loop clamp
	4	Neoprene Washer
	4	1 1/2" Bolt
	4	Small Washer
	4	Lock Nut
	5	10" STRAPS

STEP 1

Install lower back panel, slide it behind the seats. Pull back the protective paper on both sides of the panel to reveal the slots. Pull the harness straps over the lower back panel and insert the Velcro straps through the slots cut in the panel. Put the end of the strap through the plastic buckle and pull tight. Attach Velcro strap to itself.

STEP 2

Assemble bolt and neoprene washer as shown below.

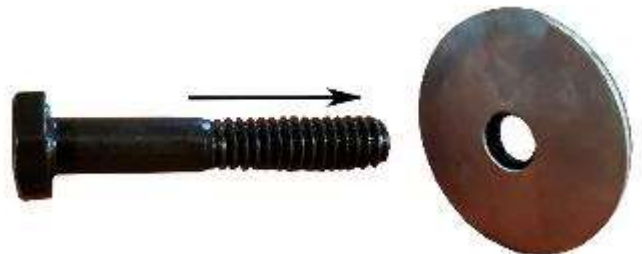

STEP 3

Install loop clamps on back roll bars. The flat side of the loop clamp will face the upper back panel .

STEP 4

Set back panel over the loop clamps. Line up the clamps holes with the slots cut in the back panel. Pull back the protective paper on both sides to reveal the slots. Insert bolt/neoprene washer assembly through the slots cut in the back panel and then through the holes in the clamp. Secure with small washer and lock nut.

Hand tighten lock nuts for now.

STEP 5

Install Velcro strap in the top of slot on the upper back panel.

STEP 6

Tighten all hardware at this time.



Cleaning Instructions.

Lexan, which is a brand of polycarbonate, is virtually indestructible. But it is also easily scratched. Please read the cleaning recommendations to limit damage to your product.

Never wipe your polycarb back panel with any just any old cloth. We recommend using micro fleece blanket. This is super soft material you can find at Walmart. Any other cloth even micro fiber will leave scratches on the polycarbonate. If you are unsure about the fabric please give us a call at 859-488-7447 ask for Sam.

Never use any abrasive cleaning products on your polycarb. Windex for example is not ok! This will cause the polycarb to develop a haze. Some chemicals may eat through the polycarb. I do not recommend using any kind of soap but if you must please use dish soap only, like dawn. Pour on and spray off, do not wipe!

Do not try to wipe off mud period! Spray mud and debris off with water hose first! If you have access to a leaf blower or air compressor we recommend using them to dry the windshield. If not, gently use a micro fleece blanket to blot the water away and then air dry.

I recommend using a product called MuddTraxx Ceramic Detailer, to apply a coat of wax that will prevent mud and dust from clinging to your windshield. If you are having trouble finding this product online please call Sam at the number listed above.