



3 STAR INDUSTRIES

POLARIS RAZOR PRO

WINDSHIELD

DO NOT REMOVE PROTECTIVE PAPER FROM WINDSHIELD THIS WILL BE YOUR LAST INSTALLATION STEP!

STEP 1

Disassemble knob bolt and nuts from Quick Connect Clamp.

STEP 2

Install clamp around the roll bar. Reinstall nuts. Do not tighten nuts! Leave loose!





Part	Qty	Description
	4	2" Quick Connect Clamp
	4	Neoprene Washer
	2	10" Straps
	4	Bolts
	4	

STEP 3

Assemble bolt, wingnut and neoprene washer. Neoprene washer will slide over the knob bolt with the silver part of the washer facing the knob. The rubber part of the washer will face the windshield.

STEP 4

Set windshield on hood line. Line up holes cut in the windshield with holes cut in the clamp. Twist bolt/washer assembly in through the front of the windshield then through the hole in the clamp. Do this for all remaining clamps.

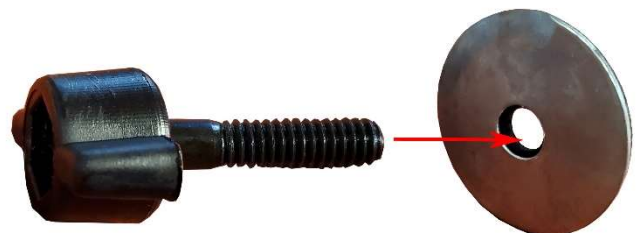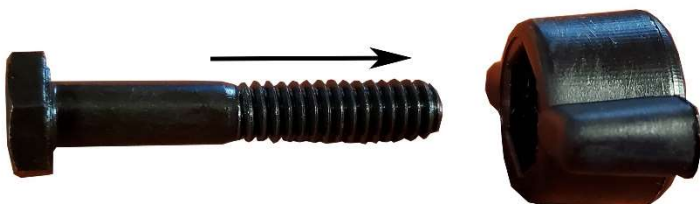

STEP 5

Tighten nuts on the back of the clamps.

STEP 6

Remove the protective paper from both sides of the windshield.



Installation complete!

Cleaning Instructions.

Lexan, which is a brand of polycarbonate, is virtually indestructible. But it is also easily scratched. Please read the cleaning recommendations to limit damage to your product.

Never wipe your polycarb back panel with any just any old cloth. We recommend using micro fleece blanket. This is super soft material you can find at Walmart. Any other cloth even micro fiber will leave scratches on the polycarbonate. If you are unsure about the fabric please give us a call at 859-488-7447 ask for Sam.

Never use any abrasive cleaning products on your polycarb. Windex for example is not ok! This will cause the polycarb to develop a haze. Some chemicals may eat through the polycarb. I do not recommend using any kind of soap but if you must please use dish soap only, like dawn. Pour on and spray off, do not wipe!

Do not try to wipe off mud period! Spray mud and debris off with water hose first! If you have access to a leaf blower or air compressor we recommend using them to dry the windshield. If not, gently use a micro fleece blanket to blot the water away and then air dry.

I recommend using a product called MuddTraxx Ceramic Detailer, to apply a coat of wax that will prevent mud and dust from clinging to your windshield. If you are having trouble finding this product online please call Sam at the number listed above.