



Installation Instructions

Thank you for purchasing a UTV enclosure manufactured in the USA with pride by 3SI UTV. Your enclosure is made of heavy duty fabric that is water repellent and resistant to mildew, ultra-violet rays and abrasion. With proper installation and care you can expect many years of service from your 3SI UTV enclosure.

SOME IMPORTANT NOTES BEFORE GETTING STARTED....

- The enclosure attaches to your UTV's cab frame with Velcro. The technical term for Velcro is hook and loop. Loop is the soft side and hook, the rough side. Loop has been sewn into the enclosure at various points. Adhesive hook has been supplied to attach to your cab frame, corresponding to the sewn-in loop. If you struggle with placement of the adhesive hook, with the enclosure held to the cab frame, note the locations of the sewn-in loop. The adhesive hook is attached to the cab frame at those locations.
- The adhesive hook should be applied at a temperature of 60 degrees or above. **For maximum adhesion, when the adhesive hook is in place, allow the adhesive to cure for 24 hours before attaching the loop to the hook.**
- Clean the surfaces the adhesive hook will be attached to before beginning installation. A light cleaning with mild soap and water is best. A little Windex works great. Do NOT wax or clean with a compound that leaves the frame slick. The adhesive hook will not stick to a slick surface. Again, a light cleaning is best.
- Your enclosure is not a "one size fits all" product. The enclosure was designed and manufactured specifically for your model UTV. As a result, the enclosure should fit square and snug to the cab frame.
- Periodic cleaning of your enclosure with mild soap and water is recommended to minimize accumulations of dirt.
- Clean the vinyl windows with mild soap, water, and a soft cloth to avoid scratches. DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS OR CHEMICALS TO CLEAN VINYL WINDOWS.
- Clean your enclosure and allow it to dry before removing for storage. **Never fold your enclosure to store.** Roll the enclosure to avoid creasing the vinyl windows. Creases in the vinyl windows cannot be removed. **CREASING THE VINYL WINDOWS VOIDS ALL WARRANTIES AND GUARANTEES.**
- The only enclosures manufactured by 3SI UTV that can be hauled when installed are Lexan windshields, full cab enclosures, and door/rear window combos with top and windshield installed. However, the enclosures should be tied down before hauling. Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. REMOVE ALL OTHER ENCLOSURES BEFORE HAULING.

PLEASE READ AND FOLLOW THE DETAILED INSTRUCTIONS THAT ARE ATTACHED.



Yamaha Viking Full Cab Windshield

Installation Instructions

You have just purchased the best Enclosure for your Utility Terrain Vehicle available on the market today. Your Enclosure is made of Heavy Duty Fabric that is Water Repellent and resistant to Mildew, Ultra-Violet Sun Rays and Abrasion. With proper installation and care you can expect many years of long lasting fit, color and service life from your **3SI UTV Cab Enclosure**.

The enclosures for the Yamaha Viking were designed to be modular. Each enclosure panel can be installed independent of the other panels. As a result, you choose your level of coverage. For cold weather, you have the option of full coverage. When warm, store the doors and back panel and leave only the top on.

With the modular design, install the sections in the following order:

1. Back Panel
2. Door Panels
3. Windshield/Top

Step 1: Remove your 3SI UTV Cab Enclosure and Velcro kit from the shipping box.


Step 2: As each panel is to be installed, hold the panel to the vehicle's cab frame. Note the location of sewn-in loop strips in the enclosure. Adhesive hook strips will be attached to the cab frame corresponding to the loop strips. Remove the backing from the adhesive hook strips and install as indicated in the following adhesive hook table and picture.

Adhesive Hook Kit Contents/Placement		
DOOR PANEL		
A	2-13"	Attach horizontally to the inside edge of the side roll bar corresponding to the 13" webbing/loop tab.
B	2-6"	Wrap around the roll bars corresponding to the double-sided straps. Wrap straps around the adhesive hook strips.
C	2-6"	Wrap around the roll bars corresponding to the double-sided straps. Wrap straps around the adhesive hook strips.

D	2-7"	Attach to the body at the rear of the cab corresponding to the sewn in loop strips on the rear corner of the wing.
E	2-6"	Wrap around the roll bars corresponding to the double-sided straps. Wrap straps around the adhesive hook strips.
F	2-10"	Attach vertically to the inside edge of the rear roll bar corresponding to the 10" webbing/loop tab.
G	6-6"	Wrap around the rear upright roll bars corresponding to the double-sided straps. Wrap straps around the adhesive hook strips.
H	2-31"	Attach vertically to the body at the rear of the cab corresponding to the sewn in loop strips on the rear of the door panel.
I	2-21"	Attach to body corresponding to the sewn in loop along the lower back edge of the door panel.
J	2-30"	Attach to body at the bottom of the door corresponding to the sewn in loop.
K	2-30"	Attach to the body at the lower/front of the door corresponding to the sewn in loop.
L	4-6"	Wrap horizontally around the roll bars corresponding to the double-side straps. Wrap straps around the adhesive hook strips.
M	2-3"	Attach vertically along the inside of the front role bar corresponding to the sewn in 3" webbing/loop tab. Attach the sewn-on loop on the tab to the adhesive hook strip.
N	2-8"	Attach vertically along the inside of the front role bar corresponding to the sewn in 8" webbing/loop tab. Attach the sewn-on loop on the tab to the adhesive hook strip.
O	2-3"	Attach vertically along the inside of the front role bar corresponding to the sewn in 3" webbing/loop tab. Attach the sewn-on loop on the tab to the adhesive hook strip.
P	2-8"	Attach at the back of the window corresponding to the 25" double sided straps under the window.

Rear Window		
A	1-57"	Attach horizontally to the bottom cross bar at the bottom of the window panel corresponding to the sewn in loop.
B	12-6"	Wrap around the roll bars corresponding to the double-sided straps. Wrap straps around the adhesive hook strips.
C	2-6"	Wrap around the cab braces behind the seat corresponding to the double-sided straps. Wrap straps around the adhesive hook strips.
D	1-6"	Attach to the body 16" from the driver's side corresponding to the sewn in loop strips on the rear corner of the wing.
E	1-17"	Attach horizontally to the center of the rear role bar.
F	2-10"	Attach horizontally to the rear role bar on either side of reference E.
G	2-5"	Wrap around the roll bars corresponding to the sewn in loop.
H	1-4"	Attach to the back of the seat belt bracket for the center seat so the soft Velcro is between the metal and the vinyl window.
Windshield/Top		
A	6-6"	ONLY NEEDED IF WINDSHIELD/TOP USED WITHOUT DOORS. Wrap around the roll bars corresponding to the double-sided straps. Wrap straps around the adhesive hook strips.
B	2-3"	ONLY NEEDED IF WINDSHIELD/TOP USED WITHOUT DOORS. Attach vertically to the outside edge of the front roll bar uprights corresponding to the 3" webbing/loop tabs on either side of the windshield. Use the tabs to pull the windshield tight from side to side.
C	2-4"	ONLY NEEDED IF WINDSHIELD/TOP USED WITHOUT DOORS. Attach vertically to the outside edge of the front roll bar uprights corresponding to the 4" webbing/loop tabs on either side of the windshield. Use the tabs to pull the windshield tight from side to side.
D	2-4"	Attach to the body corresponding to the sewn in loop at the bottom of the wing.
E	2-8"	Attach to the hood corresponding to the sewn in loop on the side of the hood panel.


F	2-8"	ONLY NEEDED IF WINDSHIELD/TOP USED WITHOUT DOORS. Attach horizontally to the outside edge of the side bars corresponding to the 8" webbing/loop tabs on either side of the top panel. Use the tabs to pull the top panel tight from side to side.
G	2-6"	Wrap horizontally around the rear roll bar uprights. Wrap the bottom of the buckle strap around the adhesive strip. If needed, disconnect the snap buckle or loosen the buckle.
H	1-6"	ONLY NEEDED IF WINDSHIELD/TOP USED WITHOUT BACK PANEL. Wrap vertically around middle head rest bar. Wrap the double-sided strap in the middle of the rear visor around the head rest bar to hold the rear visor down. (This option was added after the picture below was taken.)

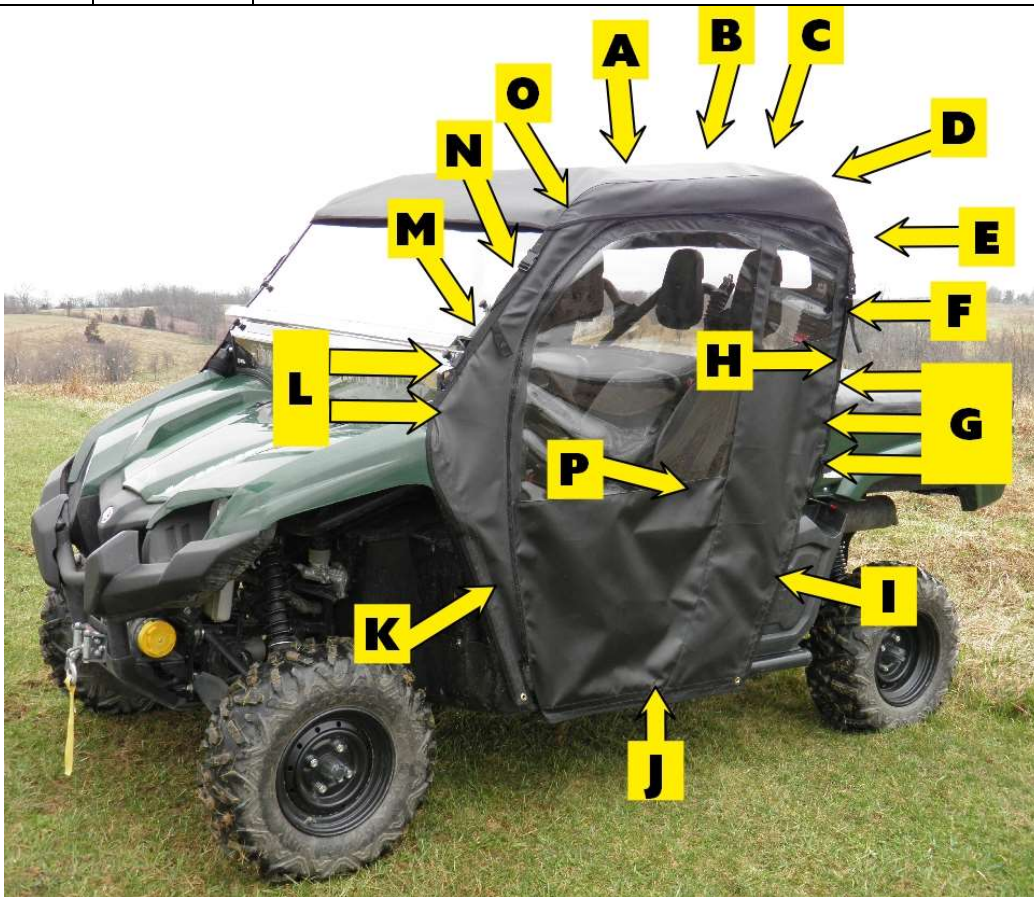

Door Kit



Back Panel

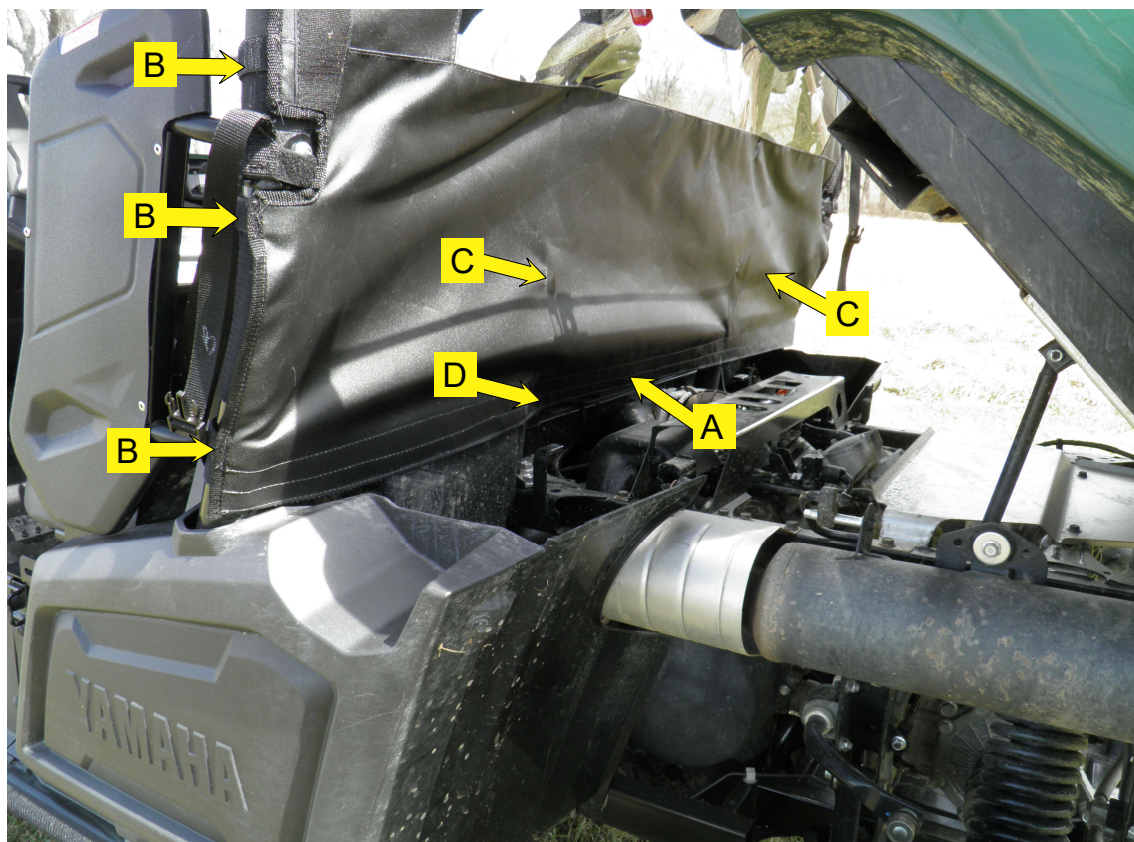

Back Panel



Windshield/Top



Back Panel



Back Panel

Step 3: After all adhesive hook strips are attached, begin attaching the enclosure to the cab frame. As you attach the hook and loop, square each panel to the frame. **PLEASE NOTE, FOR MAXIMUM ADHESION, ALLOW THE ADHESIVE HOOK TO ADHERE TO THE FRAME FOR 24 HOURS BEFORE PULLING AGAINST THE HOOK WITH THE LOOP STRIPS.**

Step 4: One at a time, pull the loose strap down on each tension strap to tighten the top to the cab frame.

Step 5: Repeat any steps necessary to achieve a snug fit on the cab frame.

See enclosed Product Care sheet for instructions on how to properly care for your 3SI UTV Enclosure.



Care Instructions

Heavy Duty Marine and Mil-Spec Military Fabric Cleaning

All 3SI UTV Enclosure Heavy Duty Marine and Military Camo fabrics are guaranteed against excessive loss of color or strength under normal exposure and use conditions. Periodic cleaning with a solution of 4 ounces of bleach and 2 ounces of soap (NOT DETERGENTS) in one gallon of water is recommended to minimize accumulations of dirt, bird droppings and other contaminants which can support surface mildew and stain fabric.

Soft Vinyl Window Cleaning

3SI UTV Enclosure Vinyl Windows will remain clear and provide great visibility under normal exposure conditions if properly cleaned. Periodic cleaning with a solution of 1 ounce of soap in one gallon of water is all that is needed to maintain good window cleanliness and visibility. Caution: DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS or CHEMICALS OF ANY KIND TO CLEAN VINYL WINDOWS AS THESE WILL CLOUD THE WINDOWS. ALSO, NEVER RUB WINDOWS WITH A DRY CLOTH OR RAG.

Storage Recommendations

Before removing the 3SI UTV Enclosure from your vehicle for storage, clean the Fabric and Vinyl Windows thoroughly as indicated above. Any dirt remaining on the Enclosure may scratch Vinyl Windows while in storage. Once the Enclosure has been cleaned it should be placed on a large flat surface. Lay the Enclosure out so that Vinyl Windows are in a flat position. Fold the doors over the rear panel first then fold the top and windshield on top of the doors keeping the Vinyl Windows flat. Caution: **FOLDING VINYL WINDOWS WILL CAUSE PERMANENT CREASE DAMAGE AND WILL VOID ALL WARRANTIES.** Once the Enclosure is folded keeping all Vinyl Windows flat, begin rolling the Enclosure into an 8" roll. Place the 8" roll into a box and store at normal room temperature. To ensure long life of your enclosure it is best not to store in extreme temperatures.

Hauling

The ONLY products manufactured by 3SI UTV that can be hauled while installed are the hard windshields, full cab enclosures, and door/rear window combos with top and windshield installed. **However, the full cab enclosures and door/rear window combos should be tied down before hauling.** Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. NEVER HAUL INSTALLED SOFT TOPS, WINDSHIELD TOP COMBOS, AND SUMMER CABS. **REMOVE BEFORE HAULING.**