



Installation Instructions

Thank you for purchasing a UTV enclosure manufactured in the USA with pride by 3SI UTV. Your enclosure is made of heavy duty fabric that is water repellent and resistant to mildew, ultra-violet rays and abrasion. With proper installation and care you can expect many years of service from your 3SI UTV enclosure.

SOME IMPORTANT NOTES BEFORE GETTING STARTED....

- The enclosure attaches to your UTV's cab frame with Velcro. The technical term for Velcro is hook and loop. Loop is the soft side and hook, the rough side. Loop has been sewn into the enclosure at various points. Adhesive hook has been supplied to attach to your cab frame, corresponding to the sewn-in loop. If you struggle with placement of the adhesive hook, with the enclosure held to the cab frame, note the locations of the sewn-in loop. The adhesive hook is attached to the cab frame at those locations.
- The adhesive hook should be applied at a temperature of 60 degrees or above. **For maximum adhesion, when the adhesive hook is in place, allow the adhesive to cure for 24 hours before attaching the loop to the hook.**
- Clean the surfaces the adhesive hook will be attached to before beginning installation. A light cleaning with mild soap and water is best. A little Windex works great. Do NOT wax or clean with a compound that leaves the frame slick. The adhesive hook will not stick to a slick surface. Again, a light cleaning is best.
- Your enclosure is not a "one size fits all" product. The enclosure was designed and manufactured specifically for your model UTV. As a result, the enclosure should fit square and snug to the cab frame.
- Periodic cleaning of your enclosure with mild soap and water is recommended to minimize accumulations of dirt.
- Clean the vinyl windows with mild soap, water, and a soft cloth to avoid scratches. DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS OR CHEMICALS TO CLEAN VINYL WINDOWS.
- Clean your enclosure and allow it to dry before removing for storage. **Never fold your enclosure to store.** Roll the enclosure to avoid creasing the vinyl windows. Creases in the vinyl windows cannot be removed. **CREASING THE VINYL WINDOWS VOIDS ALL WARRANTIES AND GUARANTEES.**
- The only enclosures manufactured by 3SI UTV that can be hauled when installed are Lexan windshields, full cab enclosures, and door/rear window combos with top and windshield installed. However, the enclosures should be tied down before hauling. Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. REMOVE ALL OTHER ENCLOSURES BEFORE HAULING.

PLEASE READ AND FOLLOW THE DETAILED INSTRUCTIONS THAT ARE ATTACHED.



Yamaha Wolverine Full Cab/Vinyl Windshield – Half Doors

Installation Instructions

You have just purchased the best Enclosure for your Utility Terrain Vehicle available on the market today. Your Enclosure is made of Heavy Duty Fabric that is Water Repellent and resistant to Mildew, Ultra-Violet Sun Rays and Abrasion. With proper installation and care you can expect many years of long lasting fit, color and service life from your **3SI UTV Cab Enclosure**.

The enclosures for the Yamaha Wolverine were designed to be modular. Each enclosure panel can be installed independent of the other panels. As a result, you choose your level of coverage. For cold weather, you have the option of full coverage. When warm, store the doors and back panel and leave only the top on.

Install your enclosure in the following order:

- Back Panel
- Doors
- Top or Windshield/Top

Step 1: Remove your 3SI UTV Cab Enclosure and Velcro kit from the shipping box.

Step 2: Raise the bed. Hold the back panel to the vehicle’s cab frame. Note the location of sewn-in loop strips in the enclosure. Adhesive hook strips will be attached to the cab frame corresponding to the loop strips. Remove the backing from the adhesive hook strips and install as indicated in the adhesive hook table and pictures.

Step 3: Remove the front fender guards before installing the door panels. Hold one of the door panels to the vehicle’s cab frame. Note the location of sewn-in loop strips in the enclosure. Adhesive hook strips will be attached to the cab frame corresponding to the loop strips. Remove the backing from the adhesive hook strips and install as indicated in the adhesive hook table and pictures.


Adhesive Hook Kit Contents/Placement		
BACK PANEL		
Reference	Qty-Size	Placement
A	1-14”	Attach horizontally to the inside edge of the rear crossbar corresponding to the sewn in loop at the top of the back panel. Hang

		the back panel over the cross bar and attach the sewn in loop to the adhesive hook strip.
B	2-8"	Attach horizontally to the inside edge of the rear crossbar corresponding to the sewn in loop at the top/sides of the back panel. Hang the back panel over the cross bar and attach the sewn in loop to the adhesive hook strip.
C	4-6"	Wrap horizontally around the back side of the side roll bars corresponding to the double-side straps. Wrap straps around the adhesive hook strips.
D	2-5"	Attach to the outside edge of the rear roll bar uprights corresponding to the 5" webbing/loop tab. Attach the sewn-in loop on the tab to the adhesive hook strips.
E	2-14"	Attach vertically to the outside edge of the rear roll bar uprights corresponding to the 14" webbing/loop tab. Attach the sewn-in loop on the tab to the adhesive hook strips.
F	2-6"	Attach vertically to the outside edge of the rear roll bar uprights corresponding to the 6" webbing/loop tab. Attach the sewn-in loop on the tab to the adhesive hook strips.
G	1-4"	Attach horizontally to the inside of the bracket between the seats. Wrap the double-sided hook and loop straps around the bracket.
No Ref.	1-4"	Wrap vertically around the middle of the small bar between the seats corresponding to the double-sided hook and loop strap. Wrap the double-sided strap around the bar at the adhesive hook strip.
Door Panels		
A	2-14"	Attach horizontally to the inside edge of the side roll bar corresponding to the 14" webbing/loop tab.
B	2-4"	Attach to the inside edge of the roll bars corresponding to the 4" webbing/loop tab.
C	2-3"	Attach to the inside edge of the roll bars corresponding to the 3" webbing/loop tab.
D	2-6"	Wrap around the roll bars corresponding to the double-sided hook and loop straps. Wrap the straps around the bar at the adhesive hook strip.
E	2-3"	ONLY USE IF BACK PANEL IS NOT INSTALLED. IF BACK PANEL IS INSTALLED, ATTACH SEWN-IN LOOP TO THE EXPOSED HOOK ON THE BACK PANEL. Attach vertically to the inside edge of the rear roll bar

		uprights corresponding to the sewn-in loop strip just below the zipper.
F	2-17"	ONLY USE IF BACK PANEL IS NOT INSTALLED. IF BACK PANEL IS INSTALLED, ATTACH SEWN-IN LOOP TO THE EXPOSED HOOK ON THE BACK PANEL. Attach vertically to the inside edge of the rear roll bar uprights corresponding to the sewn-in loop strip.
G	2-7"	ONLY USE IF BACK PANEL IS NOT INSTALLED. IF BACK PANEL IS INSTALLED, ATTACH SEWN-IN LOOP TO THE EXPOSED HOOK ON THE BACK PANEL. Attach vertically to the inside edge of the rear roll bar uprights corresponding to the sewn-in loop strip.
H	2-12"	Attach vertically to the body just below the rear roll bars corresponding to the sewn-in loop on the back/lower corner of the door panels.
I	2-15"	Attach horizontally to the body corresponding to the sewn-in loop along the bottom/rear of the door panels.
J	2-6"	Attach vertically to the inside edge of the front roll bars corresponding to the 6" webbing/loop tab near the top of the front roll bars.
K	2-4"	Attach vertically to the inside edge of the front roll bars corresponding to the 4" webbing/loop tab in the middle of the front roll bars.
L	2-6"	Wrap around the roll bars corresponding to the double-sided hook and loop straps. Wrap the straps around the bar at the adhesive hook strip.
M	2-6"	Attach vertically to the outside edge of the bottom of the front roll bars corresponding to the sewn-in loop at the front point of the door panels.
N	2-3"	REMOVE THE FENDER GUARD BEFORE APPLYING. Attach just above the bolt bracket corresponding to the sewn-in loop at the front of the door panels.
O	2-4"	REMOVE THE FENDER GUARD BEFORE APPLYING. Attach just below the bolt bracket corresponding to the sewn-in loop at the front of the door panels.
P	2-12"	Attach to the body corresponding to the sewn-in loop at the bottom of the wing.
Q	2-17"	Attach horizontally to the body corresponding to the sewn-in loop just below the rear window on the door panels.



R	Magnet Pack	Magnet pack is attached to the velcro on the door for shipping purposes. Peel the white backing of the magnet pack and attach along the inside of the half door corresponding to the sewn-in loop.
WINDSHIELD/TOP		
A	2-6"	Wrap horizontally around the bottom of the rear roll bar uprights. Wrap the double-sided straps at the bottom of the tension strap around the adhesive strip. If needed, loosen the tension on the strap as needed to attach. Do not tighten until the top is aligned on the roll cage.
B	2-8"	USE ONLY IF DOOR PANELS ARE NOT INSTALLED. Attach horizontally to the outside edge of the side bar above the seat corresponding to the 8" webbing/loop tab sewn into the side seam. Use the webbing/loop tab to pull the top tight from side to side. Attach the sewn-in loop in the tabs to the adhesive hook strips.
C	2-7"	USE ONLY IF DOOR PANELS ARE NOT INSTALLED. Attach to the outside edge of the front roll bars corresponding to the sewn-in 7" webbing/loop tabs near the top of the windshield. Use the webbing/loop tab to pull the windshield tight from side to side. Attach the sewn-in loop in the tabs to the adhesive hook strips. If door panels are installed, attach the sewn-in loop in the tabs to the sewn-in hook running along the front edge of the door panels.
D	2-8"	USE ONLY IF DOOR PANELS ARE NOT INSTALLED. Attach to the outside edge of the front roll bars corresponding to the sewn-in 8" webbing/loop tabs near the bottom of the windshield. Use the webbing/loop tab to pull the windshield tight from side to side. Attach the sewn-in loop in the tabs to the adhesive hook strips. If door panels are installed, attach the sewn-in loop in the tabs to the sewn-in hook running along the front edge of the door panels.
E	2-8"	USE ONLY IF DOOR PANELS ARE NOT INSTALLED. Wrap horizontally around the front roll bars corresponding to the double-sided hook and loop straps below the bolts at the bottom of the front roll bars. Wrap the double-sided straps around the adhesive strips. If the door panels are installed, attach the loop in the straps to the sewn-in hook running along the front edge of the door panels.
F	2-4"	USE ONLY IF DOOR PANELS ARE NOT INSTALLED. Attach to either side of the hood corresponding to the sewn-in loop at the bottom of the side panels. Attach the sewn-in loop to the adhesive hook strips.
G	2-30"	Attach to either side of the hook corresponding to the sewn-in loop along the edge of the hood cover. Attach the sewn-in loop in the hood cover to the adhesive strips.

BACK PANEL

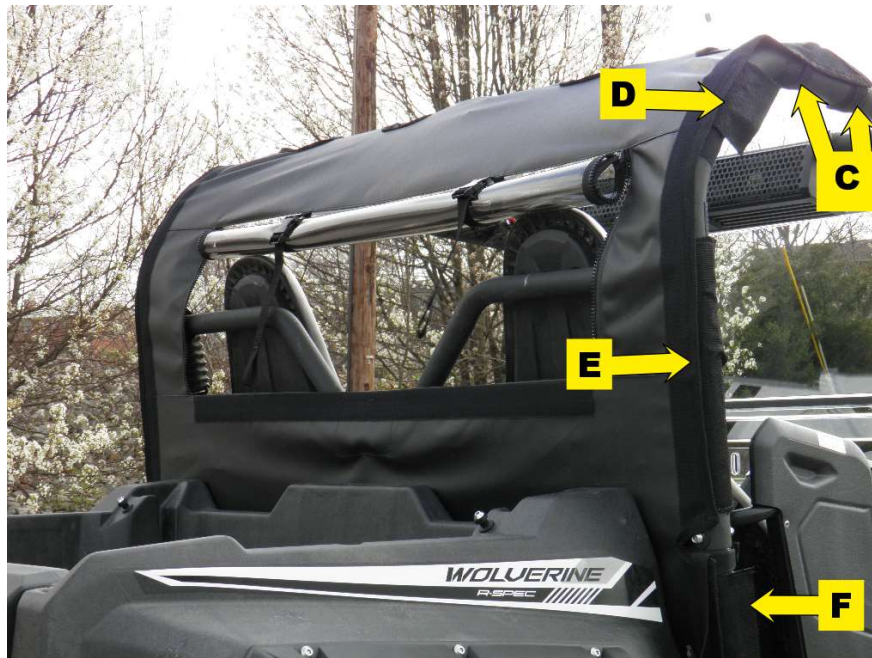



DOOR PANELS

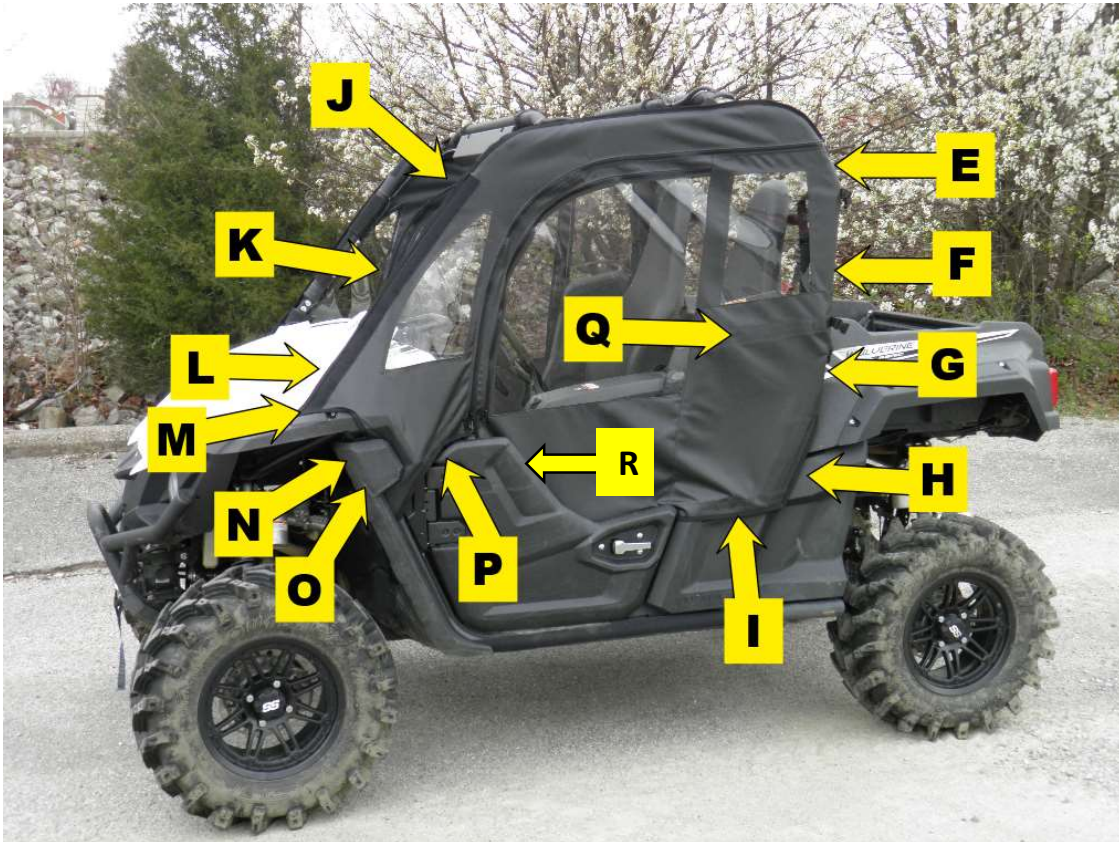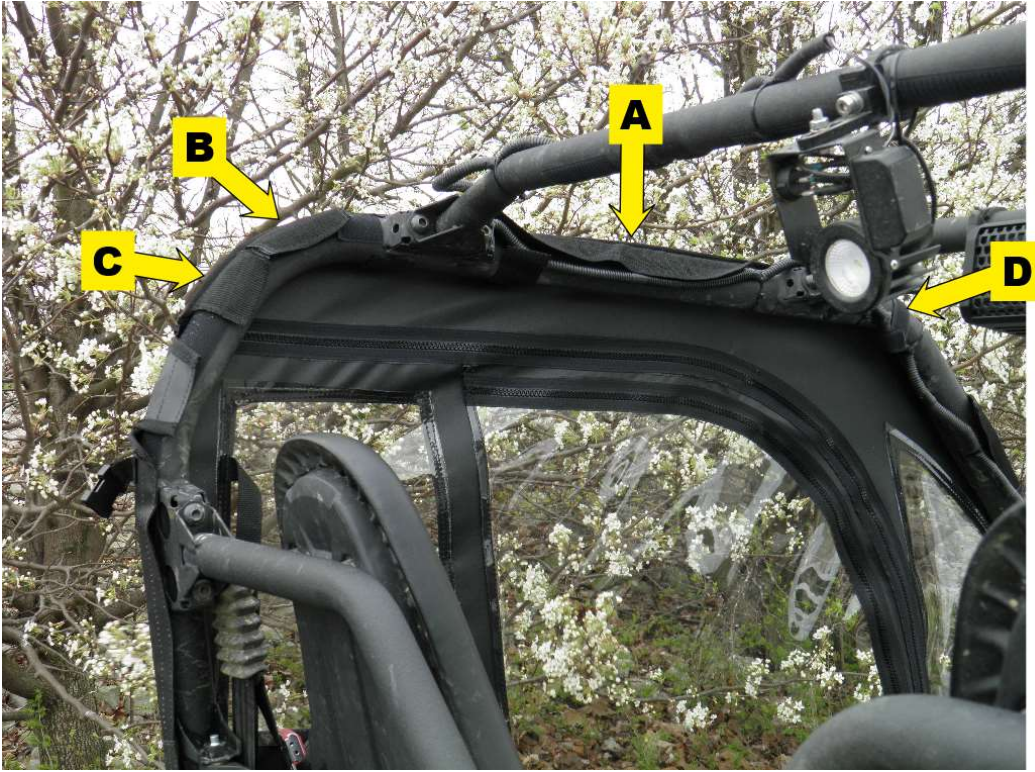

WINDSHIELD/TOP



Step 4: After all adhesive hook strips are attached, begin attaching the enclosure to the cab frame. As you attach the hook and loop, square each panel to the frame. **PLEASE NOTE, FOR MAXIMUM ADHESION, ALLOW THE ADHESIVE HOOK TO ADHERE TO THE FRAME FOR 24 HOURS BEFORE PULLING AGAINST THE HOOK WITH THE LOOP STRIPS.**

Step 5: After installing the windshield/top, fasten the front hood straps to the vehicle bumper. Wrap the long strap under and around the front bumper. Bring the end of the strap to the buckle. Run the end of the strap through the back of the top of the buckle first. Continue running the strap through the front of the lower buckle opening. **DO NOT FULLY TIGHTEN THE FRONT HOOD STRAPS UNTIL THE WINDSHIELD/TOP IS PROPERLY ALIGNED TO THE FRAME.**



Step 6: Repeat any steps necessary to achieve a snug fit on the cab frame.

Step 7: Re-install fender guards.

See enclosed Product Care sheet for instructions on how to properly care for your 3SI UTV Enclosure.



Care Instructions

Heavy Duty Marine and Mil-Spec Military Fabric Cleaning

All 3SI UTV Enclosure Heavy Duty Marine and Military Camo fabrics are guaranteed against excessive loss of color or strength under normal exposure and use conditions. Periodic cleaning with a solution of 4 ounces of bleach and 2 ounces of soap (NOT DETERGENTS) in one gallon of water is recommended to minimize accumulations of dirt, bird droppings and other contaminants which can support surface mildew and stain fabric.

Soft Vinyl Window Cleaning

3SI UTV Enclosure Vinyl Windows will remain clear and provide great visibility under normal exposure conditions if properly cleaned. Periodic cleaning with a solution of 1 ounce of soap in one gallon of water is all that is needed to maintain good window cleanliness and visibility. Caution: DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS or CHEMICALS OF ANY KIND TO CLEAN VINYL WINDOWS AS THESE WILL CLOUD THE WINDOWS. ALSO, NEVER RUB WINDOWS WITH A DRY CLOTH OR RAG.

Storage Recommendations

Before removing the 3SI UTV Enclosure from your vehicle for storage, clean the Fabric and Vinyl Windows thoroughly as indicated above. Any dirt remaining on the Enclosure may scratch Vinyl Windows while in storage. Once the Enclosure has been cleaned it should be placed on a large flat surface. Lay the Enclosure out so that Vinyl Windows are in a flat position. Fold the doors over the rear panel first then fold the top and windshield on top of the doors keeping the Vinyl Windows flat. Caution: **FOLDING VINYL WINDOWS WILL CAUSE PERMANENT CREASE DAMAGE AND WILL VOID ALL WARRANTIES.** Once the Enclosure is folded keeping all Vinyl Windows flat, begin rolling the Enclosure into an 8" roll. Place the 8" roll into a box and store at normal room temperature. To ensure long life of your enclosure it is best not to store in extreme temperatures.

Hauling

The ONLY products manufactured by 3SI UTV that can be hauled while installed are the hard windshields, full cab enclosures, and door/rear window combos with top and windshield installed. **However, the full cab enclosures and door/rear window combos should be tied down before hauling.** Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. NEVER HAUL INSTALLED SOFT TOPS, WINDSHIELD TOP COMBOS, AND SUMMER CABS. **REMOVE BEFORE HAULING.**