



Installation Instructions

Thank you for purchasing a UTV enclosure manufactured in the USA with pride by 3SI UTV. Your enclosure is made of heavy duty fabric that is water repellent and resistant to mildew, ultra-violet rays and abrasion. With proper installation and care you can expect many years of service from your 3SI UTV enclosure.

SOME IMPORTANT NOTES BEFORE GETTING STARTED....

- The enclosure attaches to your UTV's cab frame with Velcro. The technical term for Velcro is hook and loop. Loop is the soft side and hook, the rough side. Loop has been sewn into the enclosure at various points. Adhesive hook has been supplied to attach to your cab frame, corresponding to the sewn-in loop. If you struggle with placement of the adhesive hook, with the enclosure held to the cab frame, note the locations of the sewn-in loop. The adhesive hook is attached to the cab frame at those locations.
- The adhesive hook should be applied at a temperature of 60 degrees or above. **For maximum adhesion, when the adhesive hook is in place, allow the adhesive to cure for 24 hours before attaching the loop to the hook.**
- Clean the surfaces the adhesive hook will be attached to before beginning installation. A light cleaning with mild soap and water is best. A little Windex works great. Do NOT wax or clean with a compound that leaves the frame slick. The adhesive hook will not stick to a slick surface. Again, a light cleaning is best.
- Your enclosure is not a "one size fits all" product. The enclosure was designed and manufactured specifically for your model UTV. As a result, the enclosure should fit square and snug to the cab frame.
- Periodic cleaning of your enclosure with mild soap and water is recommended to minimize accumulations of dirt.
- Clean the vinyl windows with mild soap, water, and a soft cloth to avoid scratches. DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS OR CHEMICALS TO CLEAN VINYL WINDOWS.
- Clean your enclosure and allow it to dry before removing for storage. **Never fold your enclosure to store.** Roll the enclosure to avoid creasing the vinyl windows. Creases in the vinyl windows cannot be removed. **CREASING THE VINYL WINDOWS VOIDS ALL WARRANTIES AND GUARANTEES.**
- The only enclosures manufactured by 3SI UTV that can be hauled when installed are Lexan windshields, full cab enclosures, and door/rear window combos with top and windshield installed. However, the enclosures should be tied down before hauling. Speed should not exceed 55 mph while hauling to prevent ripping and shredding of the material and zippers. REMOVE ALL OTHER ENCLOSURES BEFORE HAULING.

PLEASE READ AND FOLLOW THE DETAILED INSTRUCTIONS THAT ARE ATTACHED.



Yamaha Wolverine Full Cab for Hard Windshield

Installation Instructions

You have just purchased the best Enclosure for your Utility Terrain Vehicle available on the market today. Your Enclosure is made of Heavy Duty Fabric that is Water Repellent and resistant to Mildew, Ultra-Violet Sun Rays and Abrasion. With proper installation and care you can expect many years of long lasting fit, color and service life from your **3SI UTV Cab Enclosure**.

The enclosures for the Yamaha Wolverine were designed to be modular. Each enclosure panel can be installed independent of the other panels. As a result, you choose your level of coverage. For cold weather, you have the option of full coverage. When warm, store the doors and back panel and leave only the top on.

Install your enclosure in the following order:

- Back Panel
- Doors
- Top or Windshield/Top

Step 1: Remove your 3SI UTV Cab Enclosure and Velcro kit from the shipping box.

Step 2: Raise the bed. Hold the back panel to the vehicle's cab frame. Note the location of sewn-in loop strips in the enclosure. Adhesive hook strips will be attached to the cab frame corresponding to the loop strips. Remove the backing from the adhesive hook strips and install as indicated in the adhesive hook table and pictures.

Step 3: Remove the front fender guards before installing the door panels. Hold one of the door panels to the vehicle's cab frame. Note the location of sewn-in loop strips in the enclosure. Adhesive hook strips will be attached to the cab frame corresponding to the loop strips. Remove the backing from the adhesive hook strips and install as indicated in the adhesive hook table and pictures.

Step 4: The top attaches to the frame via tension straps at each corner. Remove the adhesive hook strips and install as indicated in the adhesive hook table and pictures. The snap buckles on each tension may need to be loosened or unattached before installation. After the top is installed, reattach the snap buckles. To tighten the top to the frame, simply pull down on the loose strap on each tension strap.

Adhesive Hook Kit Contents/Placement

BACK PANEL		
Reference	Qty-Size	Placement
A	1-14"	Attach horizontally to the inside edge of the rear crossbar corresponding to the sewn in loop at the top of the back panel. Hang the back panel over the cross bar and attach the sewn in loop to the adhesive hook strip.
B	2-8"	Attach horizontally to the inside edge of the rear crossbar corresponding to the sewn in loop at the top/sides of the back panel. Hang the back panel over the cross bar and attach the sewn in loop to the adhesive hook strip.
C	4-6"	Wrap horizontally around the back side of the side roll bars corresponding to the double-side straps. Wrap straps around the adhesive hook strips.
D	2-5"	Attach to the outside edge of the rear roll bar uprights corresponding to the 5" webbing/loop tab. Attach the sewn-in loop on the tab to the adhesive hook strips.
E	2-14"	Attach vertically to the outside edge of the rear roll bar uprights corresponding to the 14" webbing/loop tab. Attach the sewn-in loop on the tab to the adhesive hook strips.
F	2-6"	Attach vertically to the outside edge of the rear roll bar uprights corresponding to the 6" webbing/loop tab. Attach the sewn-in loop on the tab to the adhesive hook strips.
G	1-4"	Attach horizontally to the inside of the bracket between the seats. Wrap the double-sided hook and loop straps around the bracket.
No Ref.	1-4"	Wrap vertically around the middle of the small bar between the seats corresponding to the double-sided hook and loop strap. Wrap the double-sided strap around the bar at the adhesive hook strip.
BACK PANEL		
A	2-3"	Attach vertically above bolt bracket at top of front fender roll bar corresponding to the sewn-in loop at the point of the wing.
B	2-11"	Attach vertically between top and bottom bolt bracket on front fender roll bar.
C	2-6"	Attach vertically on front fender roll bar at bottom below bottom bracket.
D	2-6"	Attach horizontally at front side rocker panel.

BACK


E	2-27"	Attach horizontally on side rocker panel.
F	4-23"	Attach 2 strips vertically behind door opening in front of gas cap.
G	2-7"	ONLY NEEDED IF REAR PANEL IS NOT INSTALLED. Attach around rear roll bar at the bottom below bolt
H	2-17"	ONLY NEEDED IF REAR PANEL IS NOT INSTALLED. Attach vertically around rear roll bar in center of rear roll bar above bolt.
I	2-3"	ONLY NEEDED IF REAR PANEL IS NOT INSTALLED. Attach vertically around rear roll bar above bend at top.
J	2-3"	ONLY NEEDED IF REAR PANEL IS NOT INSTALLED. Attach for tabs at rear of door above zipper.
K	2-4"	ONLY NEEDED IF REAR PANEL IS NOT INSTALLED. Attach for tabs at rear of door in curve.
L	2-14"	Attach horizontally to the inside edge of the side bars corresponding to the sewn-in loop at top/center of door panels.
M	2-6"	Attach on curve in front of top side roll bar for corresponding to the sewn-in double-sided hook and loop straps. Wrap the straps around the adhesive strips.
N	2-6"	Attach to the inside edge of the front roll bars corresponding to the sewn-in 6" webbing/loop tabs near the top of the front roll bars.
O	2-4"	Attach to the inside edge of the front roll bars corresponding to the sewn-in 4" webbing/loop tabs near the middle of the front roll bars.
P	2-6"	Wrap around front roll bars corresponding to the sewn-in double-sided hook and loop straps near the bottom of the front roll bars. Wrap the straps around the adhesive strips.
Q	2-5"	Attach at bottom of front roll bar on plastic hood corresponding to the sewn-in loop.
R	2-17"	(Inside Enclosure) Attach on plastic guard beside seat – corresponds to Velcro & double-sided Velcro below small window
TOP		
A	4-6"	Wrap horizontally near the bottom of each roll bar upright. Wrap the double-sided straps located at the bottom of the tension straps around the adhesive strips. When the top is in place and the tension strap is in position, pull down on the loose strap to tighten the top to the cab frame.

PANEL





DOOR PANELS

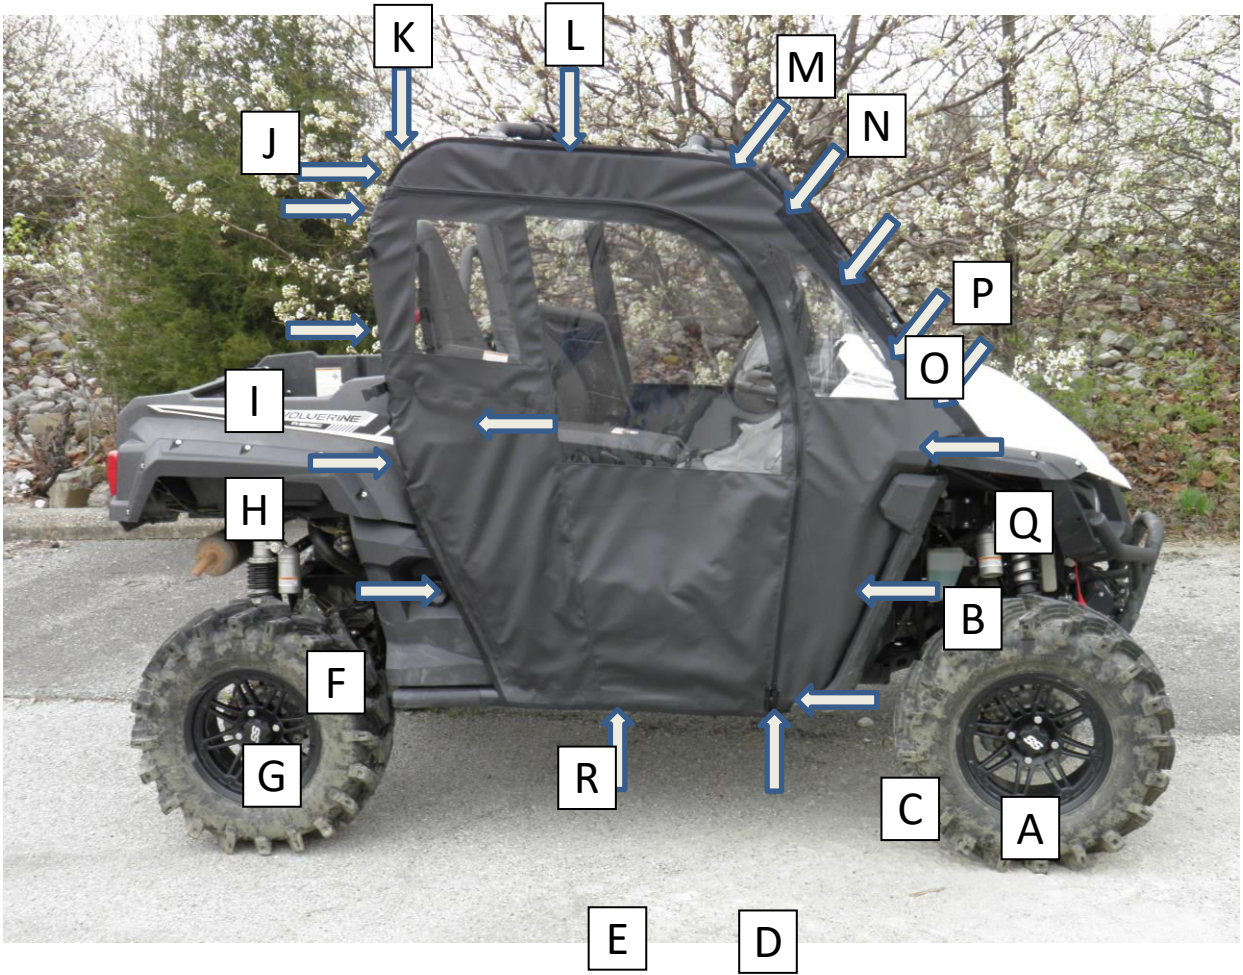

TOP



Step 5: After all adhesive hook strips are attached, begin attaching the enclosure to the cab frame. As you attach the hook and loop, square each panel to the frame. **PLEASE NOTE, FOR MAXIMUM ADHESION, ALLOW THE ADHESIVE HOOK TO ADHERE TO THE FRAME FOR 24 HOURS BEFORE PULLING AGAINST THE HOOK WITH THE LOOP STRIPS.**

Step 6: Repeat any steps necessary to achieve a snug fit on the cab frame.

Step 7: Re-install fender guards.

See enclosed Product Care sheet for instructions on how to properly care for your 3SI UTV Enclosure.



Care Instructions

Heavy Duty Marine and Mil-Spec Military Fabric Cleaning

All 3SI UTV Enclosure Heavy Duty Marine and Military Camo fabrics are guaranteed against excessive loss of color or strength under normal exposure and use conditions. Periodic cleaning with a solution of 4 ounces of bleach and 2 ounces of soap (NOT DETERGENTS) in one gallon of water is recommended to minimize accumulations of dirt, bird droppings and other contaminants which can support surface mildew and stain fabric.

Soft Vinyl Window Cleaning

3SI UTV Enclosure Vinyl Windows will remain clear and provide great visibility under normal exposure conditions if properly cleaned. Periodic cleaning with a solution of 1 ounce of soap in one gallon of water is all that is needed to maintain good window cleanliness and visibility. Caution: DO NOT USE ANY DETERGENTS, WINDOW CLEANERS, SOLVENTS or CHEMICALS OF ANY KIND TO CLEAN VINYL WINDOWS AS THESE WILL CLOUD THE WINDOWS. ALSO, NEVER RUB WINDOWS WITH A DRY CLOTH OR RAG.

Storage Recommendations

Before removing the 3SI UTV Enclosure from your vehicle for storage, clean the Fabric and Vinyl Windows thoroughly as indicated above. Any dirt remaining on the Enclosure may scratch Vinyl Windows while in storage. Once the Enclosure has been cleaned it should be placed on a large flat surface. Lay the Enclosure out so that Vinyl Windows are in a flat position. Fold the doors over the rear panel first then fold the top and windshield on top of the doors keeping the Vinyl Windows flat. Caution: **FOLDING VINYL WINDOWS WILL CAUSE PERMANENT CREASE DAMAGE AND WILL VOID ALL WARRANTIES.** Once the Enclosure is folded keeping all Vinyl Windows flat, begin rolling the Enclosure into an 8" roll. Place the 8" roll into a box and store at normal room temperature. To ensure long life of your enclosure it is best not to store in extreme temperatures.

Hauling

The ONLY products manufactured by 3SI UTV that can be hauled while installed are the hard windshields, full cab enclosures, and door/rear window combos with top and windshield installed. **However, the full cab enclosures and door/rear window combos should be tied down before hauling.** Speed should not exceed 55

mph while hauling to prevent ripping and shredding of the material and zippers. NEVER HAUL INSTALLED SOFT TOPS, WINDSHIELD TOP COMBOS, AND SUMMER CABS. REMOVE BEFORE HAULING.