## THE STABILIZER ASSEMBLY GUIDE

## WHAT'S IN THE BAG?



2 X SCREWS




2 X BRASS BUSHINGS




2 X SILVER CAPS




1 X CABLE

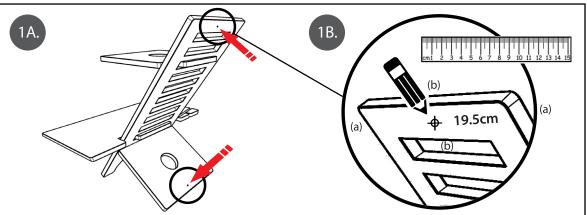

Turn your DeskStand around so that the rear is facing you. Measure and mark the center points at the top of ladder panel and bottom of the base panel as shown above. Measure 19.5cm from the side edges (a) and 2,5cm from the top and bottom edges (b) and draw a dot.

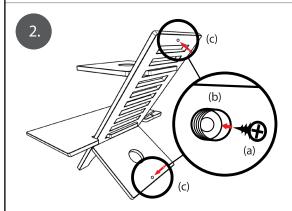

Using a star screwdriver, insert the 2 x screws (a) into the 2 x brass bushings (b) and then screw them into your center point dots (c) as shown above.

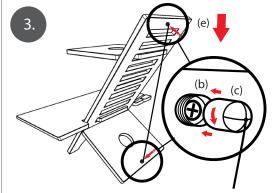

Screw 1st silver cap (c) by hand, onto the top brass bushing (b). Next, Pull and bend the top of the ladder panel (e) downwards in order to screw and tighten the bottom silver cap (c) onto the brass bushing (b).