



FLOW BRACKETS

BMW G80 - 1/2/3 M3 / M4
OEM PLINTH DELETE KIT INSTRUCTIONS

SCAN ME
TO WATCH INSTALL VIDEOS




HANDY HINTS

Ensure the spacers are oriented in the correct direction before screwing into vehicle.

INSTALLATION GUIDE


- Remove OEM Number Plate Plinth from vehicle.
- Roughly align the left and right spacers to the factory screw holes.
- Using supplied bolts (A), centre and mount the spacers to the desired Flow Number Plate Bracket (Slimline, Standard, Heritage, Euro Premium or Signature).
- Secure the number plate bracket to the plinth and vehicle using the 2 supplied screws (B).

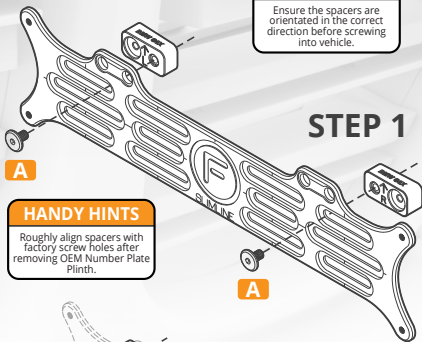

STEP 1

HANDY HINTS

Roughly align spacers with factory screw holes after removing OEM Number Plate Plinth.

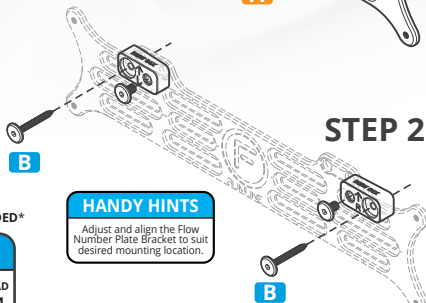

STEP 2

HANDY HINTS

Adjust and align the Flow Number Plate Bracket to suit desired mounting location.

FITTING KIT

FLOW NUMBER PLATE BRACKET **NOT INCLUDED***

A



CONNECTOR BOLT
BLACK STAINLESS
M6 X 10MM
X 2

B



M6 DRESS HEAD
8G X 38MM
SELF-TAPPING
SCREW
X 2



#flowbrackets

BMW G80 OEM PLINTH DELETE KIT
COMPATIBLE WITH ALL FLOW BRACKETS