




FLOW DESIGNS

MERCEDES REAR BLANKING PLATE

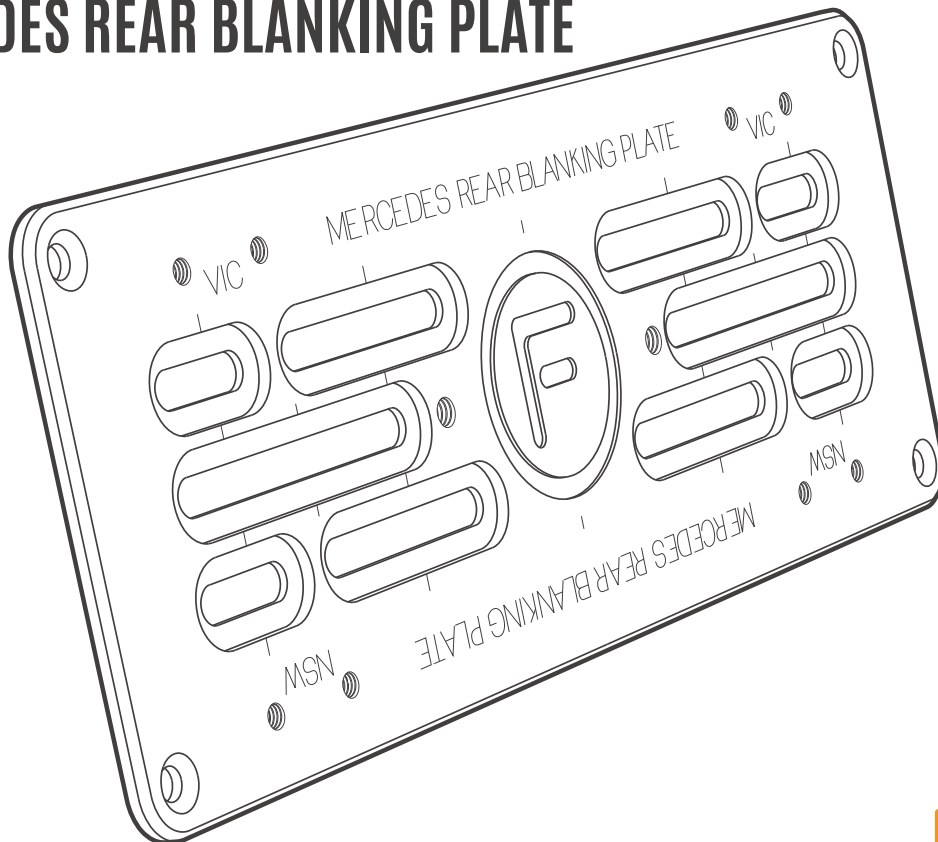

INSTALLATION DIAGRAM - STEP 1

MOUNTING MERCEDES REAR BLANKING PLATE TO VEHICLE

INSTALLATION GUIDE

- Remove existing number plate from vehicle.
- Align and insert bolt through Mercedes Rear Adapter Plate to 4 OEM rear plate mounting holes.
- Tighten Mounting bolts to secure Adapter plate to vehicle.

ADAPTER PLATE FITTING KIT

A




MERCEDES
BENZ REAR
COUNTERSUNK
BLACK STAINLESS
M5 X 20MM
X 4

HANDY HINT

For **NSW / SA** Number Plates, rotate and install Blanking Plate with mounting holes marked "**NSW**" facing up.

HANDY HINT

For **VIC** Number Plates, rotate and install Blanking Plate with mounting holes marked "**VIC**" facing up.

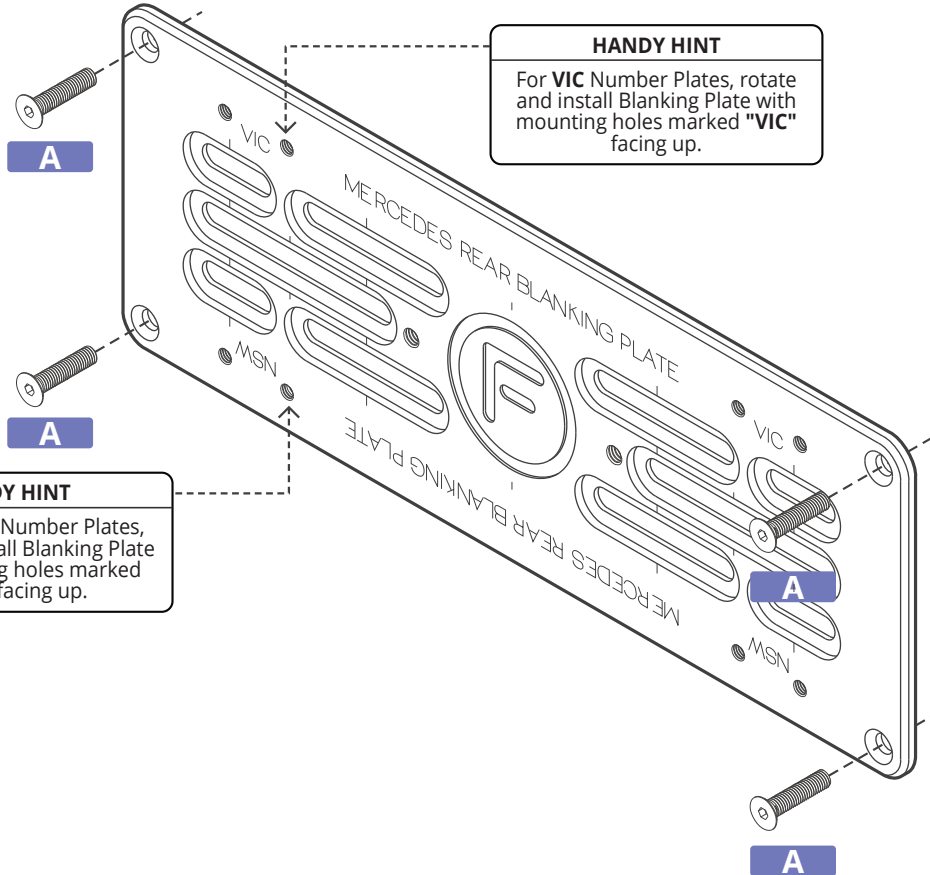

INSTALLATION DIAGRAM - STEP 2

MOUNTING NUMBER PLATE TO MERCEDES REAR BLANKING PLATE

INSTALLATION GUIDE

- Choose Plate Mounting Option:
 - **Option 1** (6mm Dress Bolt)
 - **Option 2** (6mm Countersunk)
 - **Option 3** (8mm Dress Bolt)
 - **Option 4** (Kingpin Bolt)
 - **Option 5** (Double Sided Tape)
 - **Option 6** (Heritage Bracket Mount)
- For **Option 6** (Heritage Bracket Mount) refer to last page.
- Insert bolt through number plate, then align and mount to Mercedes Rear Blanking Plate.
- Tighten Plate Mounting bolts to secure number plate to bracket.

OPTION 1 & 2

6mm Bolts to be used on Metal number plates.

1

5

2

5

3

OPTION 3

8mm Bolts to be used on Polycarbonate/Acrylic number plates.

OPTION 4 - KINGPIN COVER

4

HANDY HINT

For NSW / SA Number Plates, rotate Blanking Plate and use plate mounting holes marked "NSW"

OPTIONAL DOUBLE SIDED TAPE

To use Double Sided Tape to mount to bracket, apply primer to back of number plate and face of number plate bracket.

Apply double sided tape to primed area before peeling tape backing.

NUMBER PLATE FITTING KIT

OPTION 1



DRESS BOLT
BLACK STAINLESS
M5 X 6MM

X 2

OPTION 2



COUNTERSUNK
BLACK STAINLESS
M5 X 6MM

X 2

OPTION 3



POLYCARBONATE /
ACRYLIC PLATE
DRESS BOLT
BLACK STAINLESS
M5 X 8MM

X 2


OPTION 4



KINGPIN
COVER BOLT
COUNTERSUNK
BLACK STAINLESS
M5 X 14MM

X 2

OPTION 5



3M DOUBLE
SIDED TAPE
X 4
+
PRIMER
X 1

OPTION 6



HERITAGE
BRACKET
CONNECTOR BOLT
BLACK STAINLESS
M6 X 6MM


X 2

PARTS AND FITTING KIT

MERCEDES REAR BLANKING PLATE

PARTS LIST

**MERCEDES REAR
BLANKING PLATE**
X 1

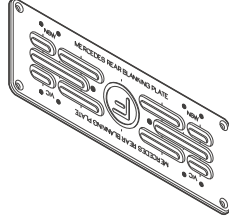

**MERCEDES
CONNECTOR BOLT**
BLACK STAINLESS
M6 X 6MM
X 2



**MERCEDES
COUNTERSUNK
BLACK STAINLESS**
M5 X 20MM
X 4



**COUNTERSUNK
BLACK STAINLESS**
M5 X 6MM
X 2



**DRESS BOLT
BLACK STAINLESS**
M5 X 6MM
X 2



**POLYCARBONATE /
ACRYLIC PLATE**
DRESS BOLT
BLACK STAINLESS
M5 X 8MM
X 2



**KINGPIN
COVER BOLT**
COUNTERSUNK
BLACK STAINLESS
M5 X 14MM
X 2



**3M
PRIMER**
X 1



**3M VHB
DOUBLE SIDED
TAPE**
X 4



**4MM
ALLEN KEY**
X 1




**3MM
ALLEN KEY**
X 1



OPTIONAL ACCESSORIES (SOLD SEPARATELY)


**HERITAGE
NUMBER PLATE BRACKET**

Heritage number plate required to install
Heritage (6 5 and 4 digit) number
plate bracket on rear of
Mercedes.

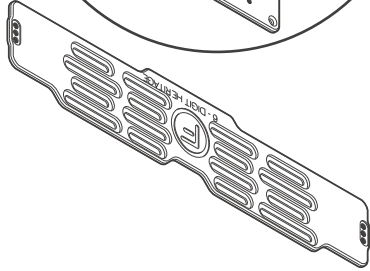

**HERITAGE NUMBER PLATE
BRACKET MOUNTING**

- Align and insert bolt through Heritage Number Plate Bracket to holes on Mercedes Rear Blanking Plate.
- Tighten Mounting bolts to secure Adapter Plate.

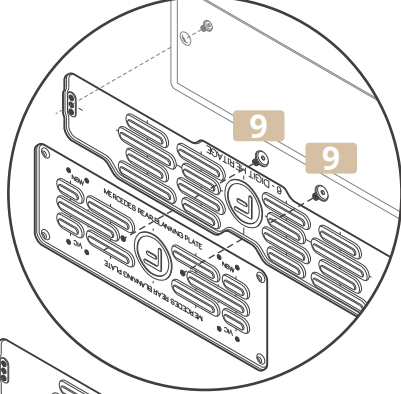

**SECURITY BOLT
PACK OPTION**

Security Bolts with Security Key to
mount number plate to bracket.

