




FLOW DESIGNS

Q PLATE FOUR-DIGIT HERITAGE NUMBER PLATE BRACKET

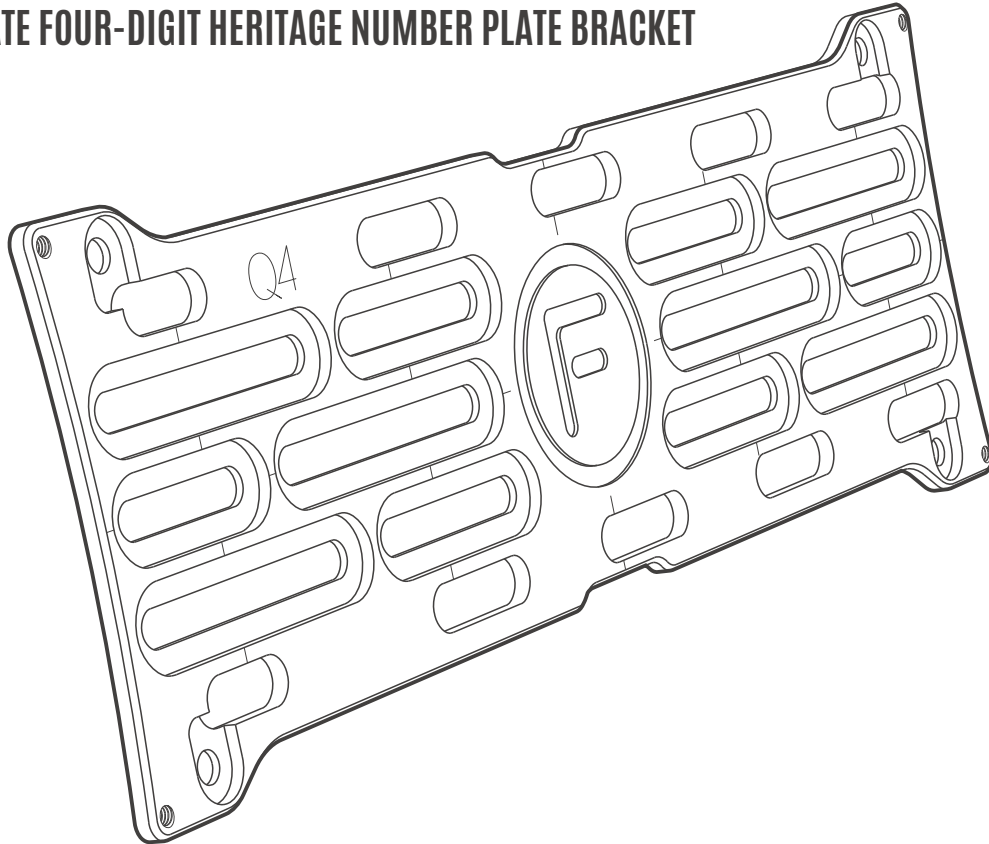


INSTALLATION DIAGRAM - STEP 1









MOUNTING QPLATE FOUR-DIGIT HERITAGE NUMBER PLATE BRACKET TO VEHICLE

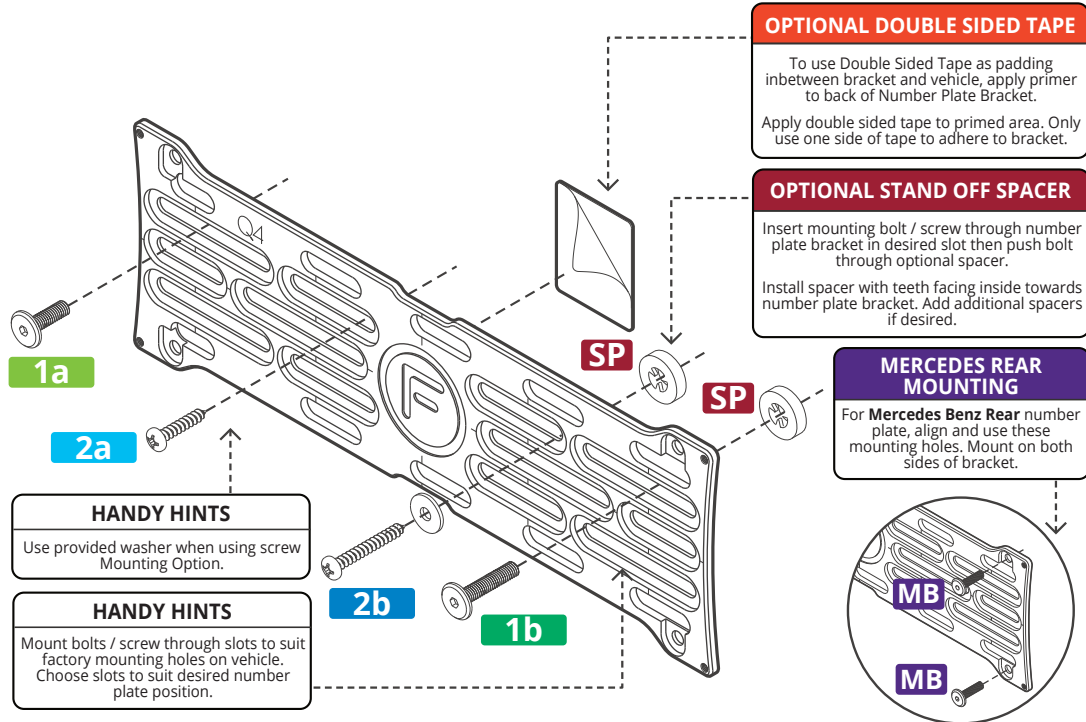INSTALLATION GUIDE

- Remove existing number plate from vehicle.
- Choose Bracket Mounting Option to suit vehicle.
 - Option 1** (M6 Connector Bolts)
 - Option 2** (10g Screws)
 - Mercedes Rear** (M5 Bolts)
- Select correct length bolt / screw (**a, b** or **c**) to suit Mounting Option. Use shorter bolts / screws if spacers are not used.
- Insert bolt / screw through number plate bracket and optional spacer then align to vehicle.
- Tighten Mounting bolts / screws to secure number plate bracket to vehicle.



BRACKET FITTING KIT


<p>OPTION 1a</p>  <p>CONNECTOR BOLT BLACK STAINLESS M6 X 20MM X 2</p>	<p>OPTION 1b</p>  <p>CONNECTOR BOLT BLACK STAINLESS M6 X 30MM X 2</p>	<p>OPTION 1c</p>  <p>CONNECTOR BOLT BLACK STAINLESS M6 X 15MM X 2</p>	<p>OPTION 2a</p>  <p>10G X 25MM SELF-TAPPING SCREW + 16mm WASHER X 2</p>	<p>OPTION 2b</p>  <p>10G X 38MM SELF-TAPPING SCREW + 16mm WASHER X 2</p>	<p>MERCEDES</p>  <p>MERCEDES BENZ REAR CONNECTOR BOLT BLACK STAINLESS M5 X 20MM X 4</p>	<p>SPACER</p>  <p>STAND OFF SPACER X 4</p>	<p>DOUBLE SIDED TAPE</p>  <p>3M DOUBLE SIDED TAPE X 4 + PRIMER X 1</p>
--	--	--	--	--	--	--	---

INSTALLATION DIAGRAM - STEP 2

MOUNTING NUMBER PLATE TO QPLATE FOUR-DIGIT HERITAGE NUMBER PLATE BRACKET

INSTALLATION GUIDE

- Choose Plate Mounting Option:
 - **Option 1** (6mm Dress Bolt)
 - **Option 2** (6mm Security Bolt)
 - **Option 3** (6mm White Bolts)
- Insert bolt through Heritage number plate, then align and mount to number plate bracket.
- Tighten Plate Mounting bolts to secure number plate to bracket.

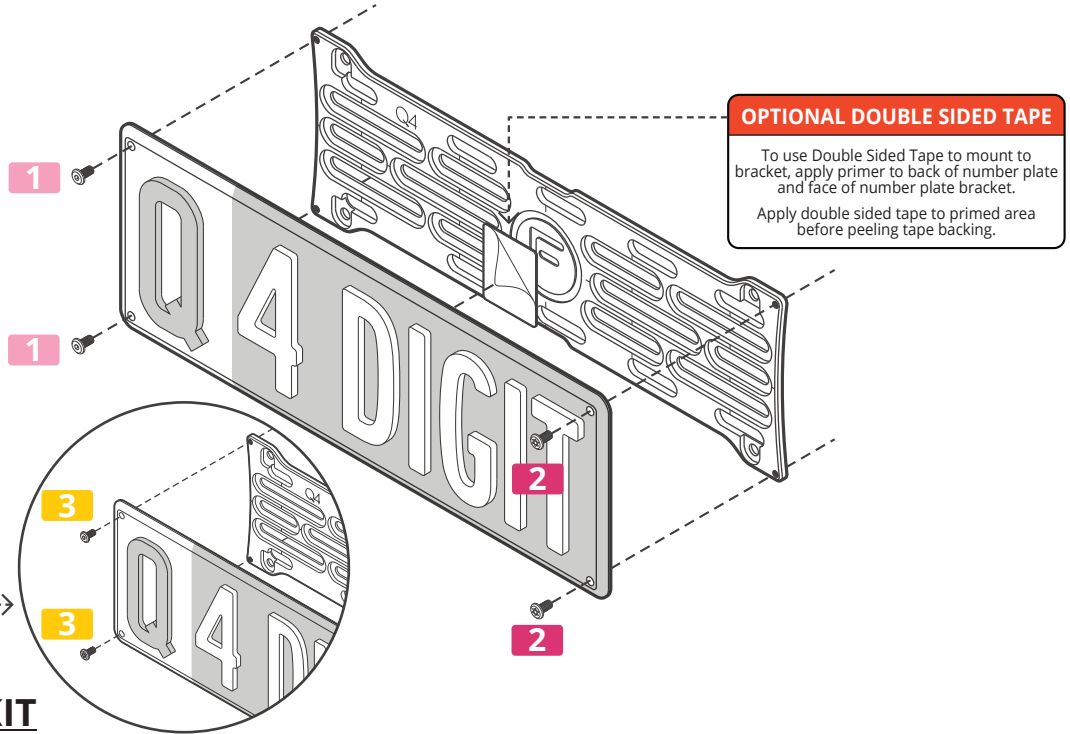

OPTION 3

Optional **White 6mm Bolts** can be used to match white number plate.

NUMBER PLATE FITTING KIT

OPTION 1



DRESS BOLT
BLACK STAINLESS
M4 X 6MM

X 4



SECURITY BOLT
BLACK STAINLESS
M4 X 6MM

X 4

OPTION 3



DRESS BOLT
WHITE STAINLESS
M4 X 6MM

X 2



SECURITY BOLT
WHITE STAINLESS
M4 X 6MM

X 2

DOUBLE SIDED TAPE




3M DOUBLE
SIDED TAPE
X 4
+
PRIMER
X 1

PARTS AND FITTING KIT

QPLATE FOUR-DIGIT HERITAGE NUMBER PLATE BRACKET

PARTS LIST

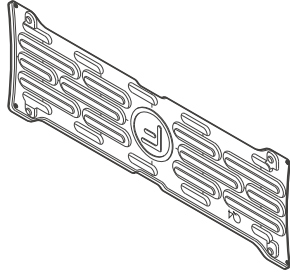

X 1
QPLATE FOUR-DIGIT HERITAGE
NUMBER PLATE BRACKET

X 2
CONNECTOR
BOLT
BLACK STAINLESS
M6 X 20MM



X 2
CONNECTOR
BOLT
BLACK STAINLESS
M6 X 30MM



X 2
CONNECTOR
BOLT
BLACK STAINLESS
M6 X 15MM



X 1
4MM
ALLEN KEY



X 1
3MM
ALLEN KEY

X 2
10G X 25MM
SELF-TAPPING
SCREW
+
16mm WASHER



X 2
10G X 38MM
SELF-TAPPING
SCREW
+
16mm WASHER



X 4
CONNECTOR BOLT
BLACK STAINLESS
M5 X 20MM
MERCEDÉS
BENZ REAR

X 4
DRESS BOLT
BLACK STAINLESS
M4 X 6MM



X 4
SECURITY BOLT
BLACK STAINLESS
M4 X 6MM



X 2
DRESS BOLT
WHITE STAINLESS
M4 X 6MM



X 2
SECURITY BOLT
WHITE STAINLESS
M4 X 6MM



X 4
DOUBLE SIDED
3M VHB
TAPE



X 4
STAND OFF
SPACER



X 1
3M
PRIMER

OPTIONAL ACCESSORIES (SOLD SEPARATELY)