


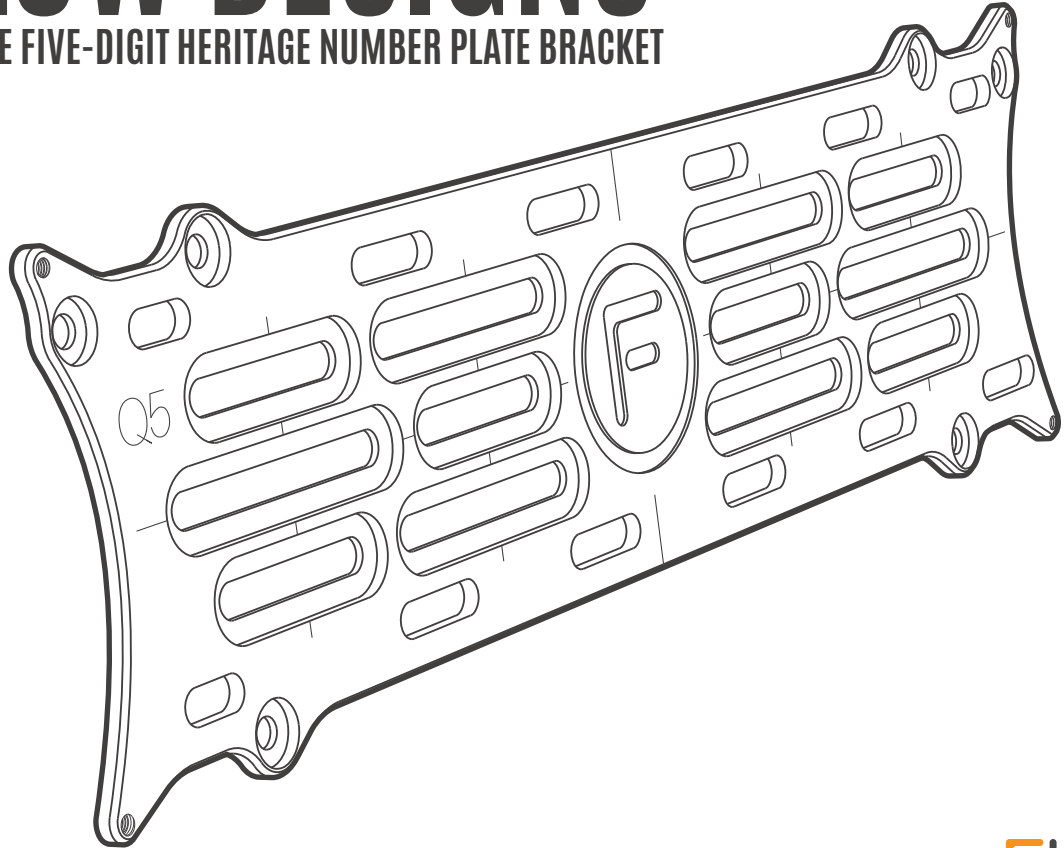

FLOW DESIGNS

Q PLATE FIVE-DIGIT HERITAGE NUMBER PLATE BRACKET




INSTALLATION DIAGRAM - STEP 1

MOUNTING QPLATE FIVE-DIGIT HERITAGE NUMBER PLATE BRACKET TO VEHICLE

INSTALLATION GUIDE

- Remove existing number plate from vehicle.
- Choose Bracket Mounting Option to suit vehicle.
 - Option 1** (M6 Connector Bolts)
 - Option 2** (10g Screws)
 - Option 3** (M5 Bolts - Mercedes Rear)
- Select correct length bolt / screw (**a** or **b**) to suit Mounting Option. Use shorter bolts / screws if spacers are not used.
- Insert bolt / screw through number plate bracket and optional spacer then align to vehicle.
- Tighten Mounting bolts / screws to secure number plate bracket to vehicle.

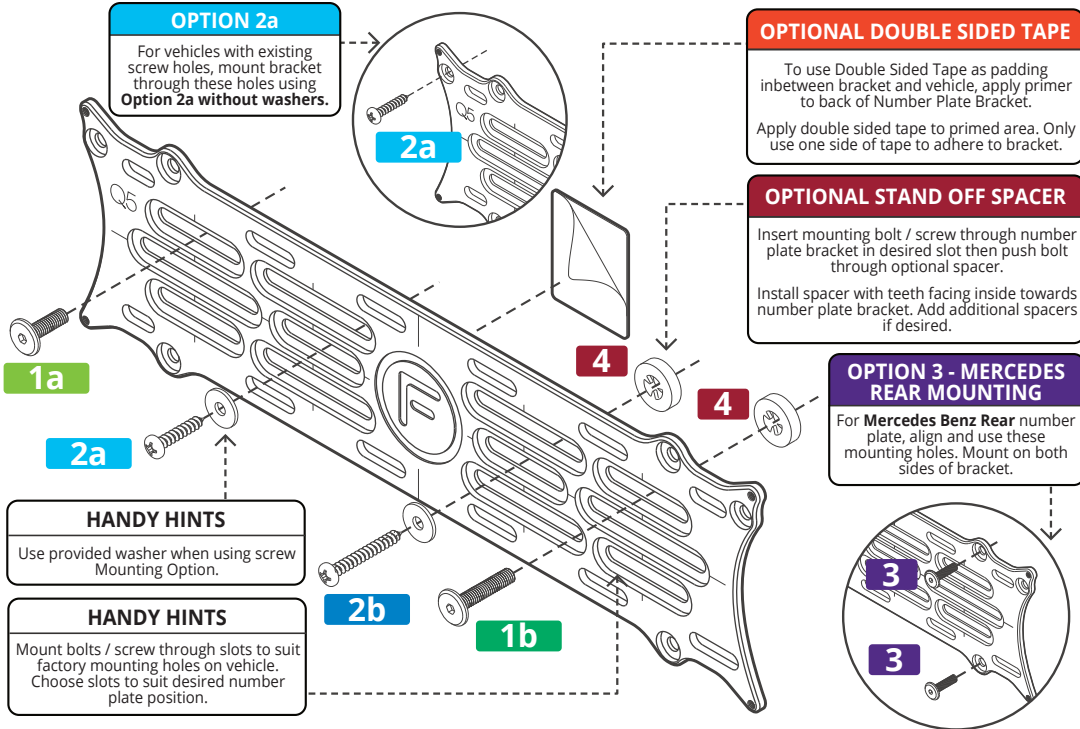

BRACKET FITTING KIT

OPTION 1a



CONNECTOR BOLT
BLACK STAINLESS
M6 X 20MM
X 2

OPTION 1b



CONNECTOR BOLT
BLACK STAINLESS
M6 X 30MM
X 2

OPTION 2a



10G X 25MM
SELF-TAPPING
SCREW
+
16mm WASHER
X 2

OPTION 2b



10G X 38MM
SELF-TAPPING
SCREW
+
16mm WASHER
X 2

OPTION 3



MERCEDES
BENZ REAR
CONNECTOR BOLT
BLACK STAINLESS
M5 X 20MM
X 4

4



STAND OFF
SPACER
X 4

DOUBLE SIDED TAPE




3M DOUBLE
SIDED TAPE
X 4
+
PRIMER
X 1

INSTALLATION DIAGRAM - STEP 2

MOUNTING NUMBER PLATE TO QPLATE FIVE-DIGIT HERITAGE NUMBER PLATE BRACKET

INSTALLATION GUIDE

- Choose Plate Mounting Option:
 - **Option 1** (6mm Dress Bolt)
 - **Option 2** (6mm Security Bolt)
 - **Option 3** (6mm White Bolts)
- Insert bolt through Heritage number plate, then align and mount to number plate bracket.
- Tighten Plate Mounting bolts to secure number plate to bracket.

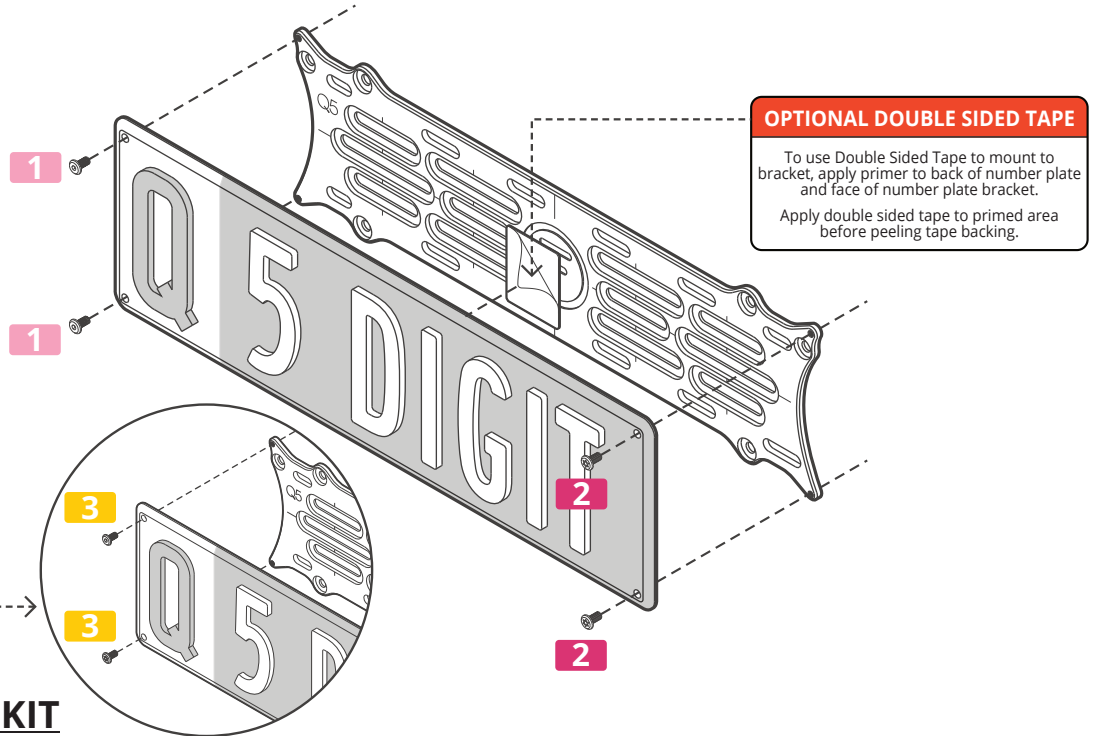

OPTION 3

Optional **White 6mm Bolts** can be used to match white number plate.

NUMBER PLATE FITTING KIT

OPTION 1



DRESS BOLT
BLACK STAINLESS
M4 X 6MM
X 4



SECURITY BOLT
BLACK STAINLESS
M4 X 6MM
X 4

OPTION 3



DRESS BOLT
WHITE STAINLESS
M4 X 6MM
X 2



SECURITY BOLT
WHITE STAINLESS
M4 X 6MM
X 2

DOUBLE SIDED TAPE




3M DOUBLE
SIDED TAPE
X 4
+
PRIMER
X 1

PARTS AND FITTING KIT

QPLATE FIVE-DIGIT HERITAGE NUMBER PLATE BRACKET

PARTS LIST

X 1
QPLATE FIVE-DIGIT HERITAGE
NUMBER PLATE BRACKET

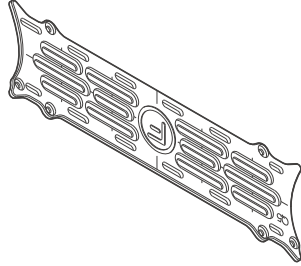

X 2
CONNECTOR
BOLT
BLACK STAINLESS
M6 X 20MM

X 2
CONNECTOR
BOLT
BLACK STAINLESS
M6 X 30MM



X 2
10G X 25MM
SELF-TAPPING
SCREW
+
16mm WASHER



X 2
10G X 38MM
SELF-TAPPING
SCREW
+
16mm WASHER



X 4
DRESS BOLT
BLACK STAINLESS
M4 X 6MM



X 4
SECURITY BOLT
BLACK STAINLESS
M4 X 6MM



X 2
DRESS BOLT
WHITE STAINLESS
M4 X 6MM



X 2
SECURITY BOLT
WHITE STAINLESS
M4 X 6MM



X 4
3M VHB
DOUBLE SIDED
TAPE

X 1
3M
PRIMER



X 4
MERCEDSES
BENZ REAR
CONNECTOR BOLT
BLACK STAINLESS
M5 X 20MM

X 1
4MM
ALLEN KEY



X 1
2.5MM
ALLEN KEY



X 4
STAND OFF
SPACER



OPTIONAL ACCESSORIES (SOLD SEPARATELY)