


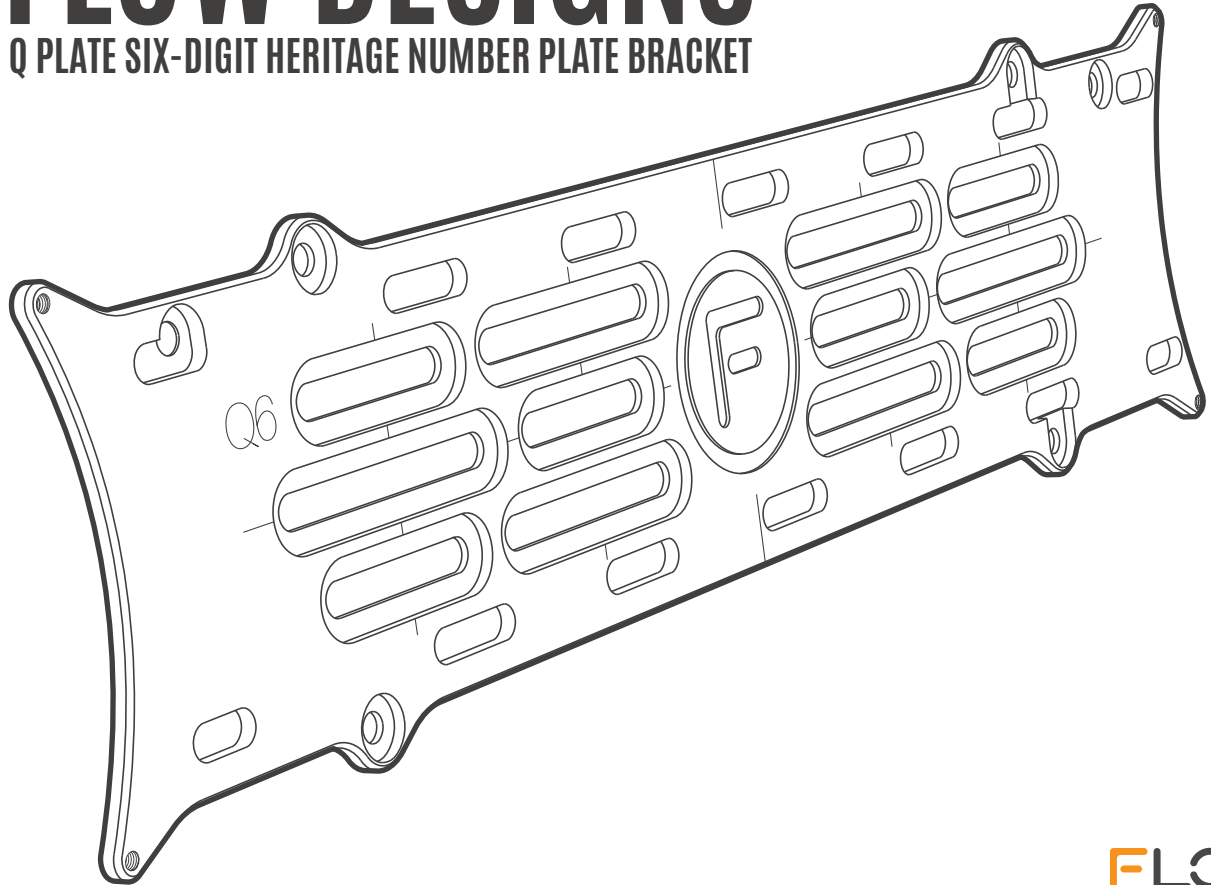

# FLOW DESIGNS

Q PLATE SIX-DIGIT HERITAGE NUMBER PLATE BRACKET




# INSTALLATION DIAGRAM - STEP 1

## MOUNTING QPLATE SIX-DIGIT HERITAGE NUMBER PLATE BRACKET TO VEHICLE

### INSTALLATION GUIDE

- Remove existing number plate from vehicle.
- Choose Bracket Mounting Option to suit vehicle.
  - Option 1** (M6 Connector Bolts)
  - Option 2** (10g Screws)
  - Option 3** (M5 Bolts - Mercedes Rear)
- Select correct length bolt / screw (**a** or **b**) to suit Mounting Option. Use shorter bolts / screws if spacers are not used.
- Insert bolt / screw through number plate bracket and optional spacer then align to vehicle.
- Tighten Mounting bolts / screws to secure number plate bracket to vehicle.

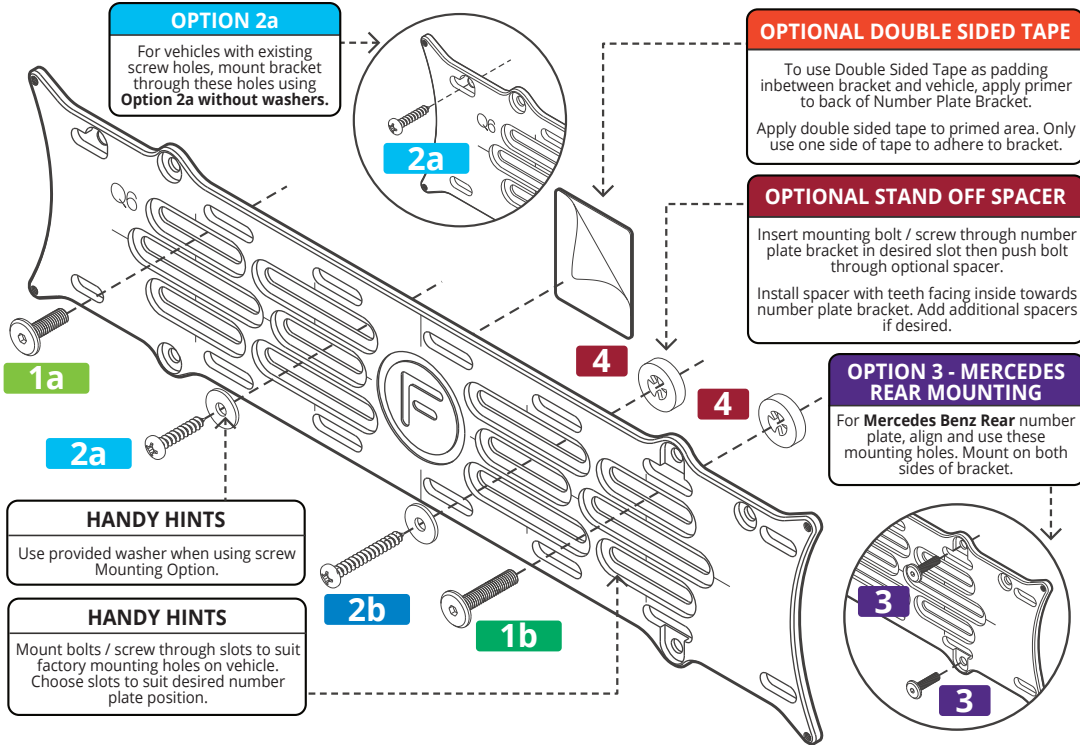

### BRACKET FITTING KIT

#### OPTION 1a



CONNECTOR BOLT  
BLACK STAINLESS  
M6 X 20MM  
**X 2**

#### OPTION 1b



CONNECTOR BOLT  
BLACK STAINLESS  
M6 X 30MM  
**X 2**

#### OPTION 2a



10G X 25MM  
SELF-TAPPING  
SCREW  
+  
16mm WASHER  
**X 2**

#### OPTION 2b



10G X 38MM  
SELF-TAPPING  
SCREW  
+  
16mm WASHER  
**X 2**

#### OPTION 3




MERCEDES  
BENZ REAR  
CONNECTOR BOLT  
BLACK STAINLESS  
M5 X 20MM  
**X 4**

#### 4



STAND OFF  
SPACER  
**X 4**

#### DOUBLE SIDED TAPE




3M DOUBLE  
SIDED TAPE  
**X 4**  
+  
PRIMER  
**X 1**

# INSTALLATION DIAGRAM - STEP 2

## MOUNTING NUMBER PLATE TO QPLATE SIX-DIGIT HERITAGE NUMBER PLATE BRACKET

### INSTALLATION GUIDE

- Choose Plate Mounting Option:
  - Option 1** (6mm Dress Bolt)
  - Option 2** (6mm Security Bolt)
  - Option 3** (6mm White Bolts)
- Insert bolt through Heritage number plate, then align and mount to number plate bracket.
- Tighten Plate Mounting bolts to secure number plate to bracket.

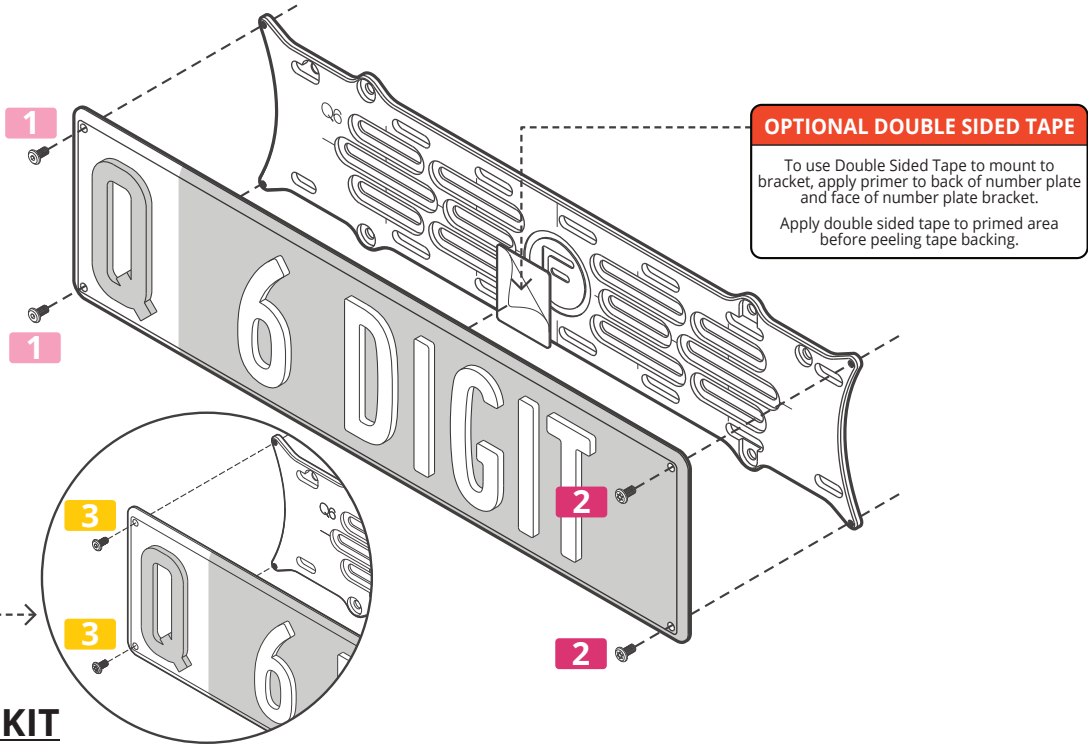

#### OPTION 3

Optional **White 6mm Bolts** can be used to match white number plate.

### NUMBER PLATE FITTING KIT

#### OPTION 1



DRESS BOLT  
BLACK STAINLESS  
M4 X 6MM  
**X 4**



SECURITY BOLT  
BLACK STAINLESS  
M4 X 6MM  
**X 4**

#### OPTION 3



DRESS BOLT  
WHITE STAINLESS  
M4 X 6MM  
**X 2**



SECURITY BOLT  
WHITE STAINLESS  
M4 X 6MM  
**X 2**

#### DOUBLE SIDED TAPE




3M DOUBLE  
SIDED TAPE  
**X 4**  
+  
PRIMER  
**X 1**

# PARTS AND FITTING KIT

QPLATE SIX-DIGIT HERITAGE NUMBER PLATE BRACKET

## PARTS LIST

**X 1**  
QPLATE SIX-DIGIT HERITAGE  
NUMBER PLATE BRACKET

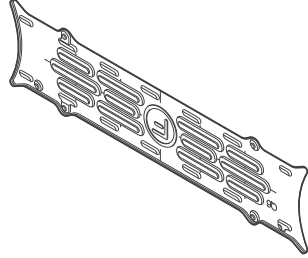

**X 2**  
CONNECTOR  
BOLT  
BLACK STAINLESS  
M6 X 20MM

**X 2**  
CONNECTOR  
BOLT  
BLACK STAINLESS  
M6 X 30MM



**X 2**  
10G X 25MM  
SELF-TAPPING  
SCREW  
+  
16mm WASHER



**X 2**  
10G X 38MM  
SELF-TAPPING  
SCREW  
+  
16mm WASHER



**X 4**  
DRESS BOLT  
M4 X 6MM  
BLACK STAINLESS



**X 4**  
SECURITY BOLT  
BLACK STAINLESS  
M4 X 6MM



**X 1**  
4MM  
ALLEN KEY



**X 1**  
2.5MM  
ALLEN KEY




**X 4**  
MERCEDÉS  
BENZ REAR  
CONNECTOR BOLT  
BLACK STAINLESS  
M5 X 20MM



**X 4**  
STAND OFF  
SPACER



**X 2**  
DRESS BOLT  
M4 X 6MM  
WHITE STAINLESS



**X 2**  
SECURITY BOLT  
M4 X 6MM  
WHITE STAINLESS



**X 4**  
DOUBLE SIDED  
TAPES  
3M VHB



**X 1**  
3M  
PRIMER



OPTIONAL ACCESSORIES (SOLD SEPARATELY)