


REMOVE EXISTING MOUNTING BRACKET FROM SIGNATURE PLATE

#### **INSTALLATION GUIDE**


- Loosen the 3 grub screws located at the bottom edge of the mounting plate bracket.
- Remove existing mounting bracket from Signature Plate prior to installation of Signature S3 Bracket.
- Unclip the Signature Plate from the existing mounting bracket.

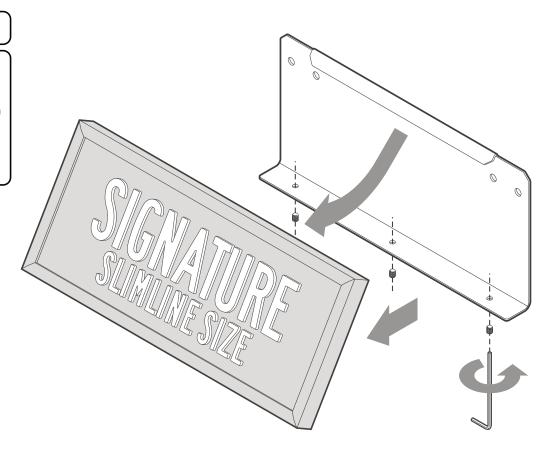


ASSEMBLE TOP AND BOTTOM MOUNTS TO BRACKET

### **INSTALLATION GUIDE**

- Use supplied Assembly Fitting Kit (A) to loosely assemble top and bottom mounts to the Signature Plate Bracket.
- Place the Signature Plate over the top and bottom mounts as a guide.
- · Centre the frame to the bracket.
- Remove Signature Plate from the mounts, then tighten and lock the bolts to the bracket.
- If the Signature Plate frame clips into the bottom mount, use the supplied pry bar to unclip the frame from the mounts.

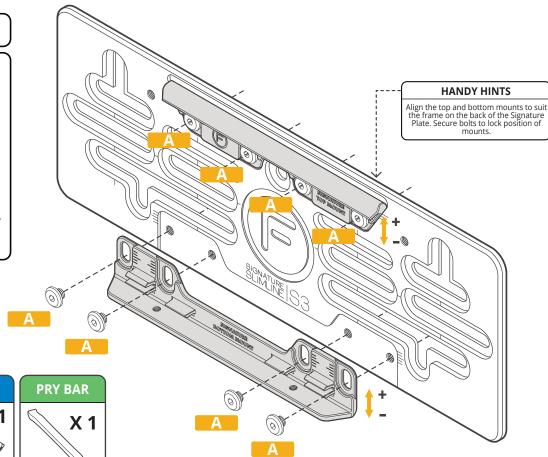

## **ASSEMBLY FITTING KIT**






MOUNTING SIGNATURE PLATE BRACKET TO VEHICLE

#### **INSTALLATION GUIDE**

- Remove existing number plate from vehicle.
- · Choose Bracket Mounting Option to suit vehicle.
  - Option 1 (M6 Connector Bolts)
  - Option 2 (10g Screws)

Insert bolt / screw through Signature Plate Bracket and optional spacer then align to vehicle.

• Tighten Mounting bolts / screws to secure Signature Plate Bracket to vehicle.

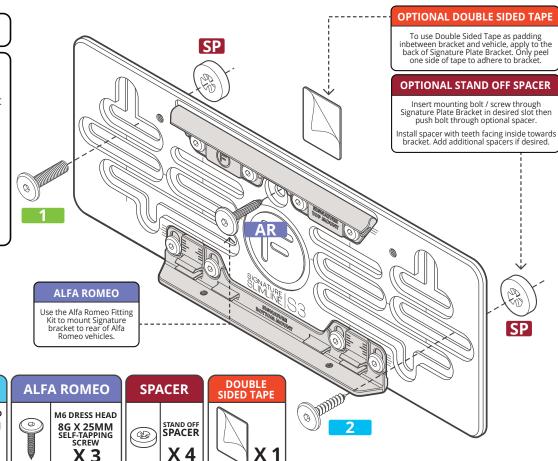

#### **BRACKET FITTING KIT**

#### **OPTION 1**



M6 DRESS HEAD 10G X 25MM SELF-TAPPING SCREW **X2** 

**OPTION 2** 


MOUNTING SIGNATURE PLATE TO SIGNATURE PLATE BRACKET

#### **INSTALLATION GUIDE**

- Align and centre the Signature Plate frame with the top and bottom mounts on the Bracket.
- Attach Signature Plate by hooking the top mount into the back of the Signature Plate frame.
- Firmly click the plate frame into the bottom mount.
- Insert 2 grub screws into the bottom mount to secure the Signature plate frame.
- Use Allen Key to tighten and firmly hold the plate in place.

## NUMBER PLATE FITTING KIT



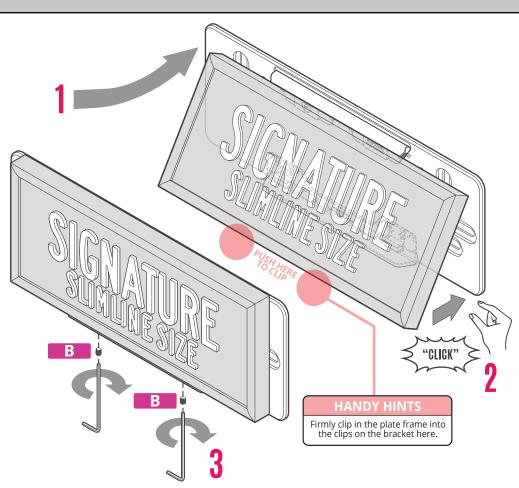


## **MOUNTING OPTION 2**


MOUNTING EXISTING BRACKET TO SIGNATURE PLATE BRACKET

#### **INSTALLATION GUIDE**

- Remove existing mounting bracket from Signature Plate prior to installation of Signature S3 Bracket.
- Install the Signature Plate bracket onto the vehicle without any mounts.
- Align and mount the exisiting mounting bracket to the Signature Plate Bracket using the supplied fitting kit.

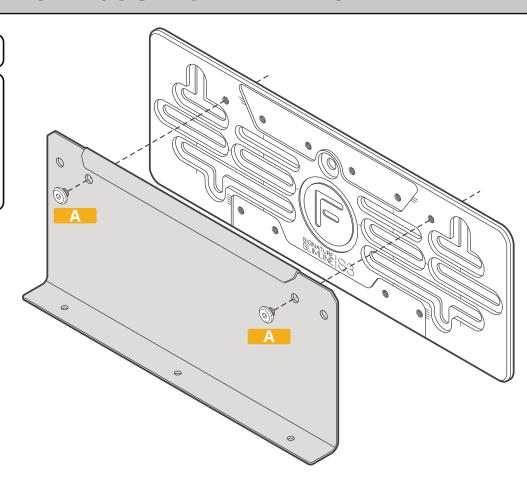


## **ASSEMBLY FITTING KIT**



## **MOUNTING OPTION 2**

MOUNTING SIGNATURE PLATE TO EXISTING BRACKET

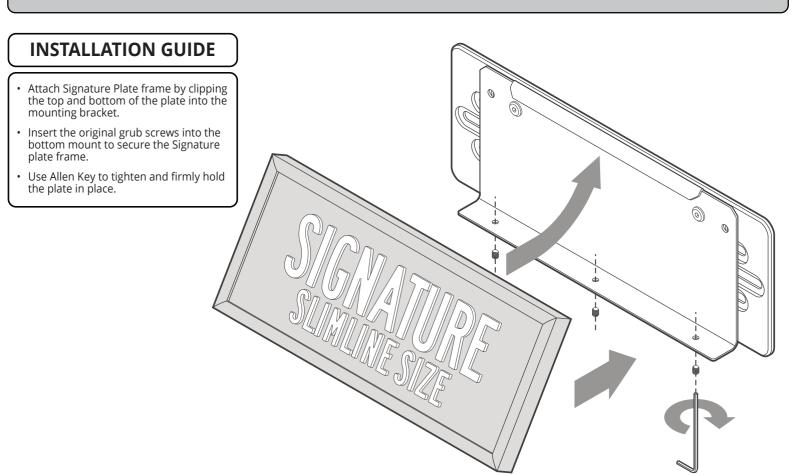

# PARTS AND FITTING KIT SIGNATURE S3 NUMBER PLATE BRACKET

LX LX **7** X τX SM VHB TAPE STAND OFF (F) **ALLEN KEY** ALLEN KEY **MM8** MMÞ **X S X S** SELF-TAPPING SELF-TAPPING SCREW 10G X 25MM SELF-TAPPING SCREW ■ M4 X 6MM 0 **GRUB SCREW ALFA ROMEO** M6 DRESS HEAD LX 8 X LX **ZX** BLACK STAINLESS
MS X 4MM **MMSX X 9M** ALLEN KEY **T00L a** BLACK STAINLESS PRY **NM2** CONNECTOR BOLT CONNECTOR BOLT MOTTOM MOUNT LX TNUOM **4OT BRACKET JAJA REBNUM ES ANUTANDIS OPTIONAL ACCESSORIES (SOLD SEPARATELY) TSIJ STAA9**