

BIOCLIMATIC PERGOLA FREE STANDING 4 POSTS

3×3/3×4m








Installation and Wind Management Guidelines

1.Installation on Various Surfaces

For WPC (Wood Plastic Composite), antiseptic wood, ceramic, or stone flooring, it is essential to either concrete the post directly or construct a 50cm concrete foundation beneath the base plate to secure it firmly.

2.Wind Management


In the event of strong winds, the louvers must be opened to maintain proper air circulation and minimise wind resistance.”

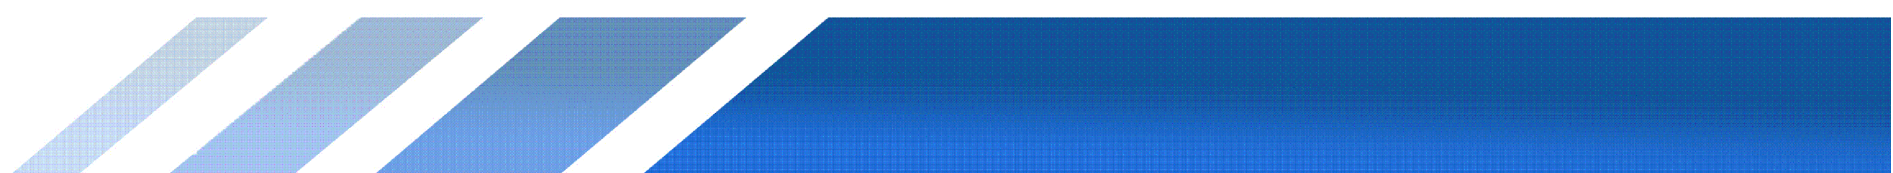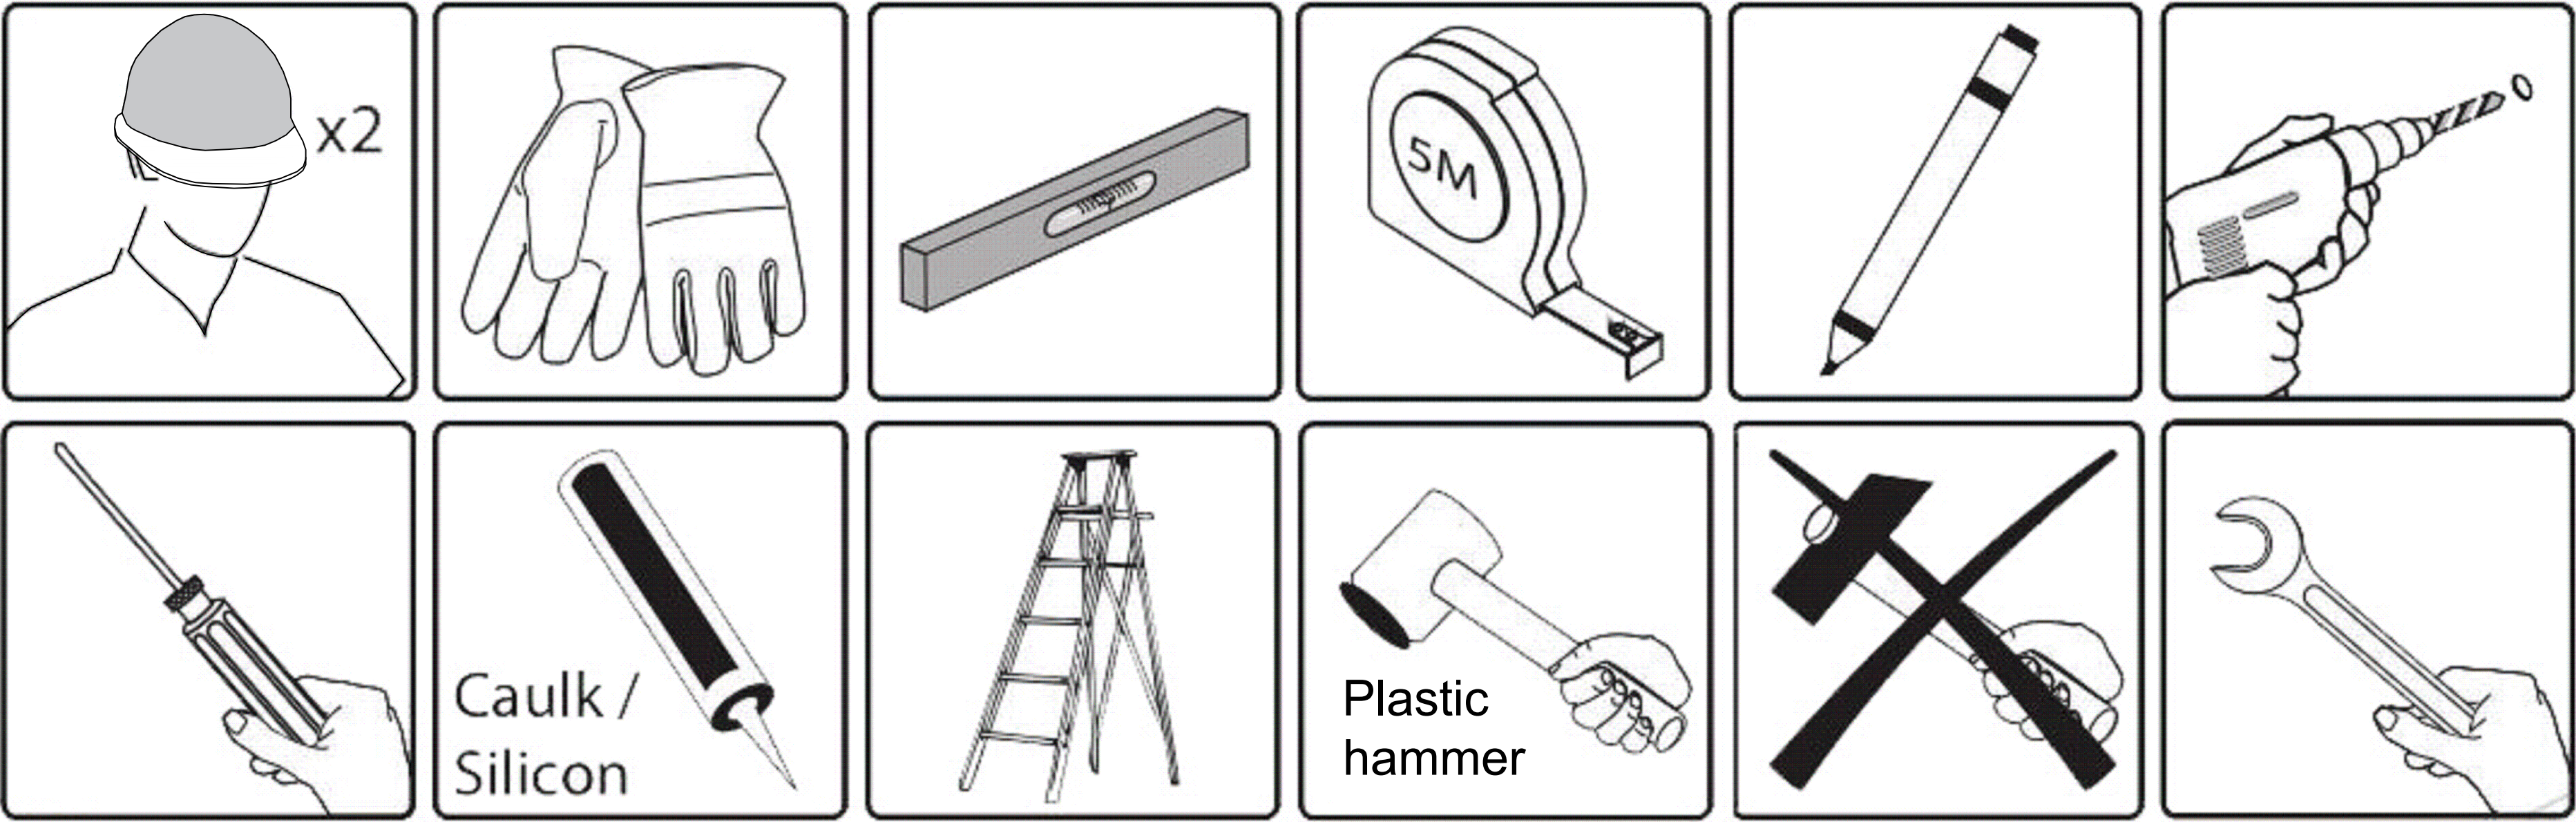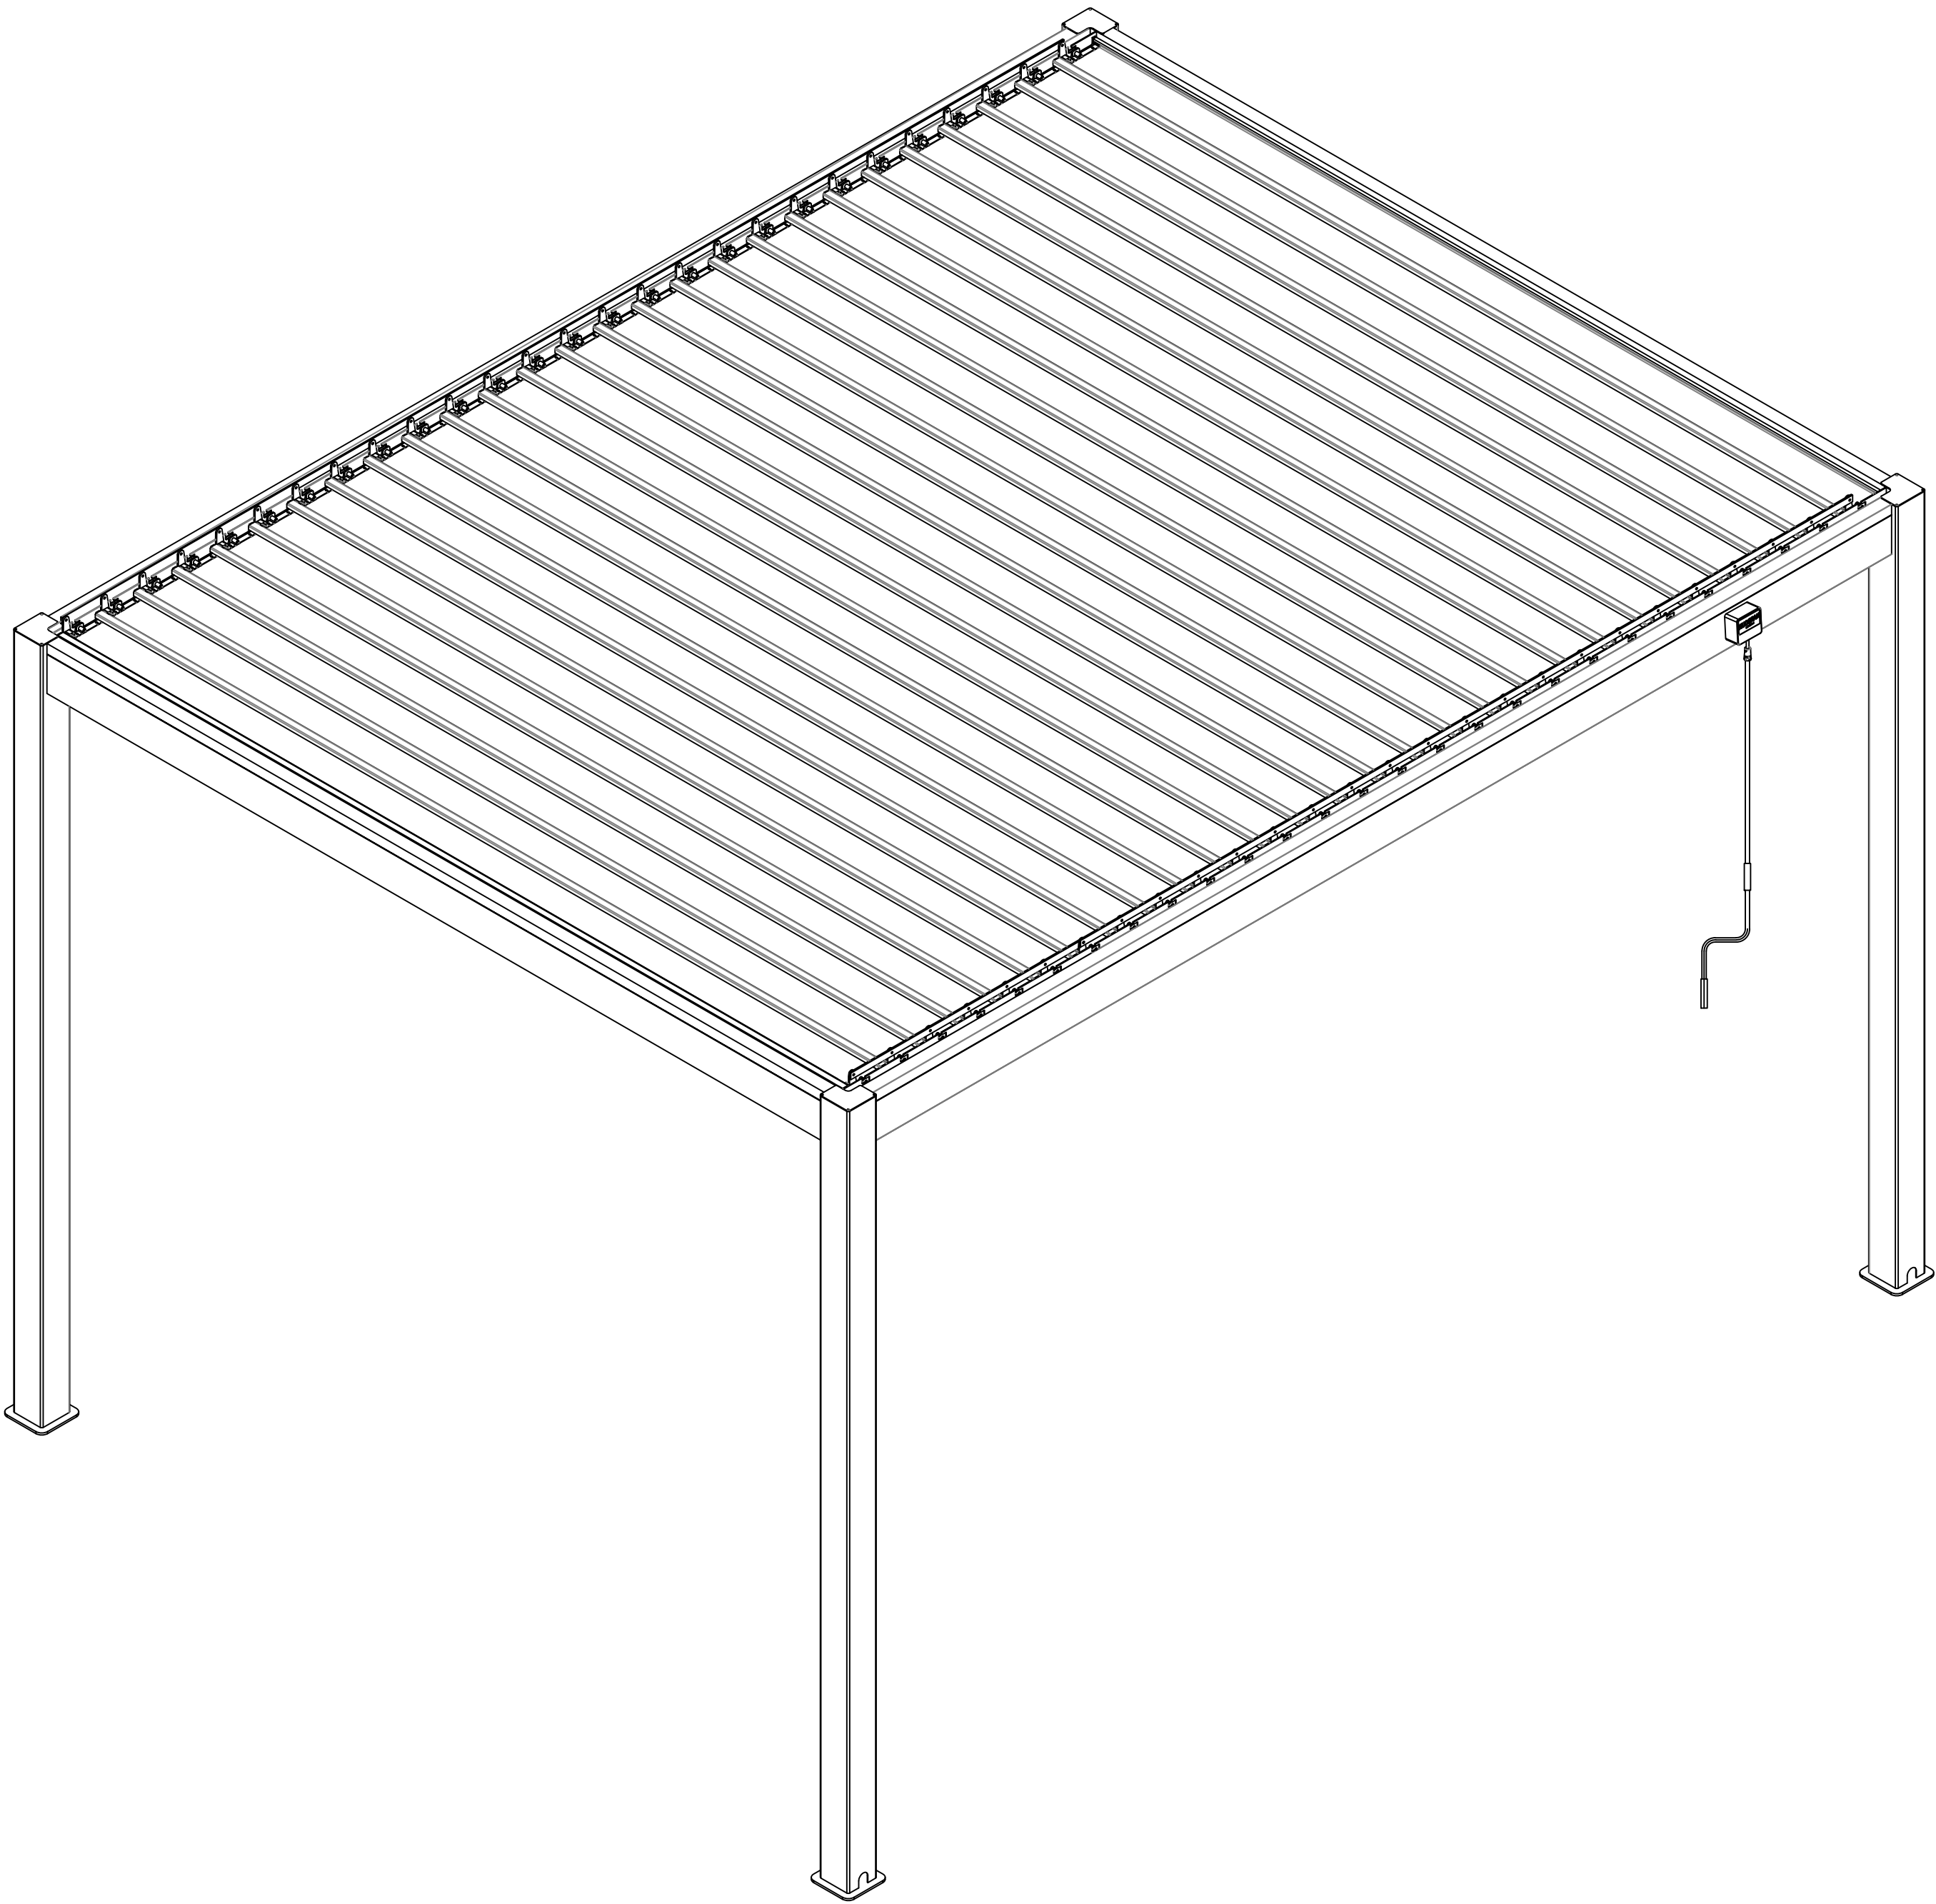










3x3


	Item	Qty		Item	Qty	Item	Qty
Carton 1/4	7B-01 A/B	4		7B-11	4	7B-13	4
	7B-14	1		7B-15	1	7B-16	1
	7B-19	8+		7B-20	42+	7B-21	16+
	7B-22	24+		7B-24	1	7B-30	41+
	7B-31	1		7B-32	42+	7B-33	84+
	7B-18	1					
Carton 2/4	7B-02	1		7B-03	1	7B-04	2
	7B-09	2		7B-06	2		
Carton 3/4	7B-06	10					
Carton 4/4	7B-06	9					

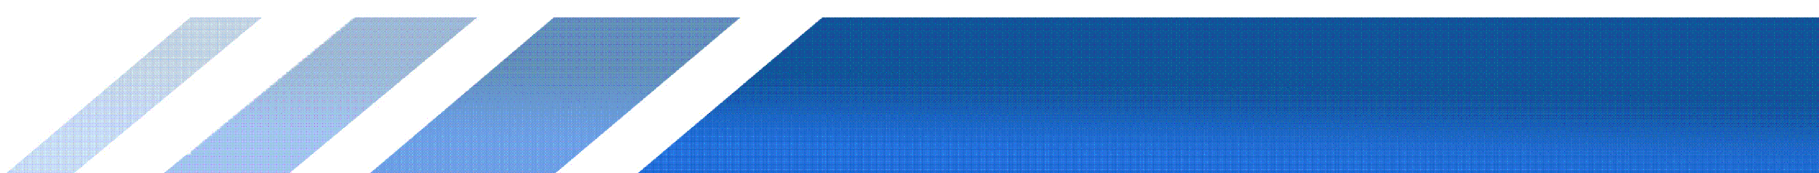


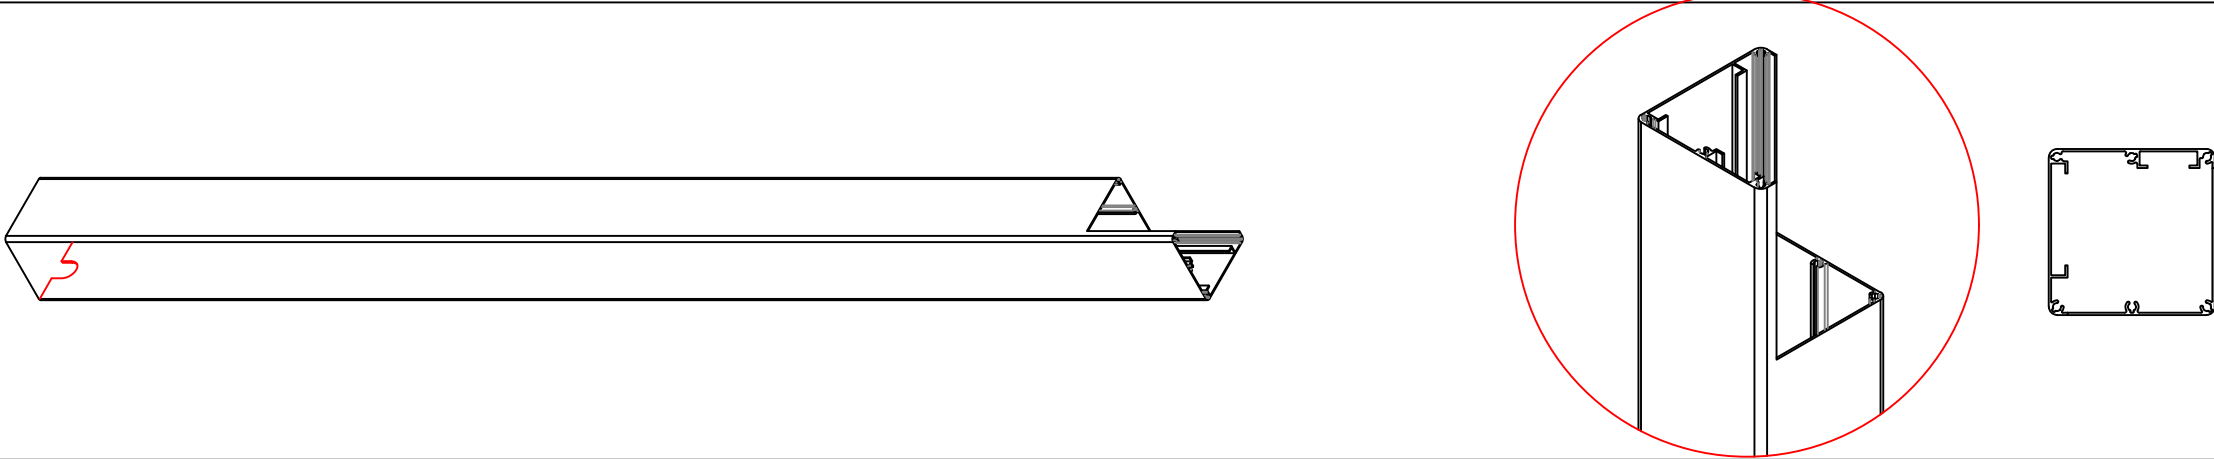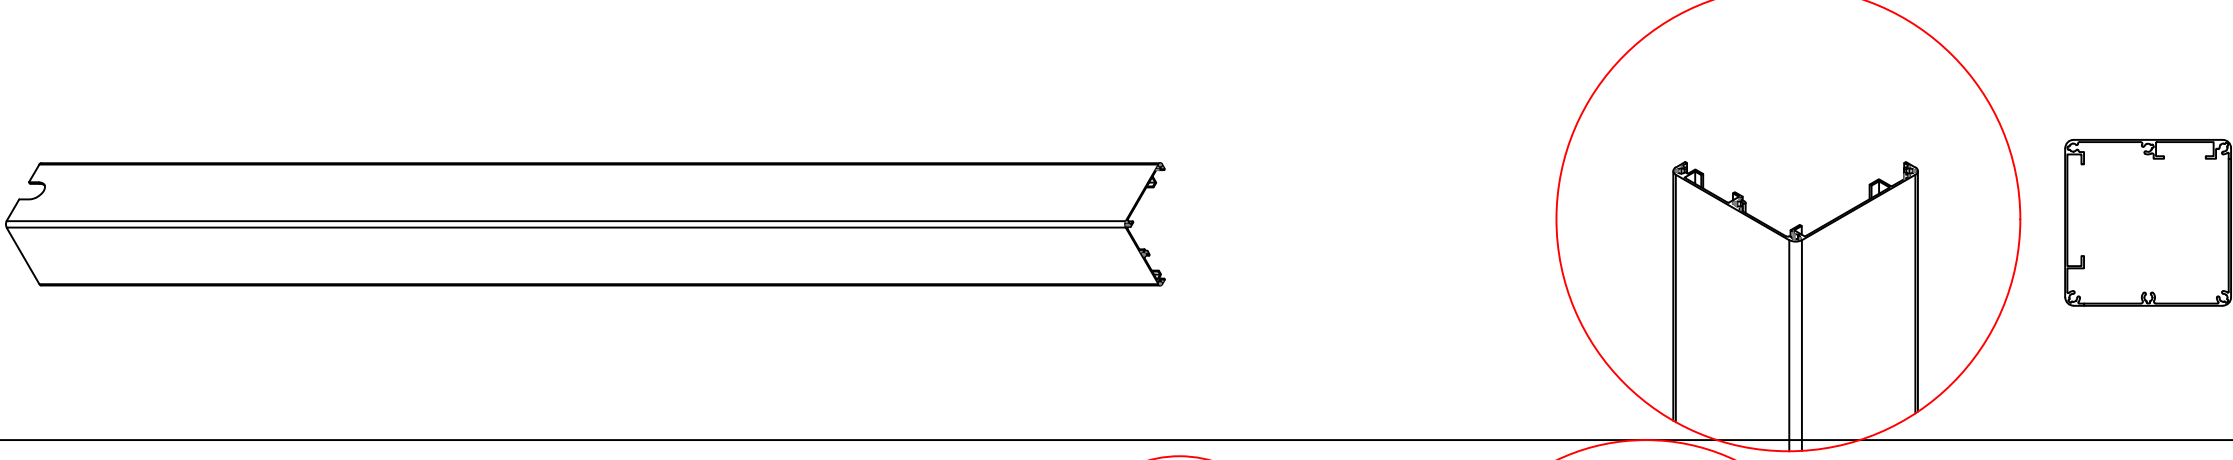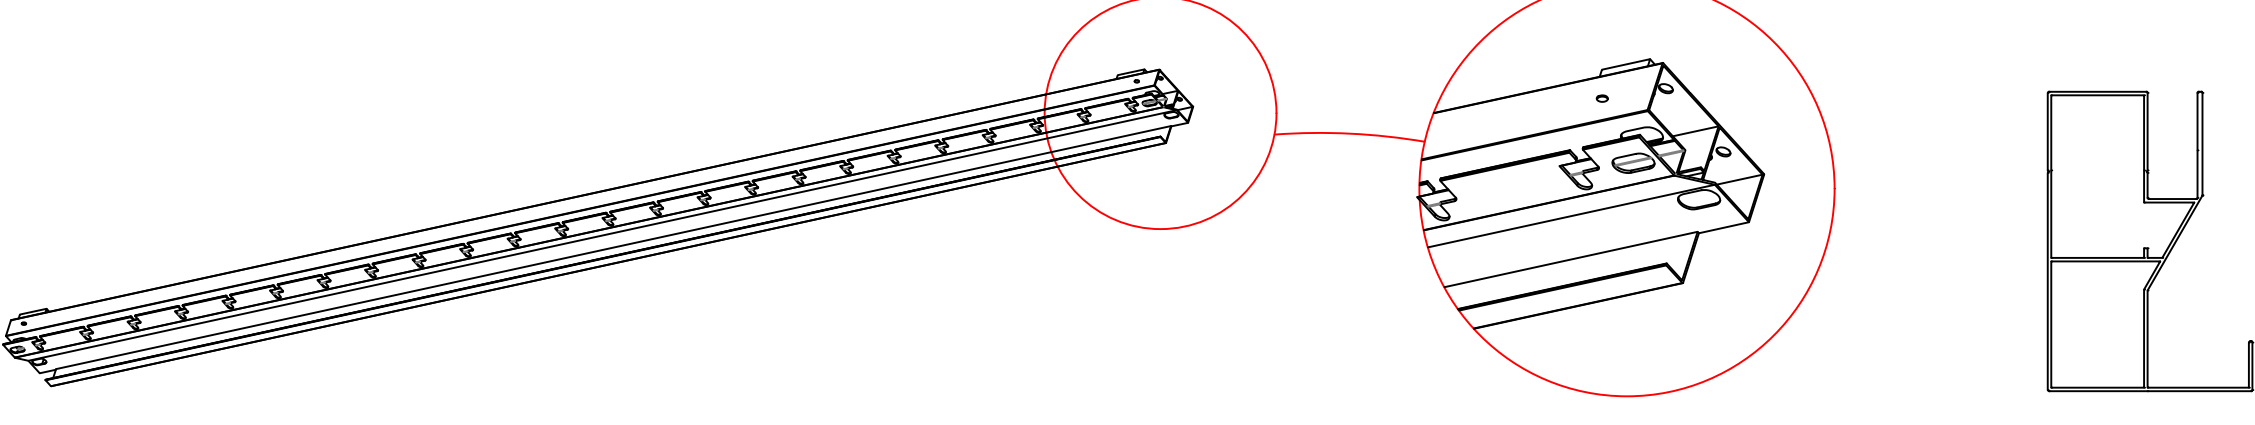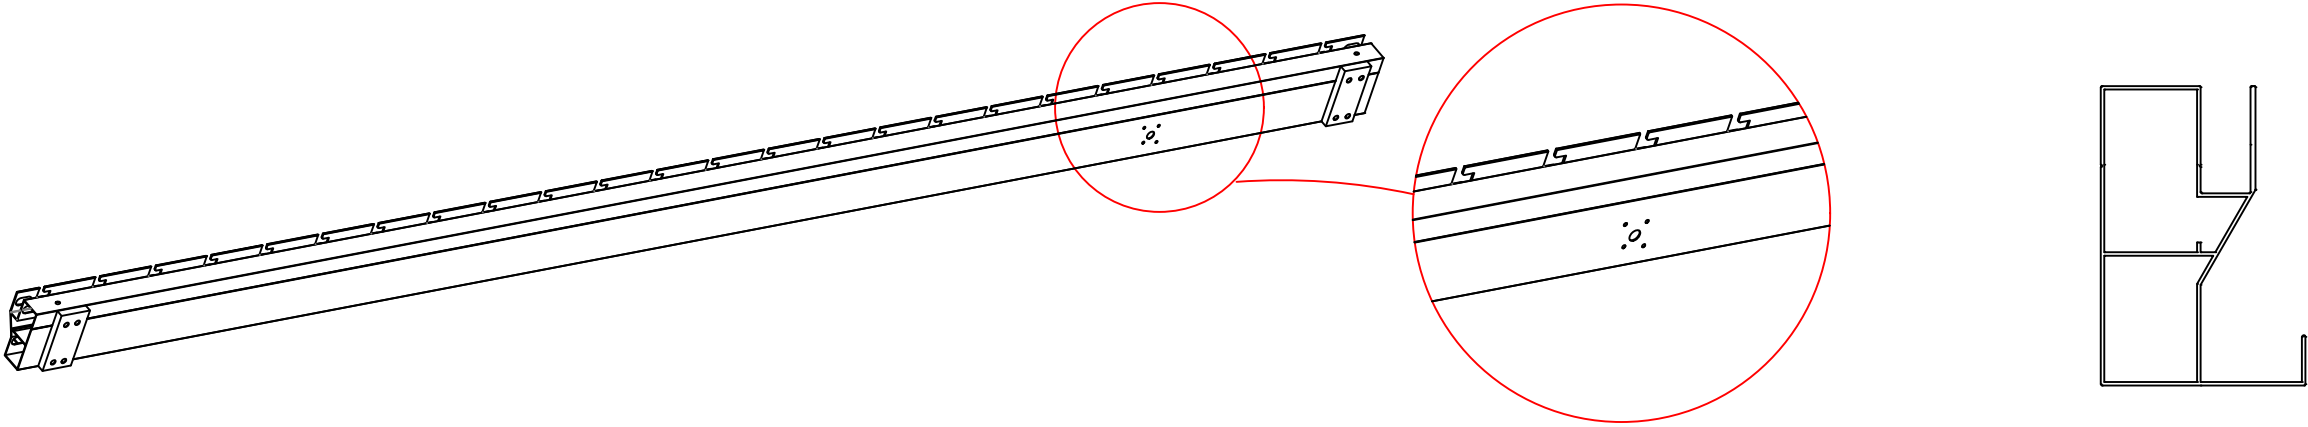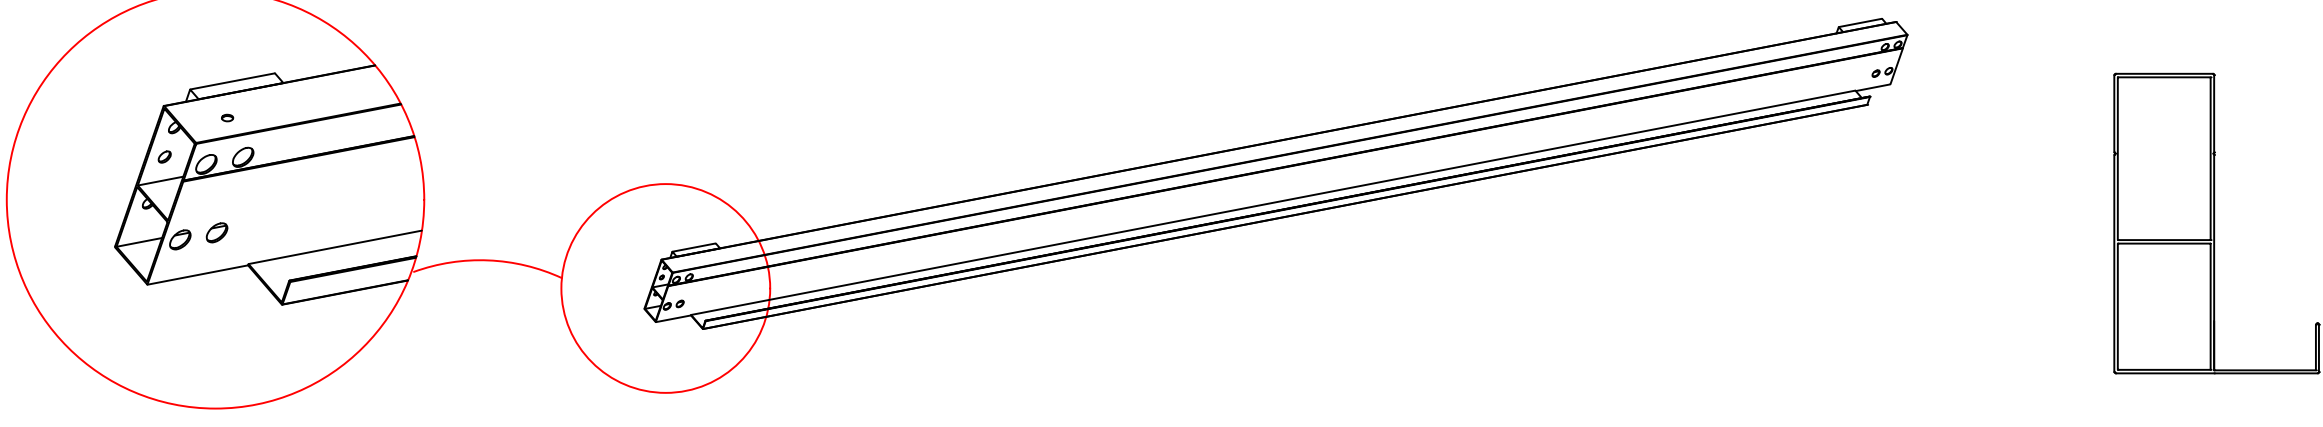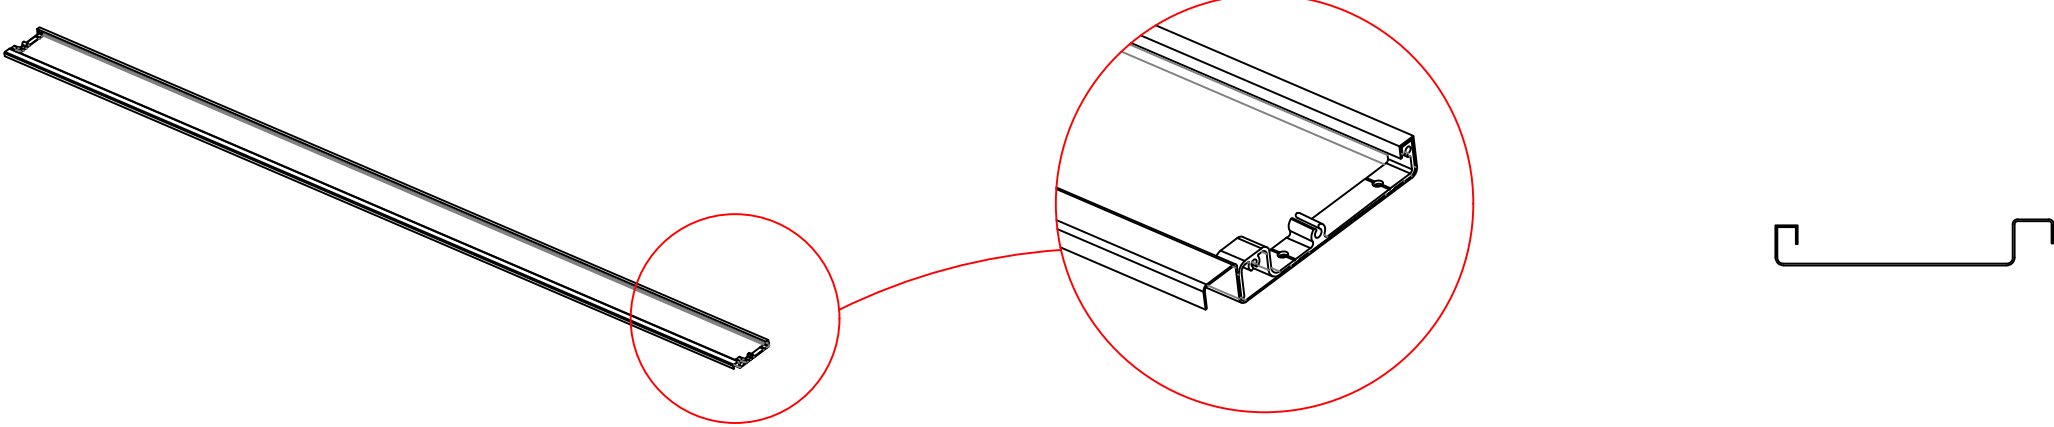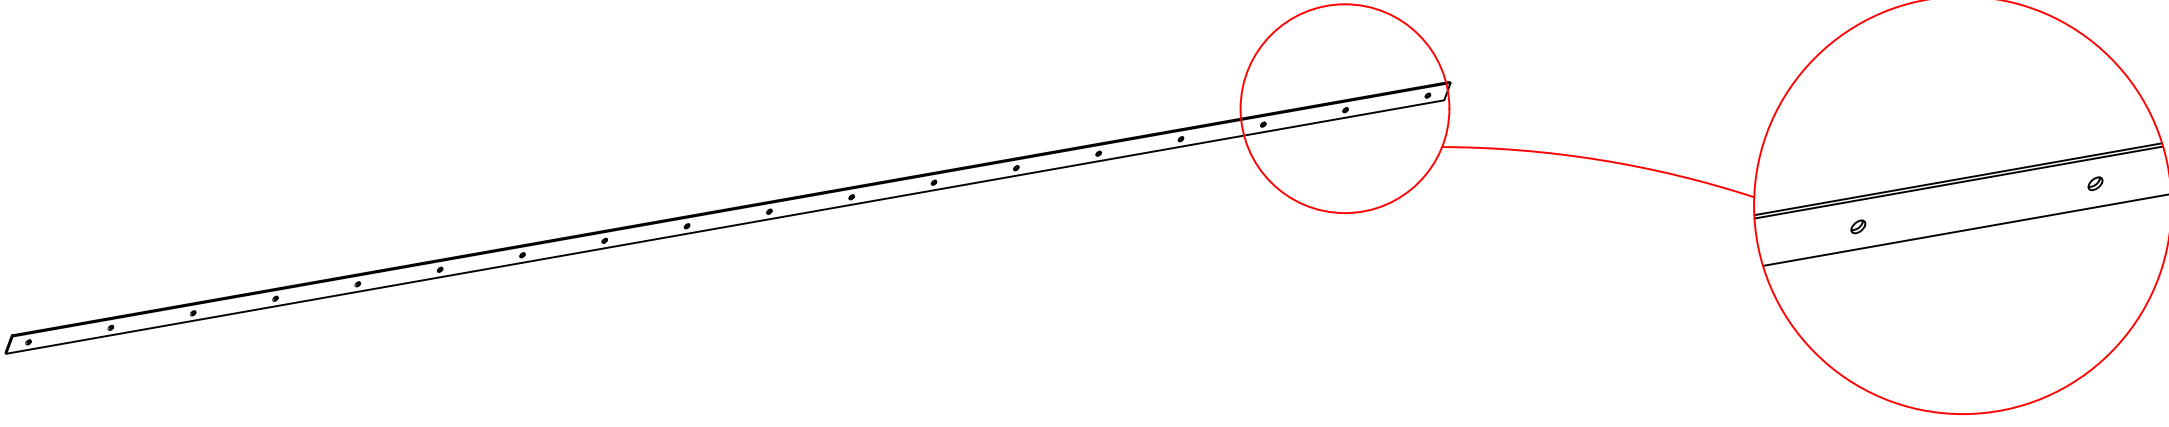


Item	Drawings	Qty
7B-01A		2
7B-01B		2
7B-02		1
7B-03		1
7B-04		2
7B-06		21
7B-09		2

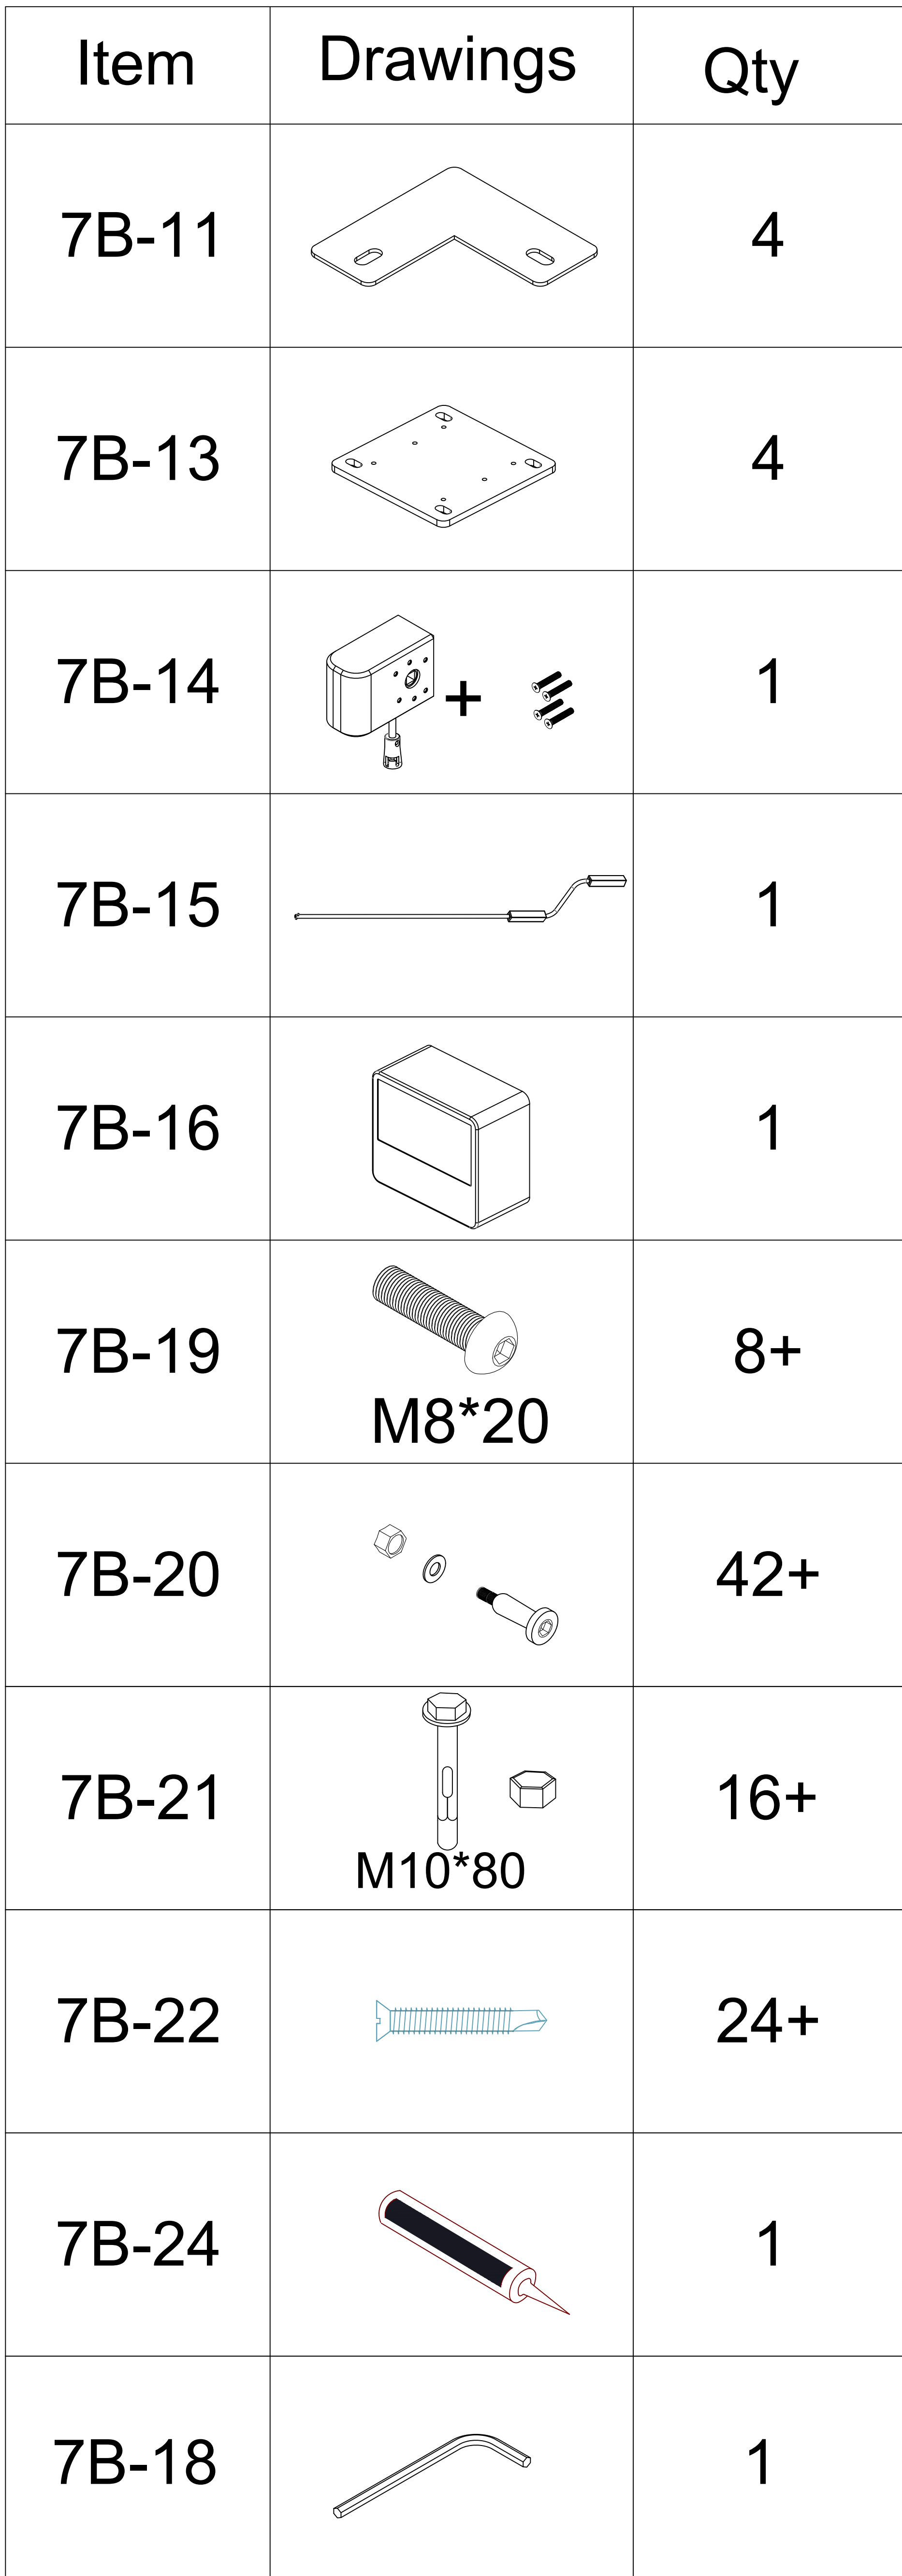

[illegible]

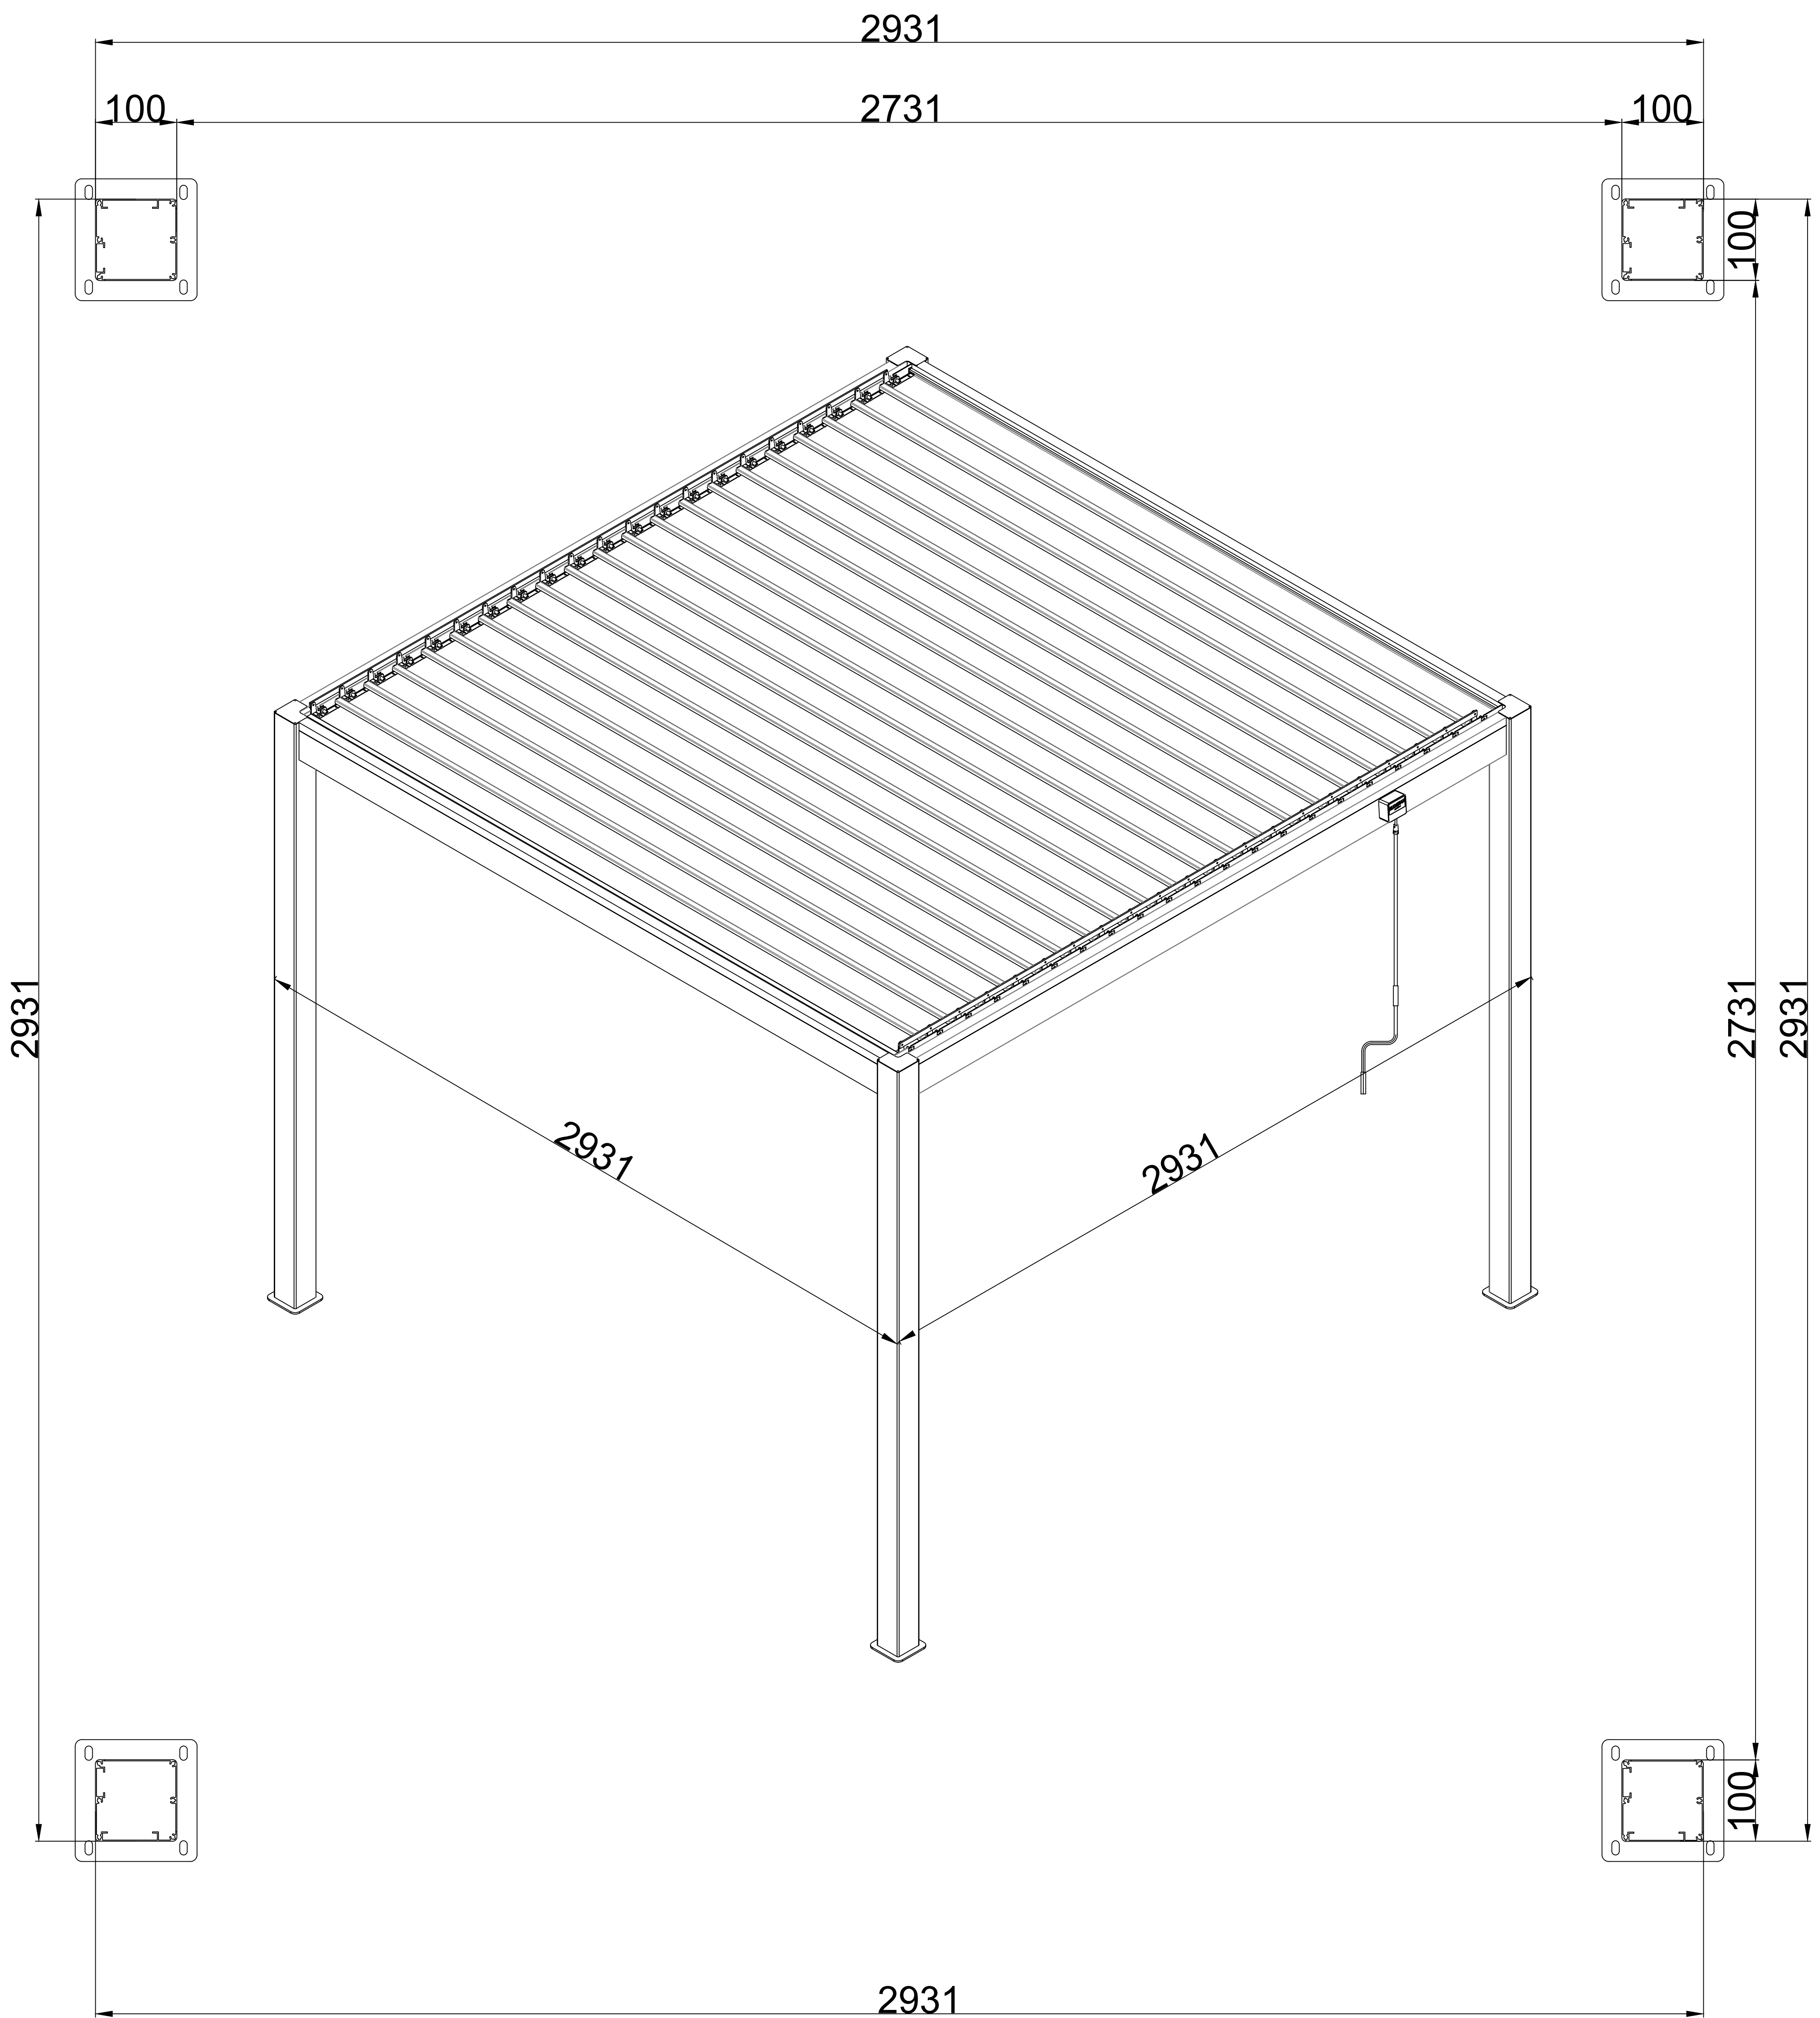


3X3-4

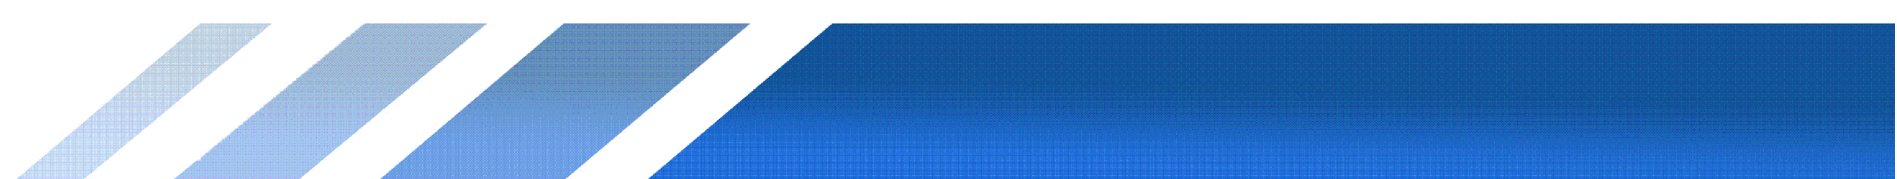











3x4




	Item	Qty		Item	Qty		Item	Qty
Carton 1/5	7B-01 A/B	4		7B-11	4		7B-13	4
	7B-14	1		7B-15	1		7B-16	1
	7B-19	8+		7B-20	58+		7B-21	16+
	7B-22	24+		7B-24	1		7B-30	57+
	7B-31	1		7B-32	58+		7B-33	116+
	7B-18	1						
Carton 2/5	7B-02	1		7B-03	1		7B-04	2
	7B-09	2						
Carton 3/5	7B-06	10						
Carton 4/5	7B-06	10						
Carton 5/5	7B-06	9						

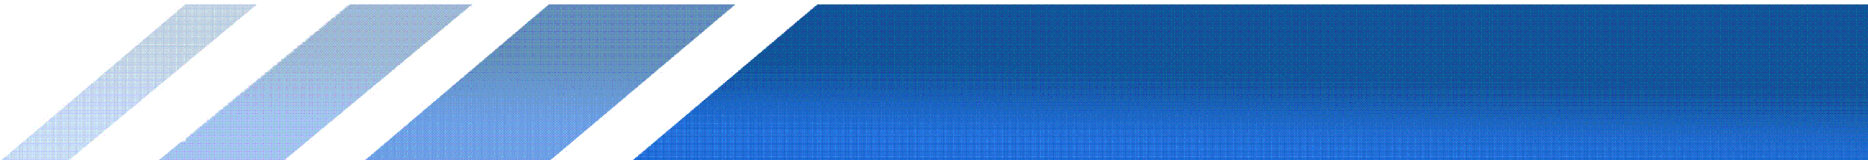

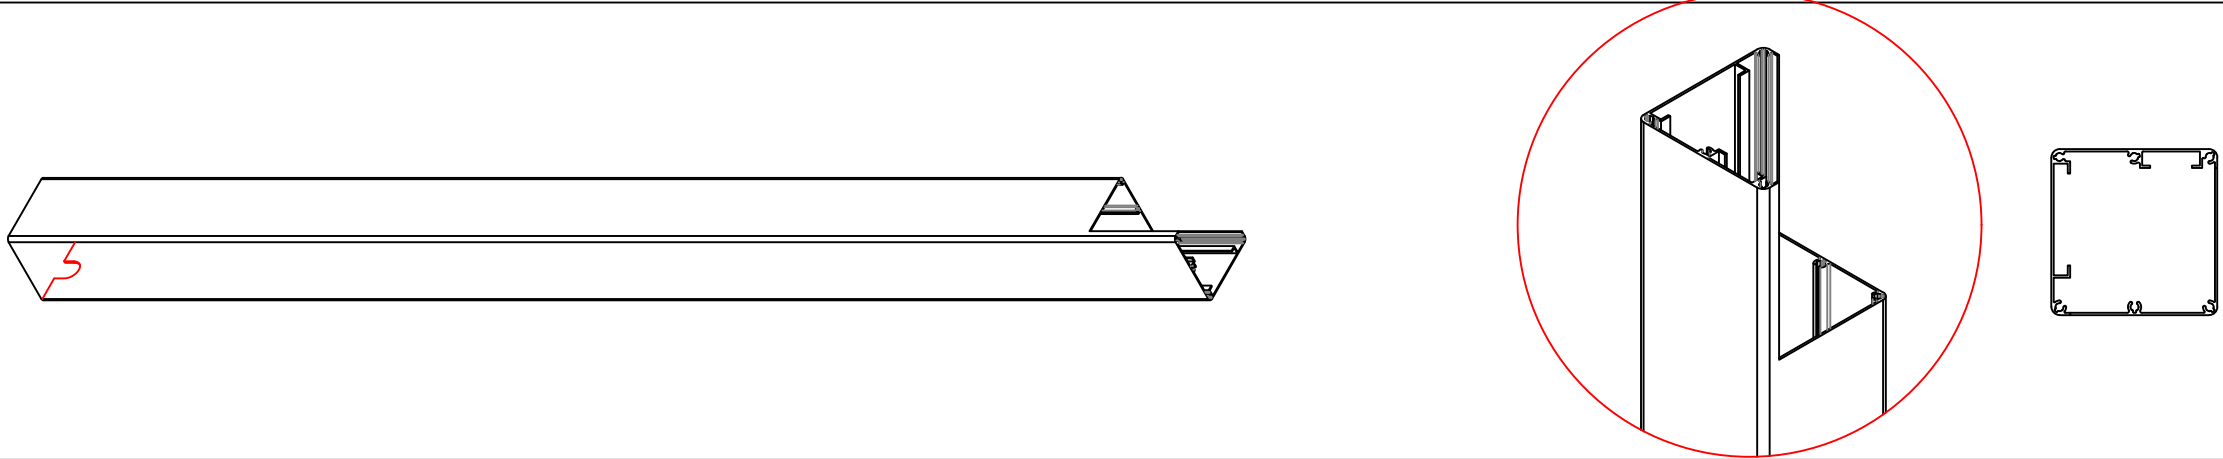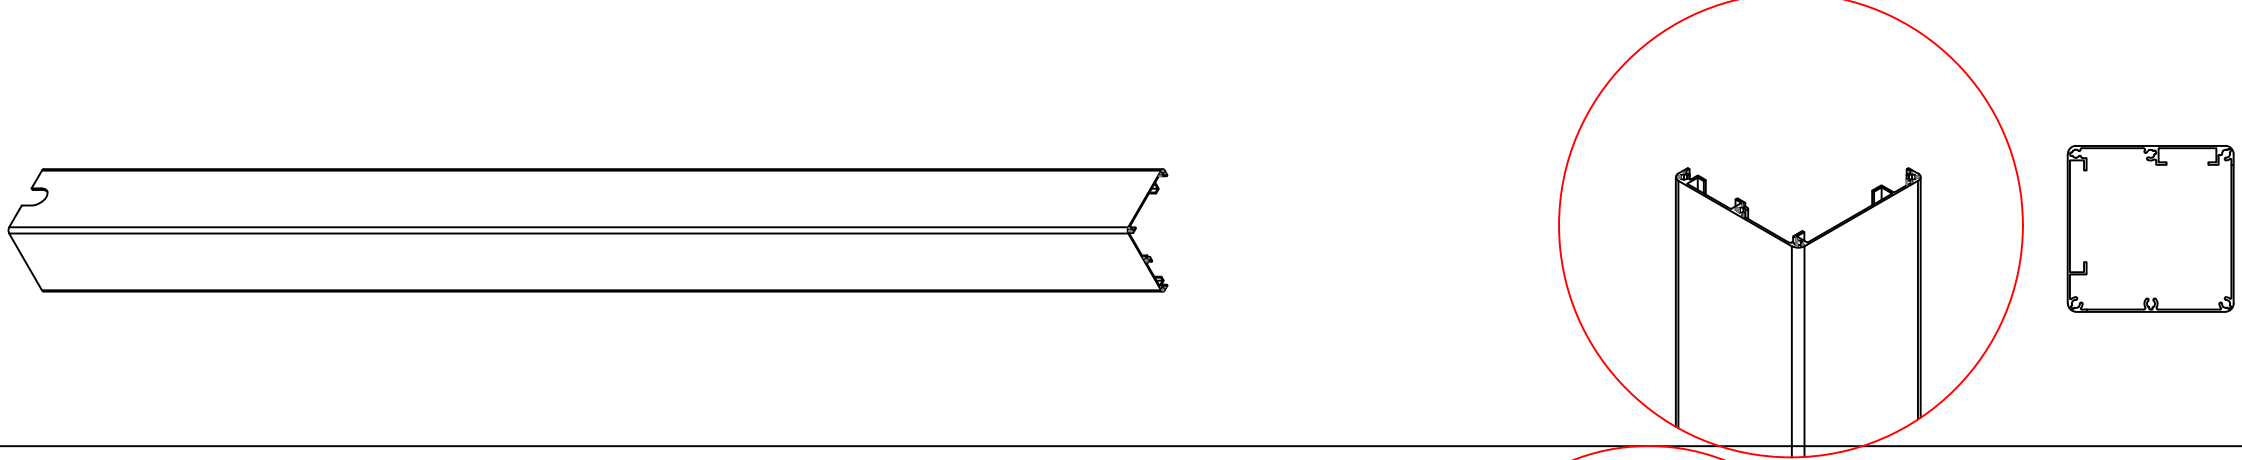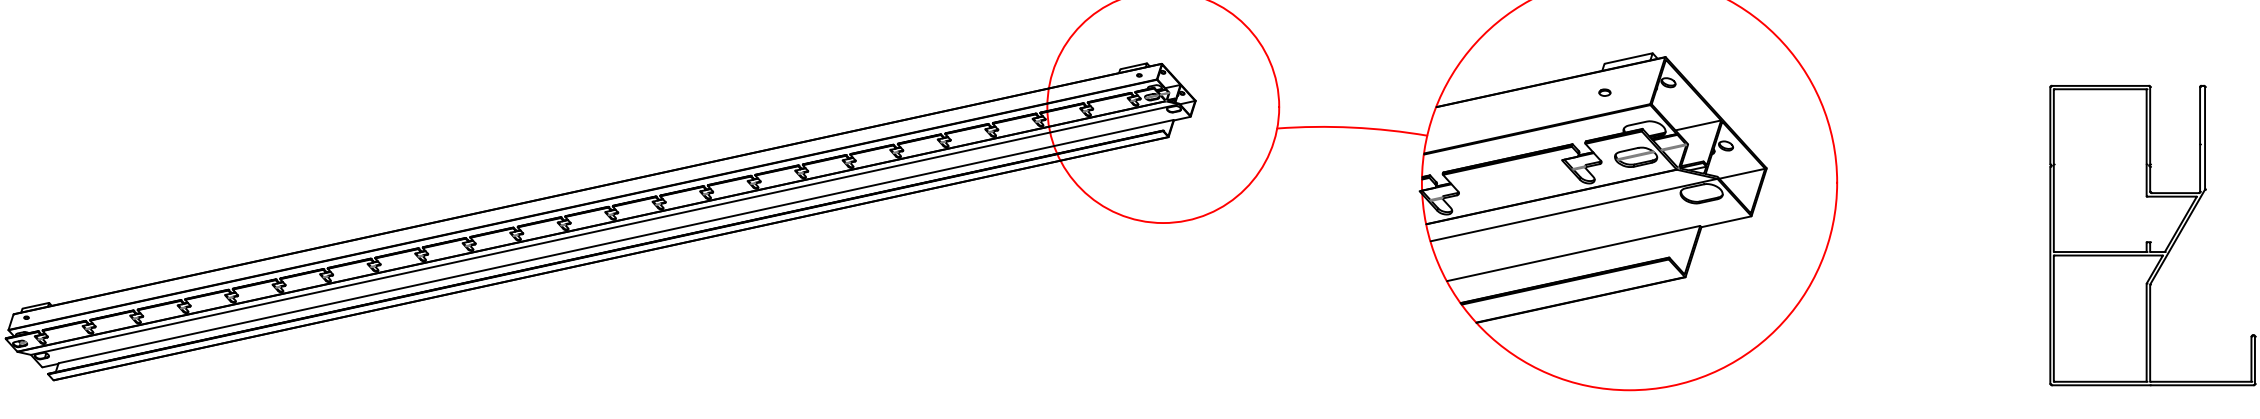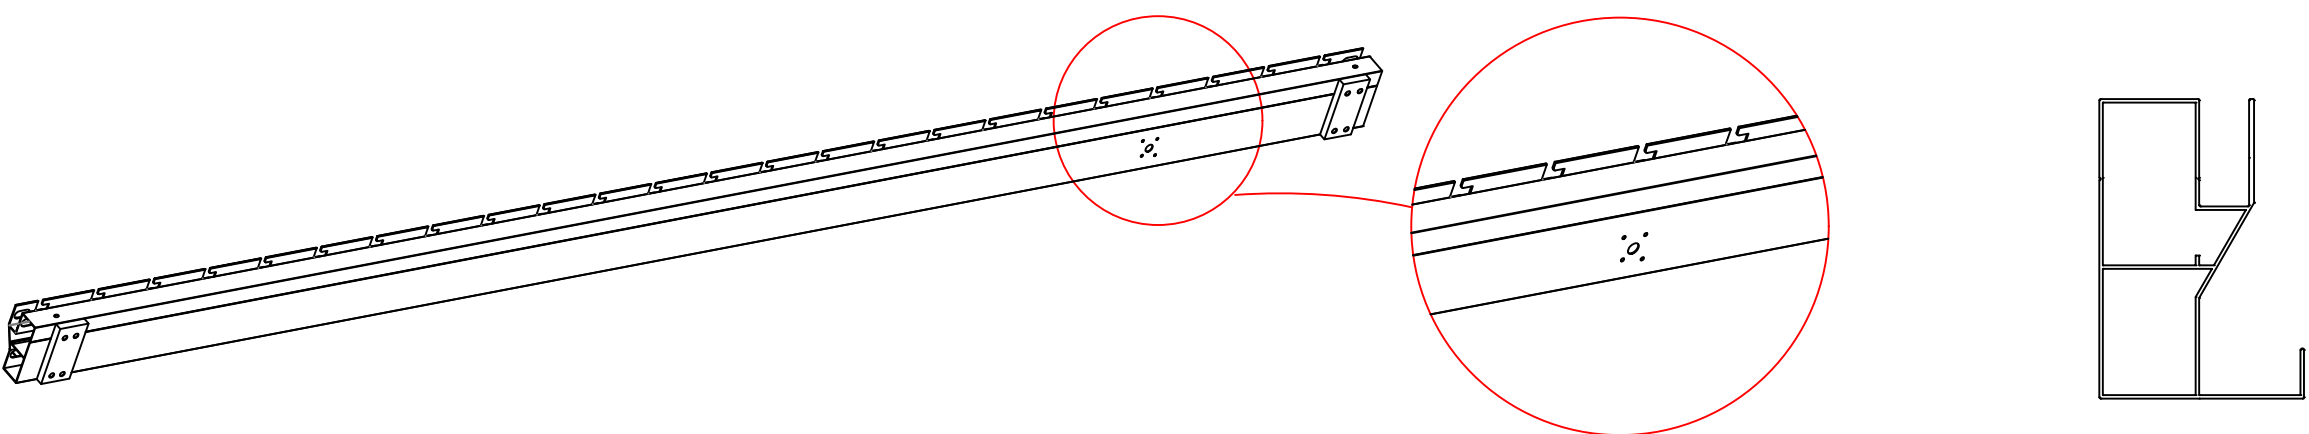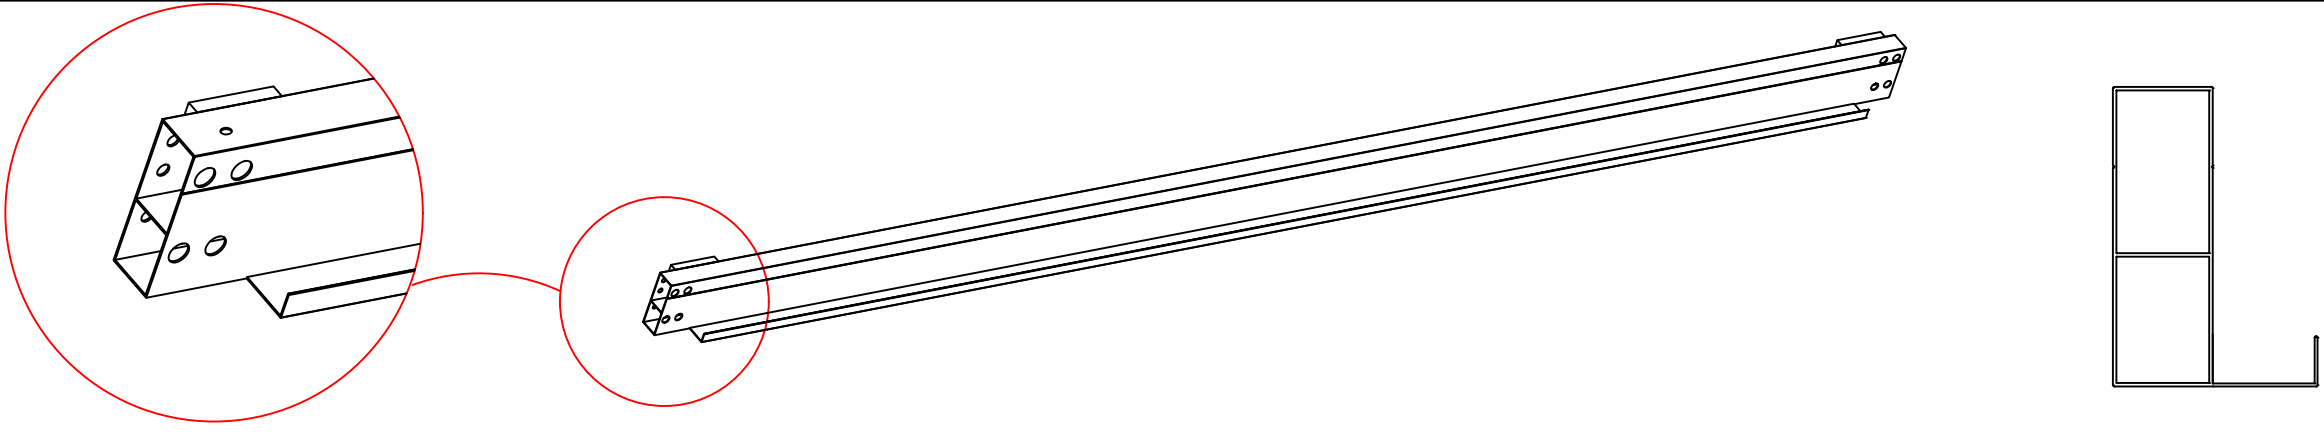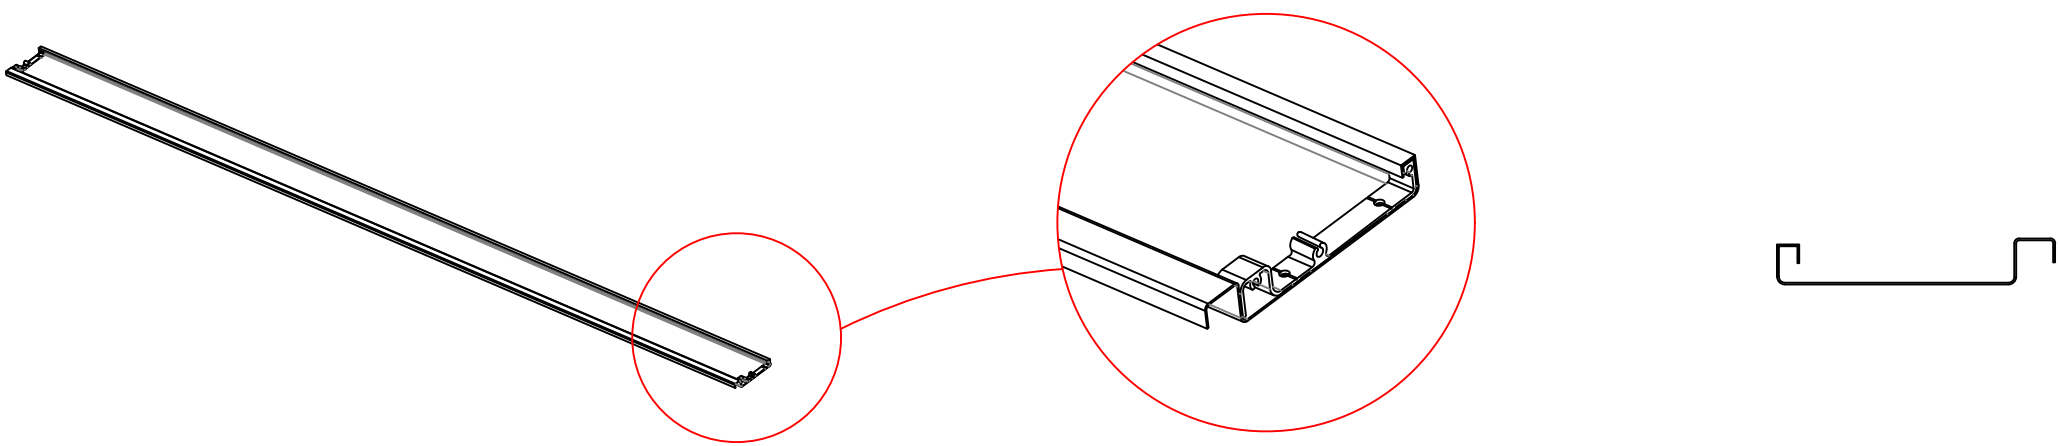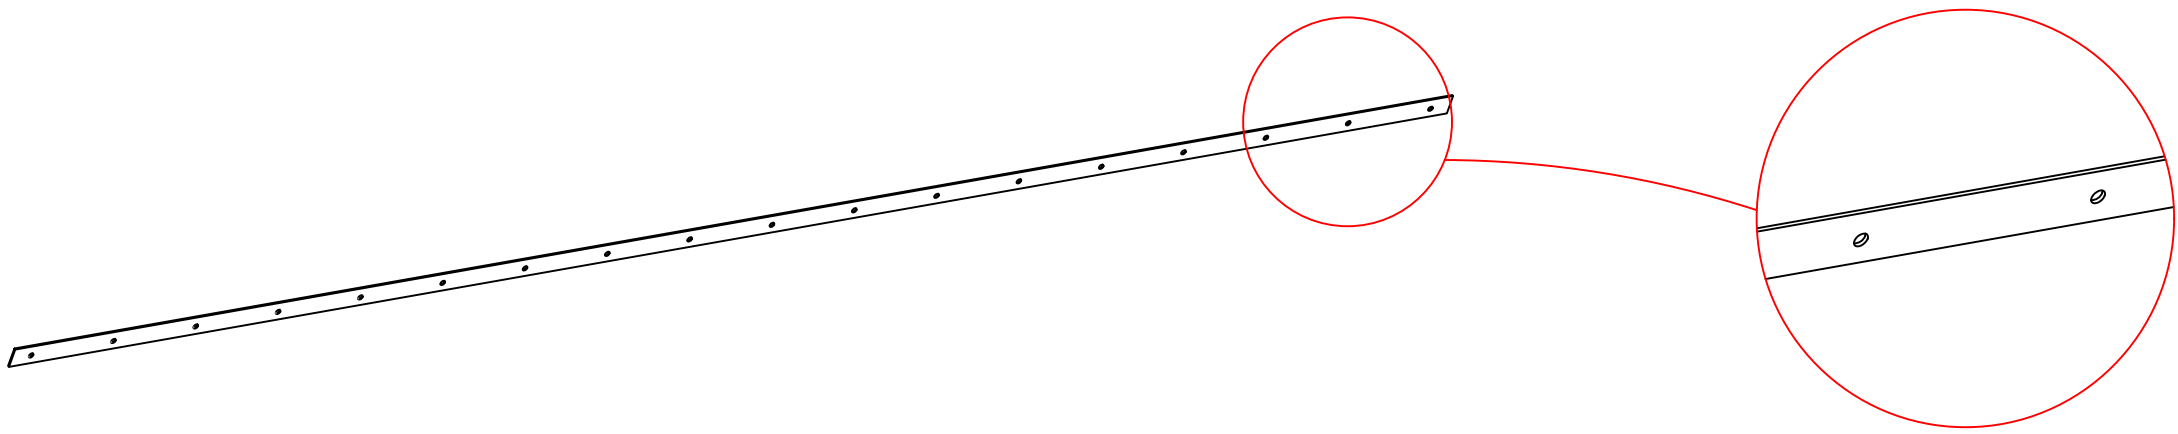





Item	Drawings	Qty
7B-01A		2
7B-01B		2
7B-02		1
7B-03		1
7B-04		2
7B-06		29
7B-09		2


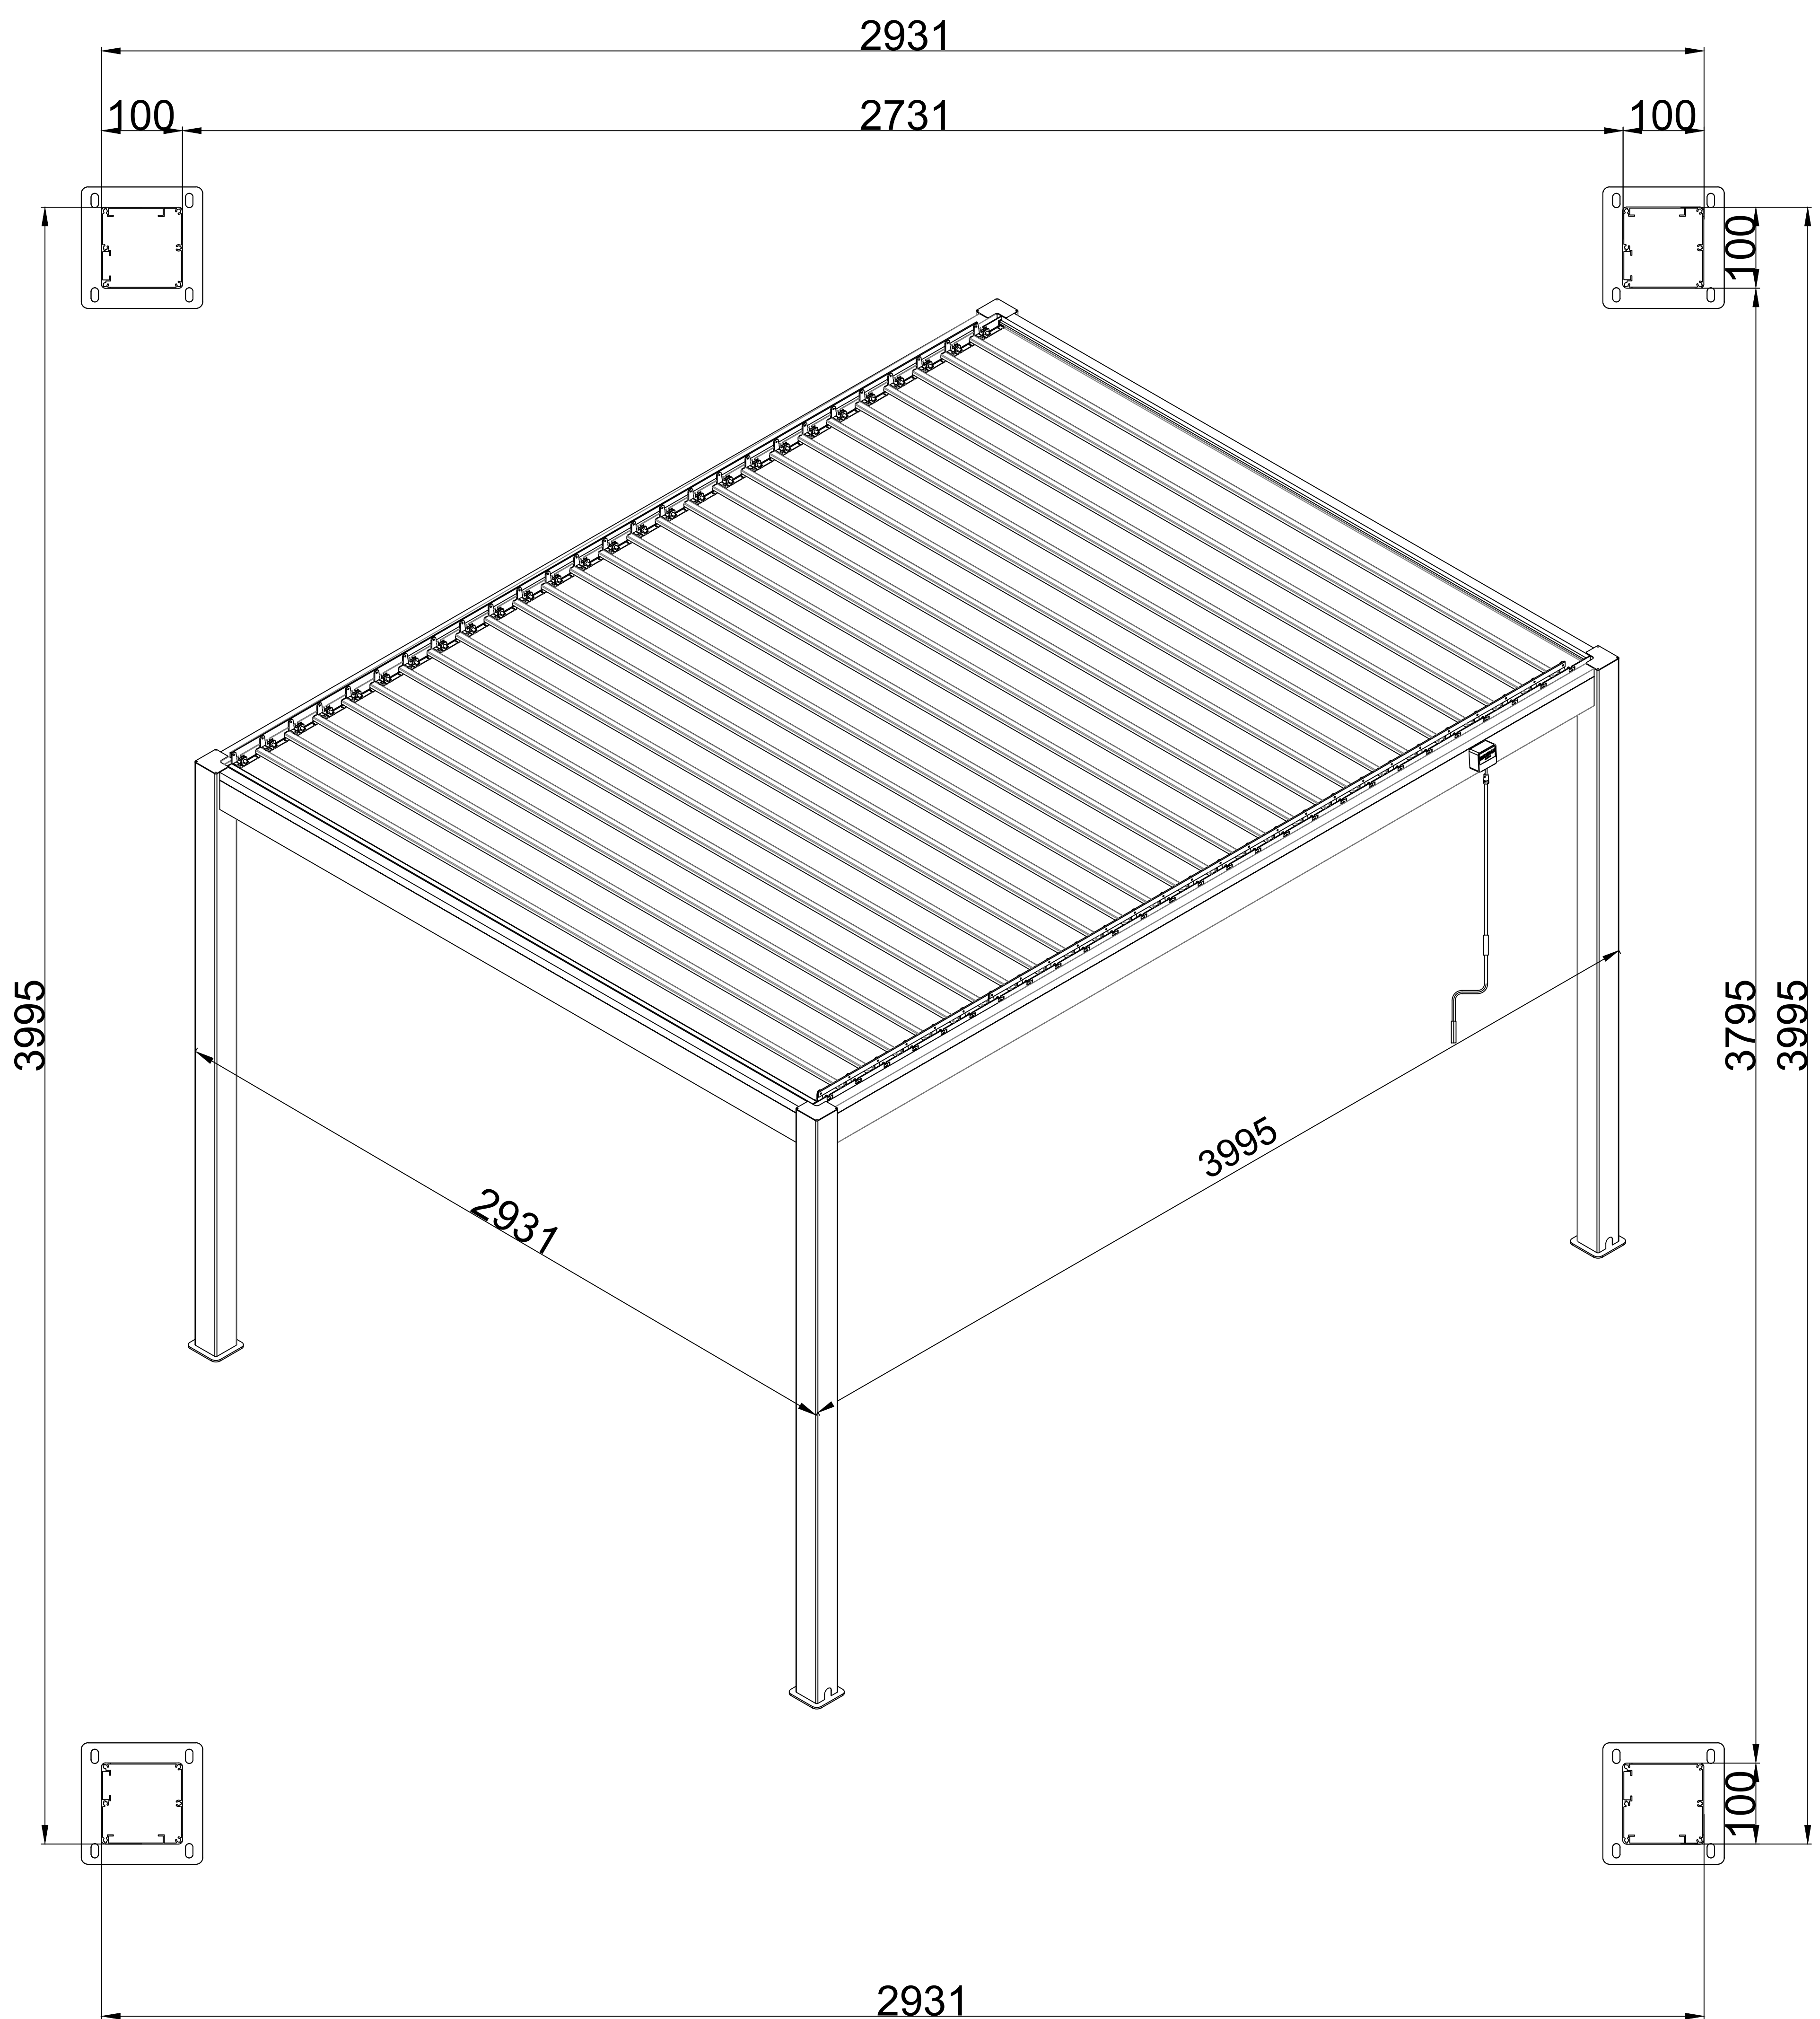


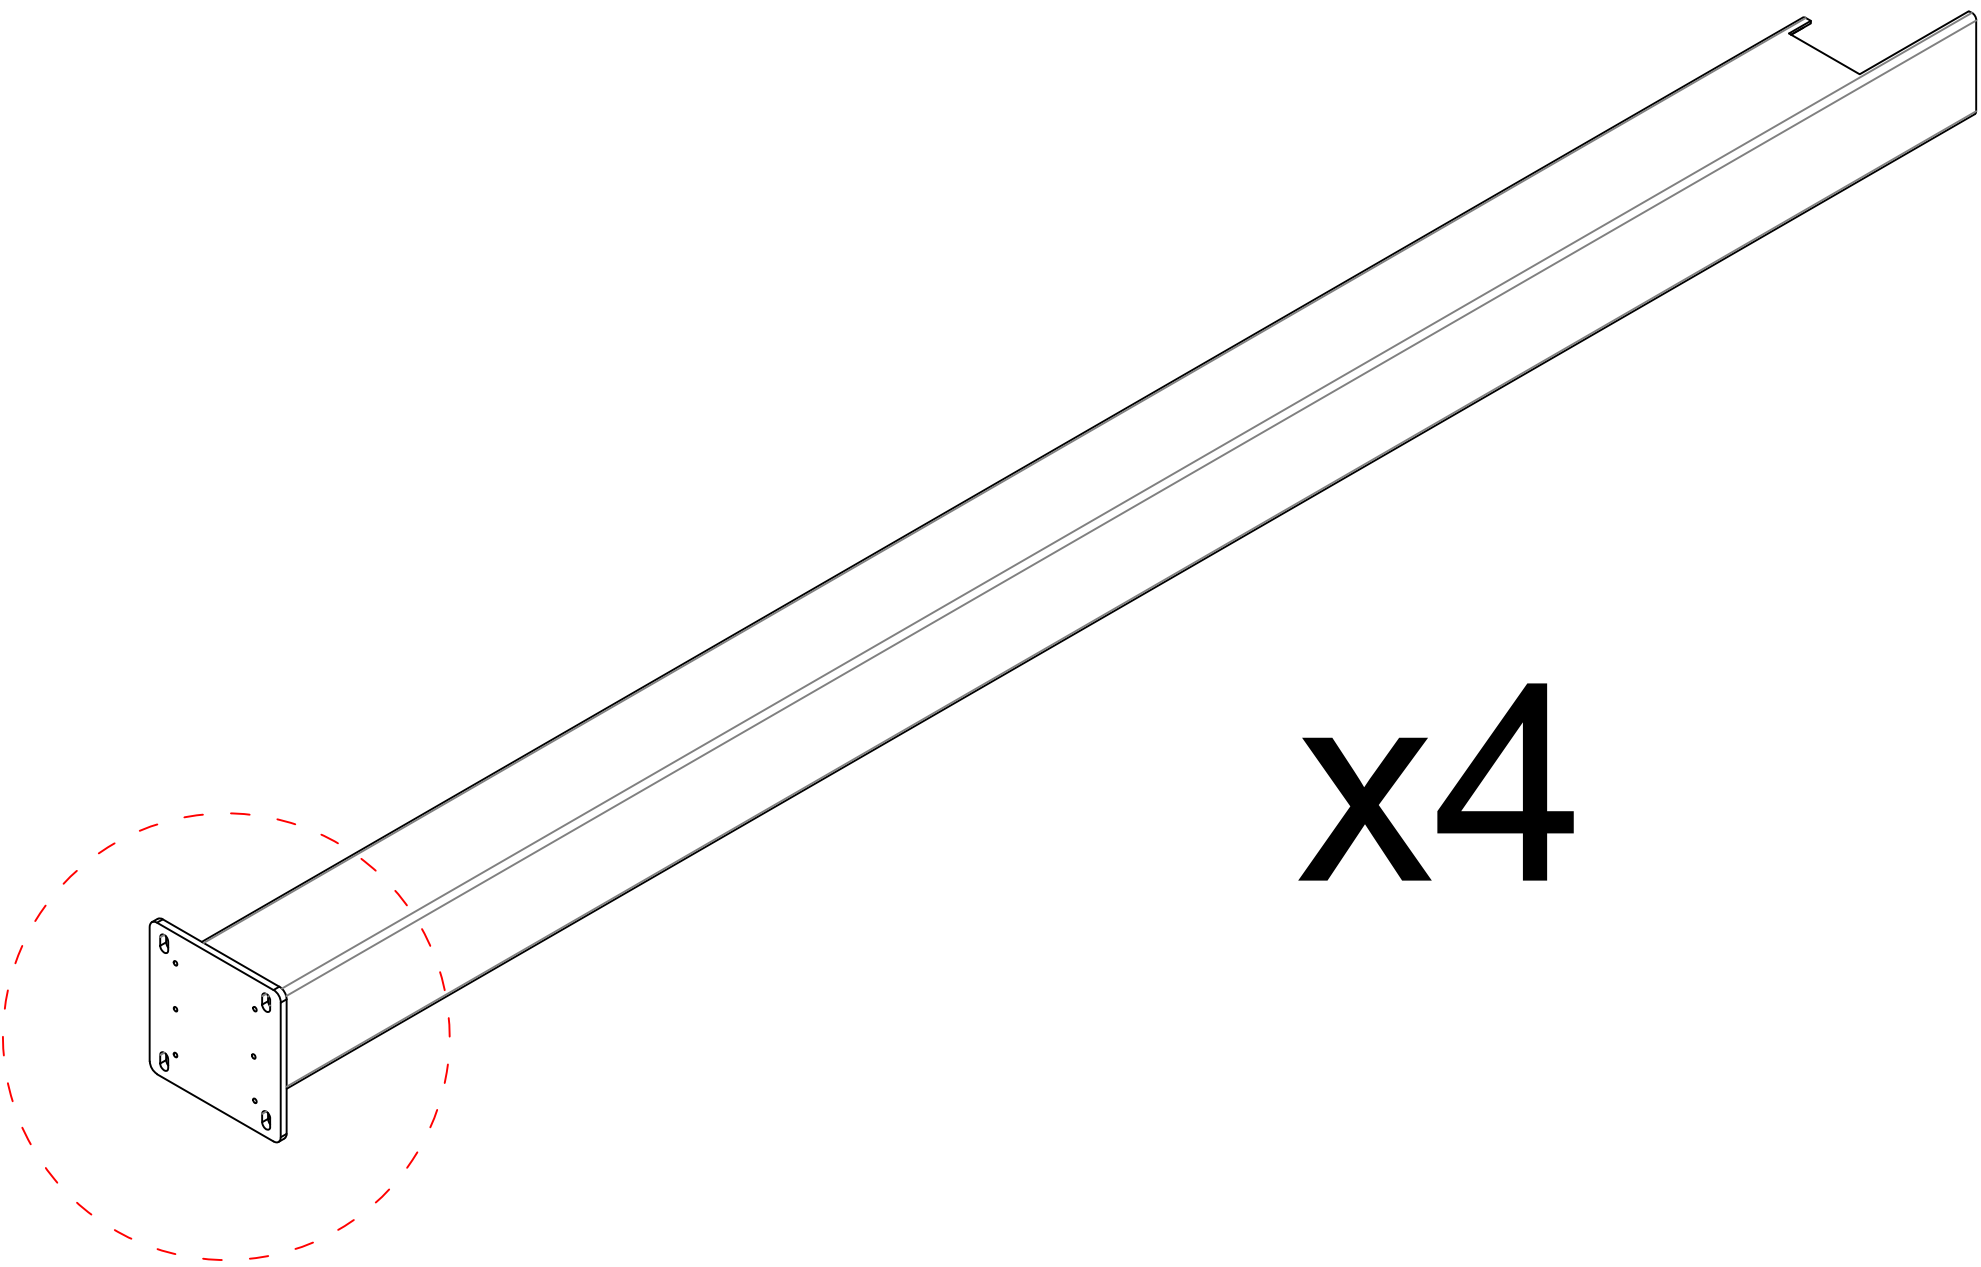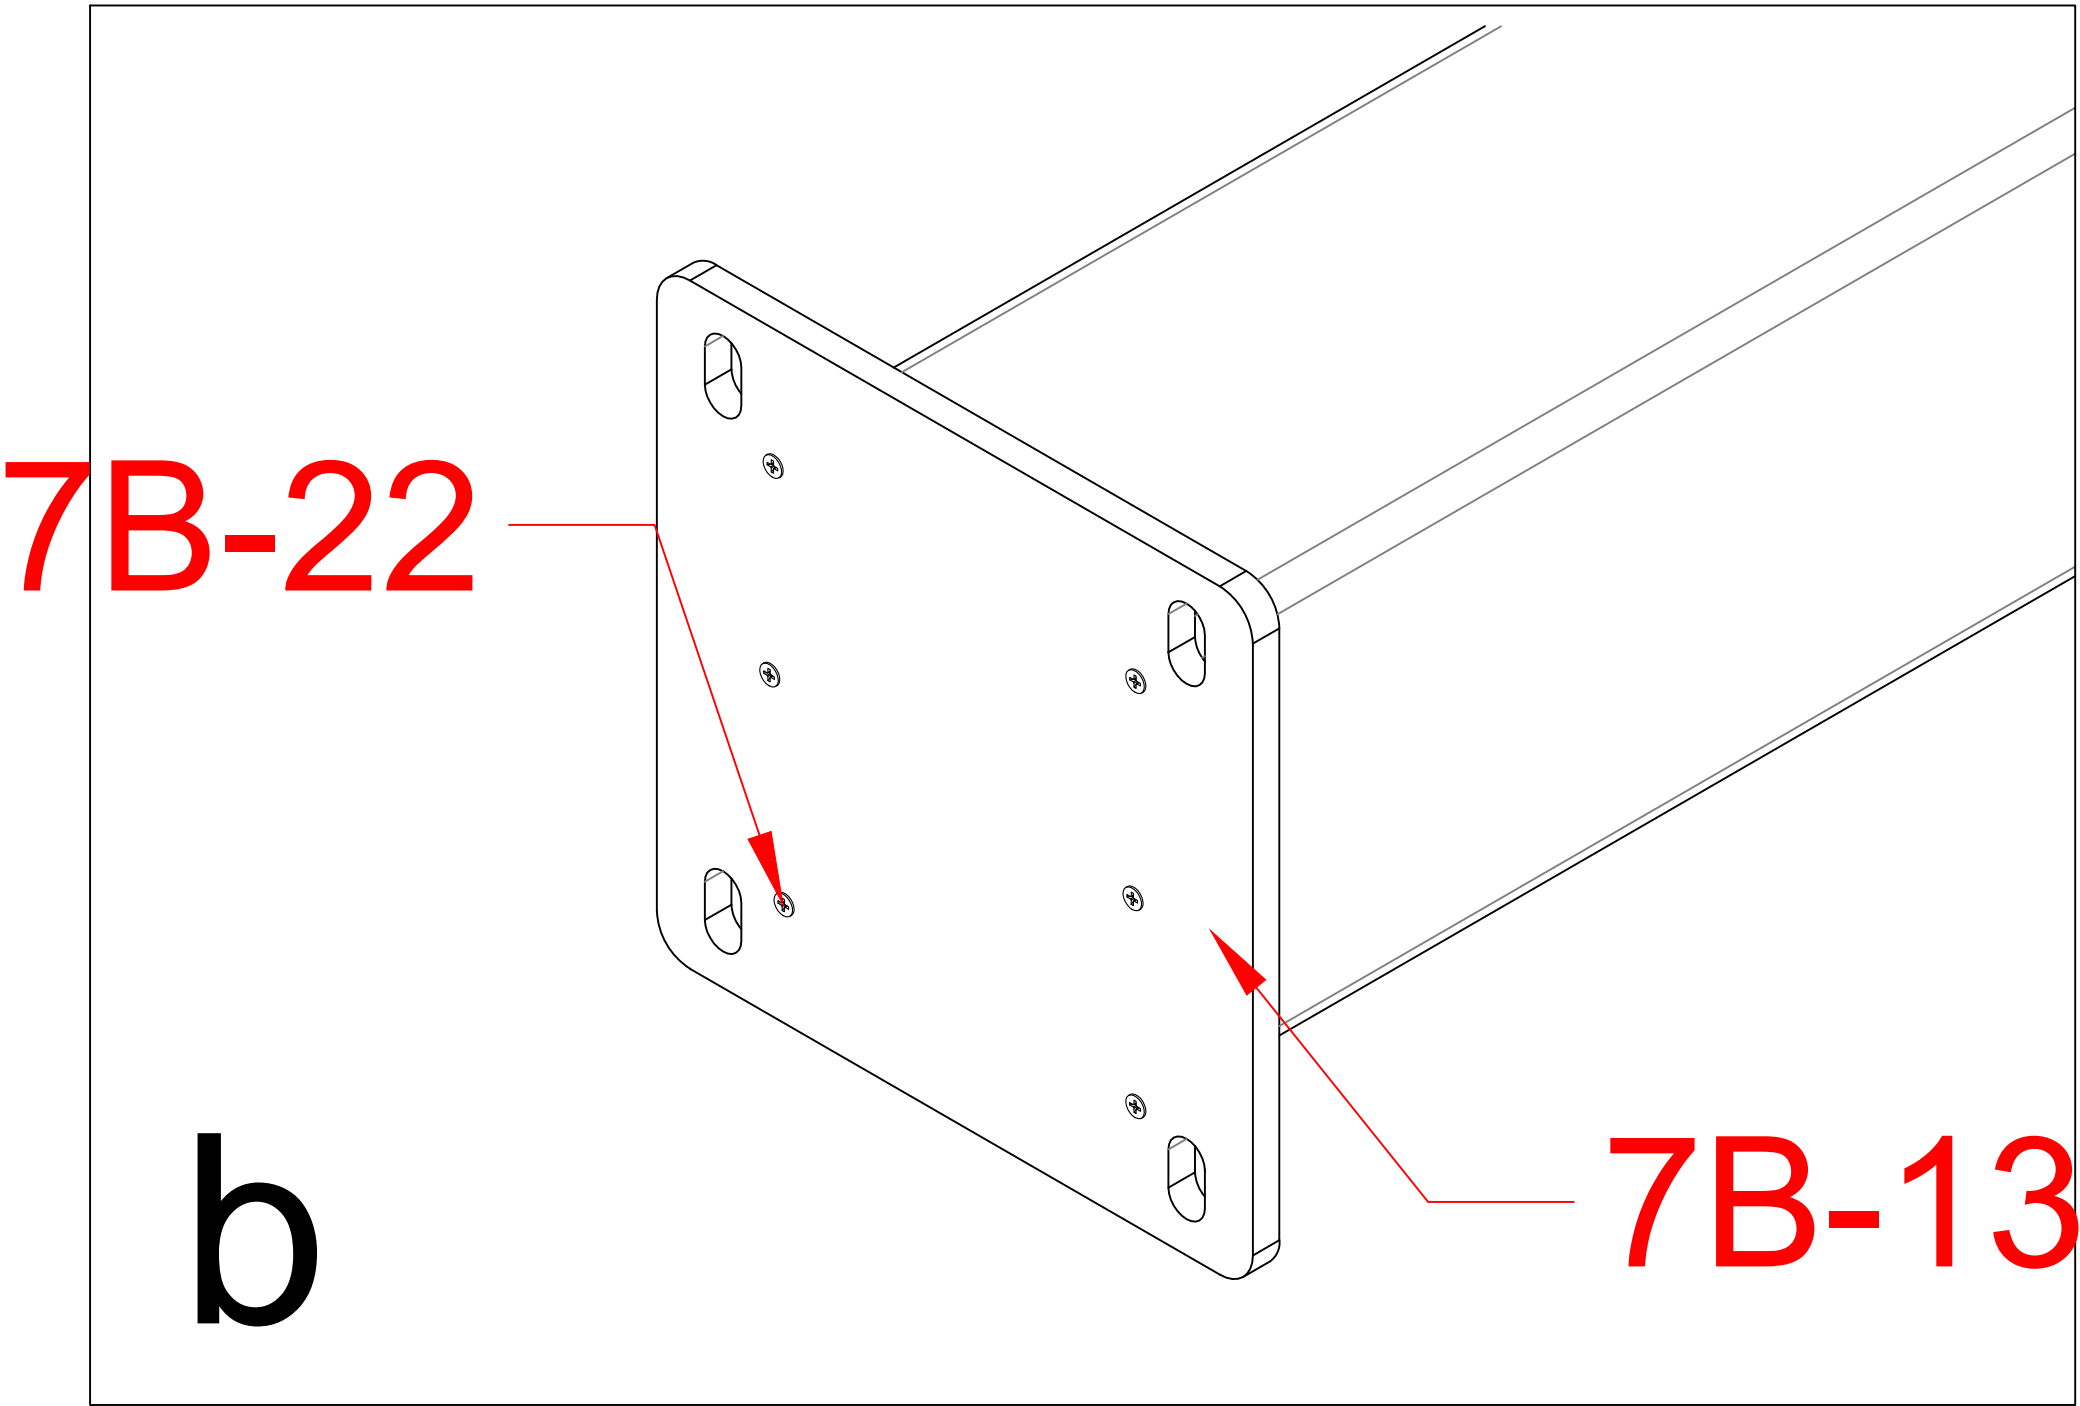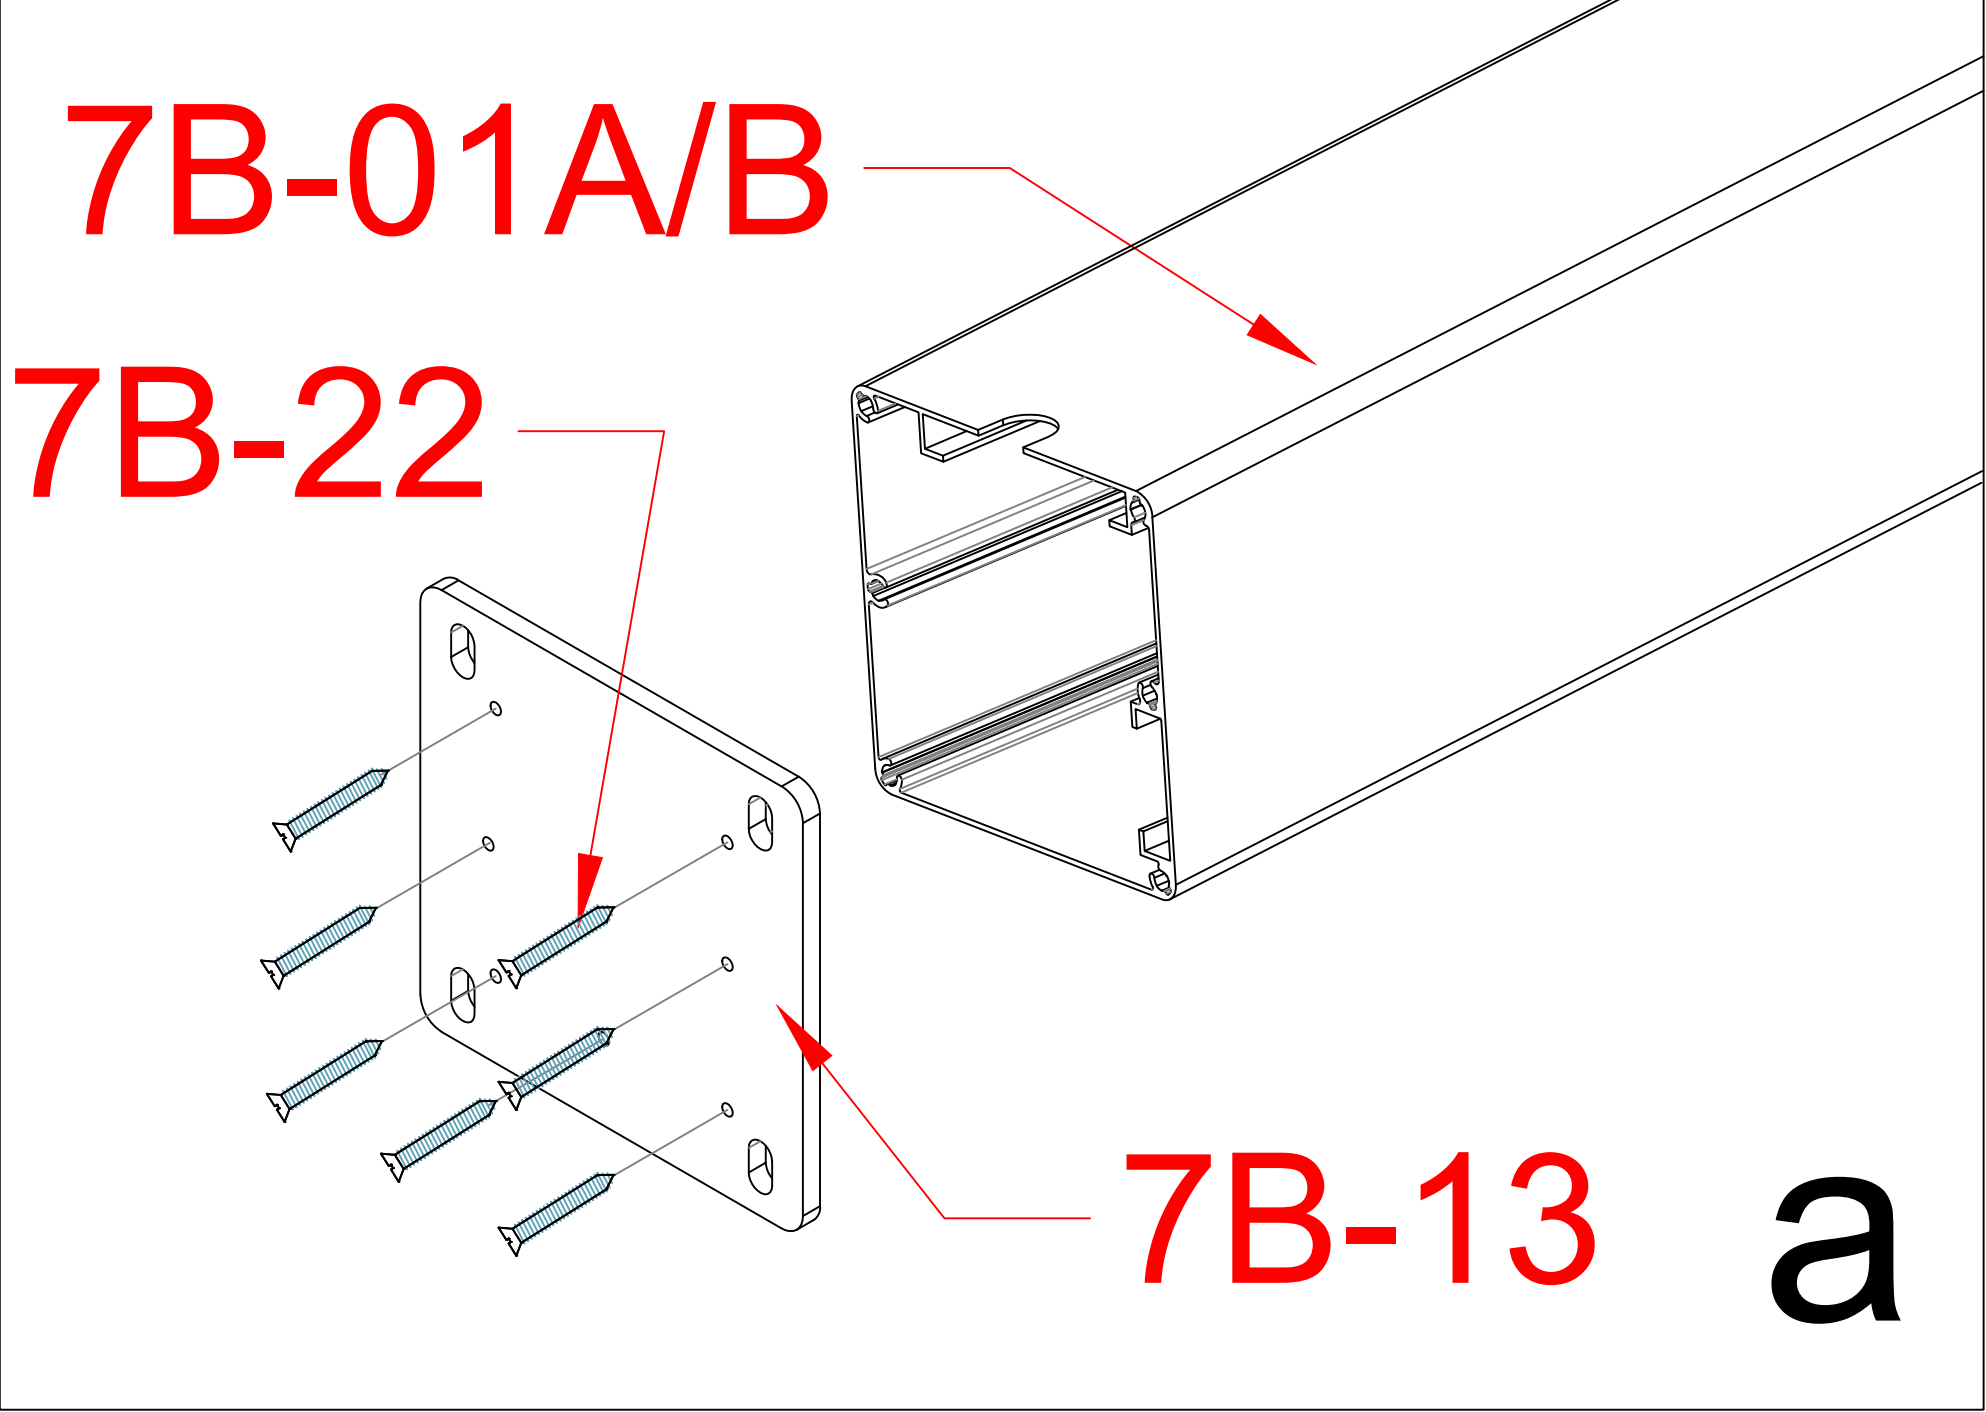





7B-01 A/B		4
7B-13		4
7B-22		24

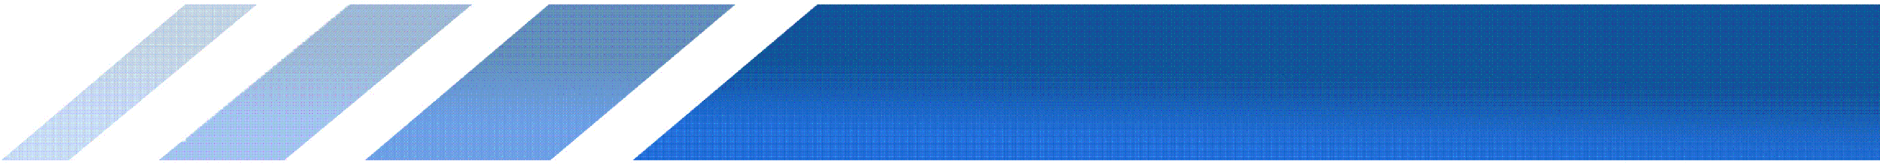

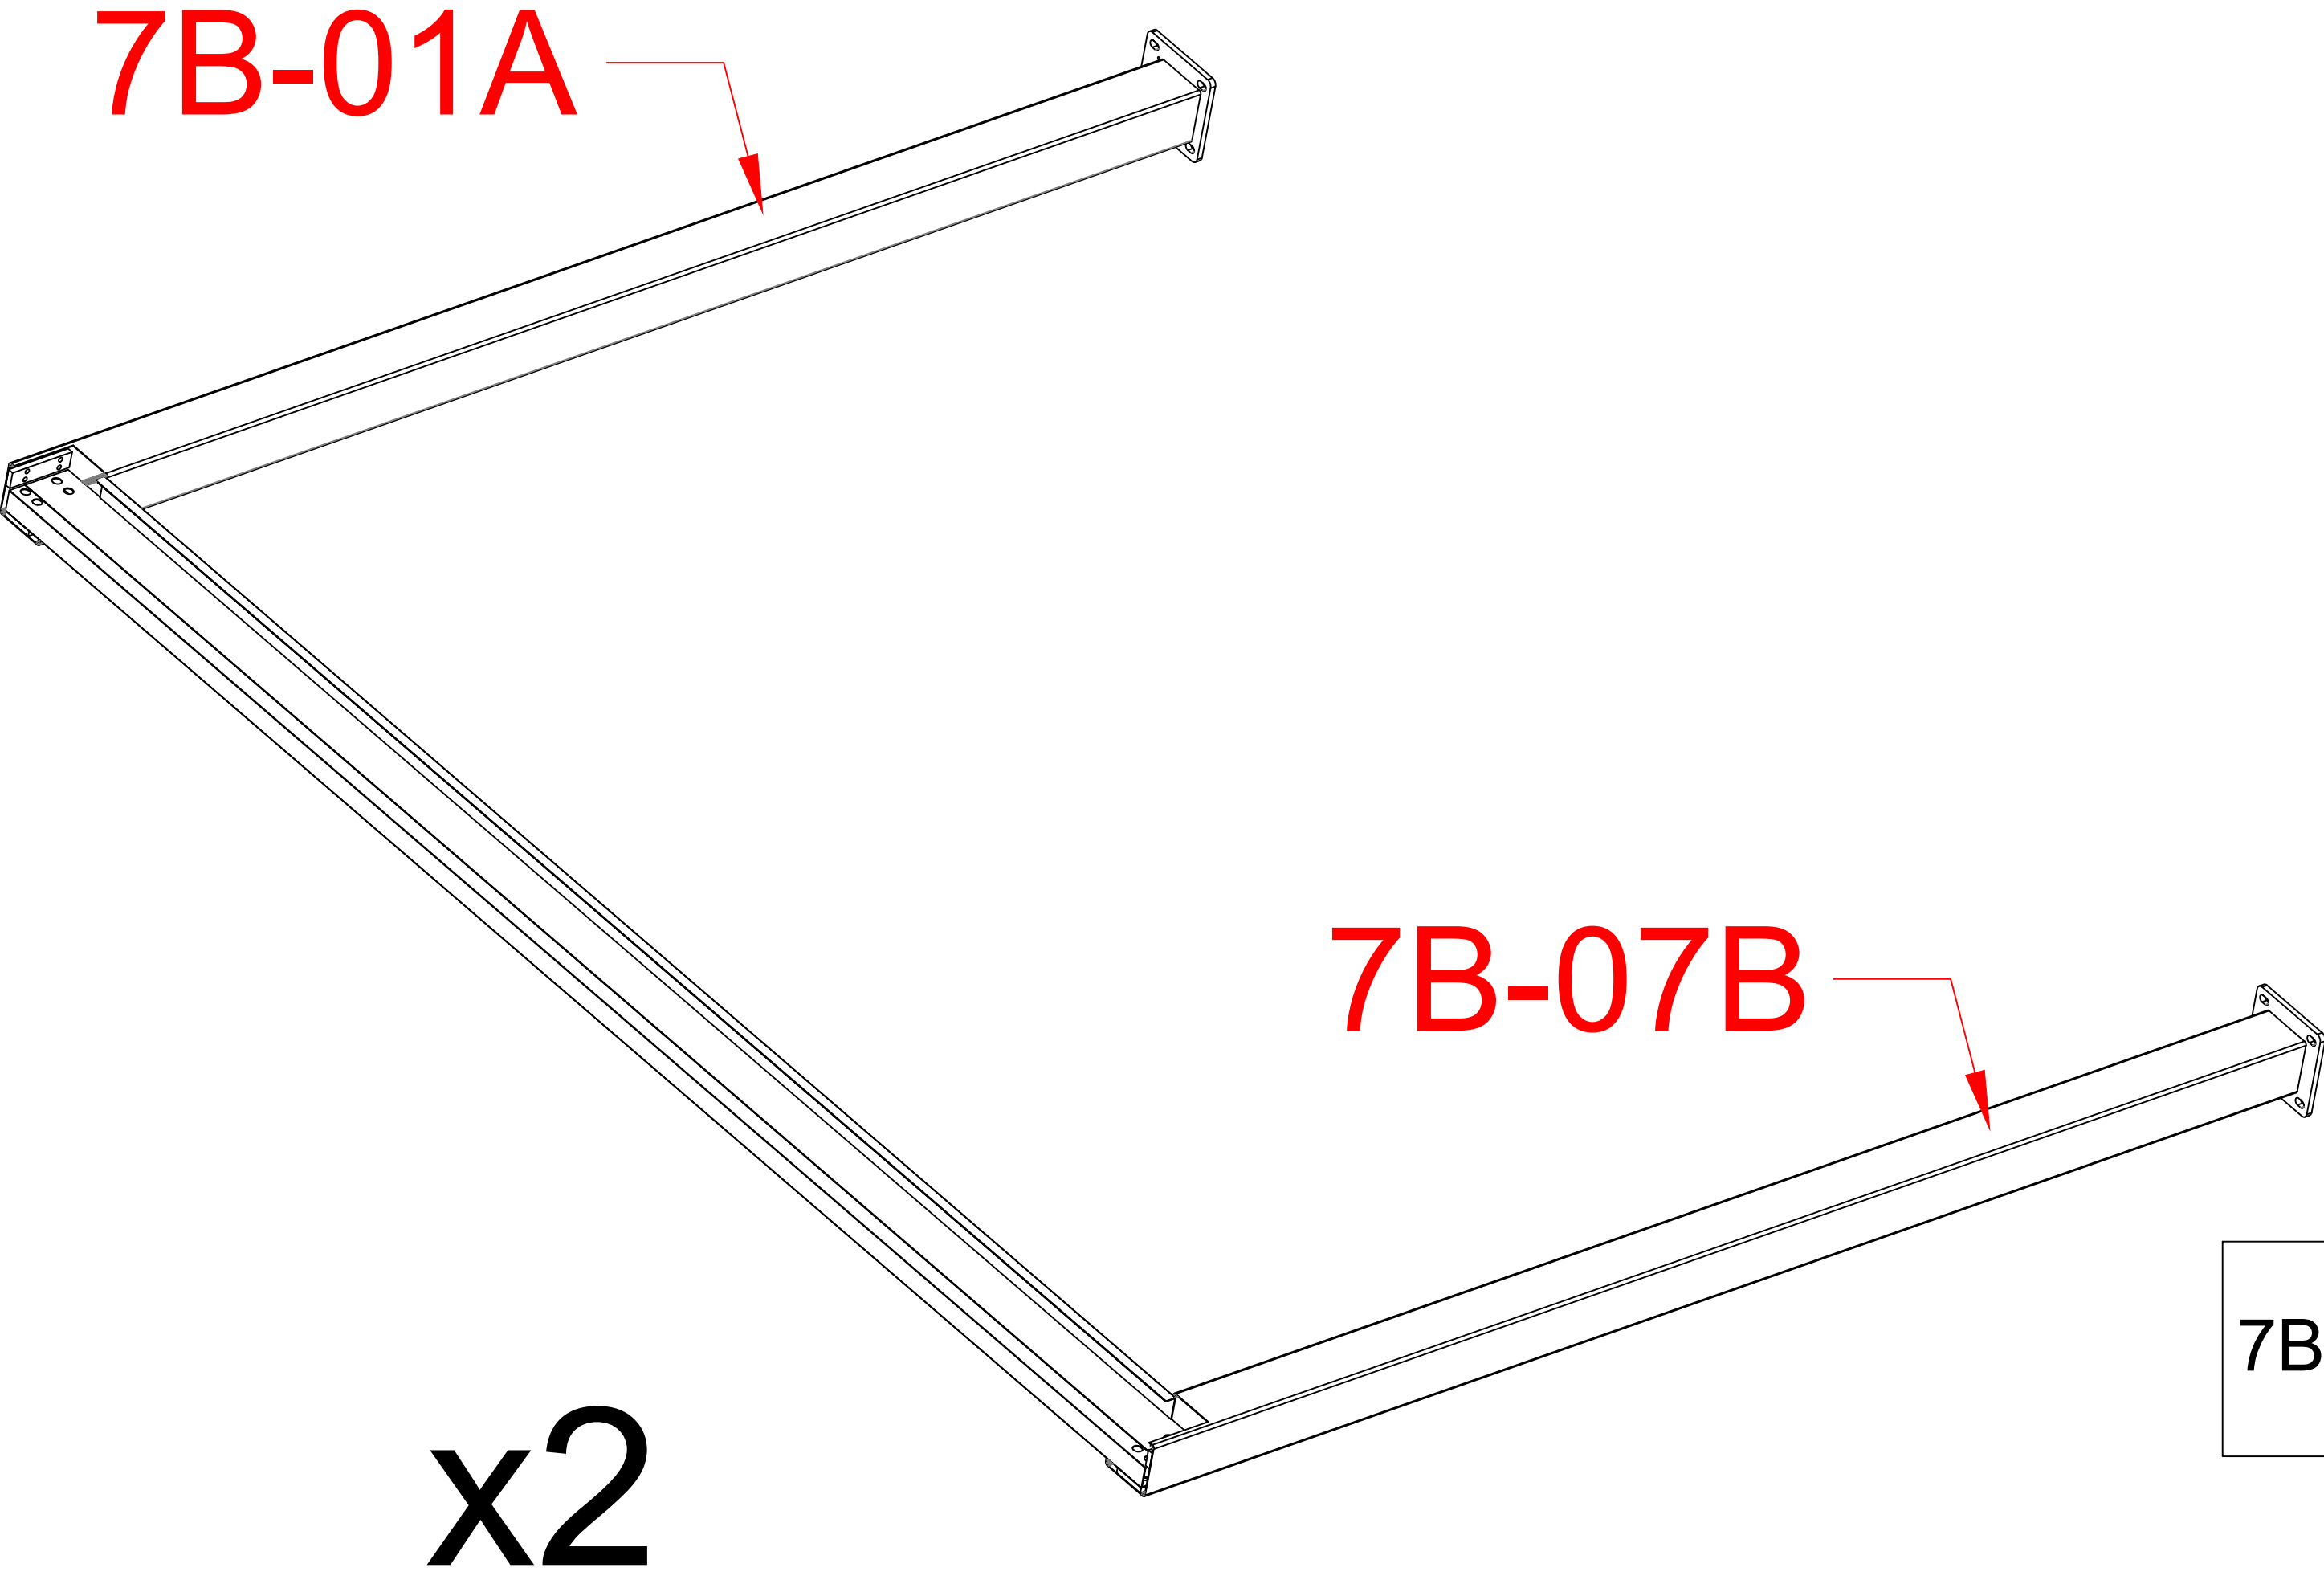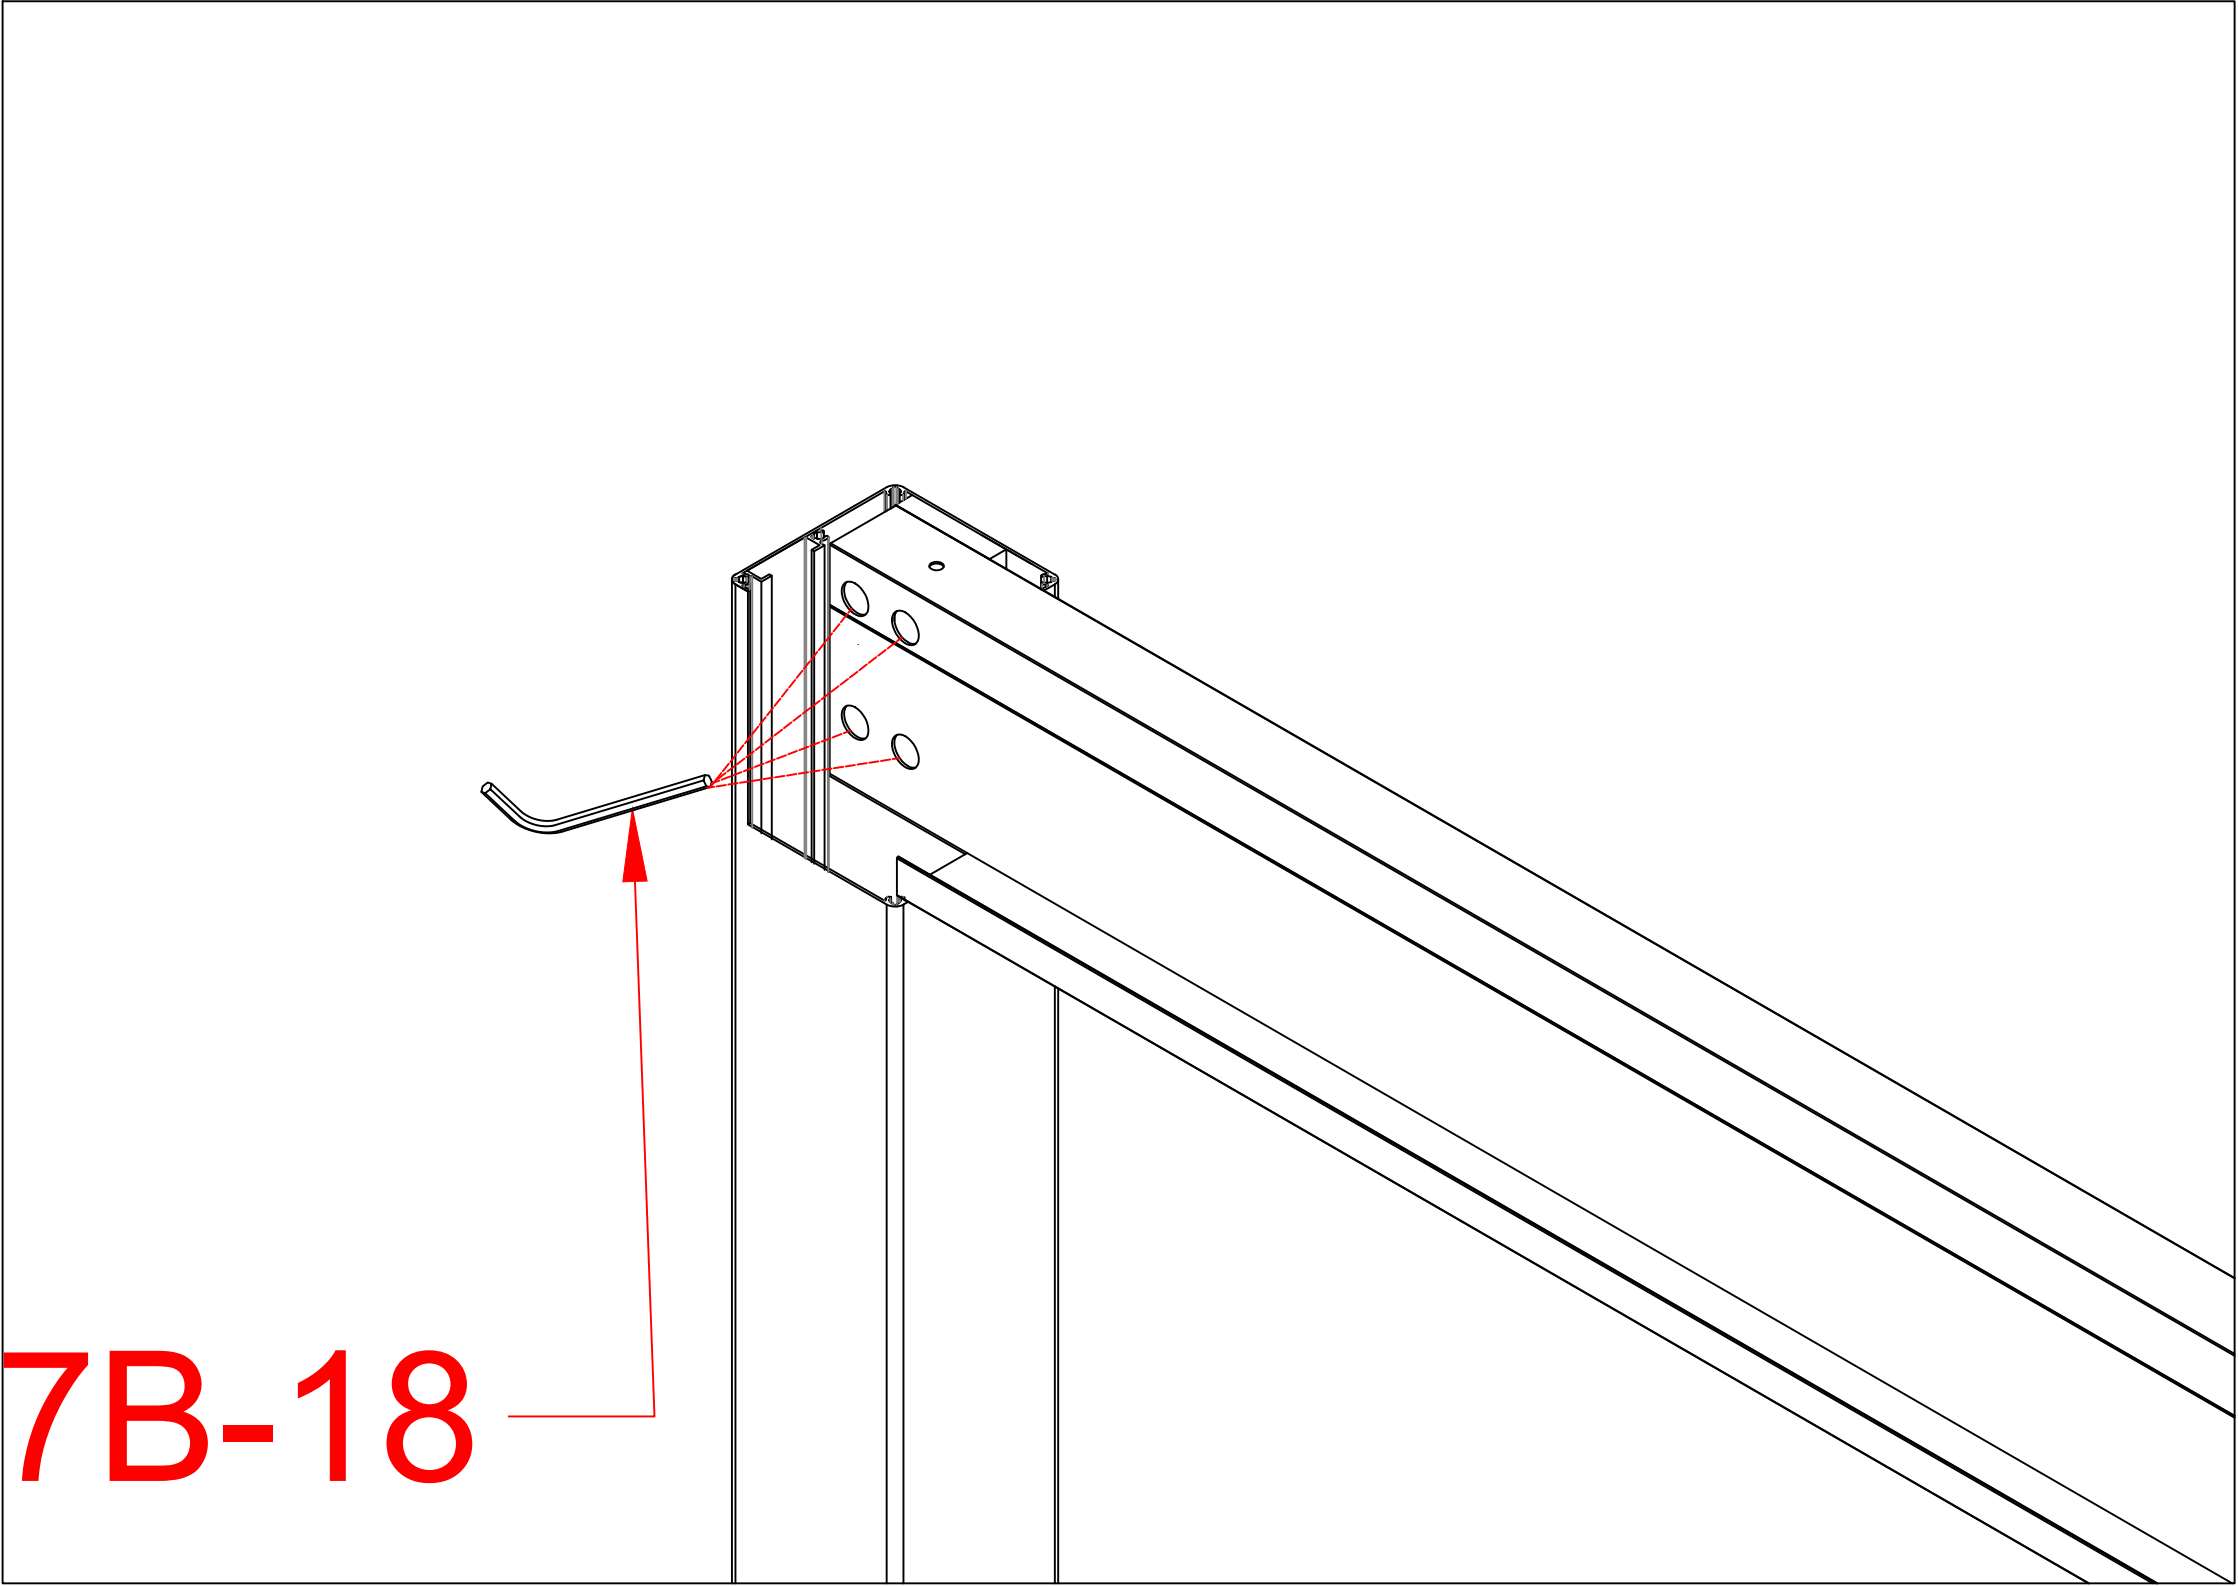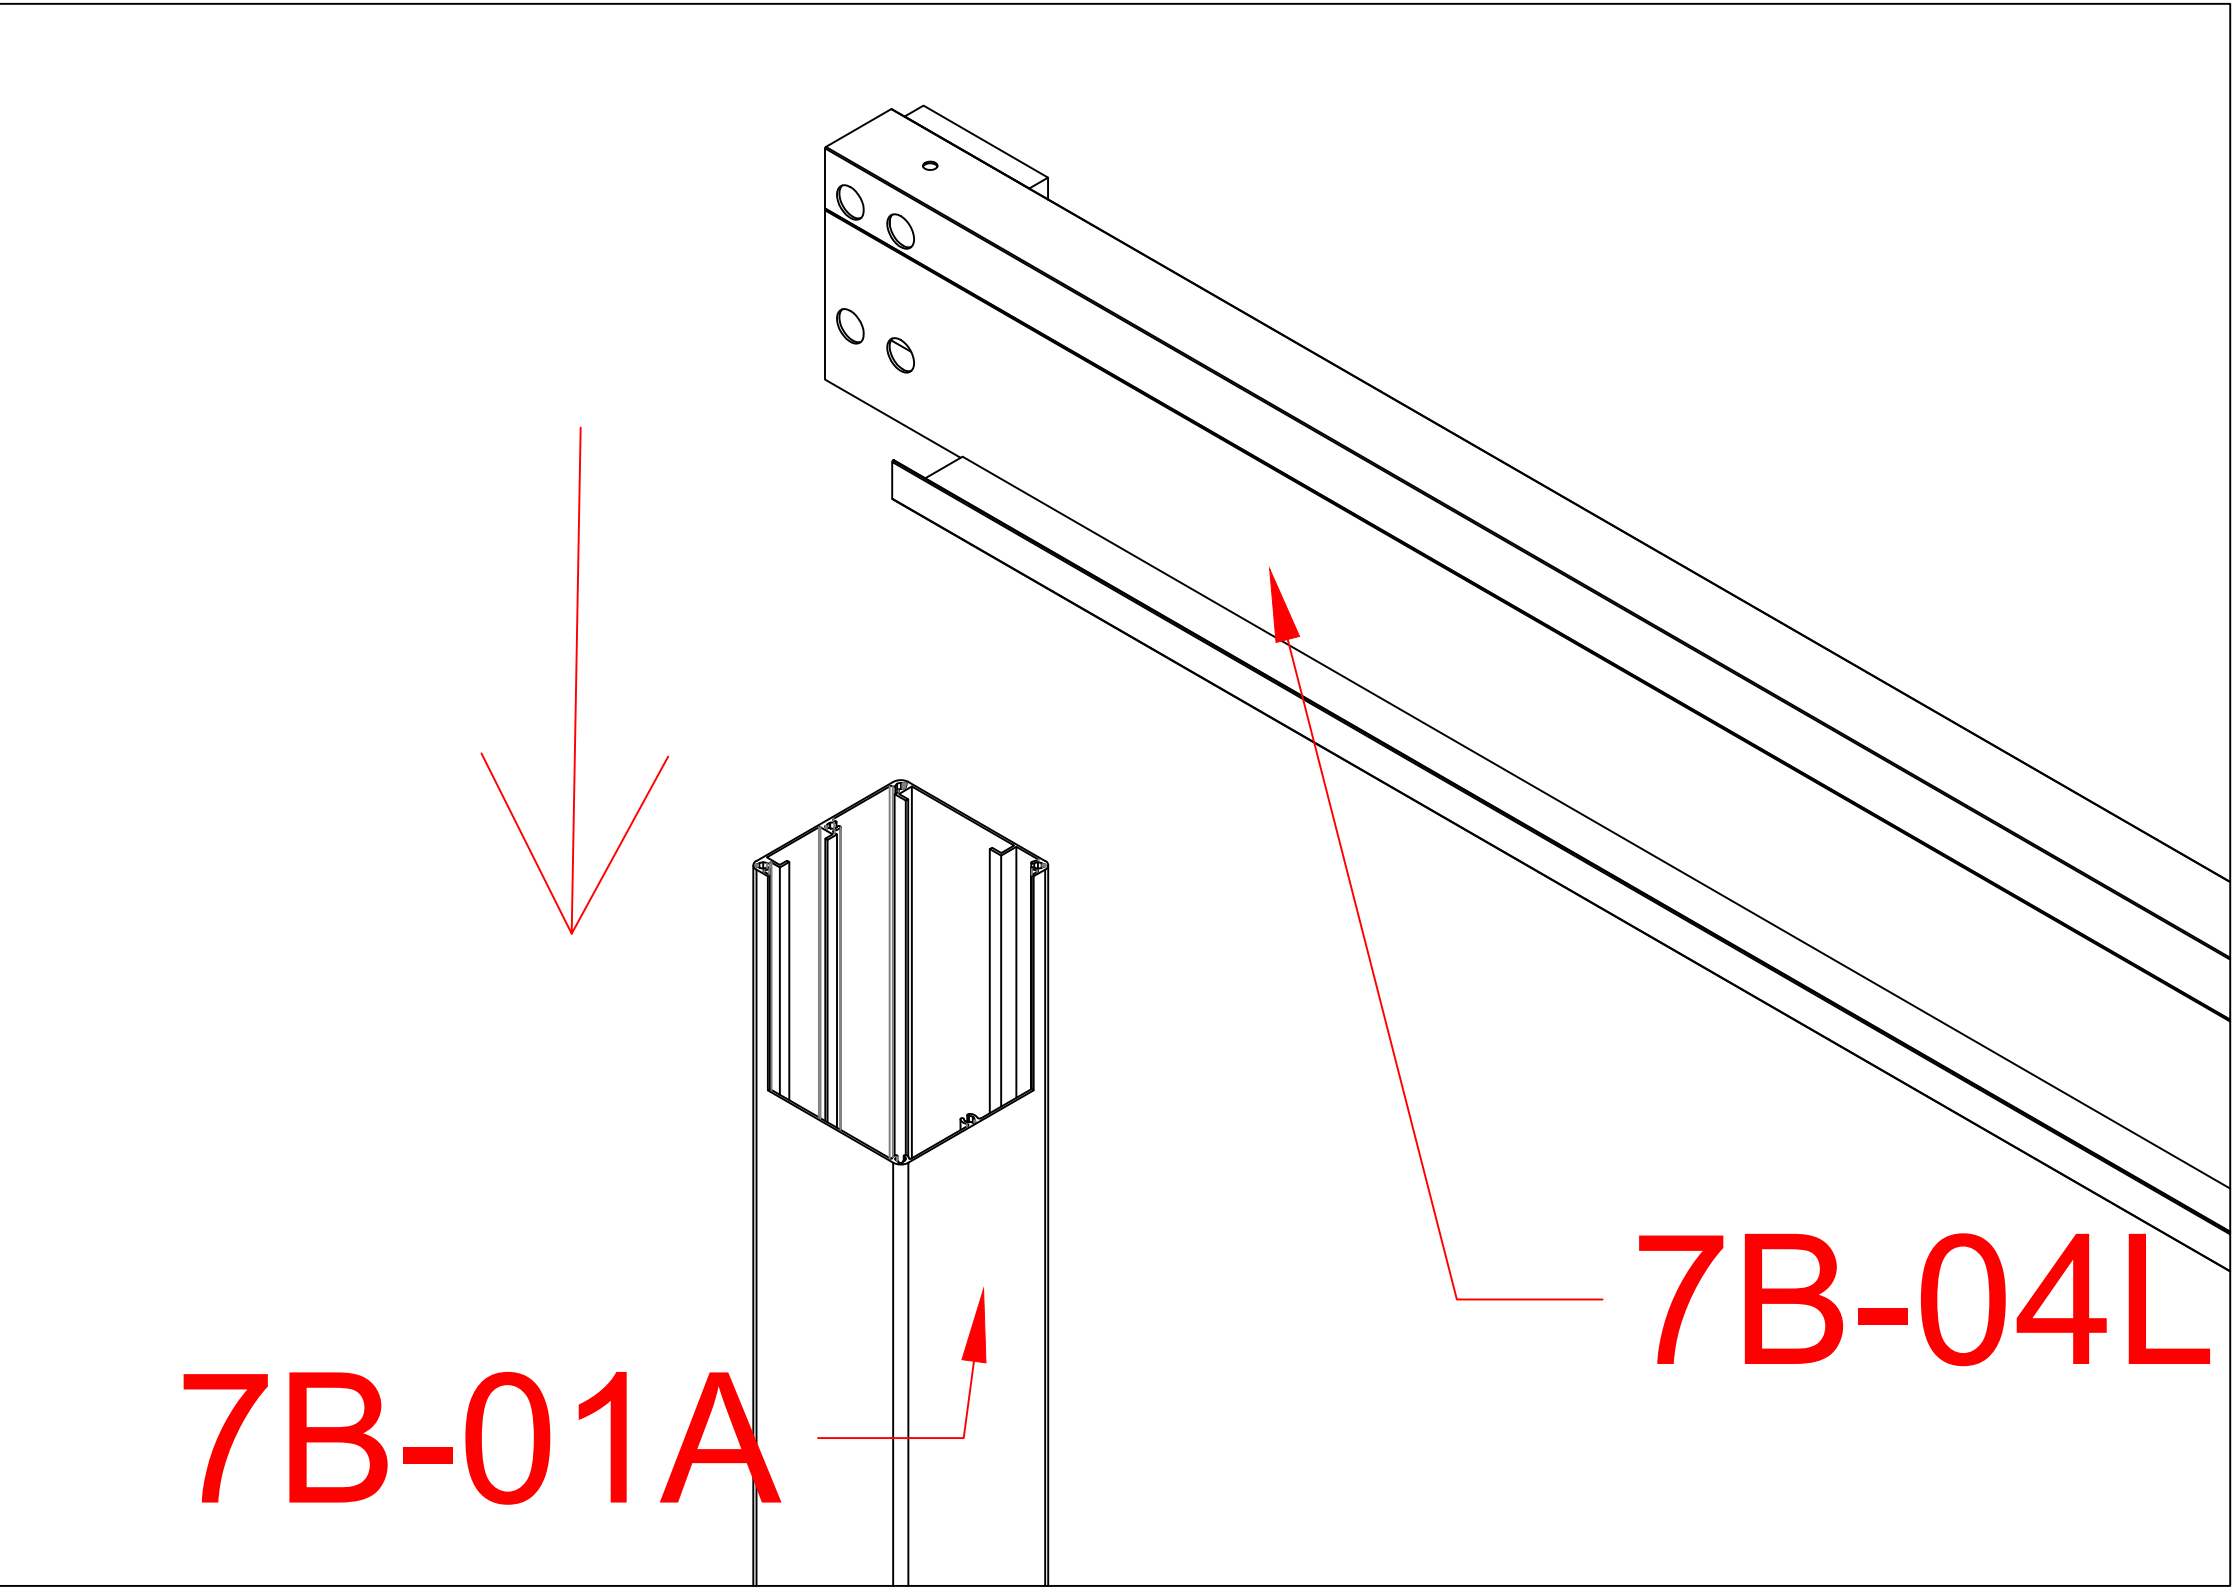





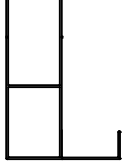
7B-04			2
-------	---	---	---

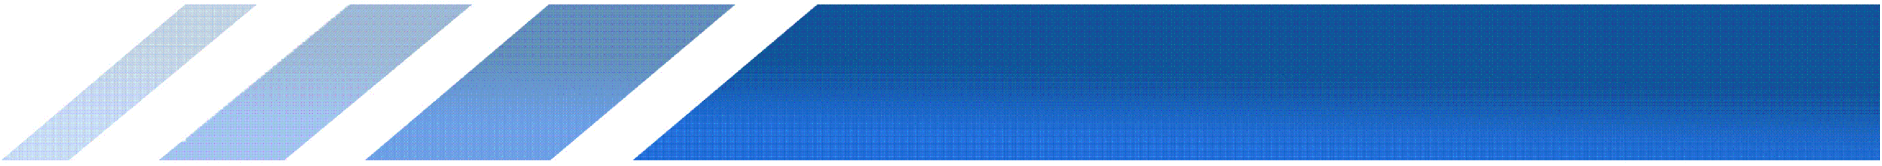

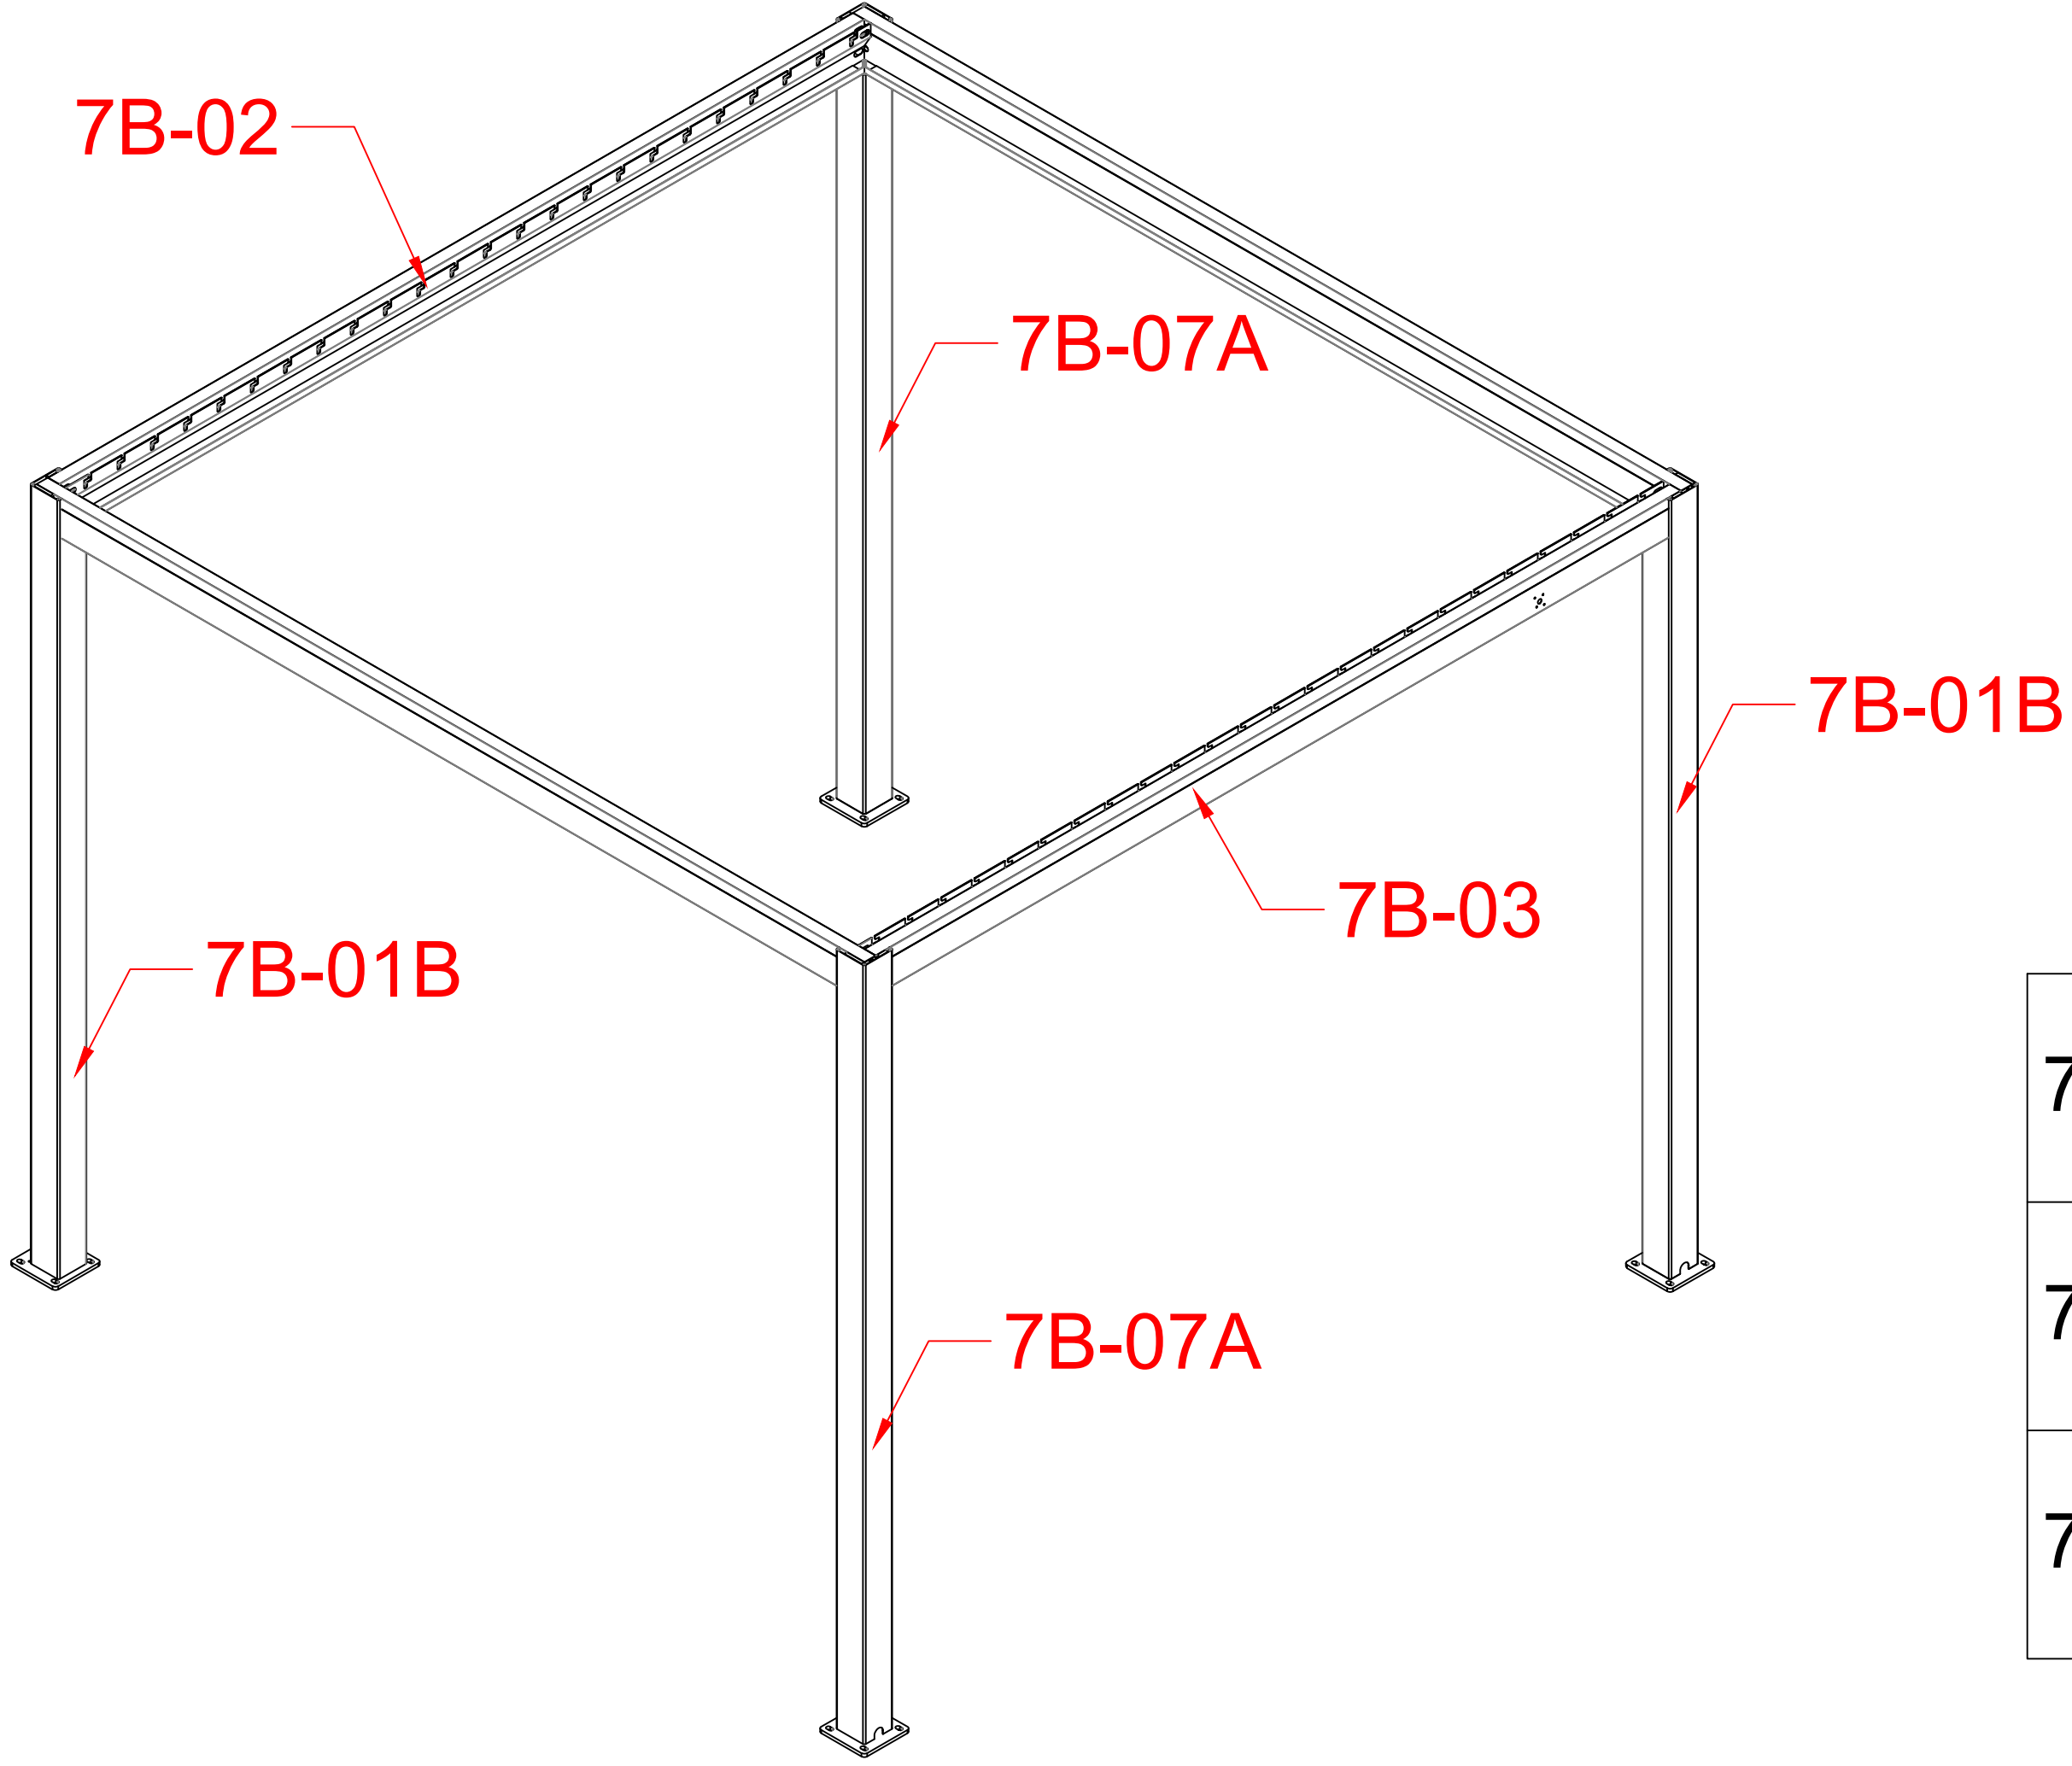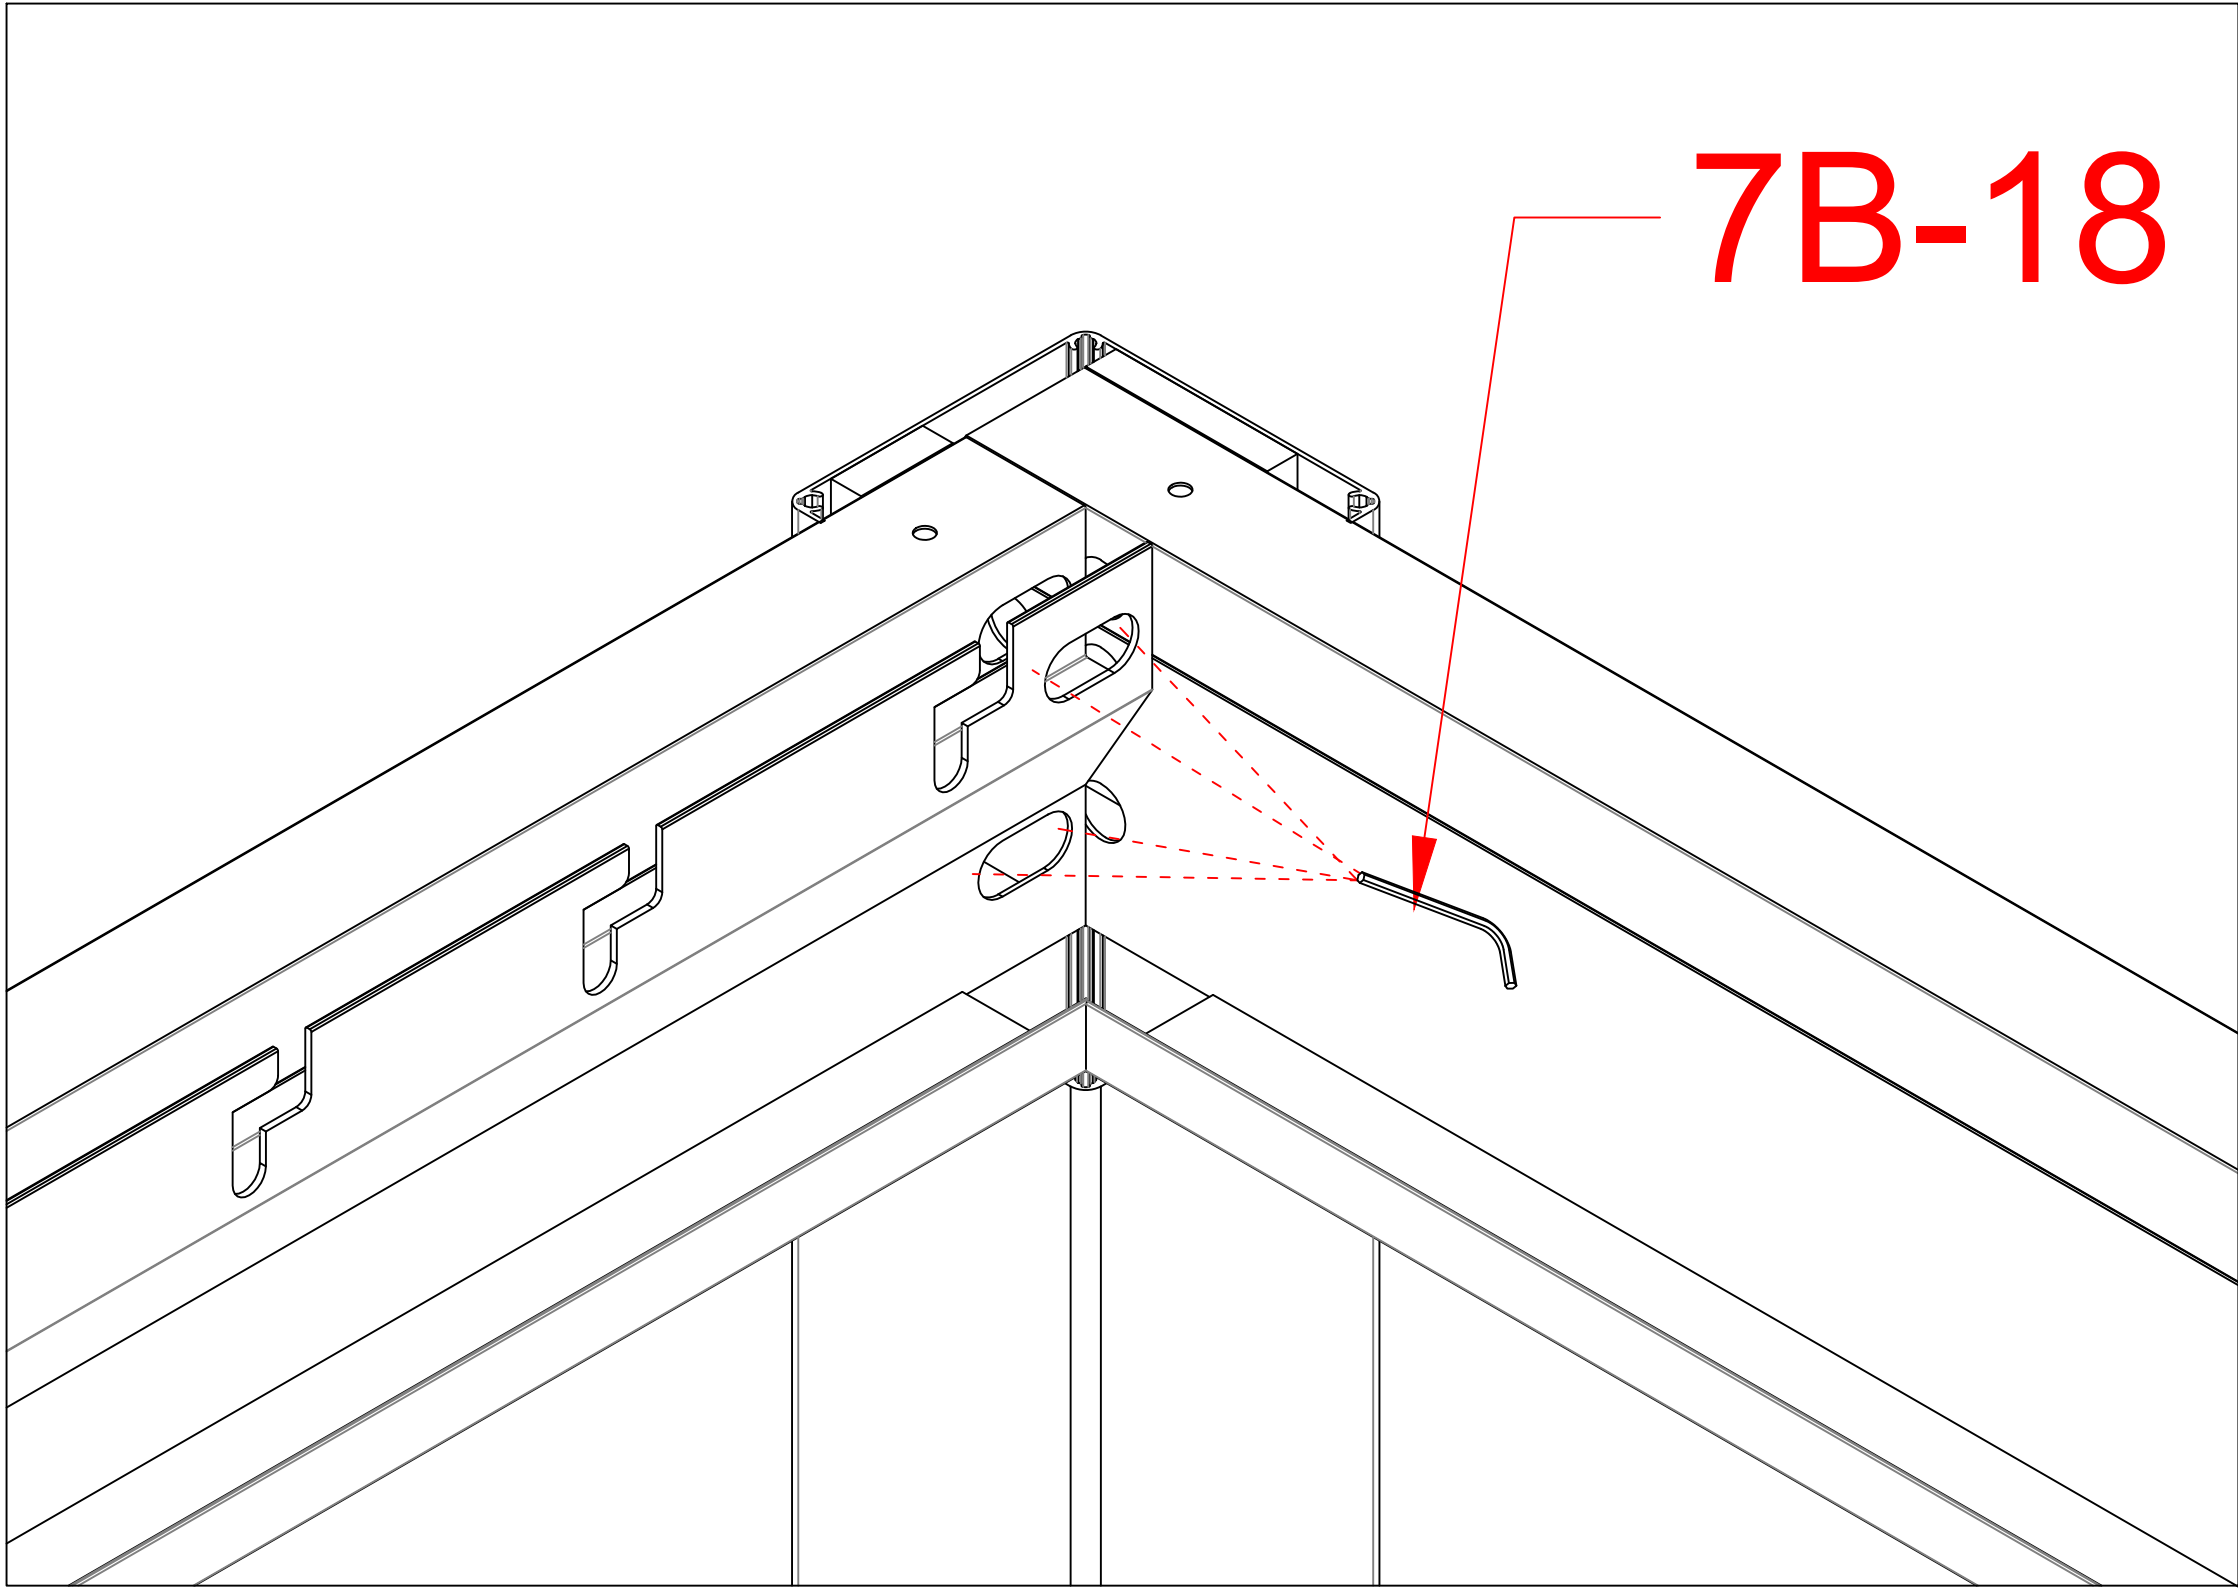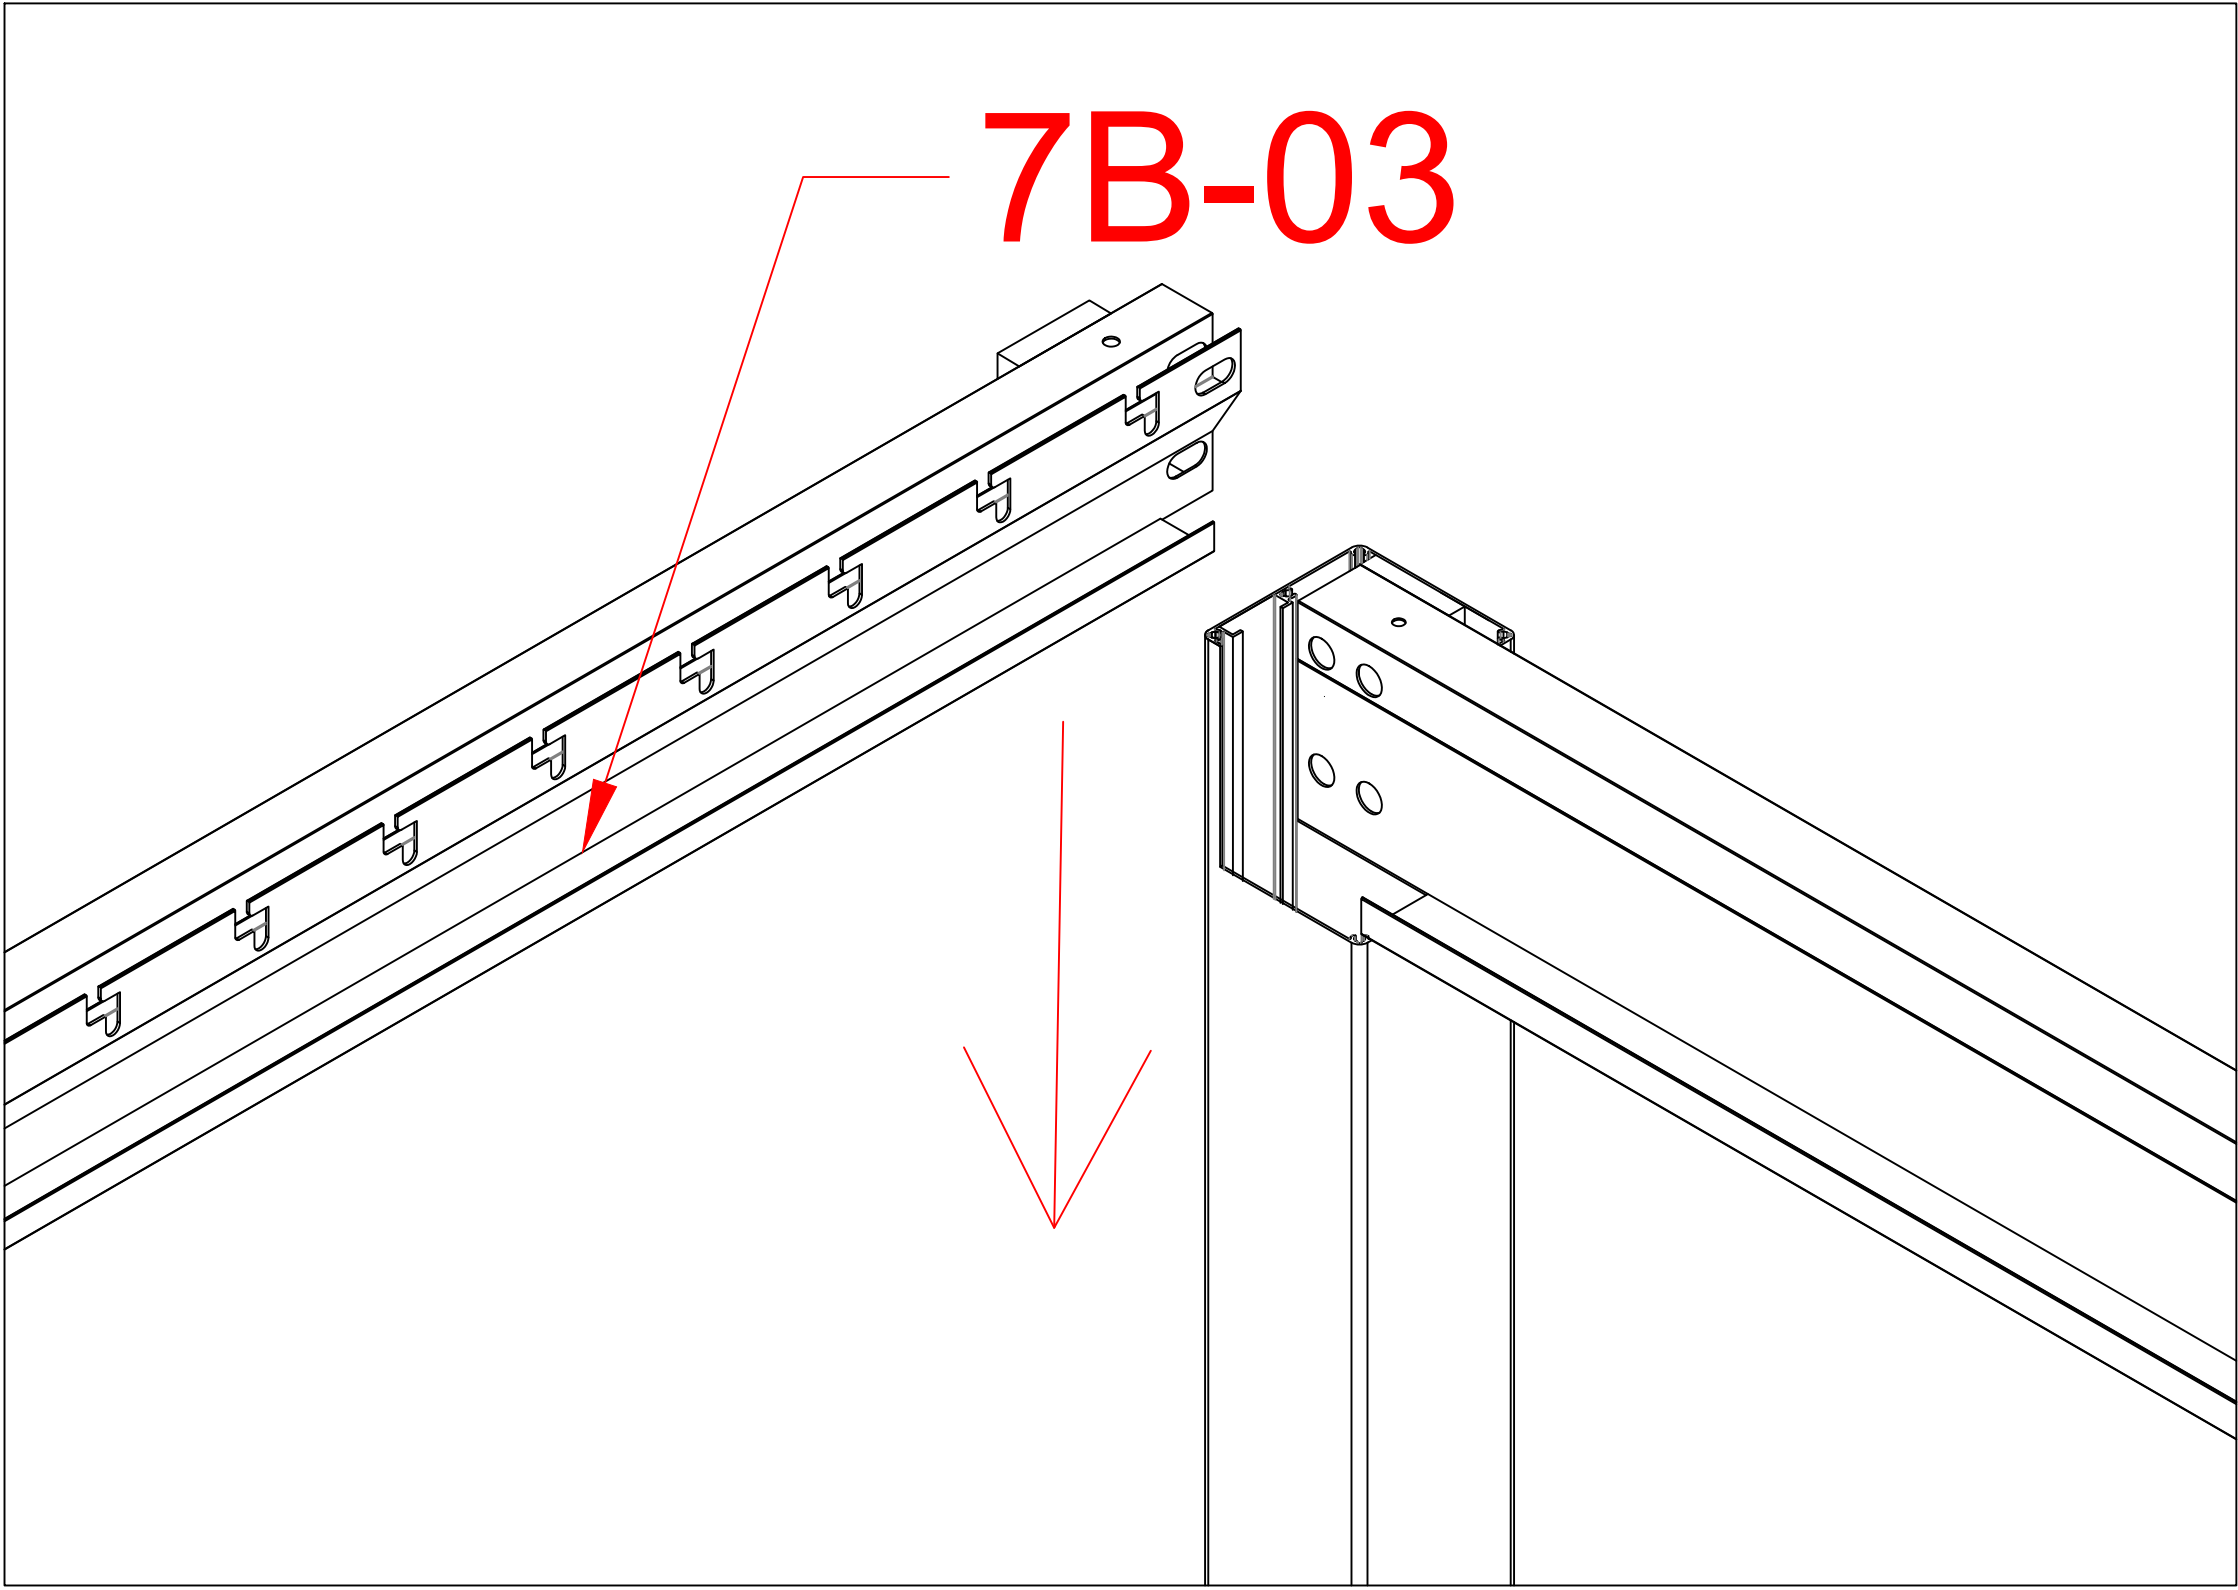


7B-18		1
7B-02		1
7B-03		1



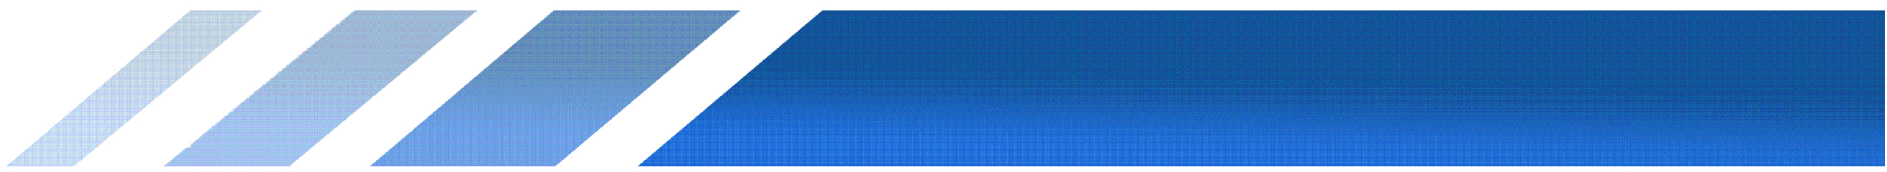


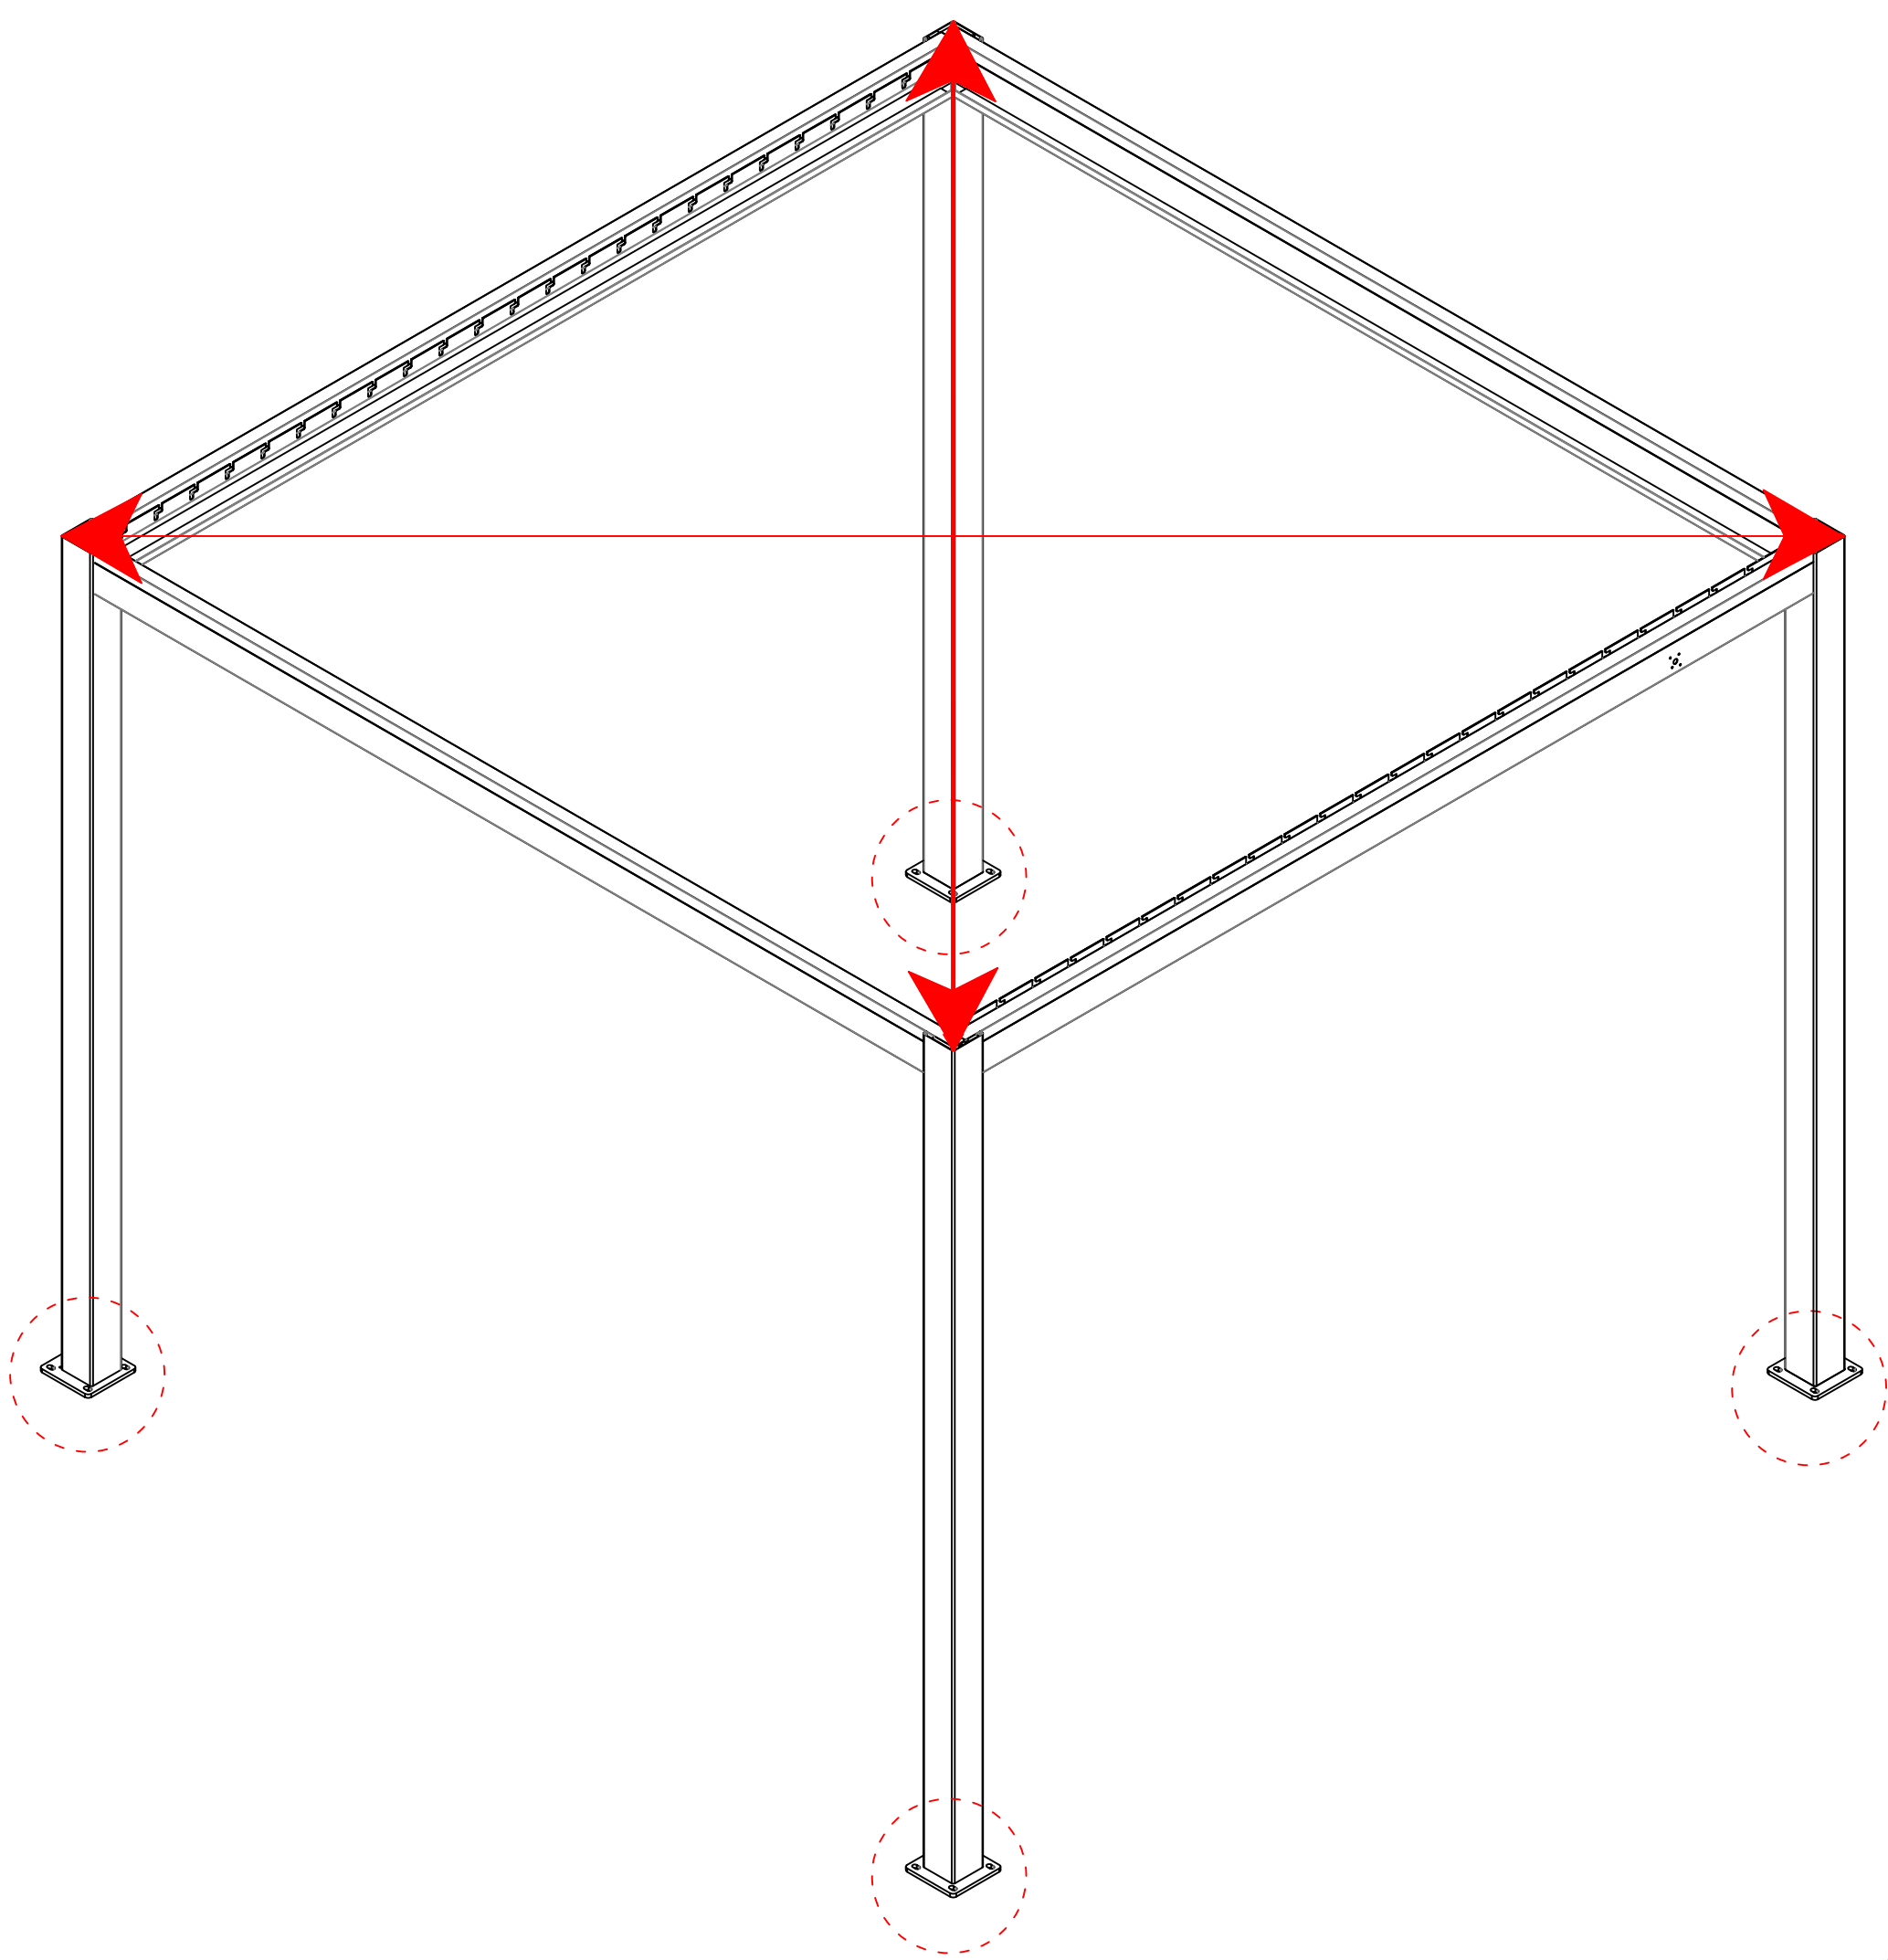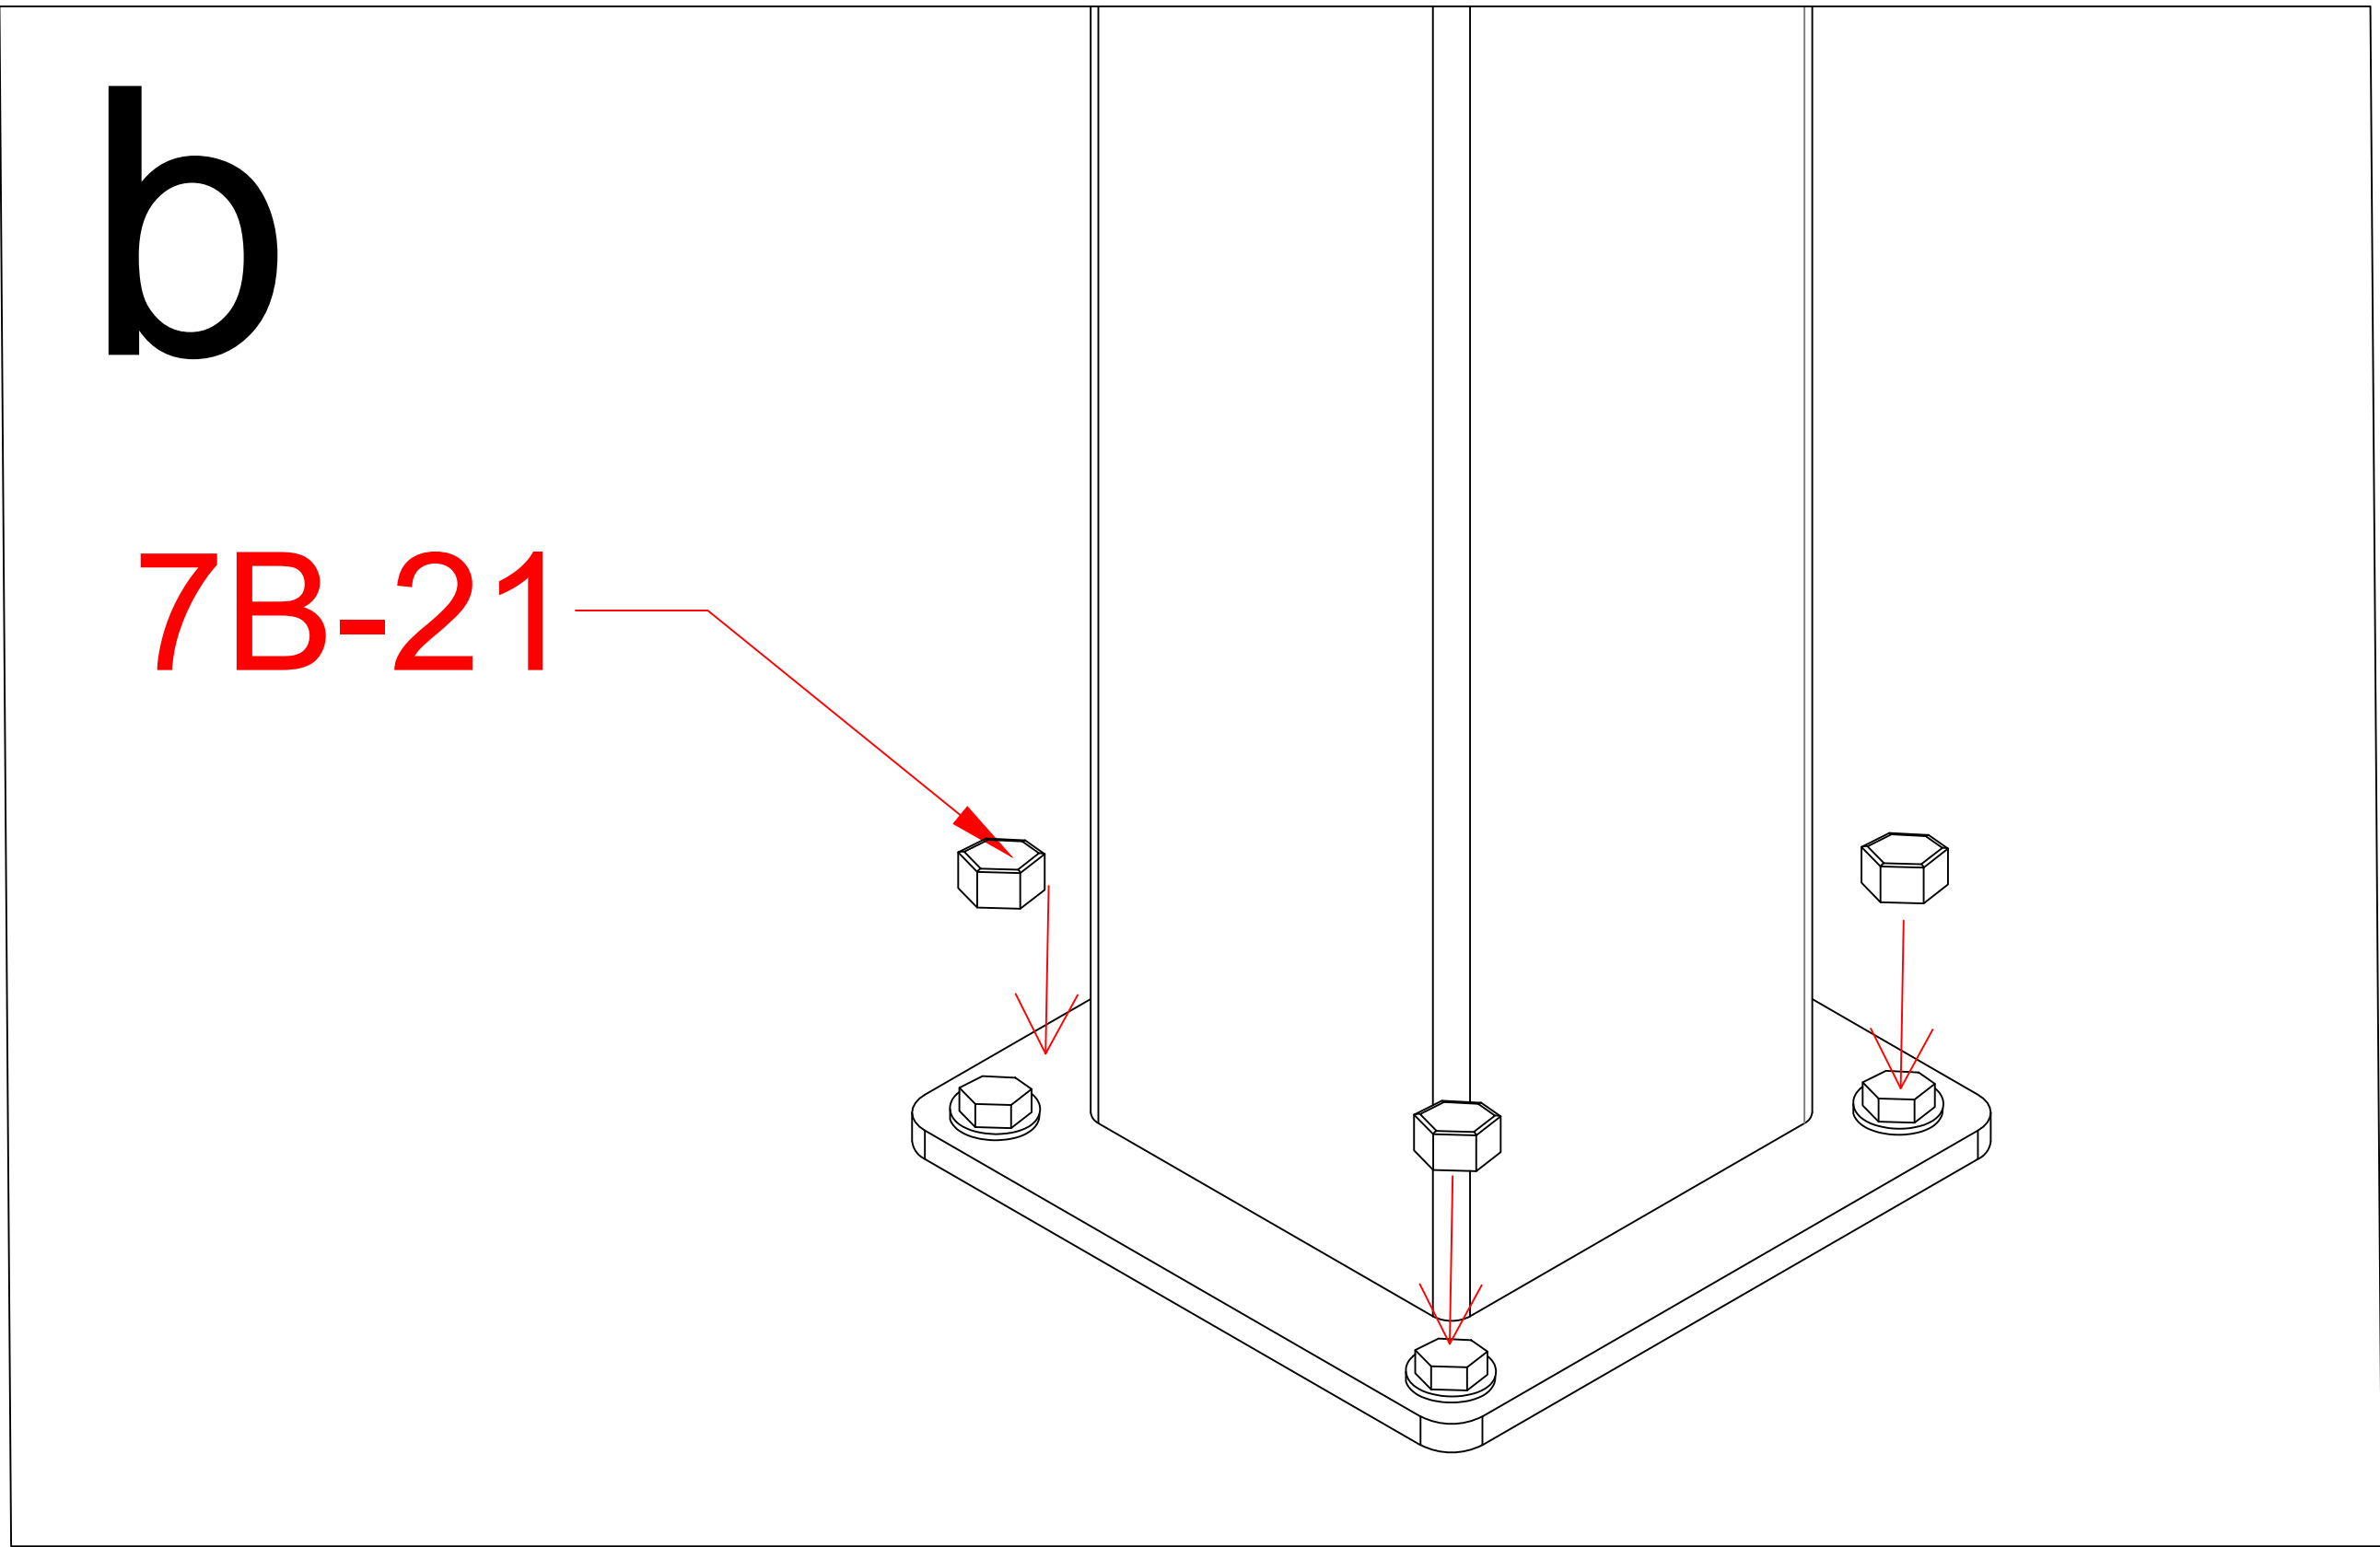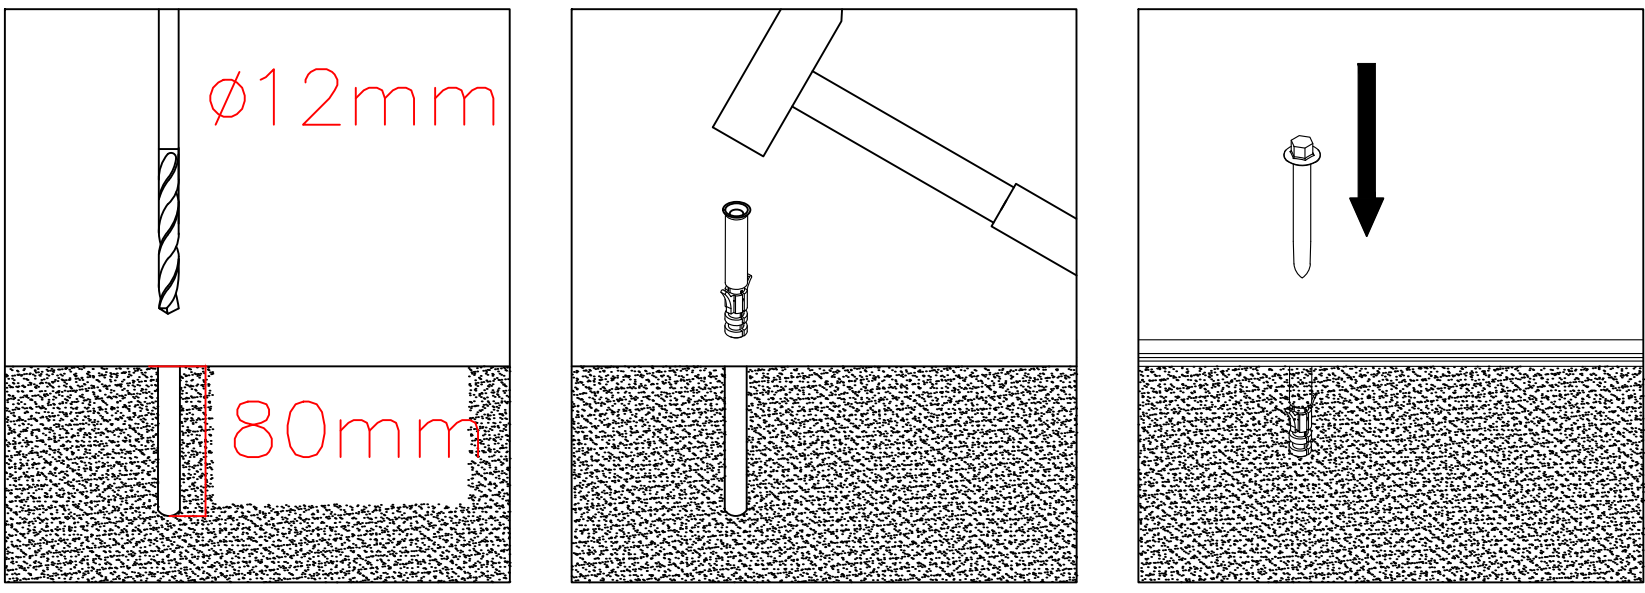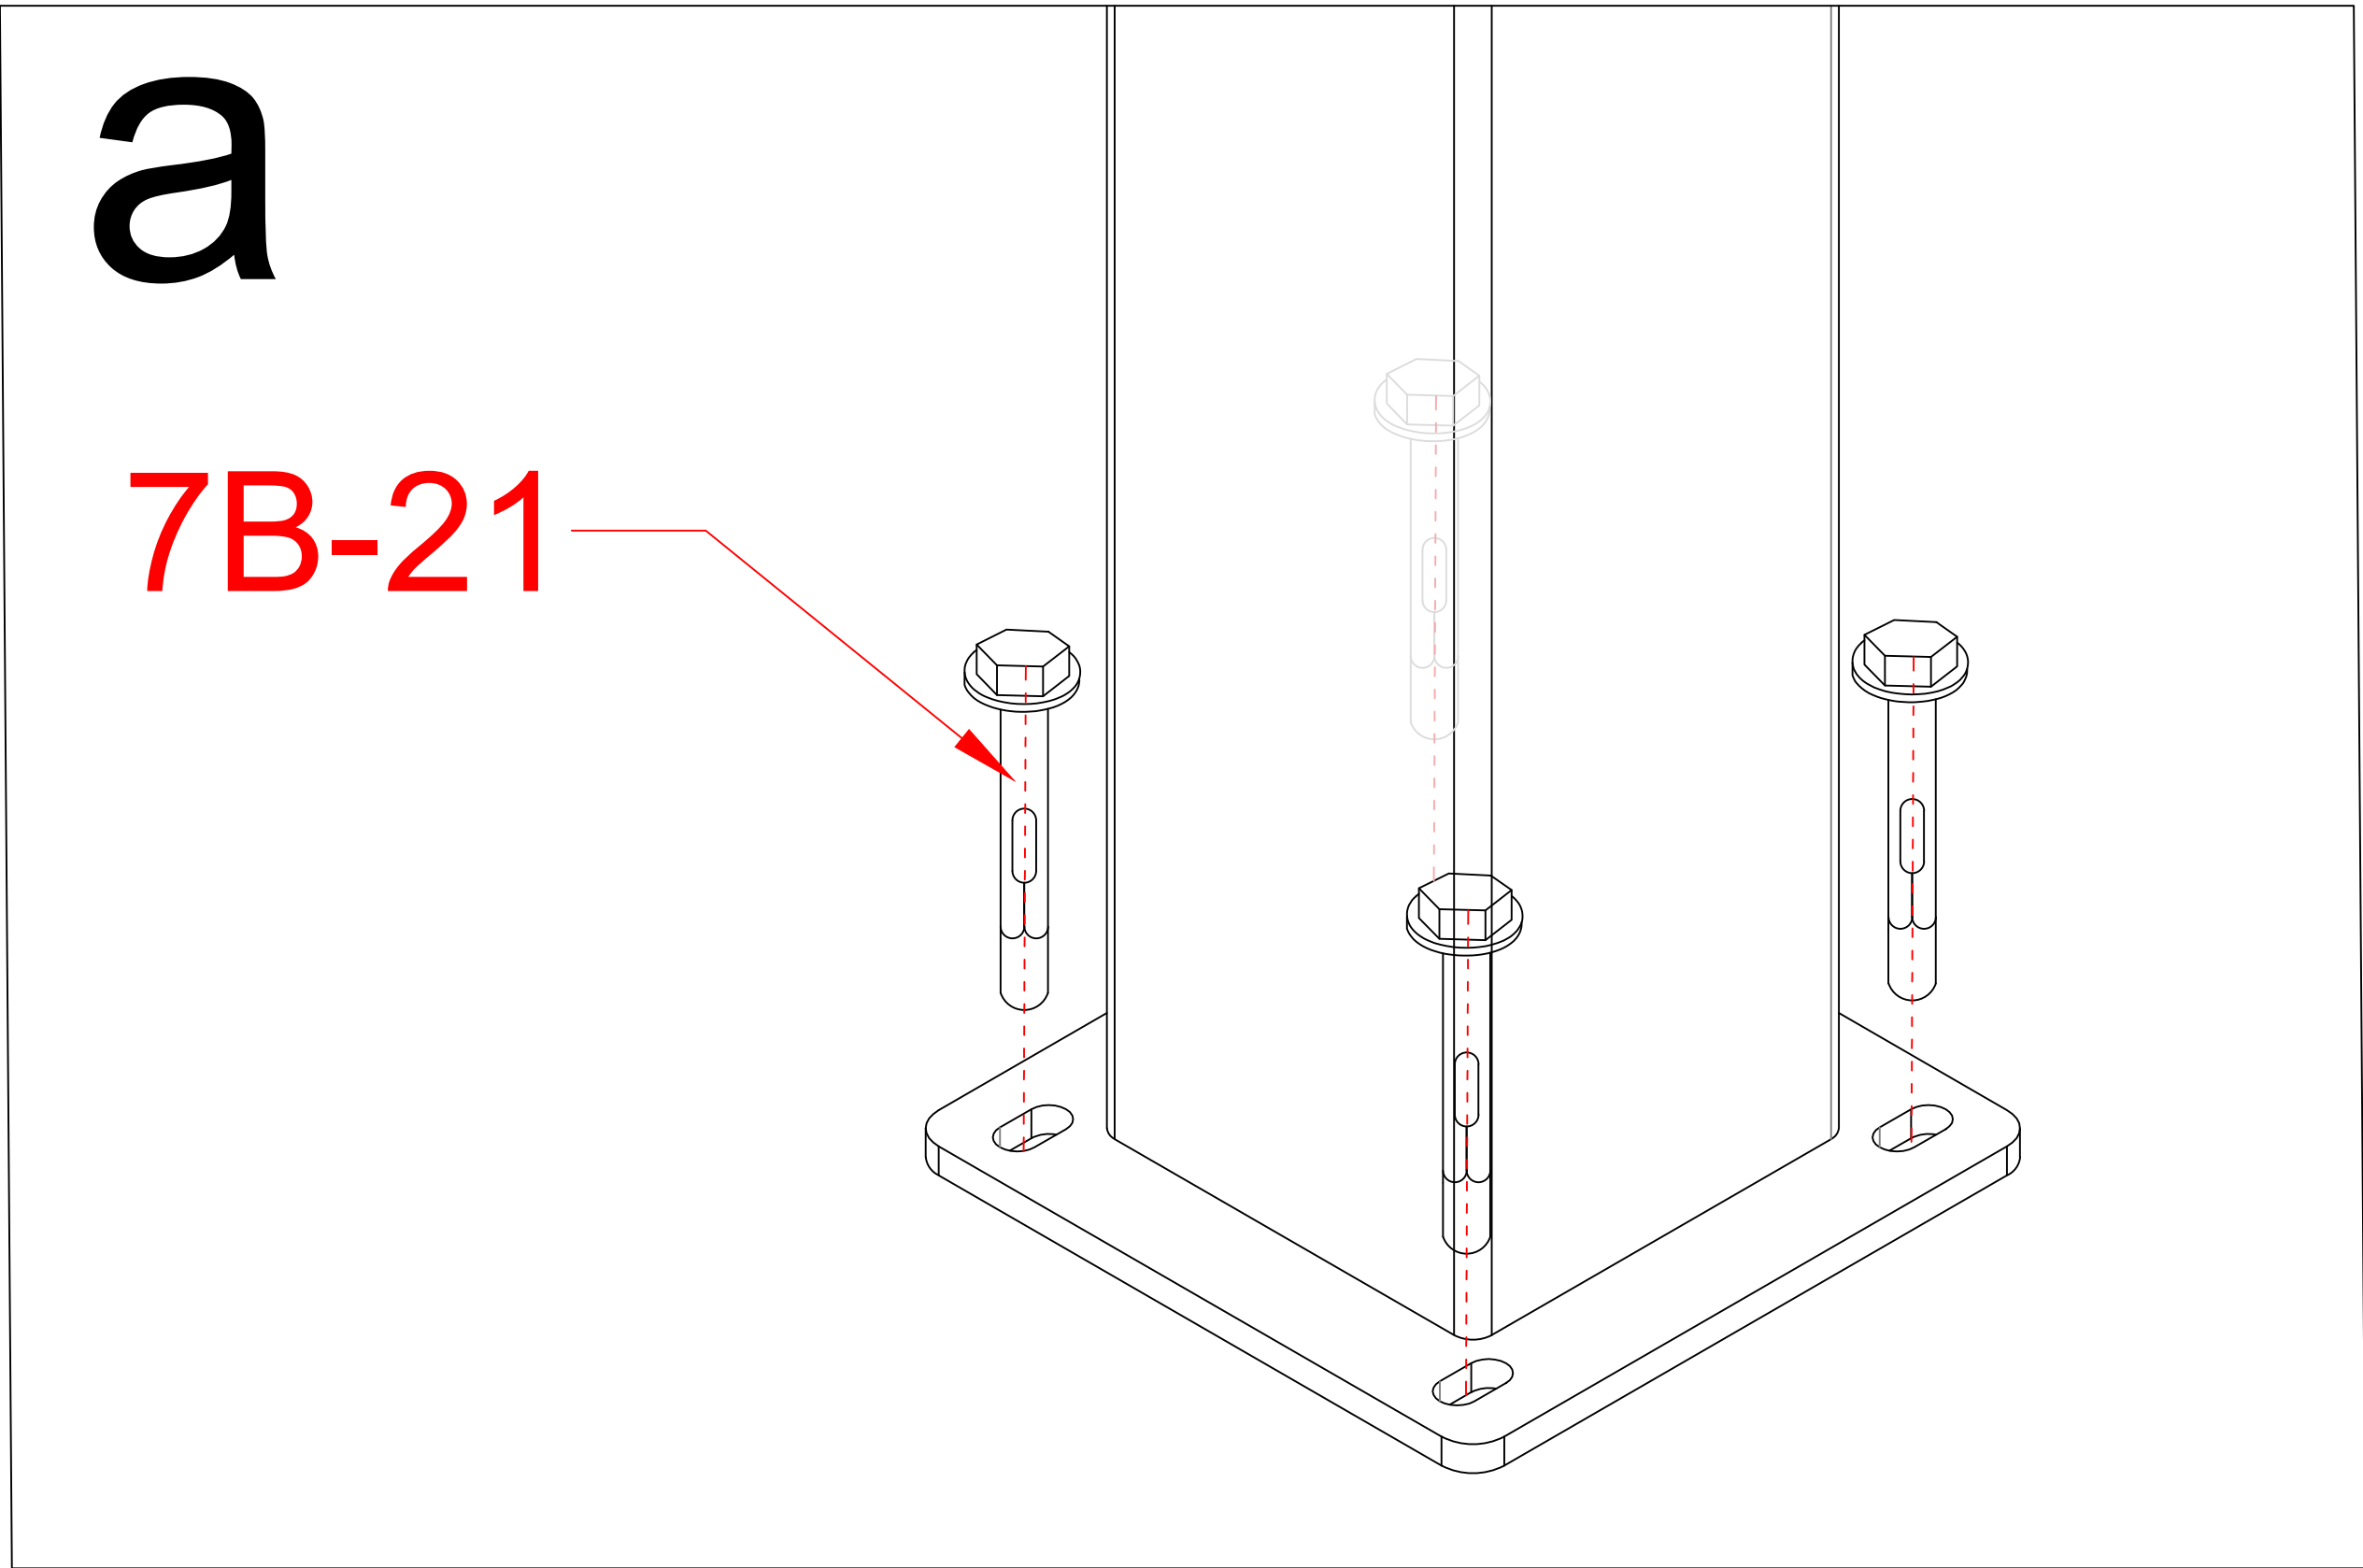


Pls measure the diagonal size and make sure the diagonal size keeps same before screw 7B-21 mounted. If not, pls adjust it to same size.





7B-21		16
-------	--	----

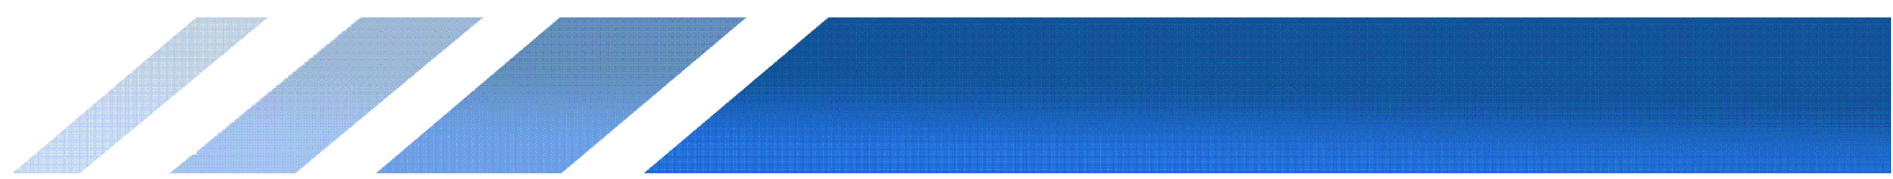

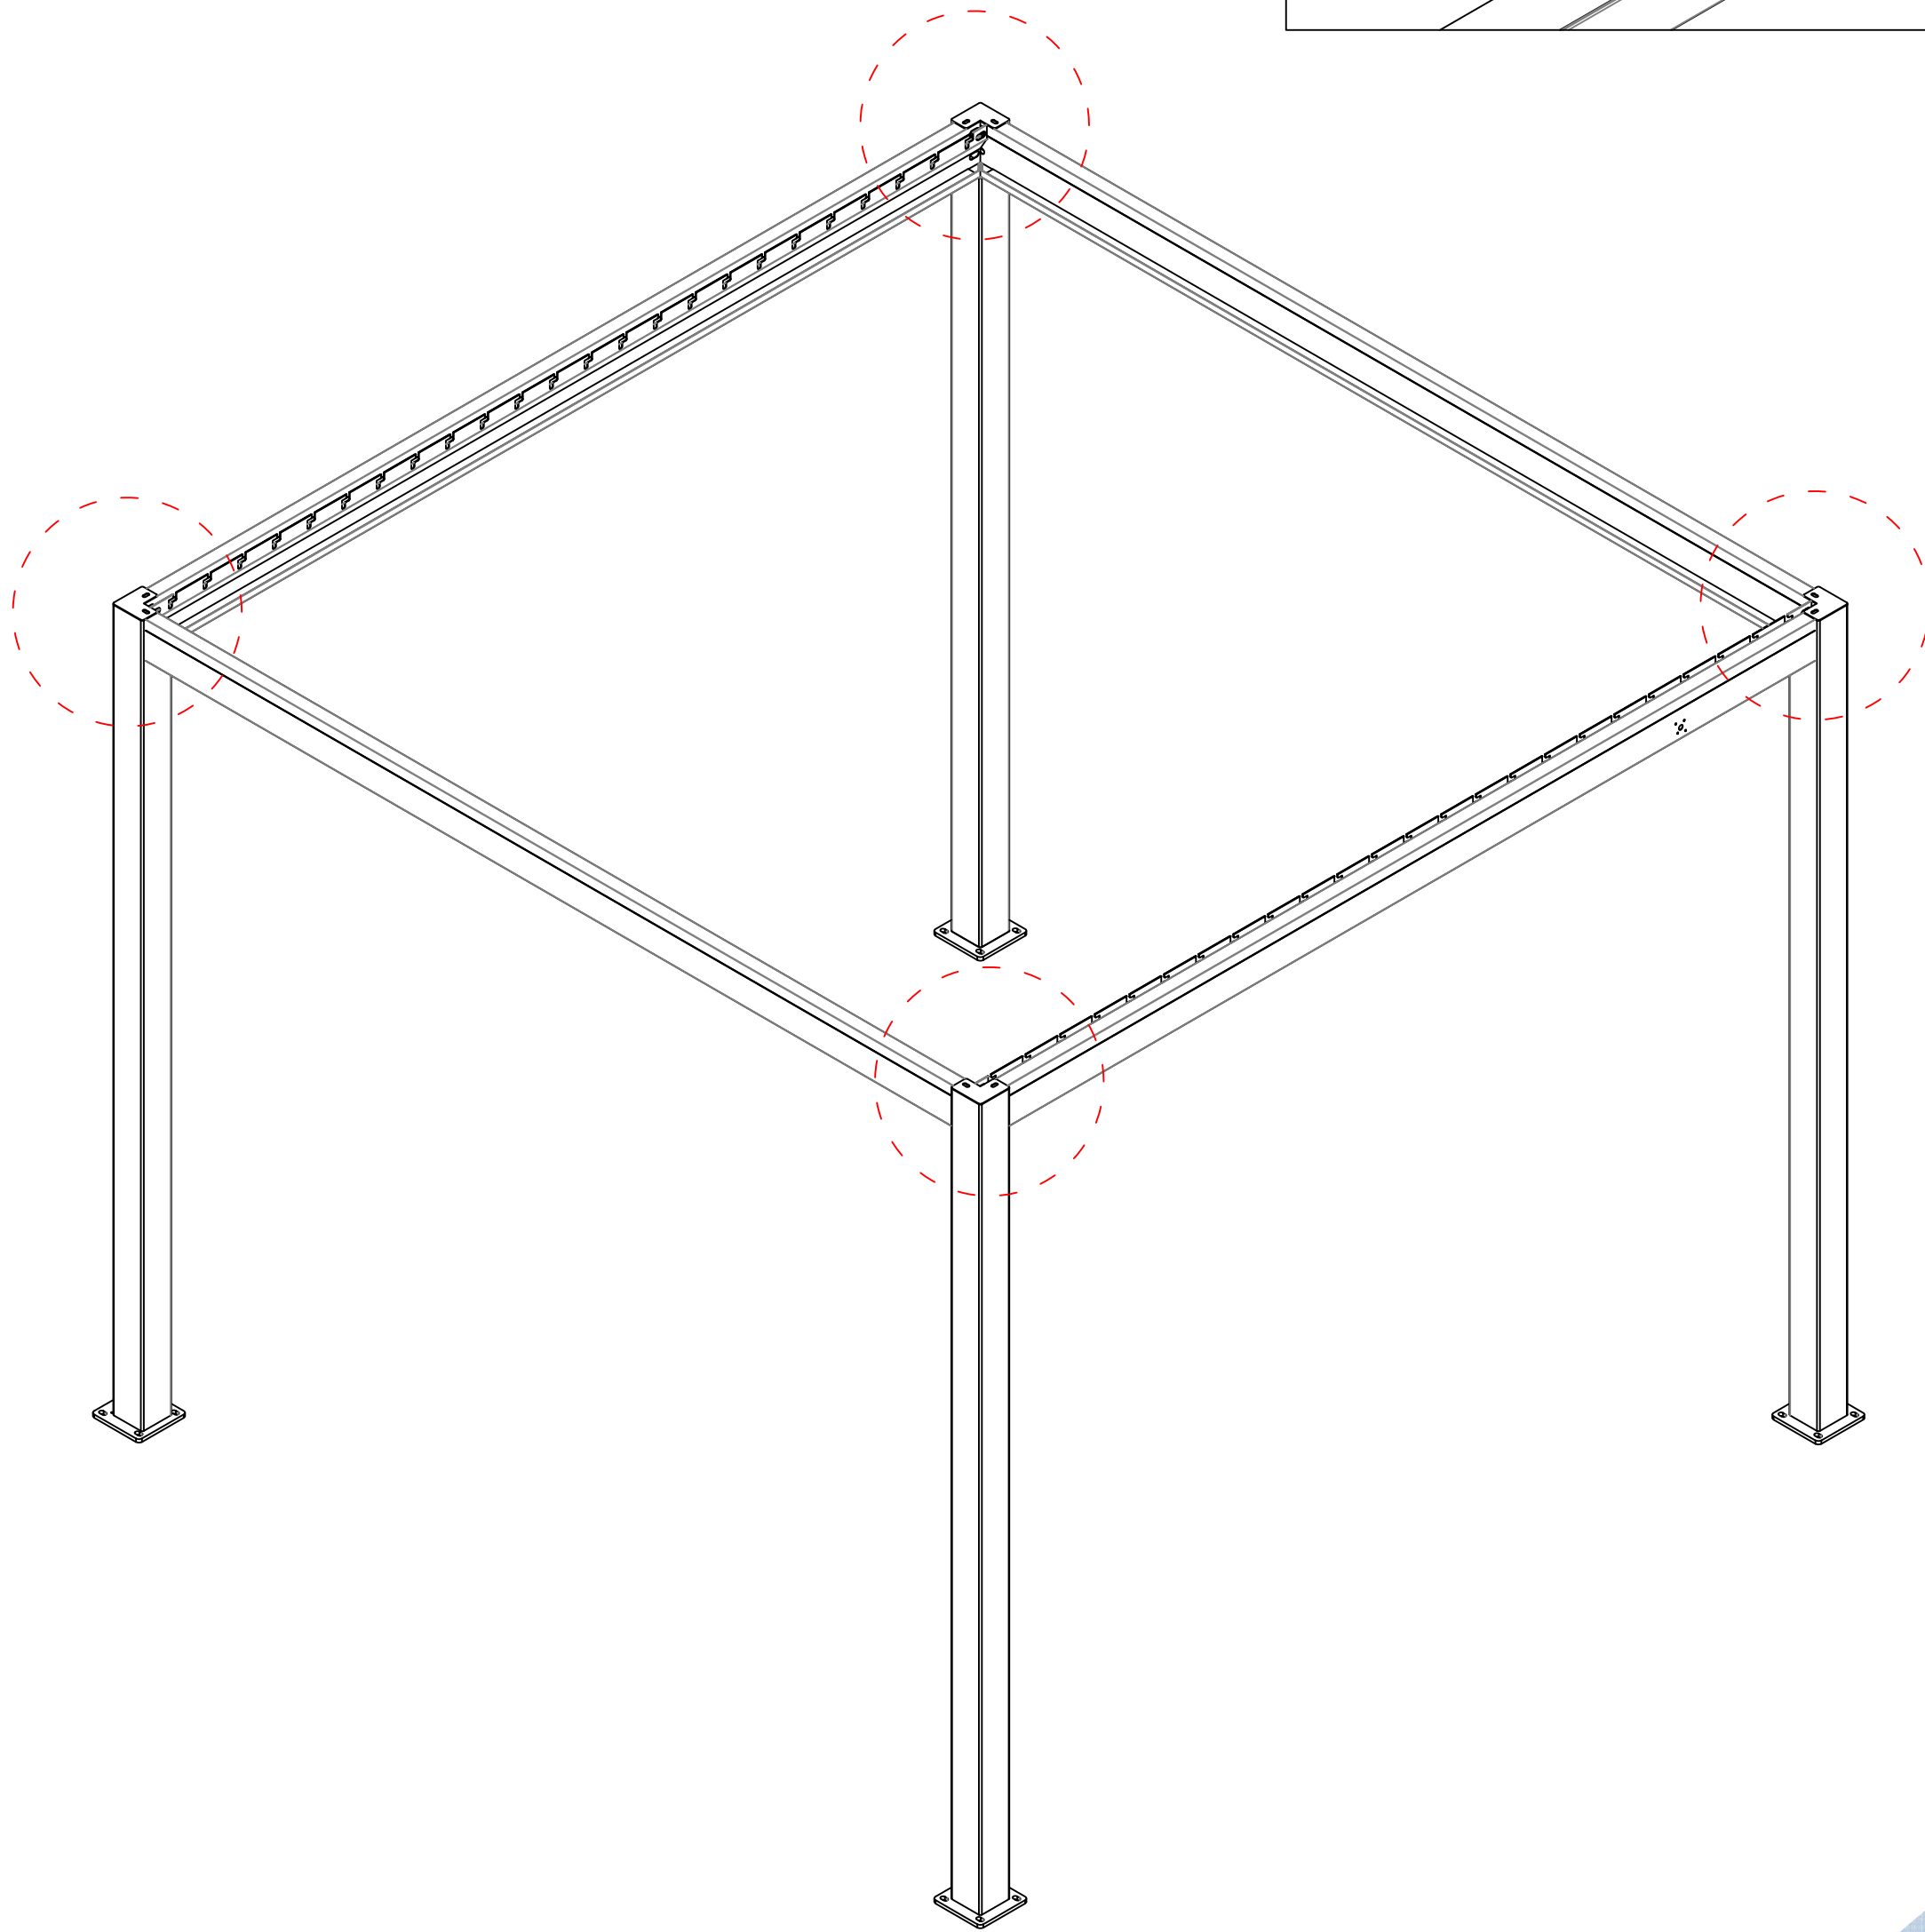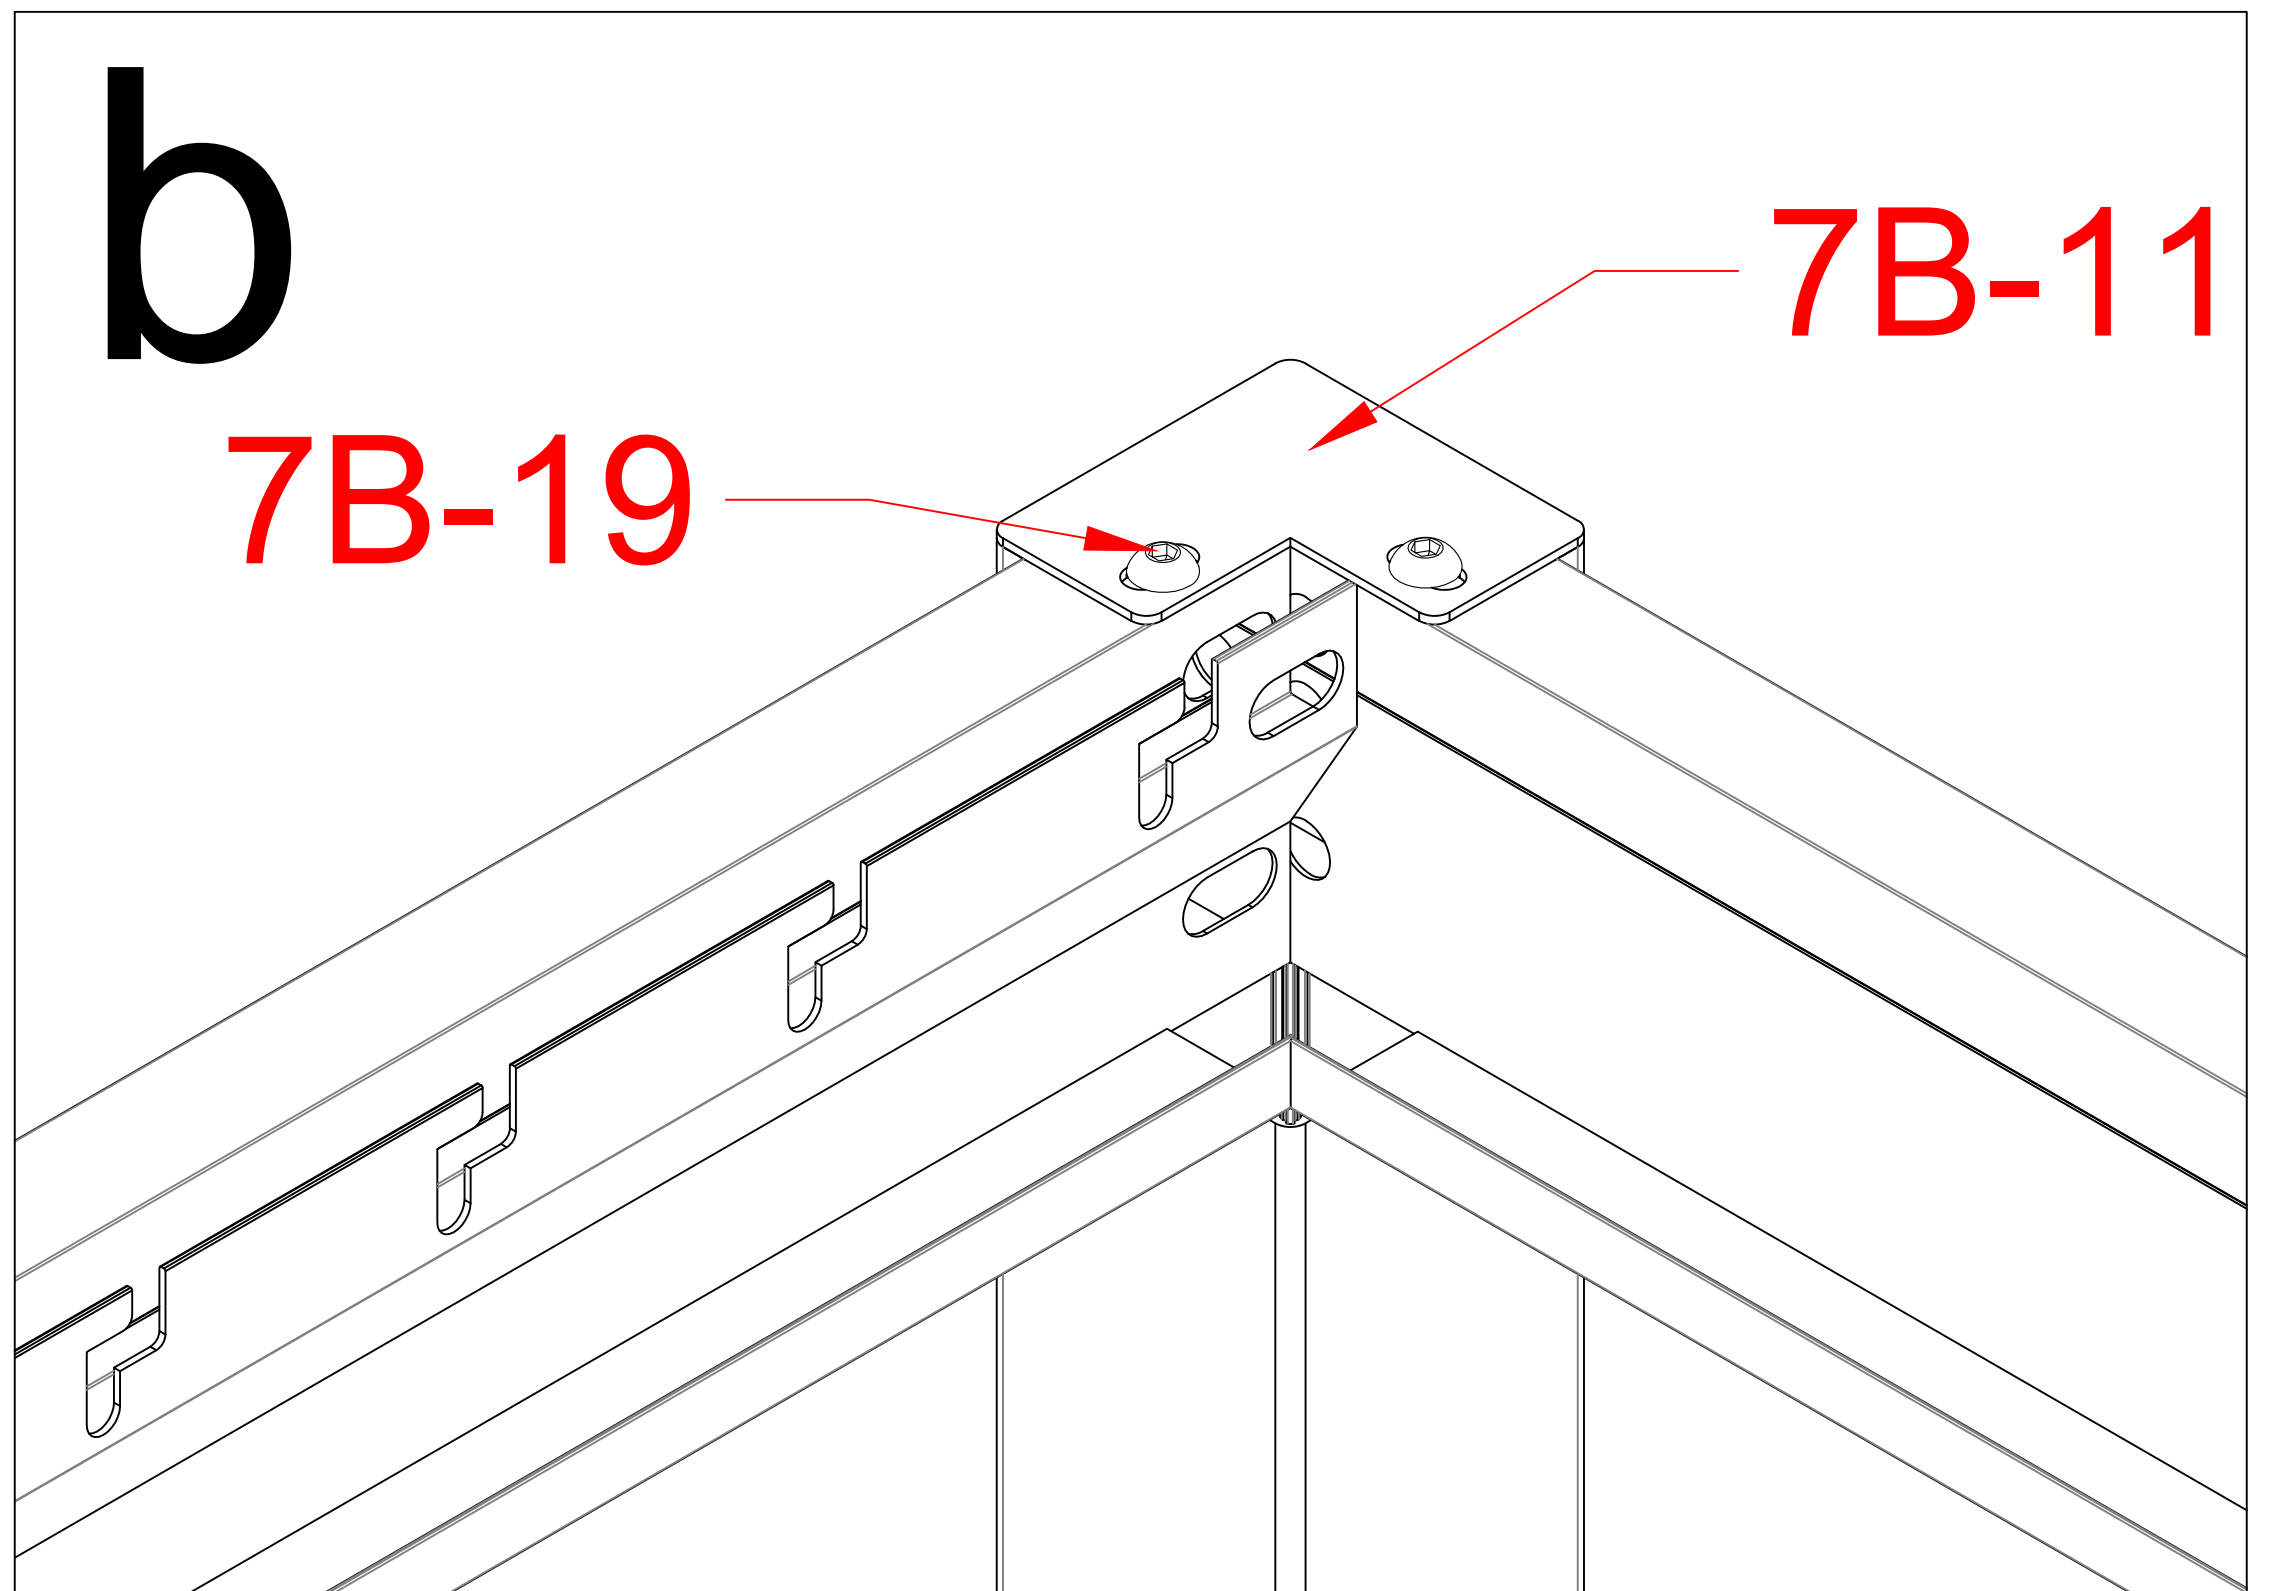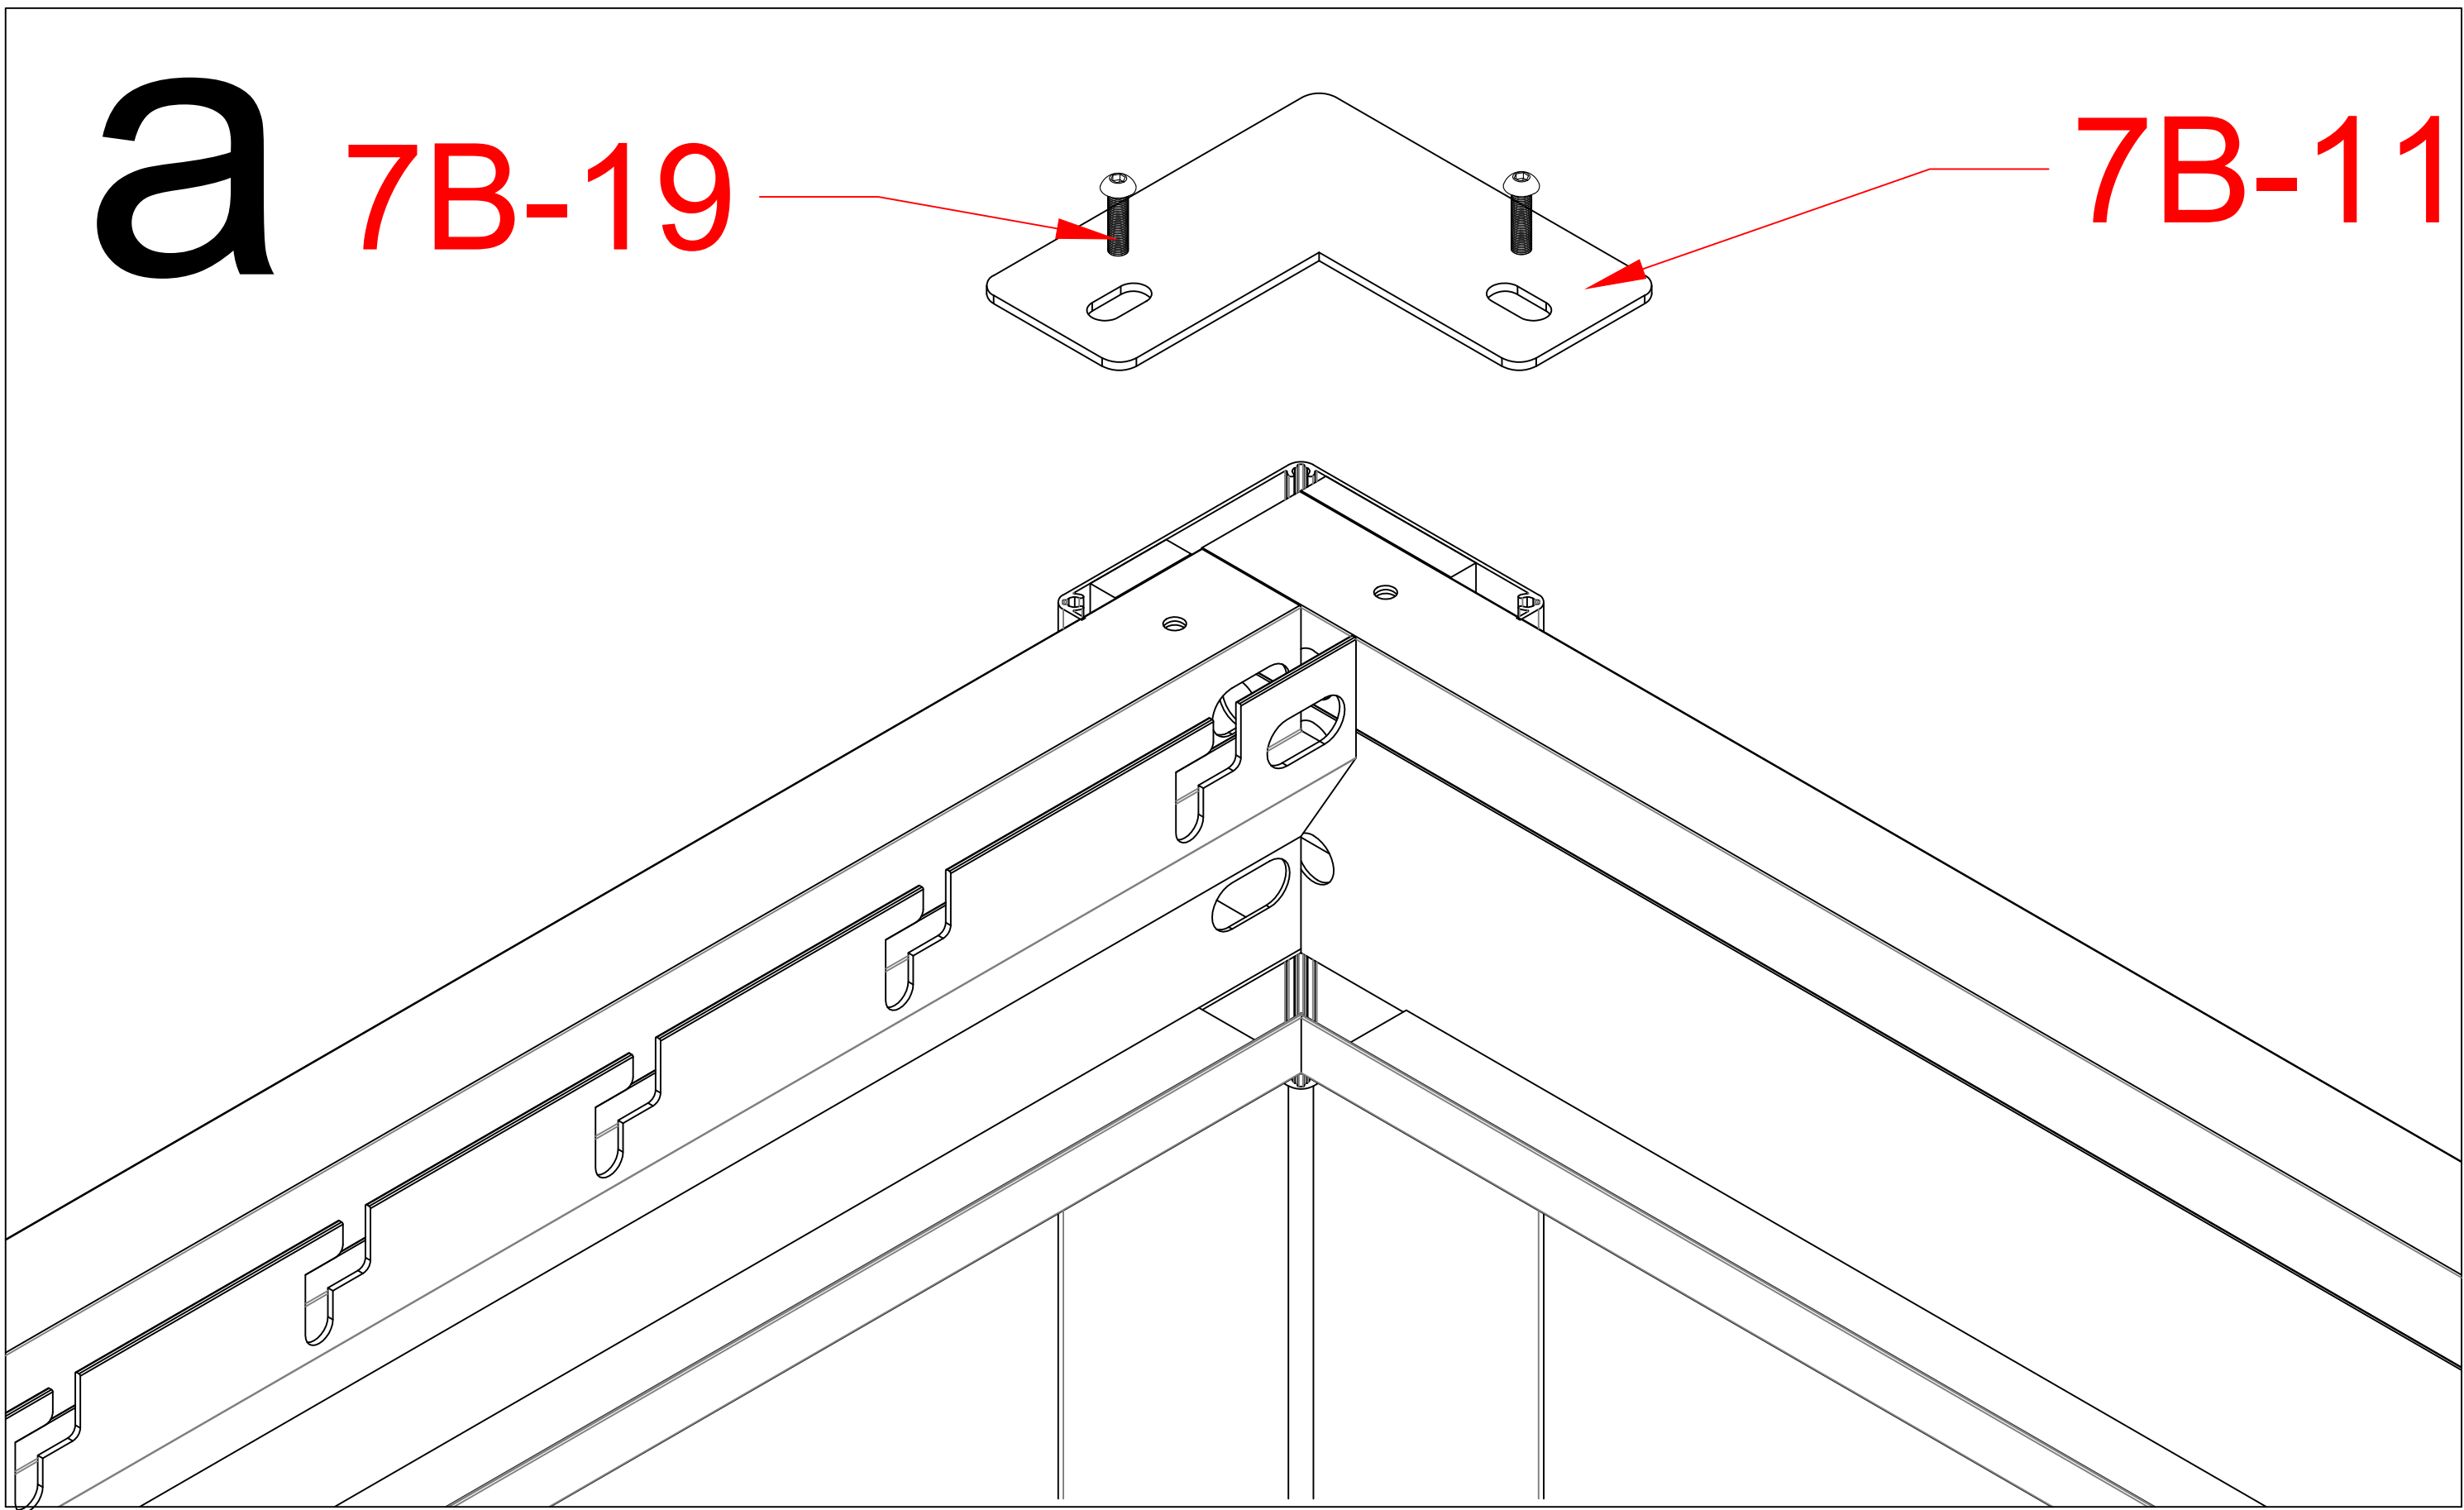






7B-11		4
7B-19		8





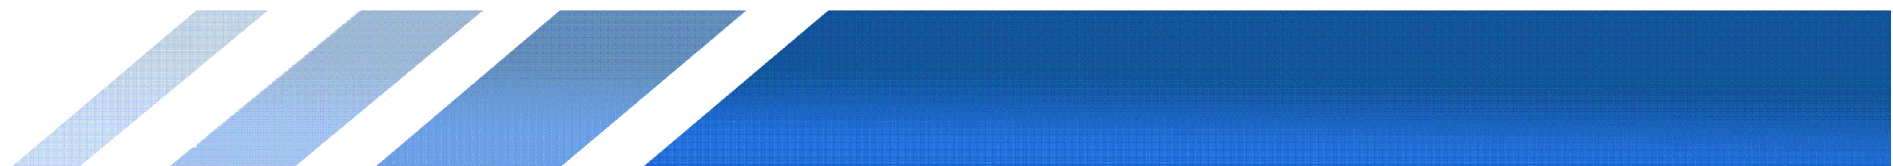


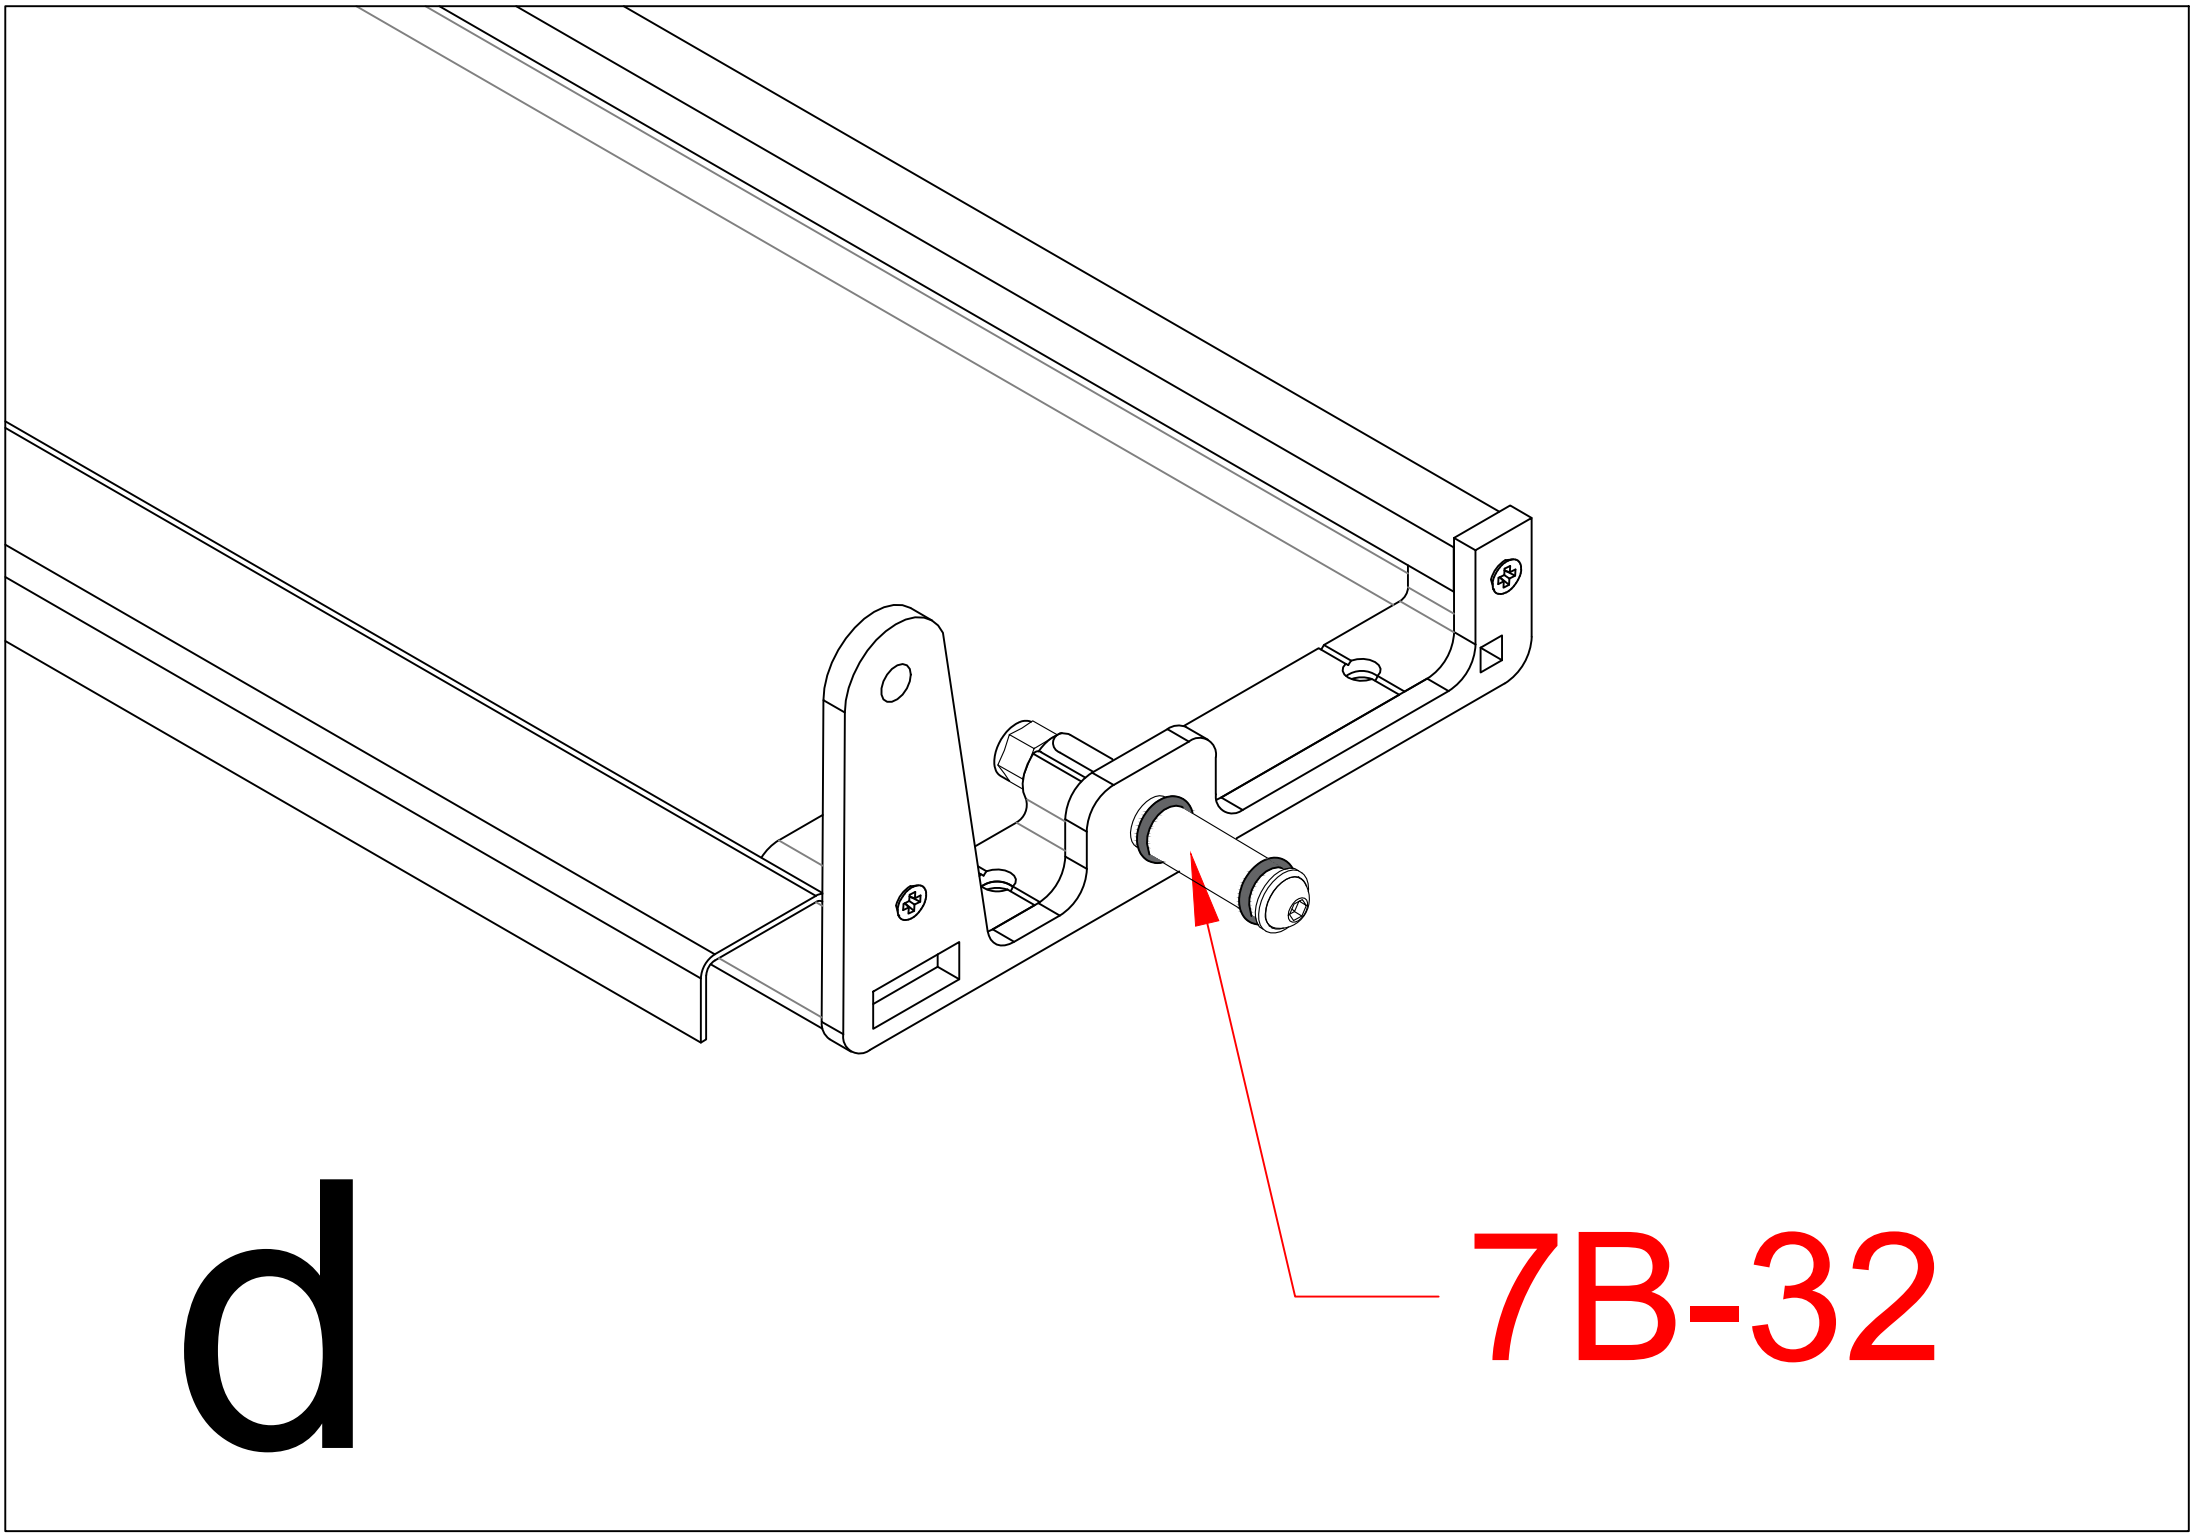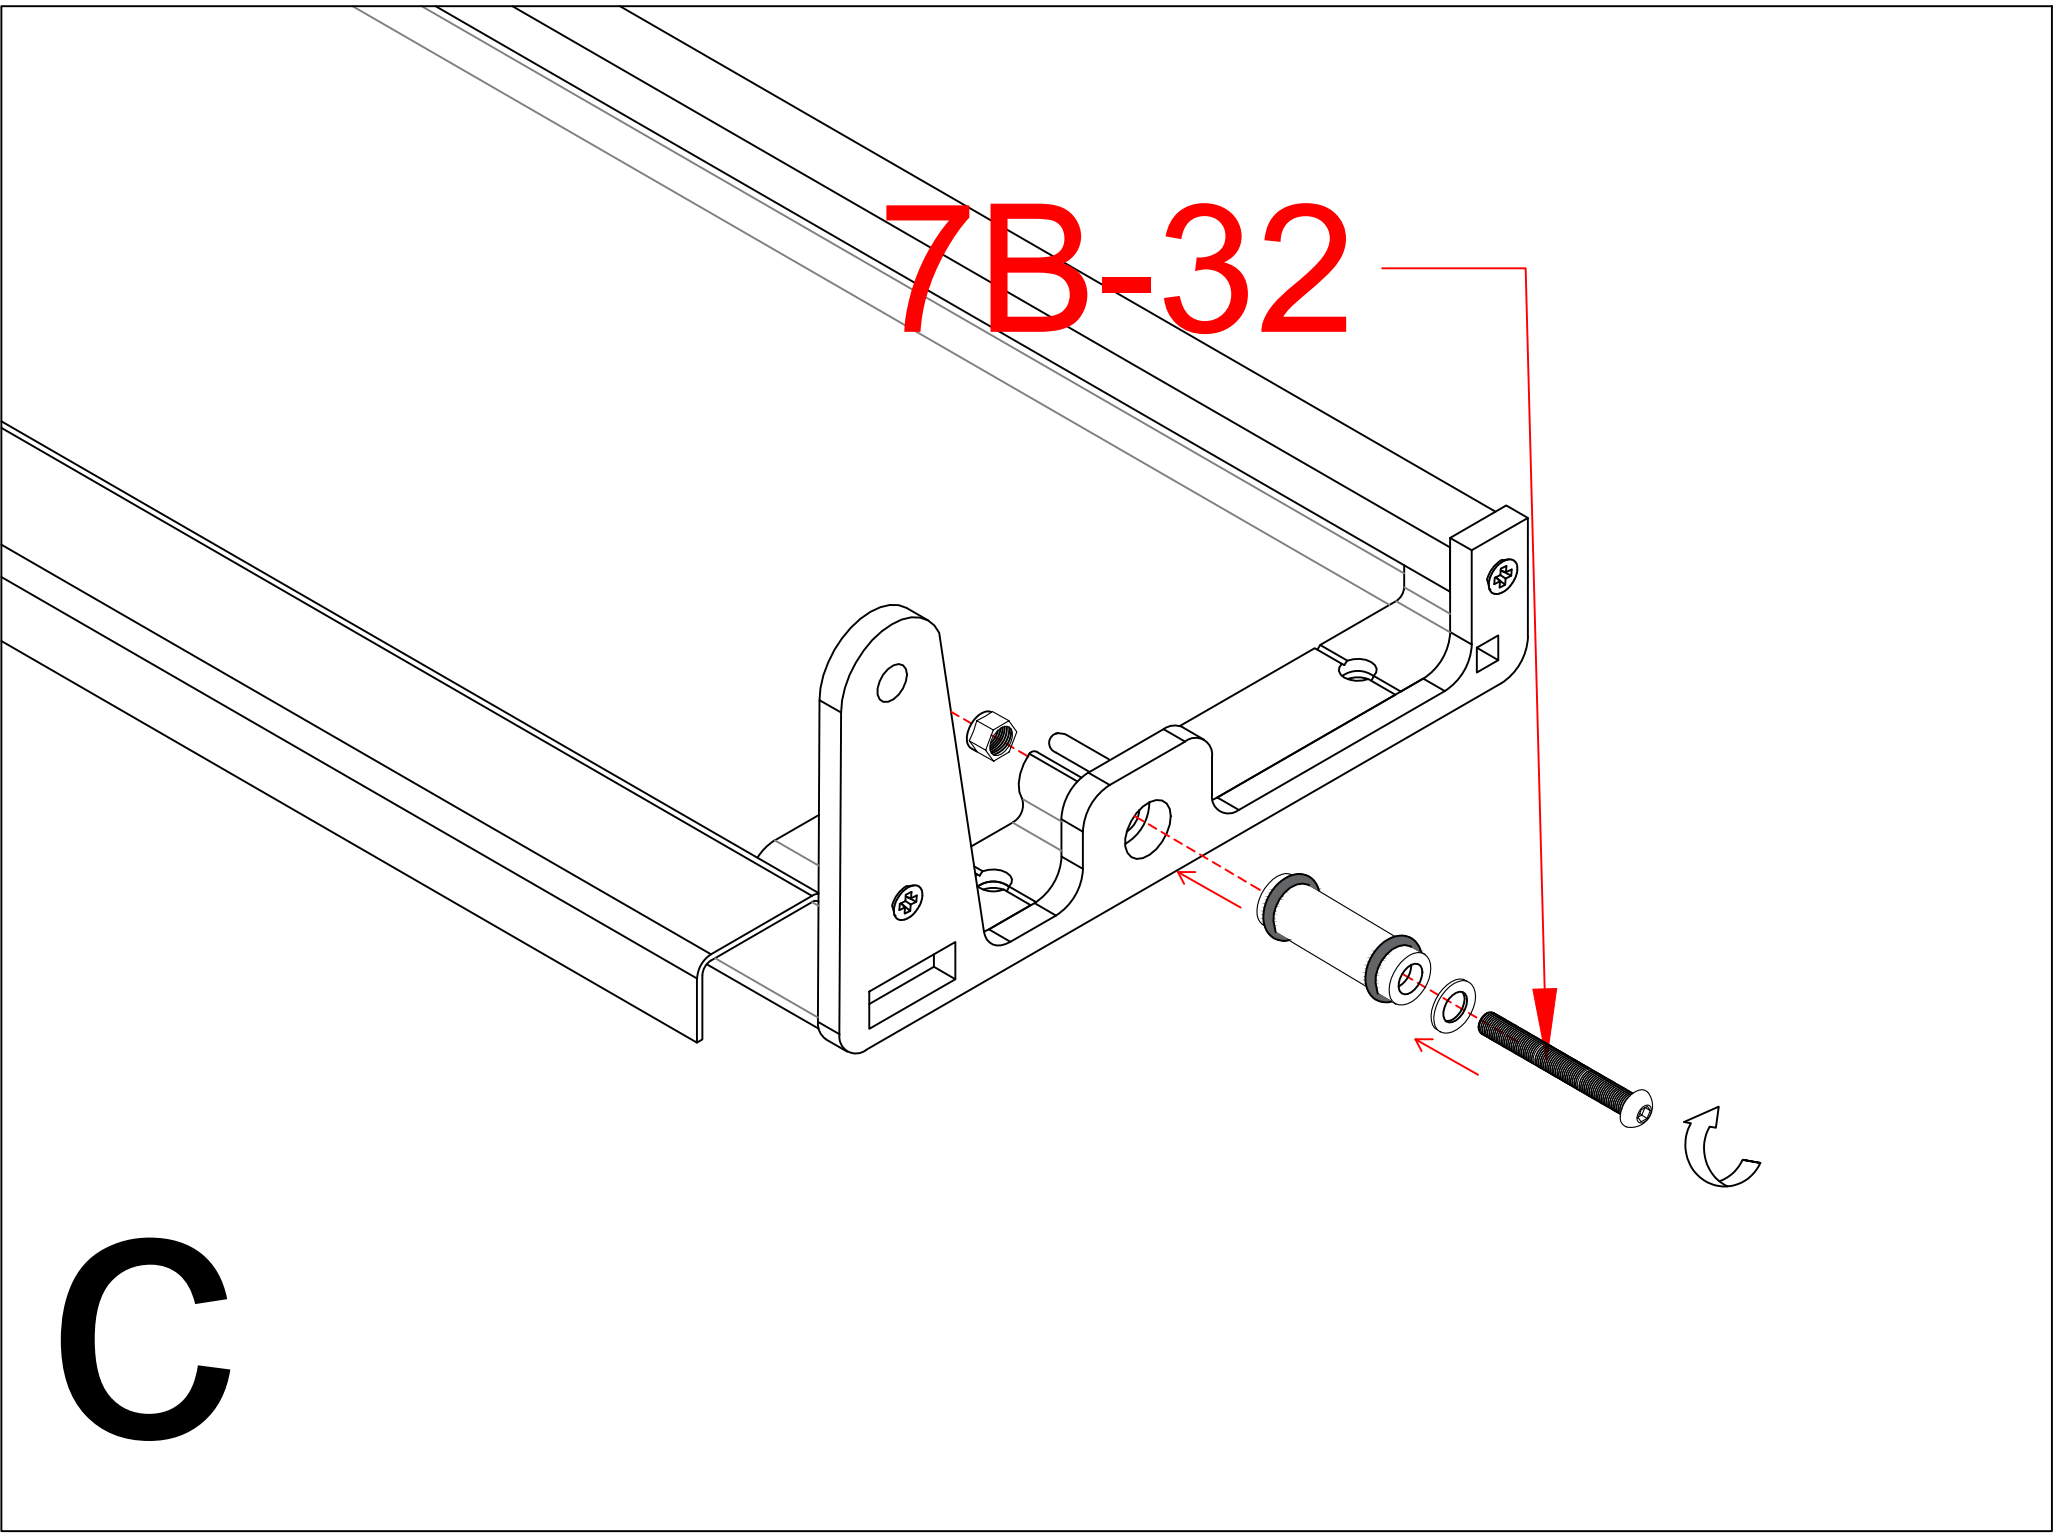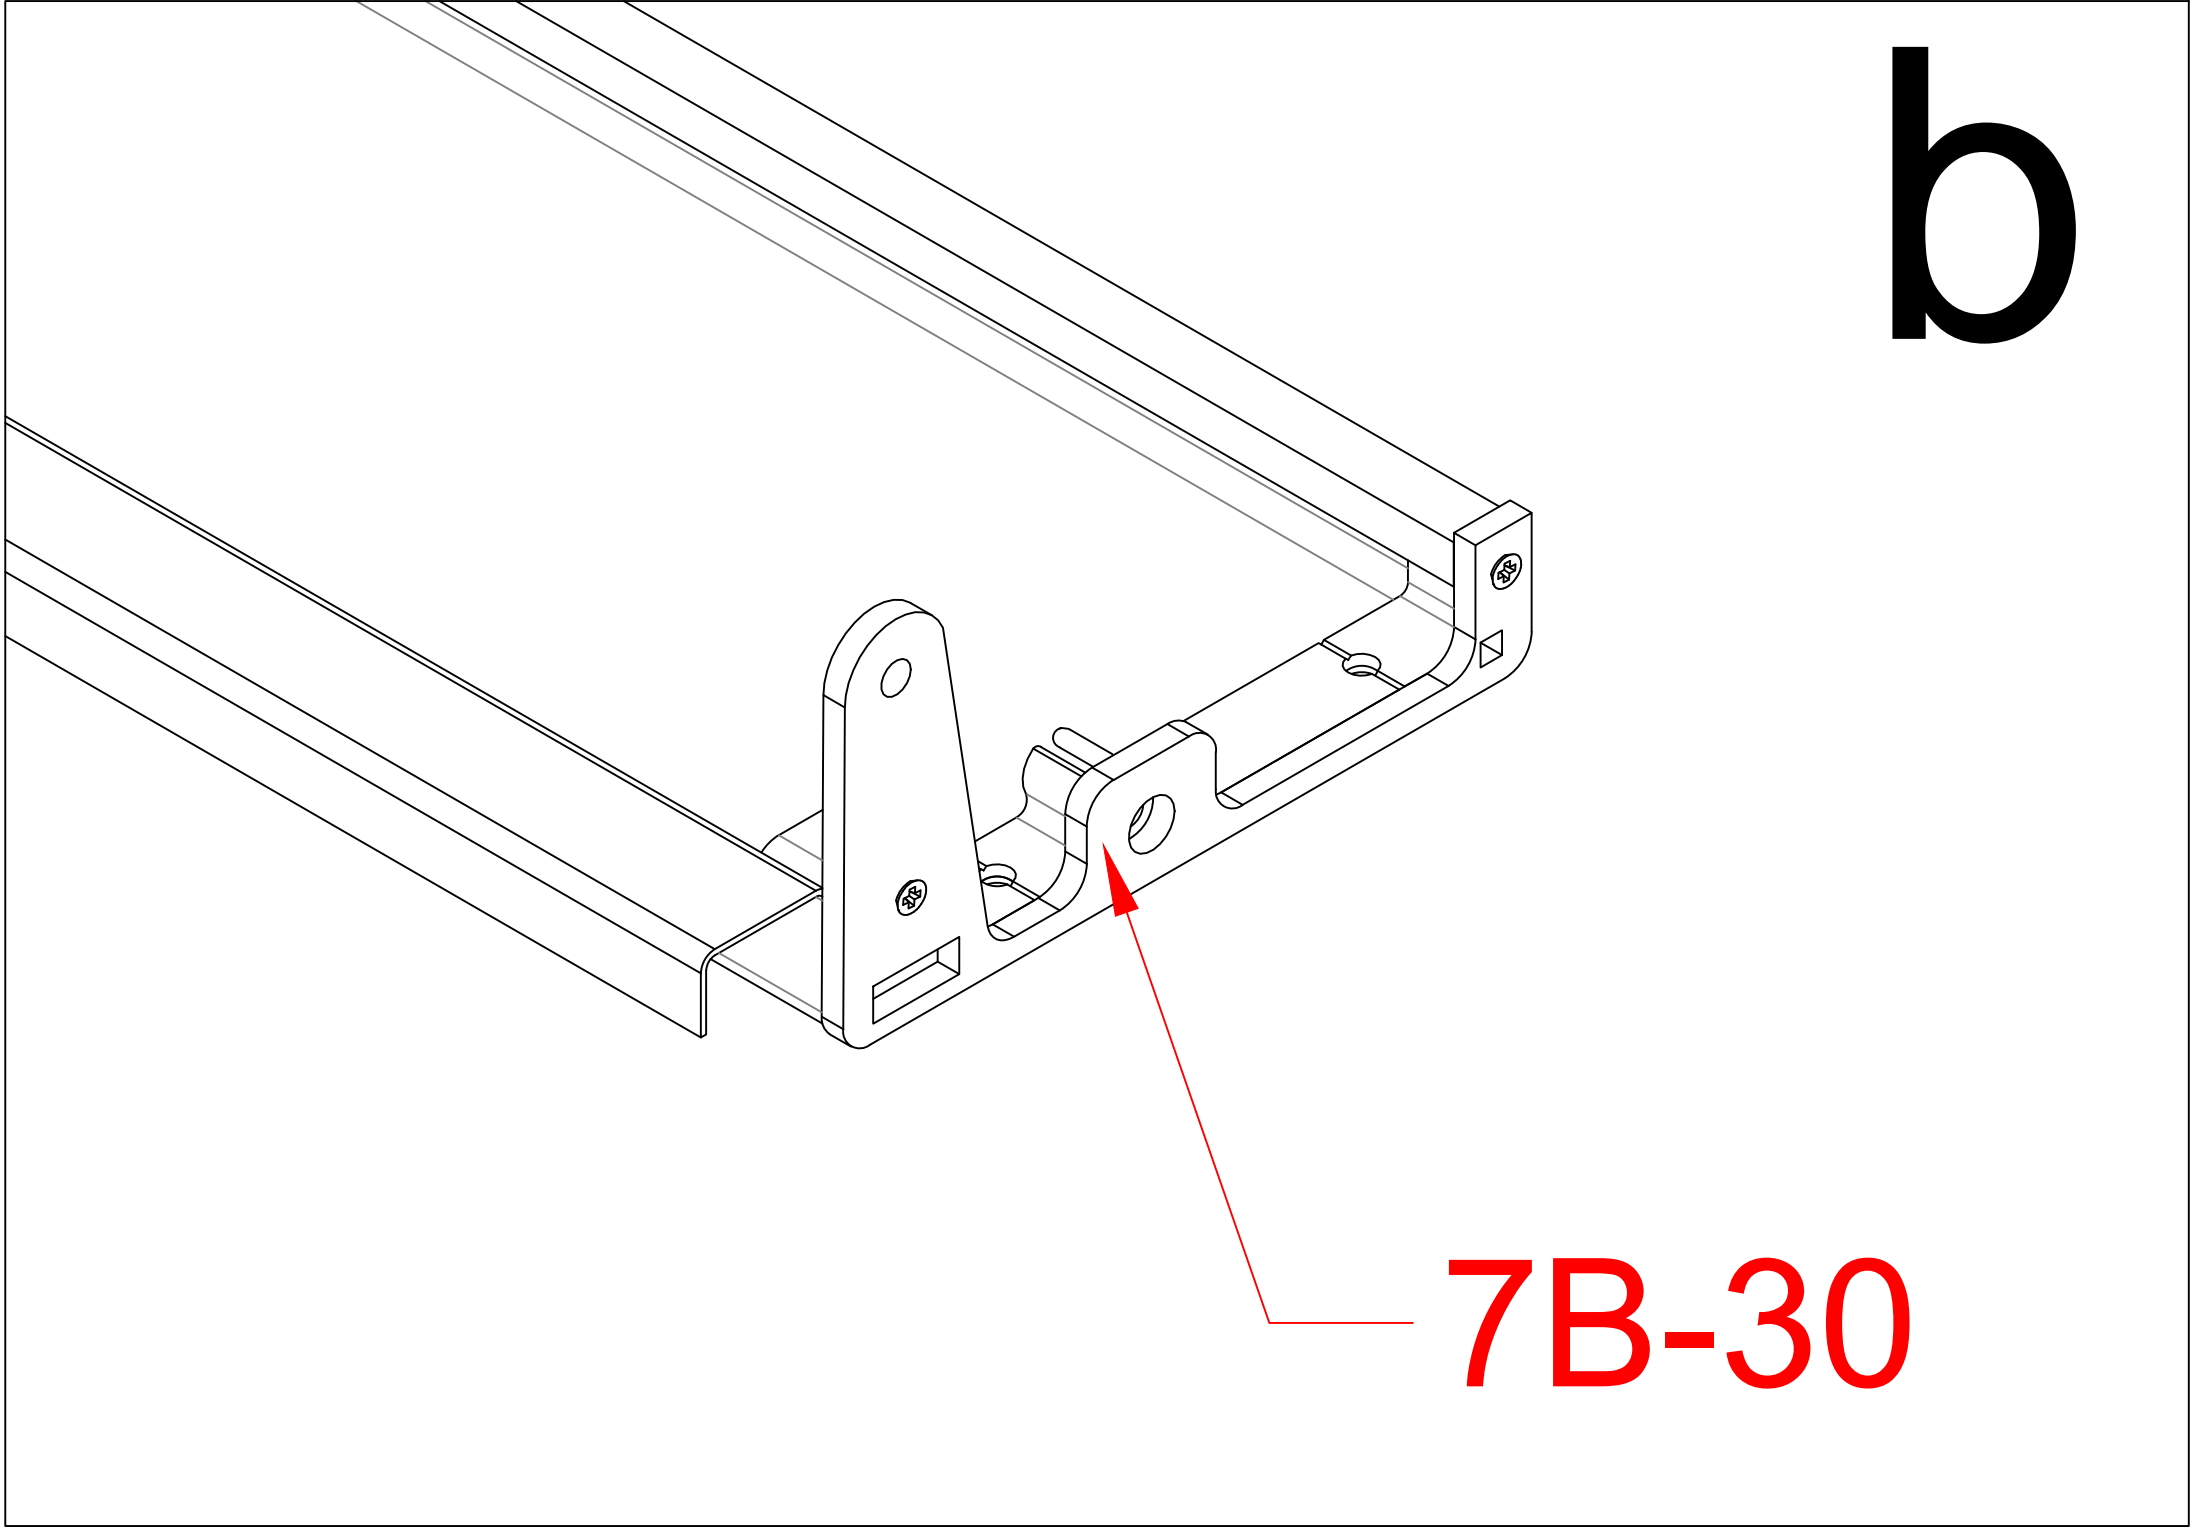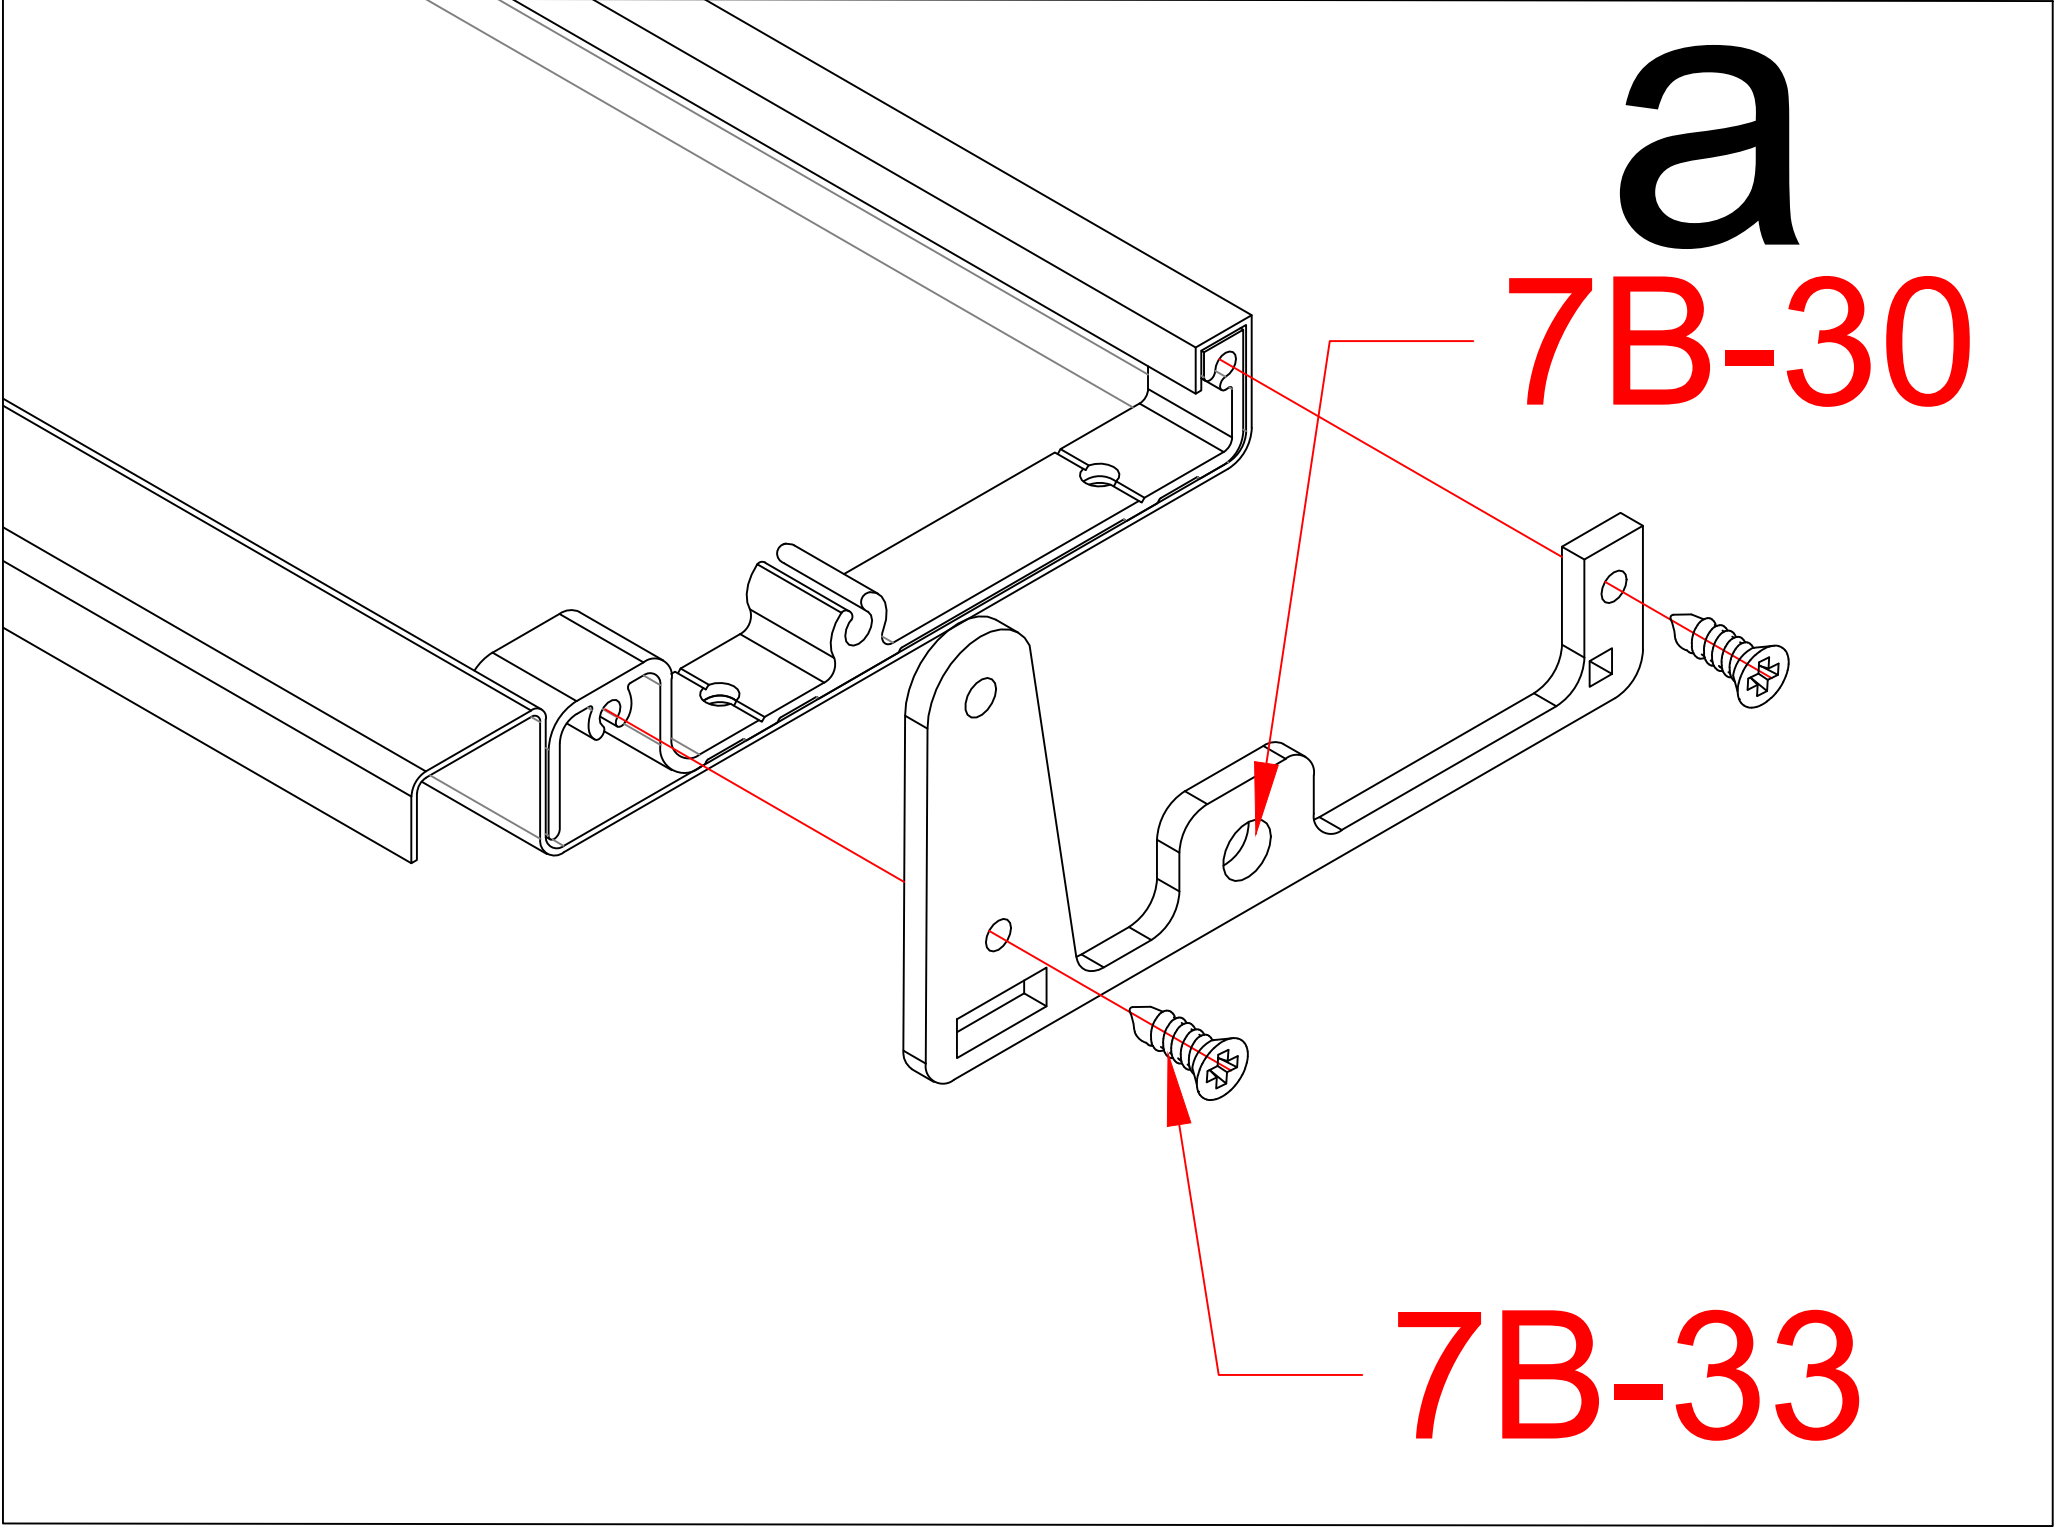







7B-06		x
7B-30		x
7B-32		x
7B-33		x

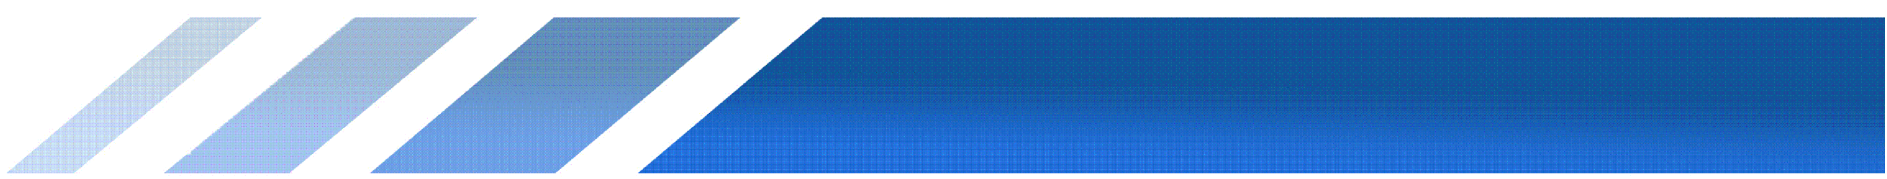

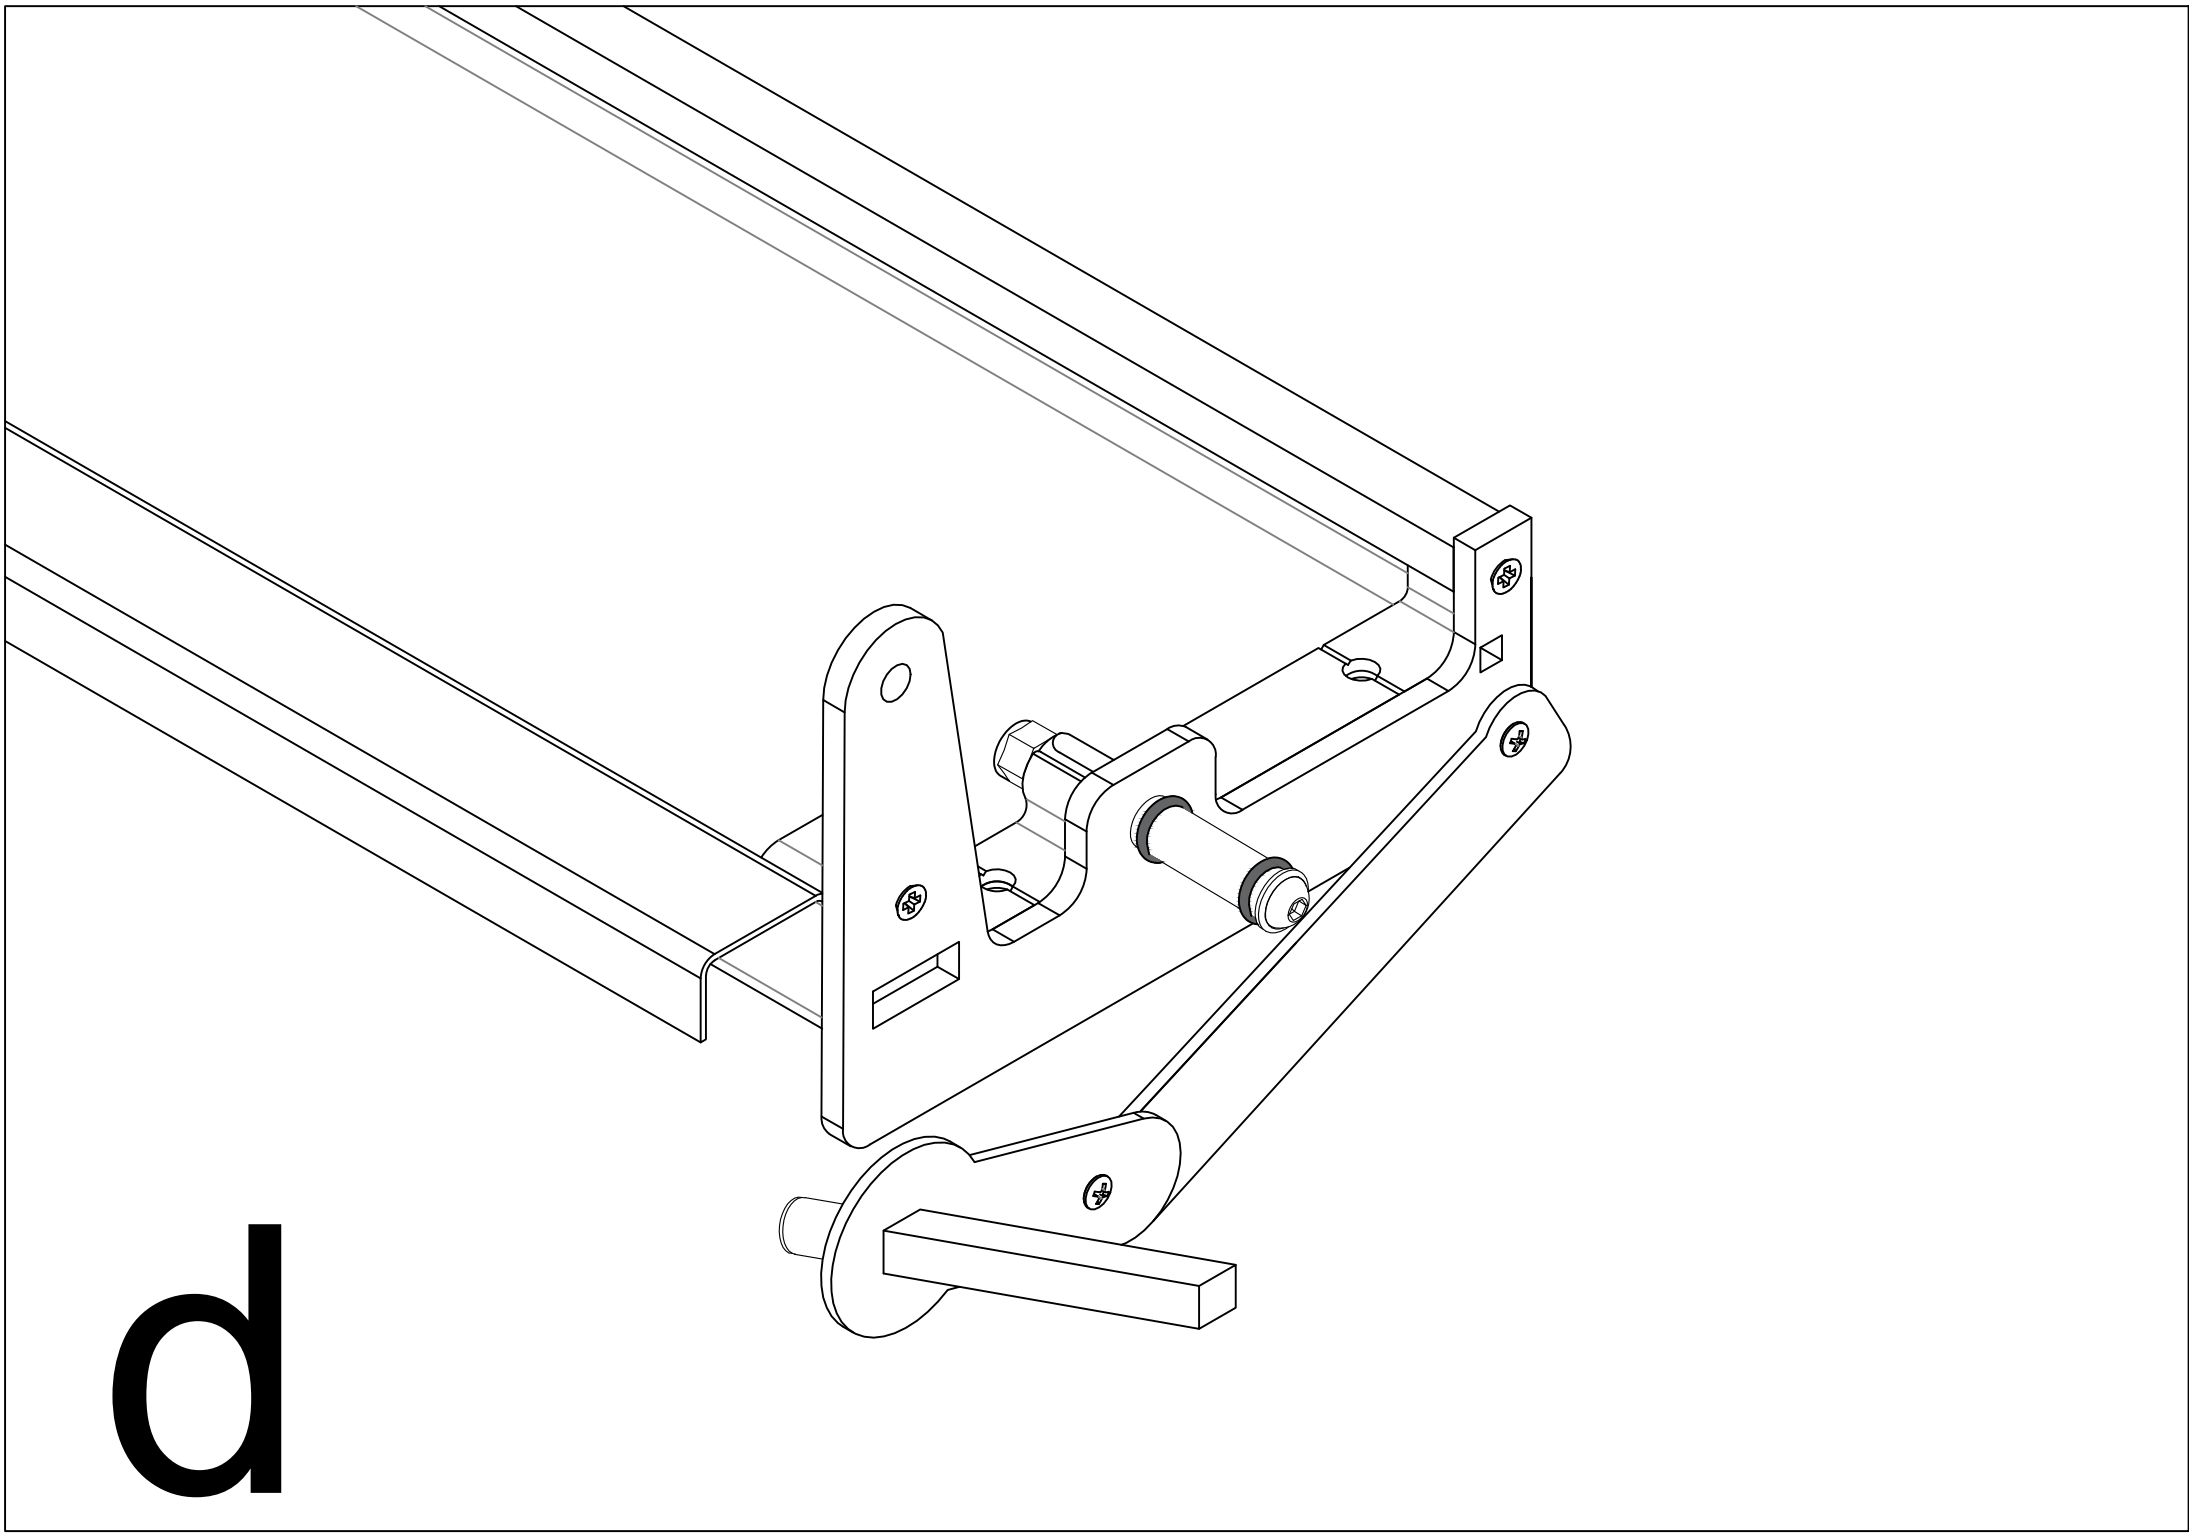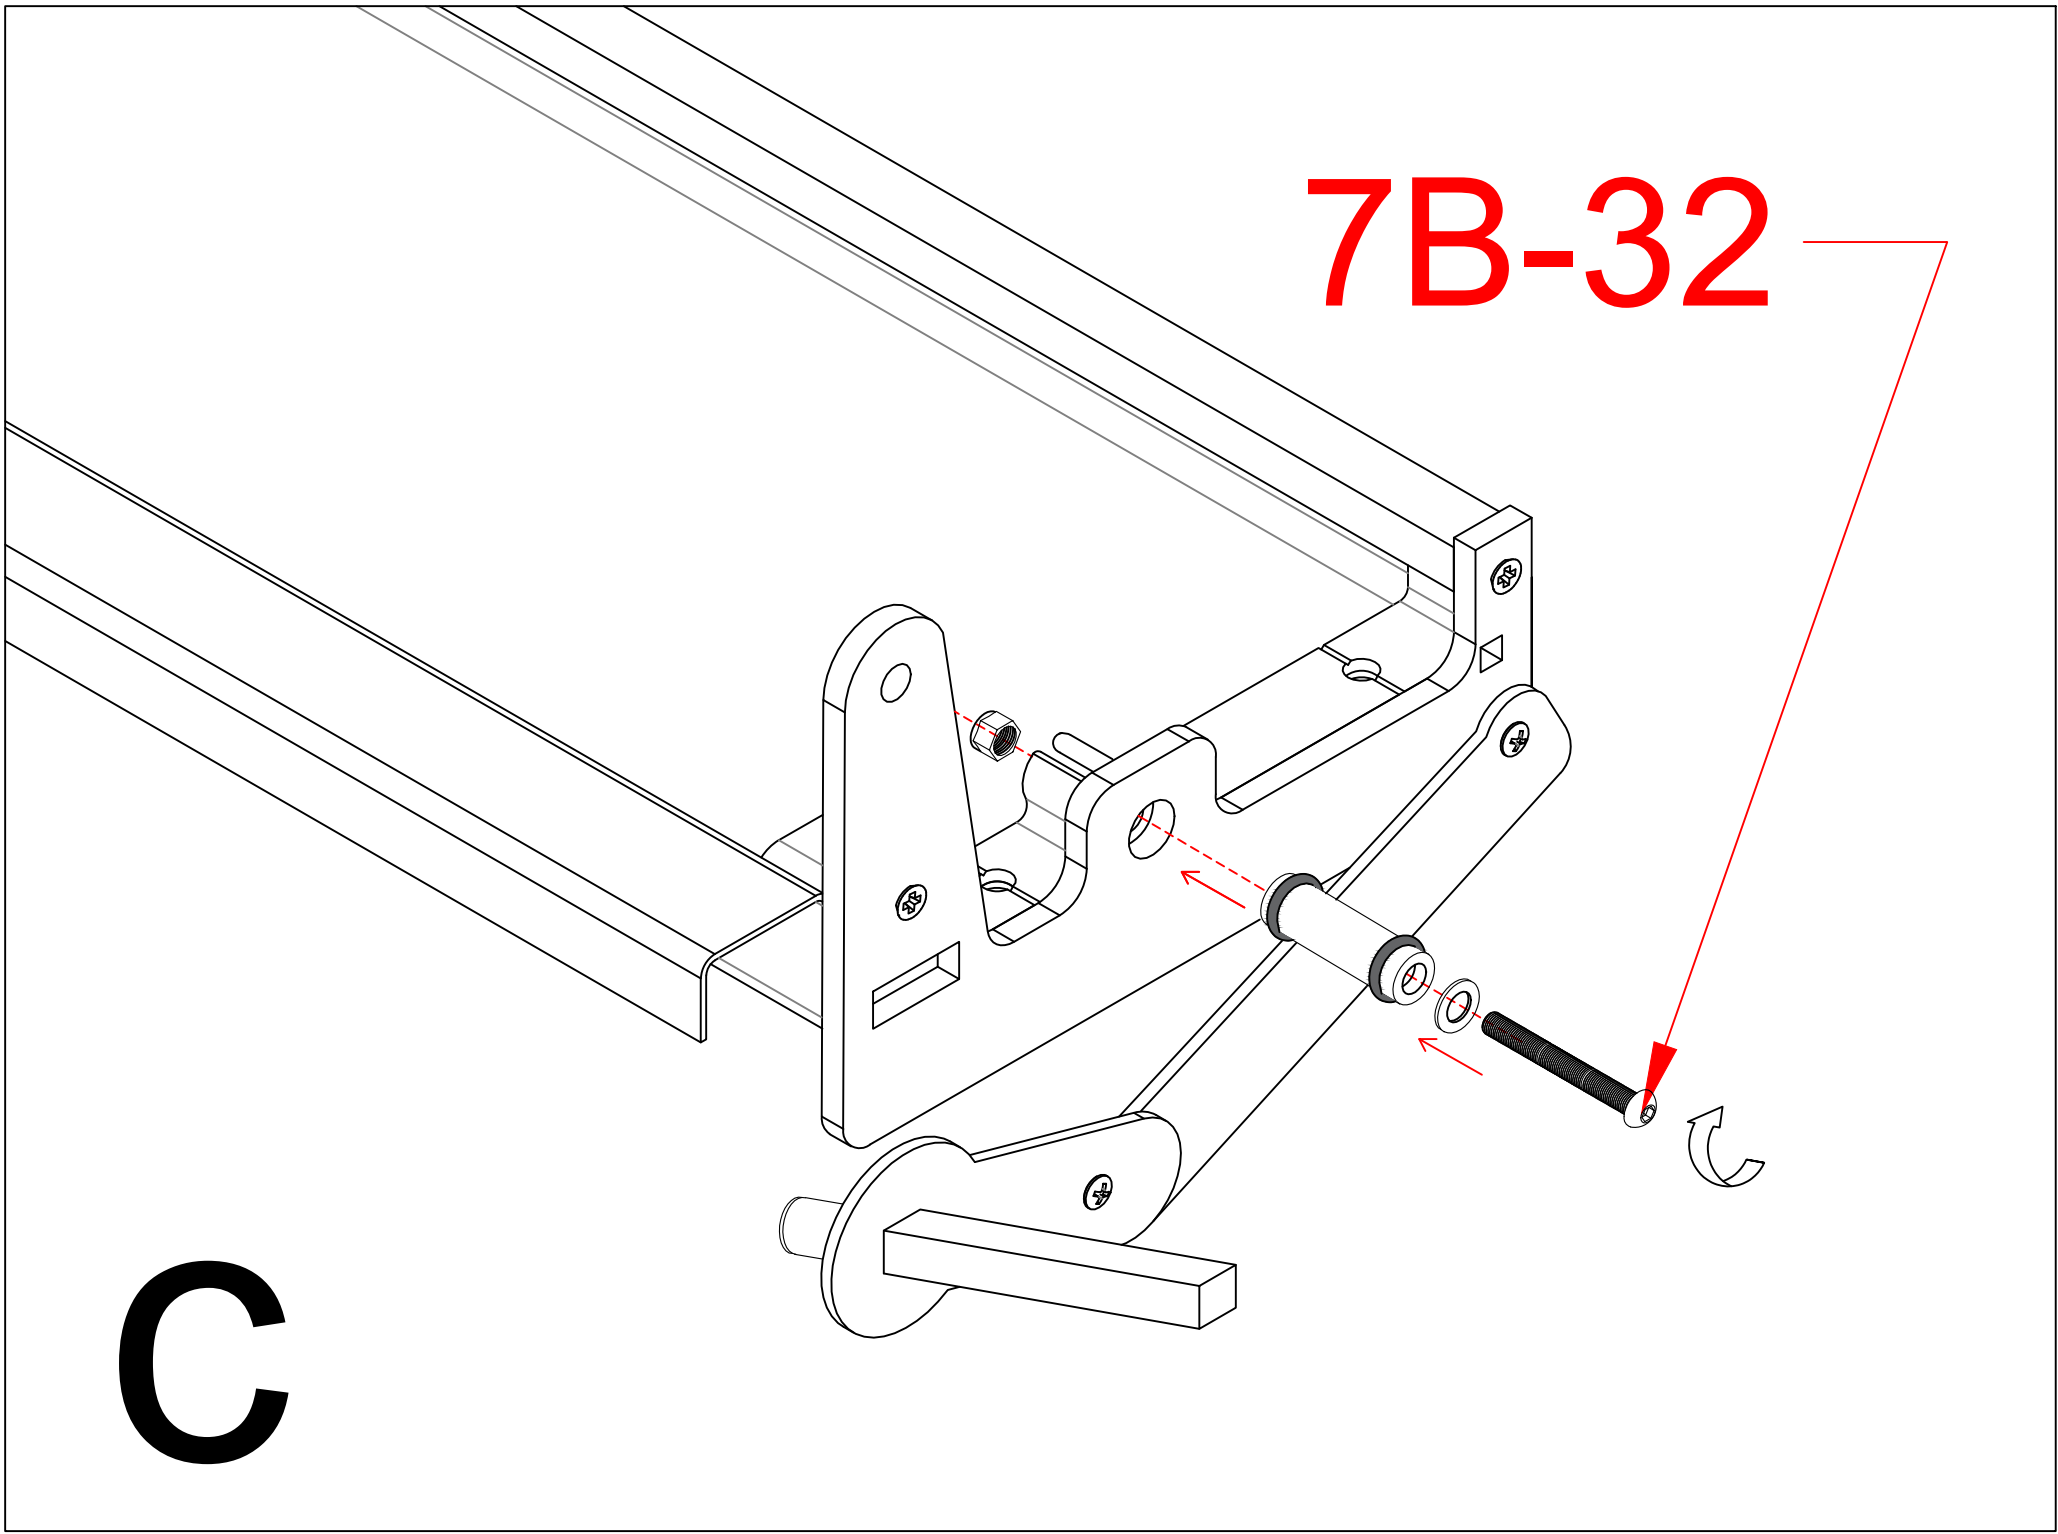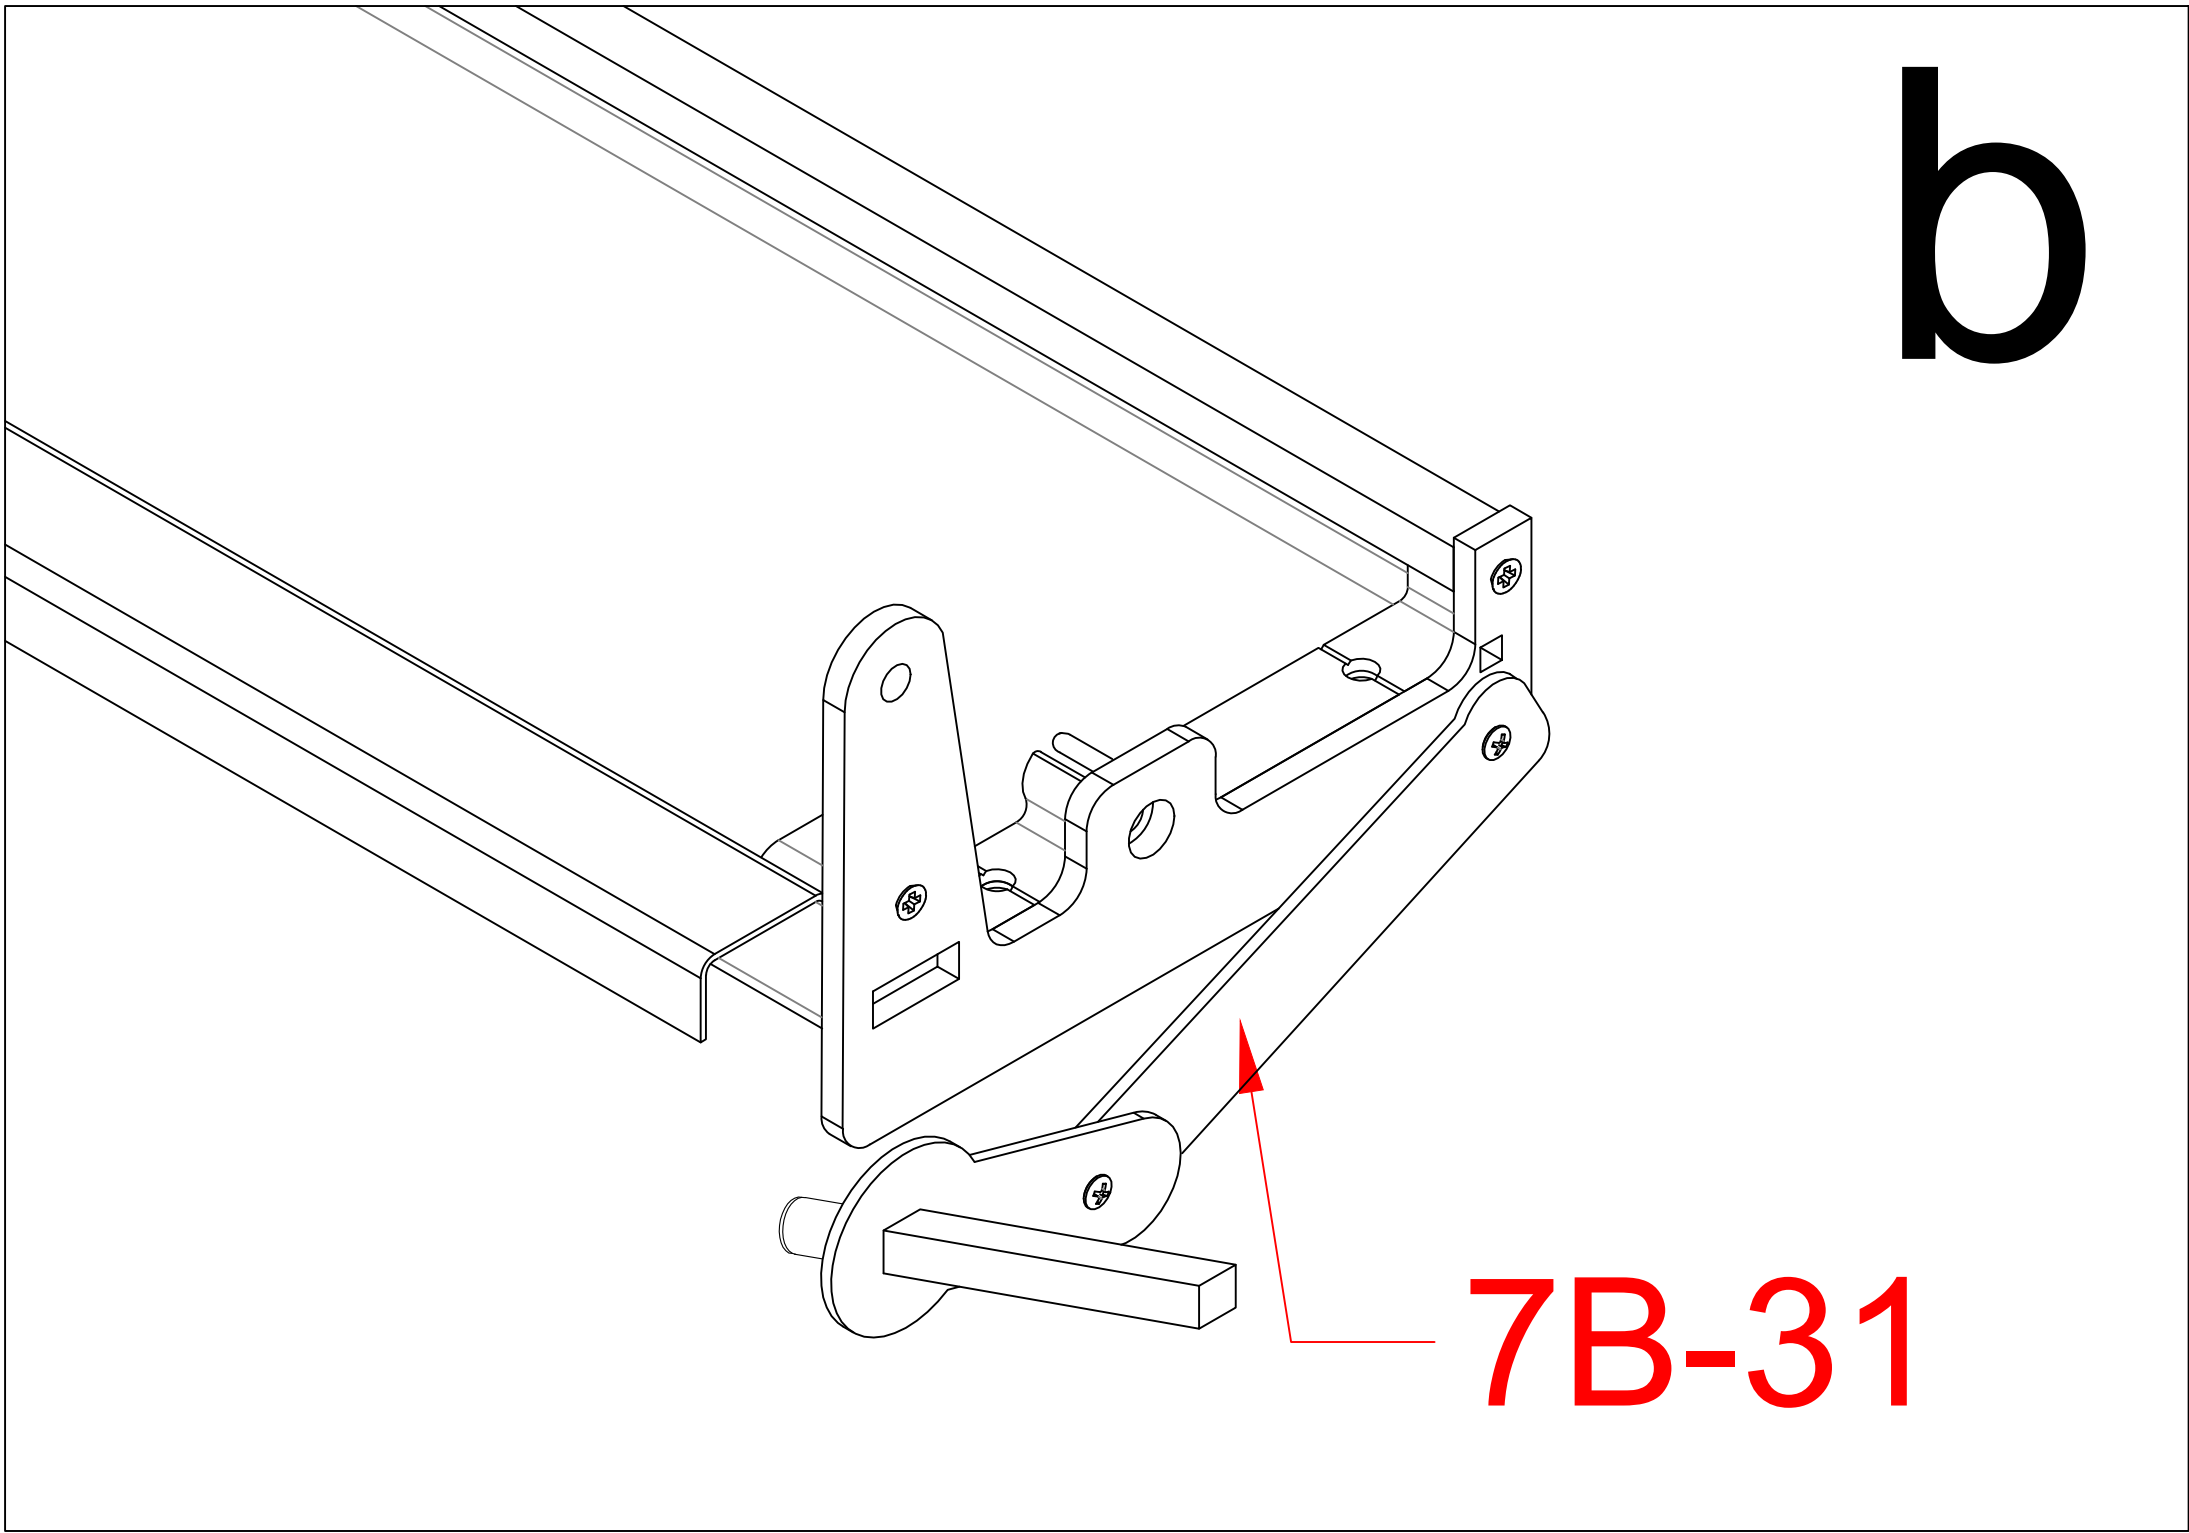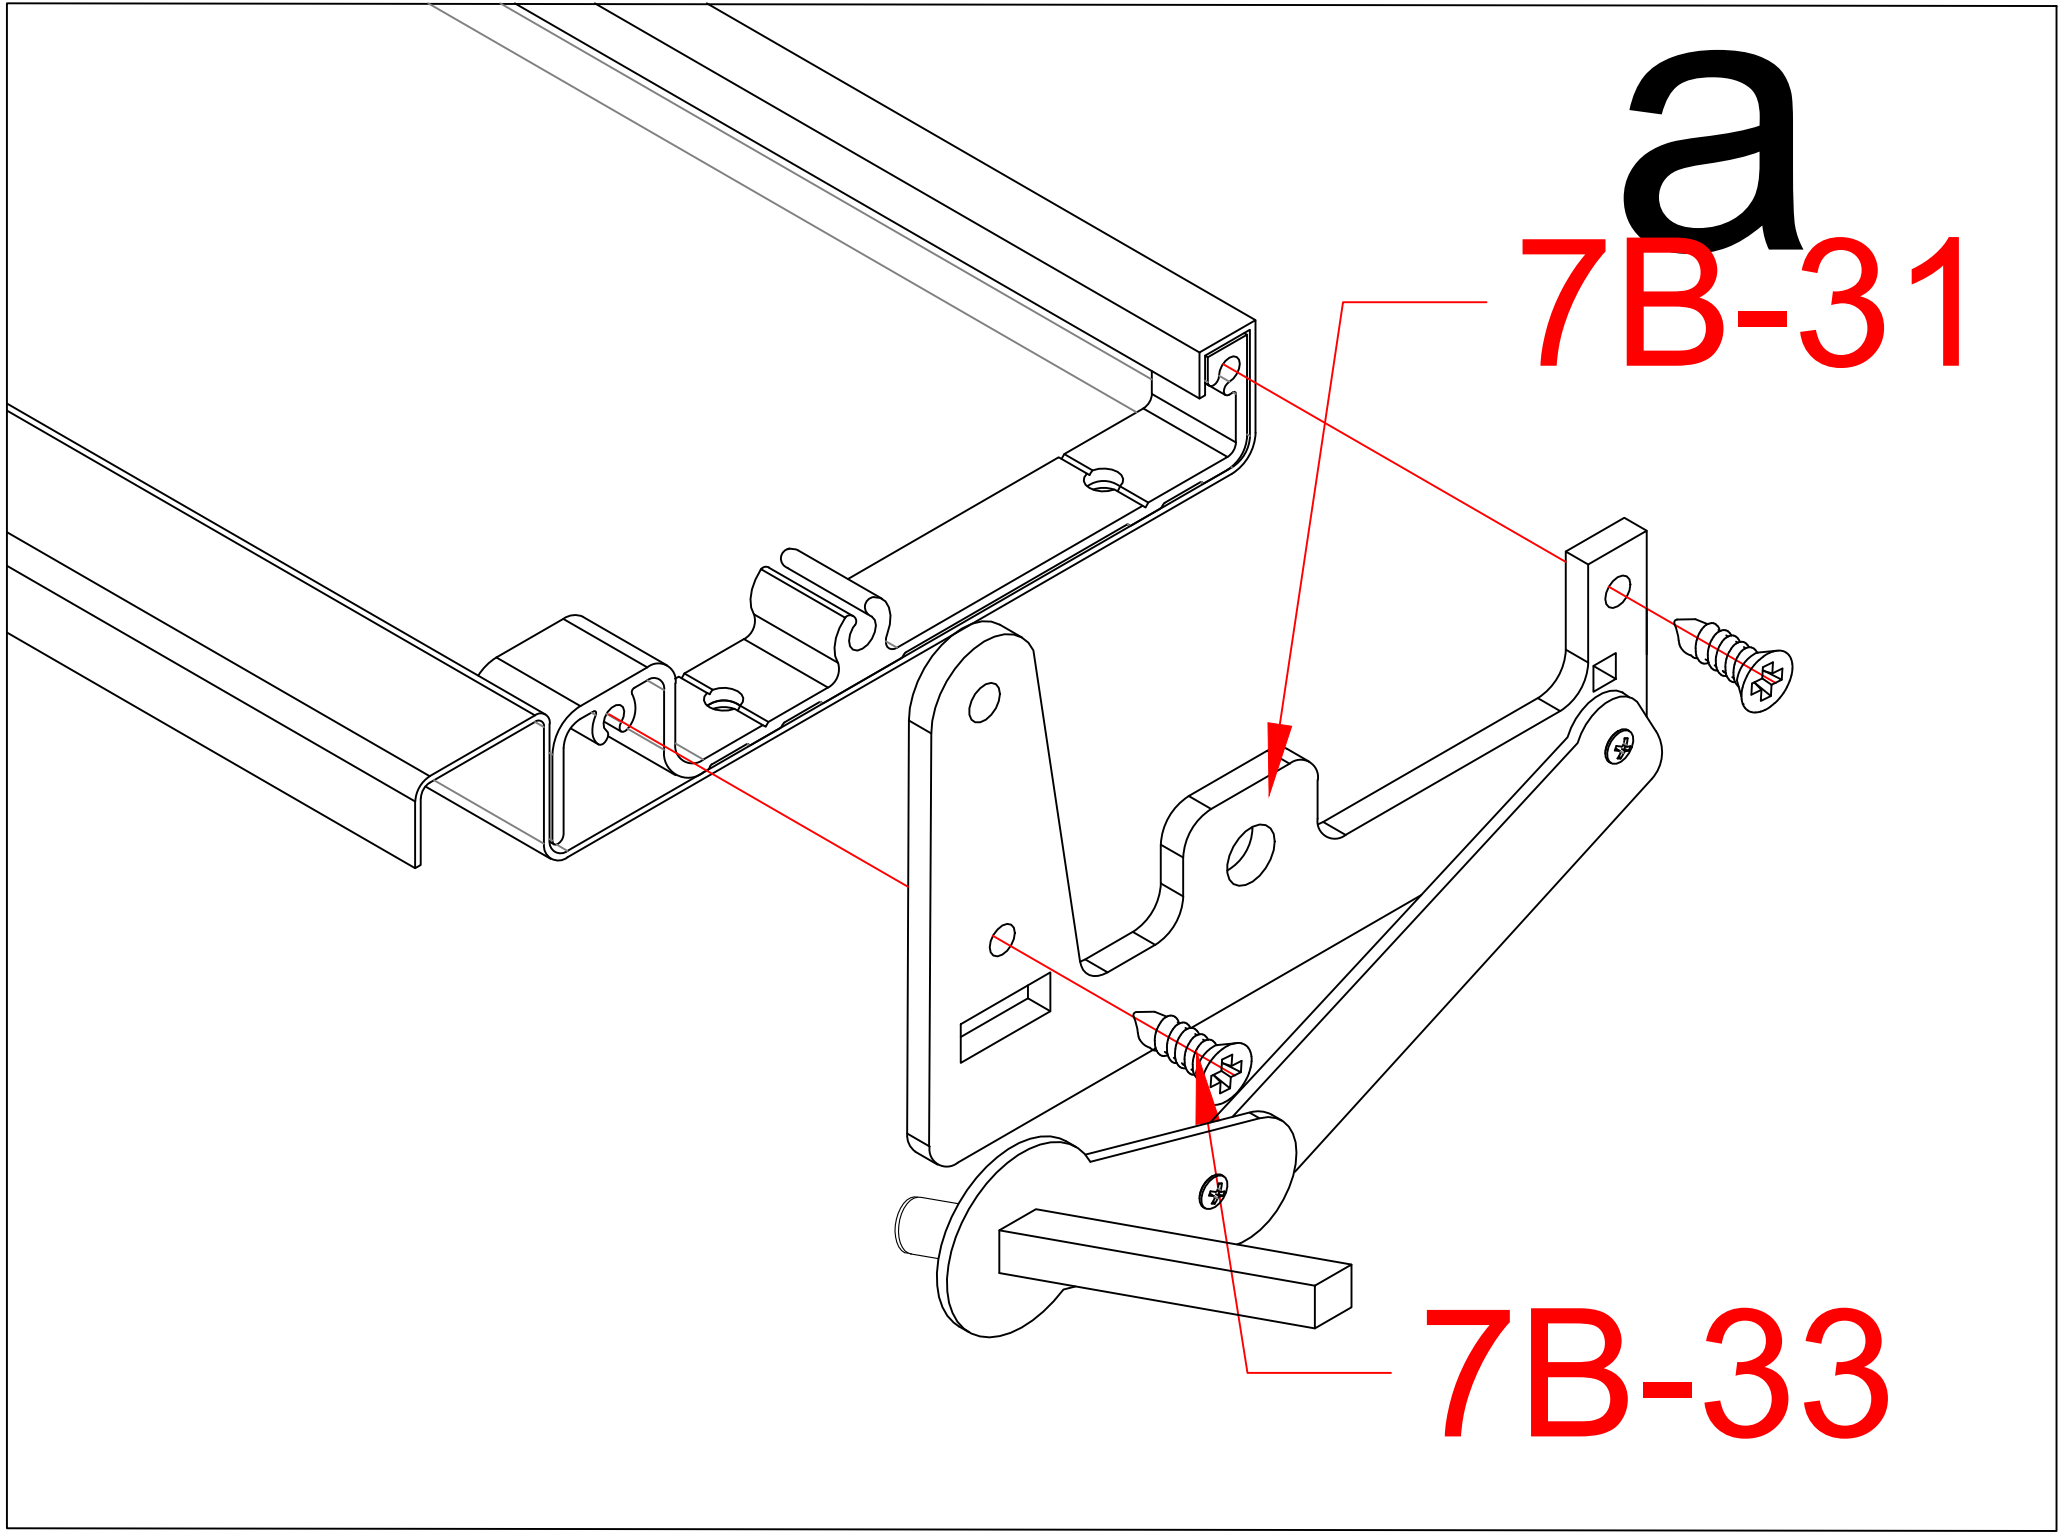

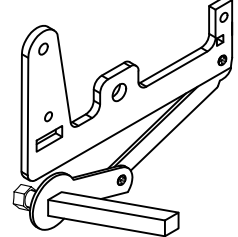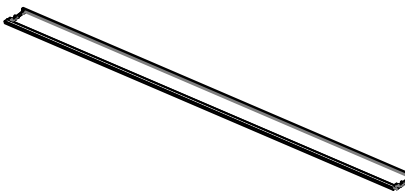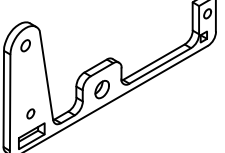
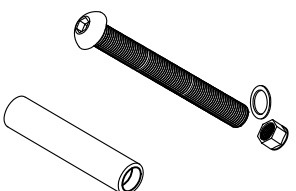
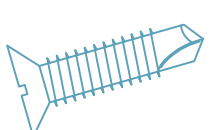
7B-31		1
7B-06		1
7B-30		1
7B-32		2
7B-33		4

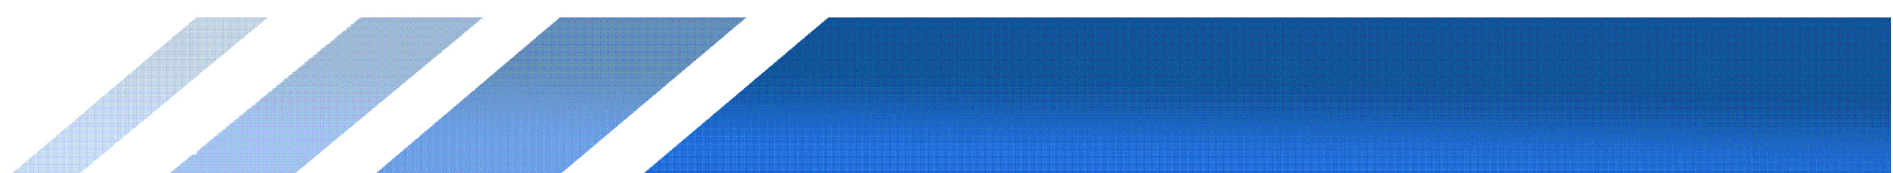


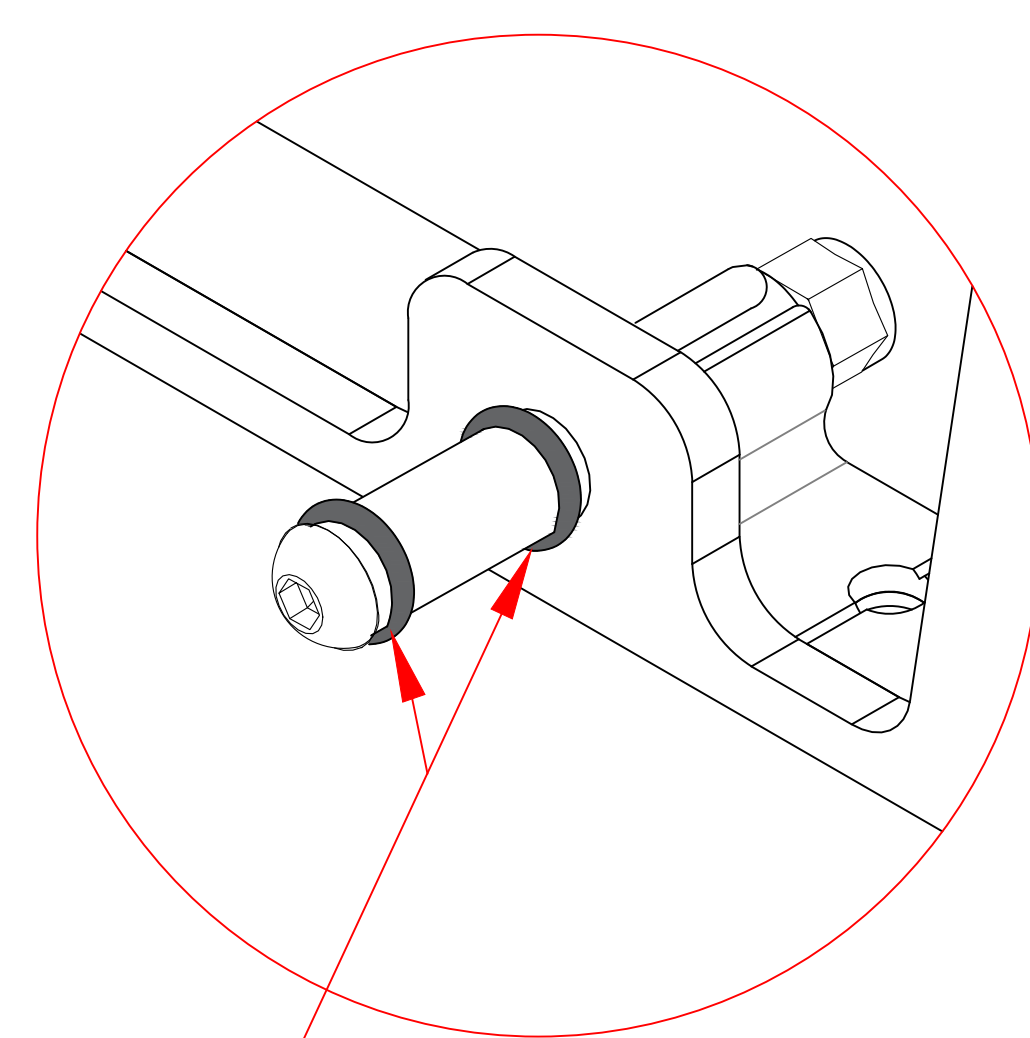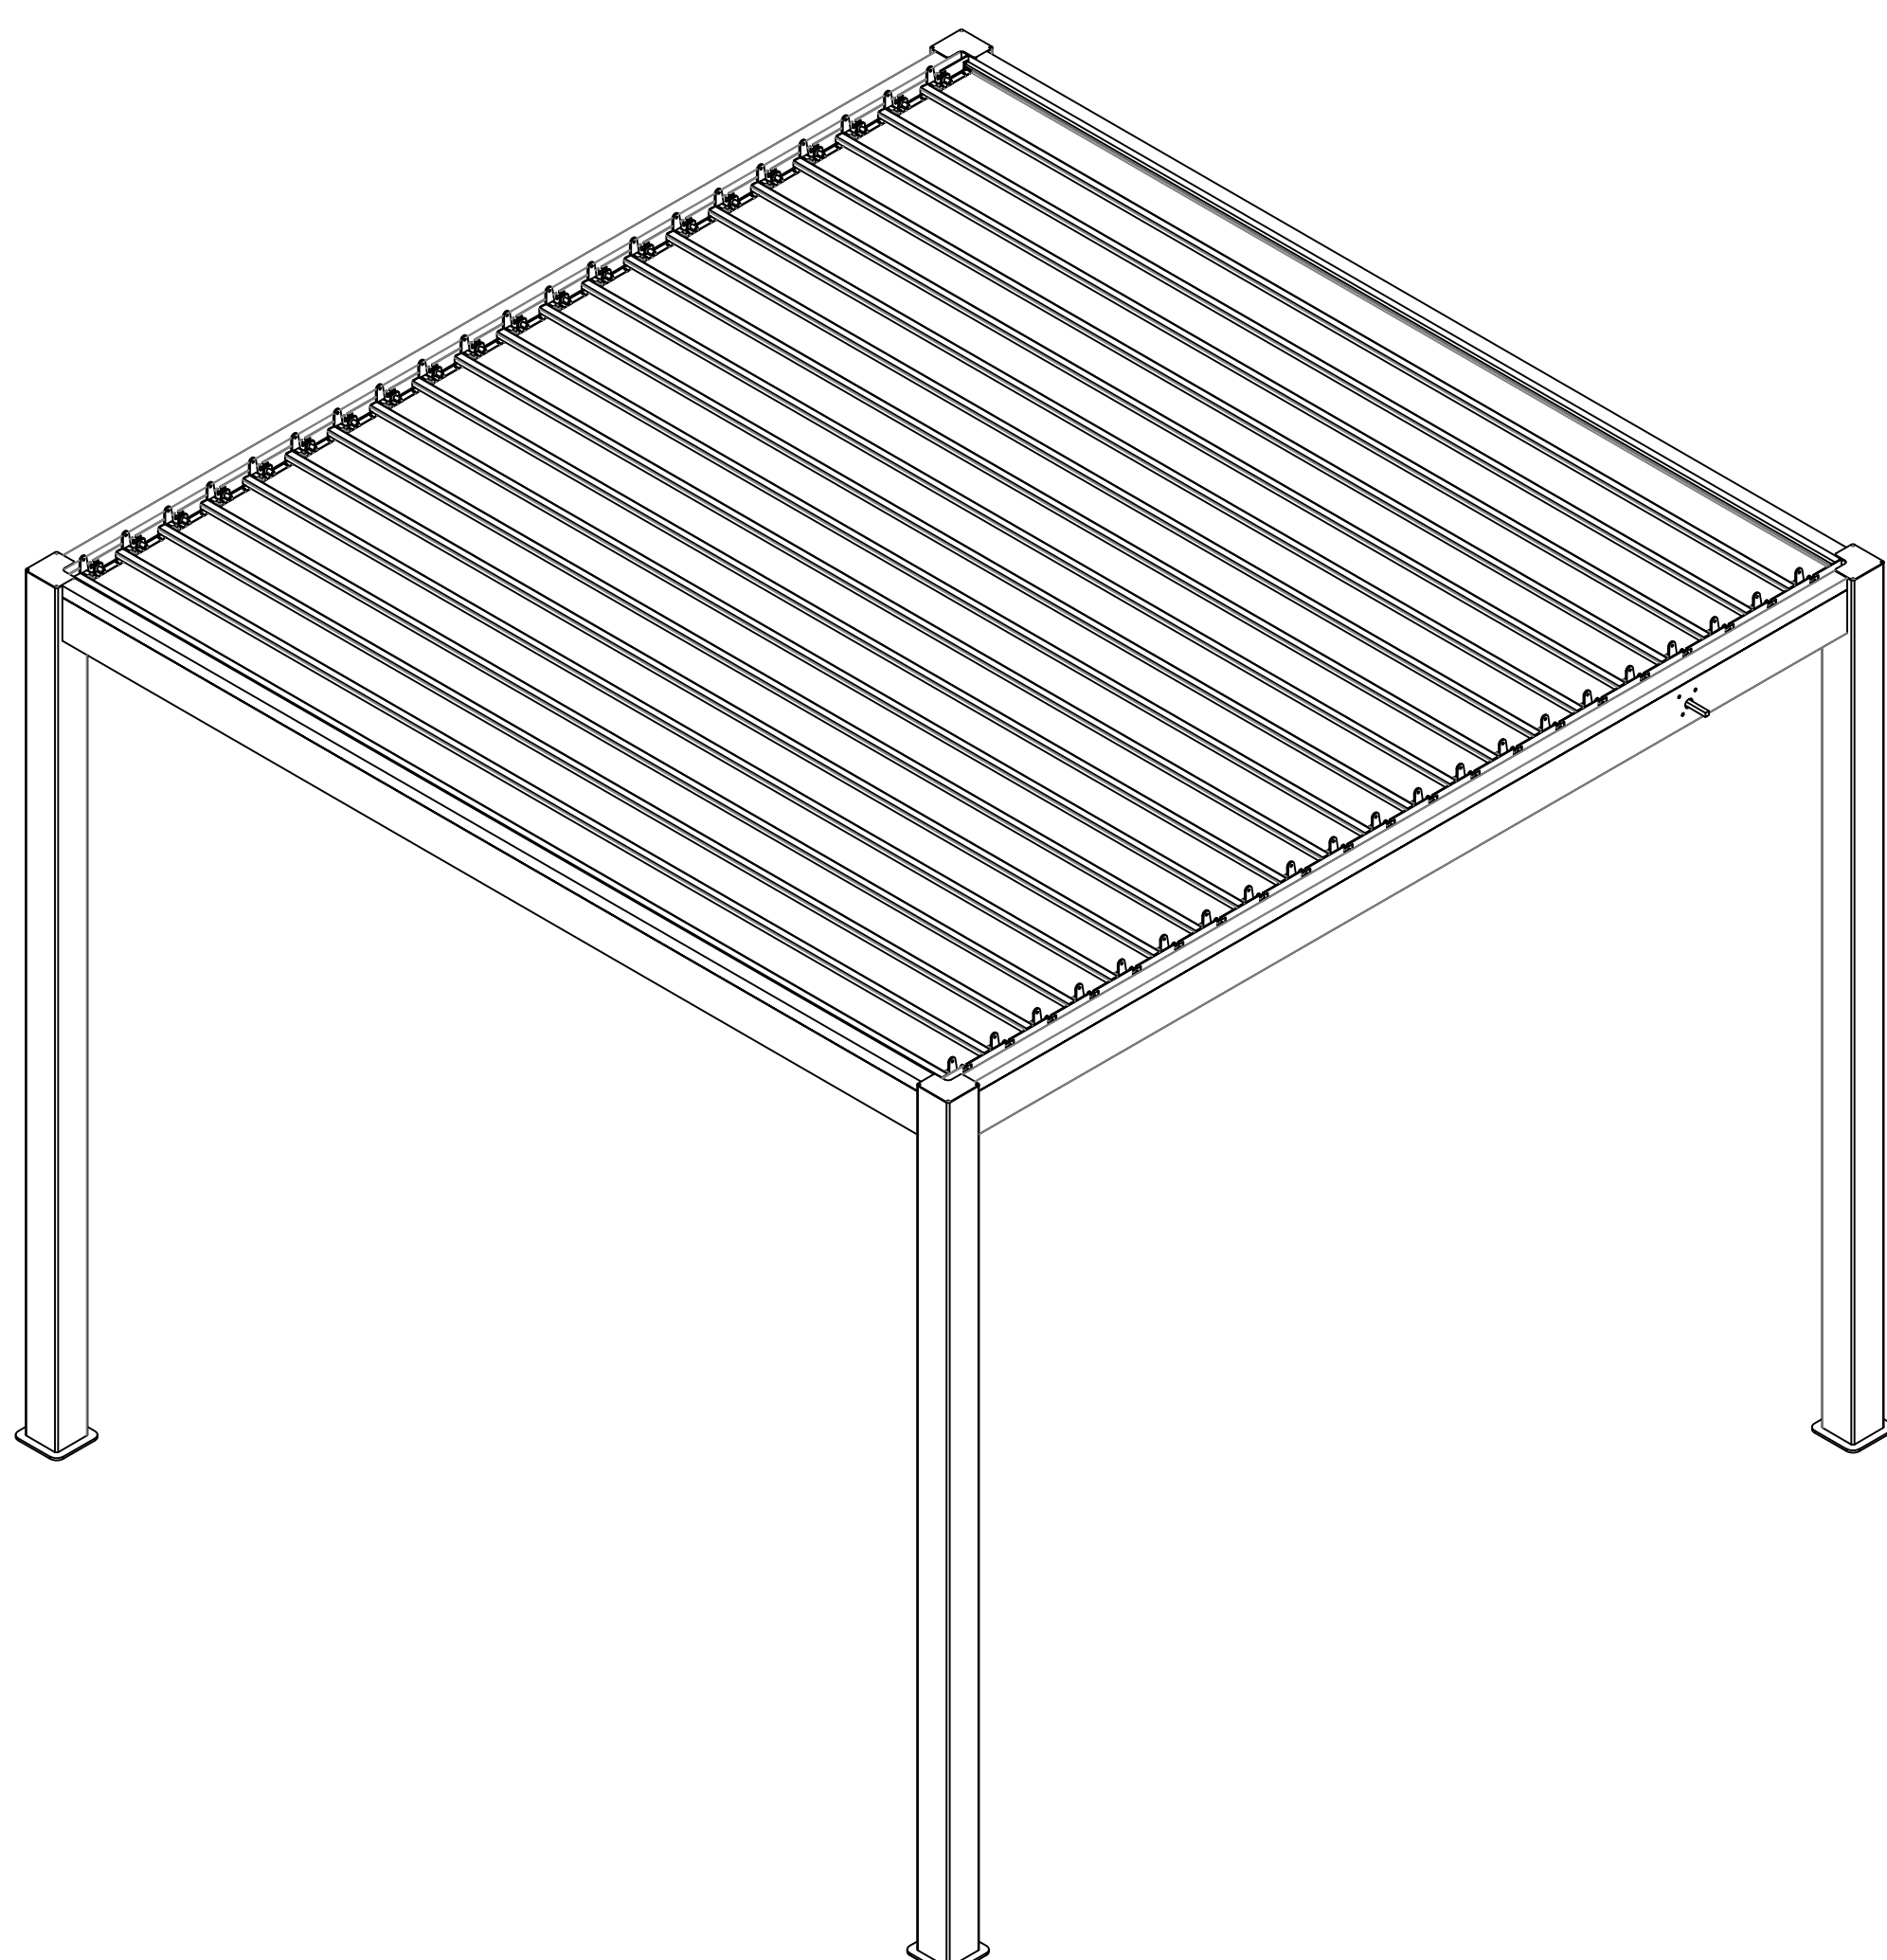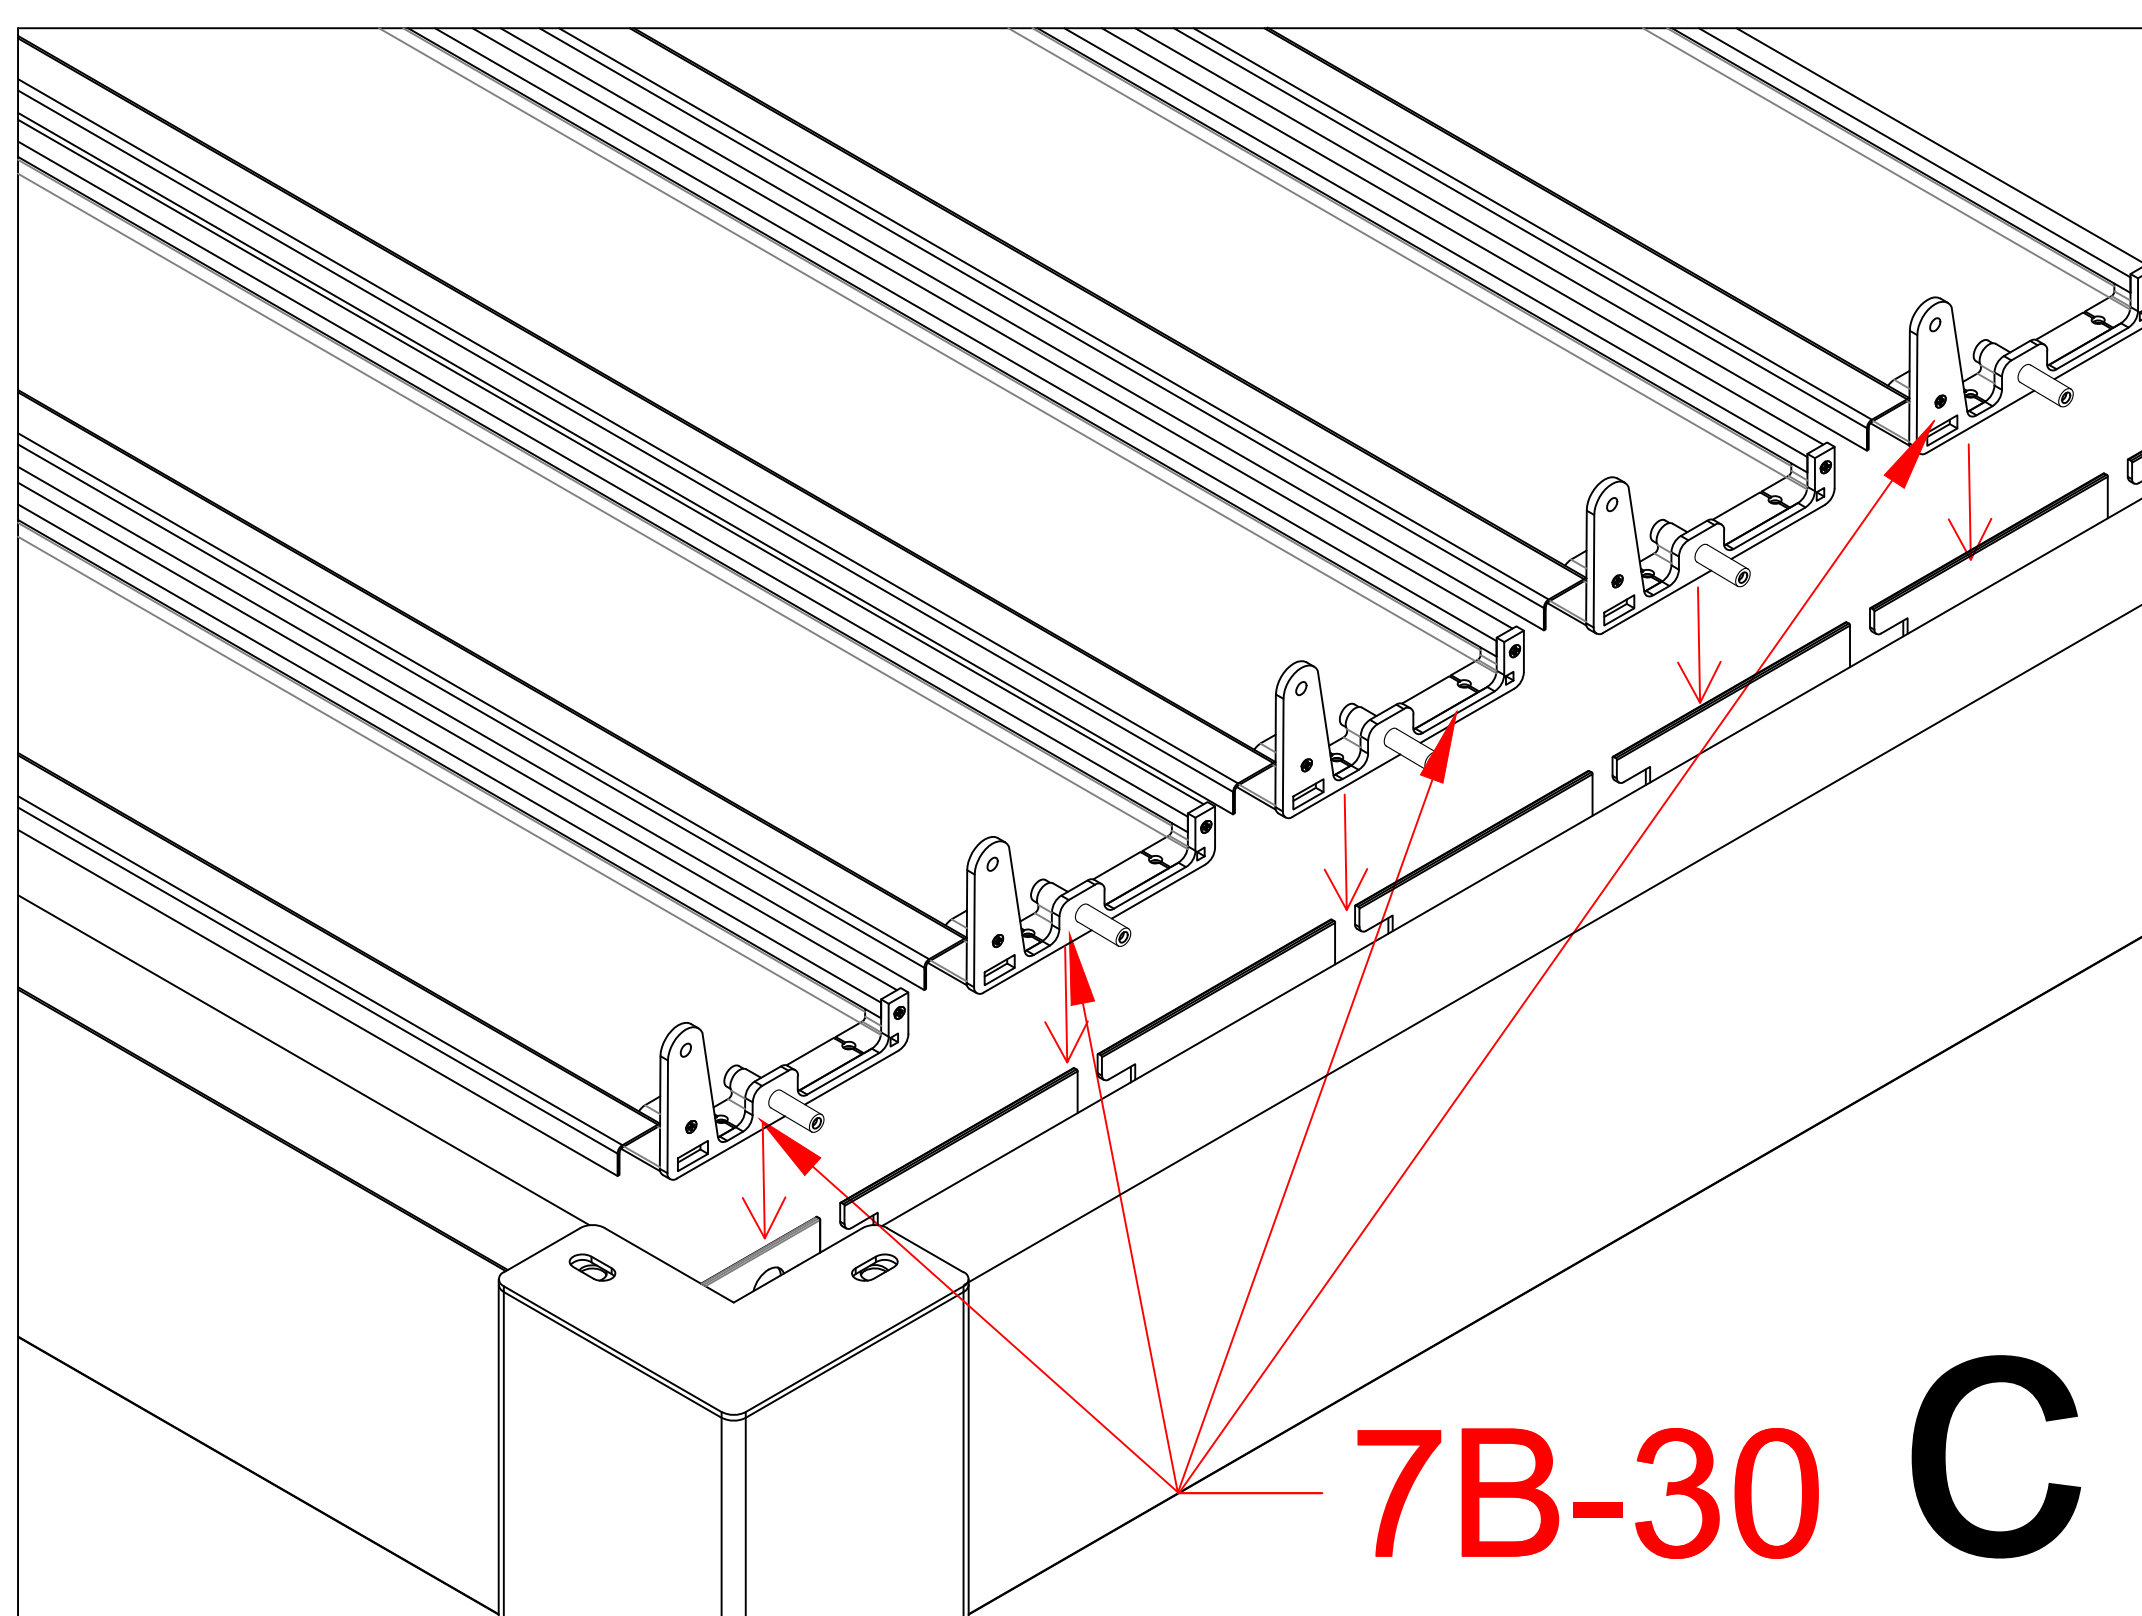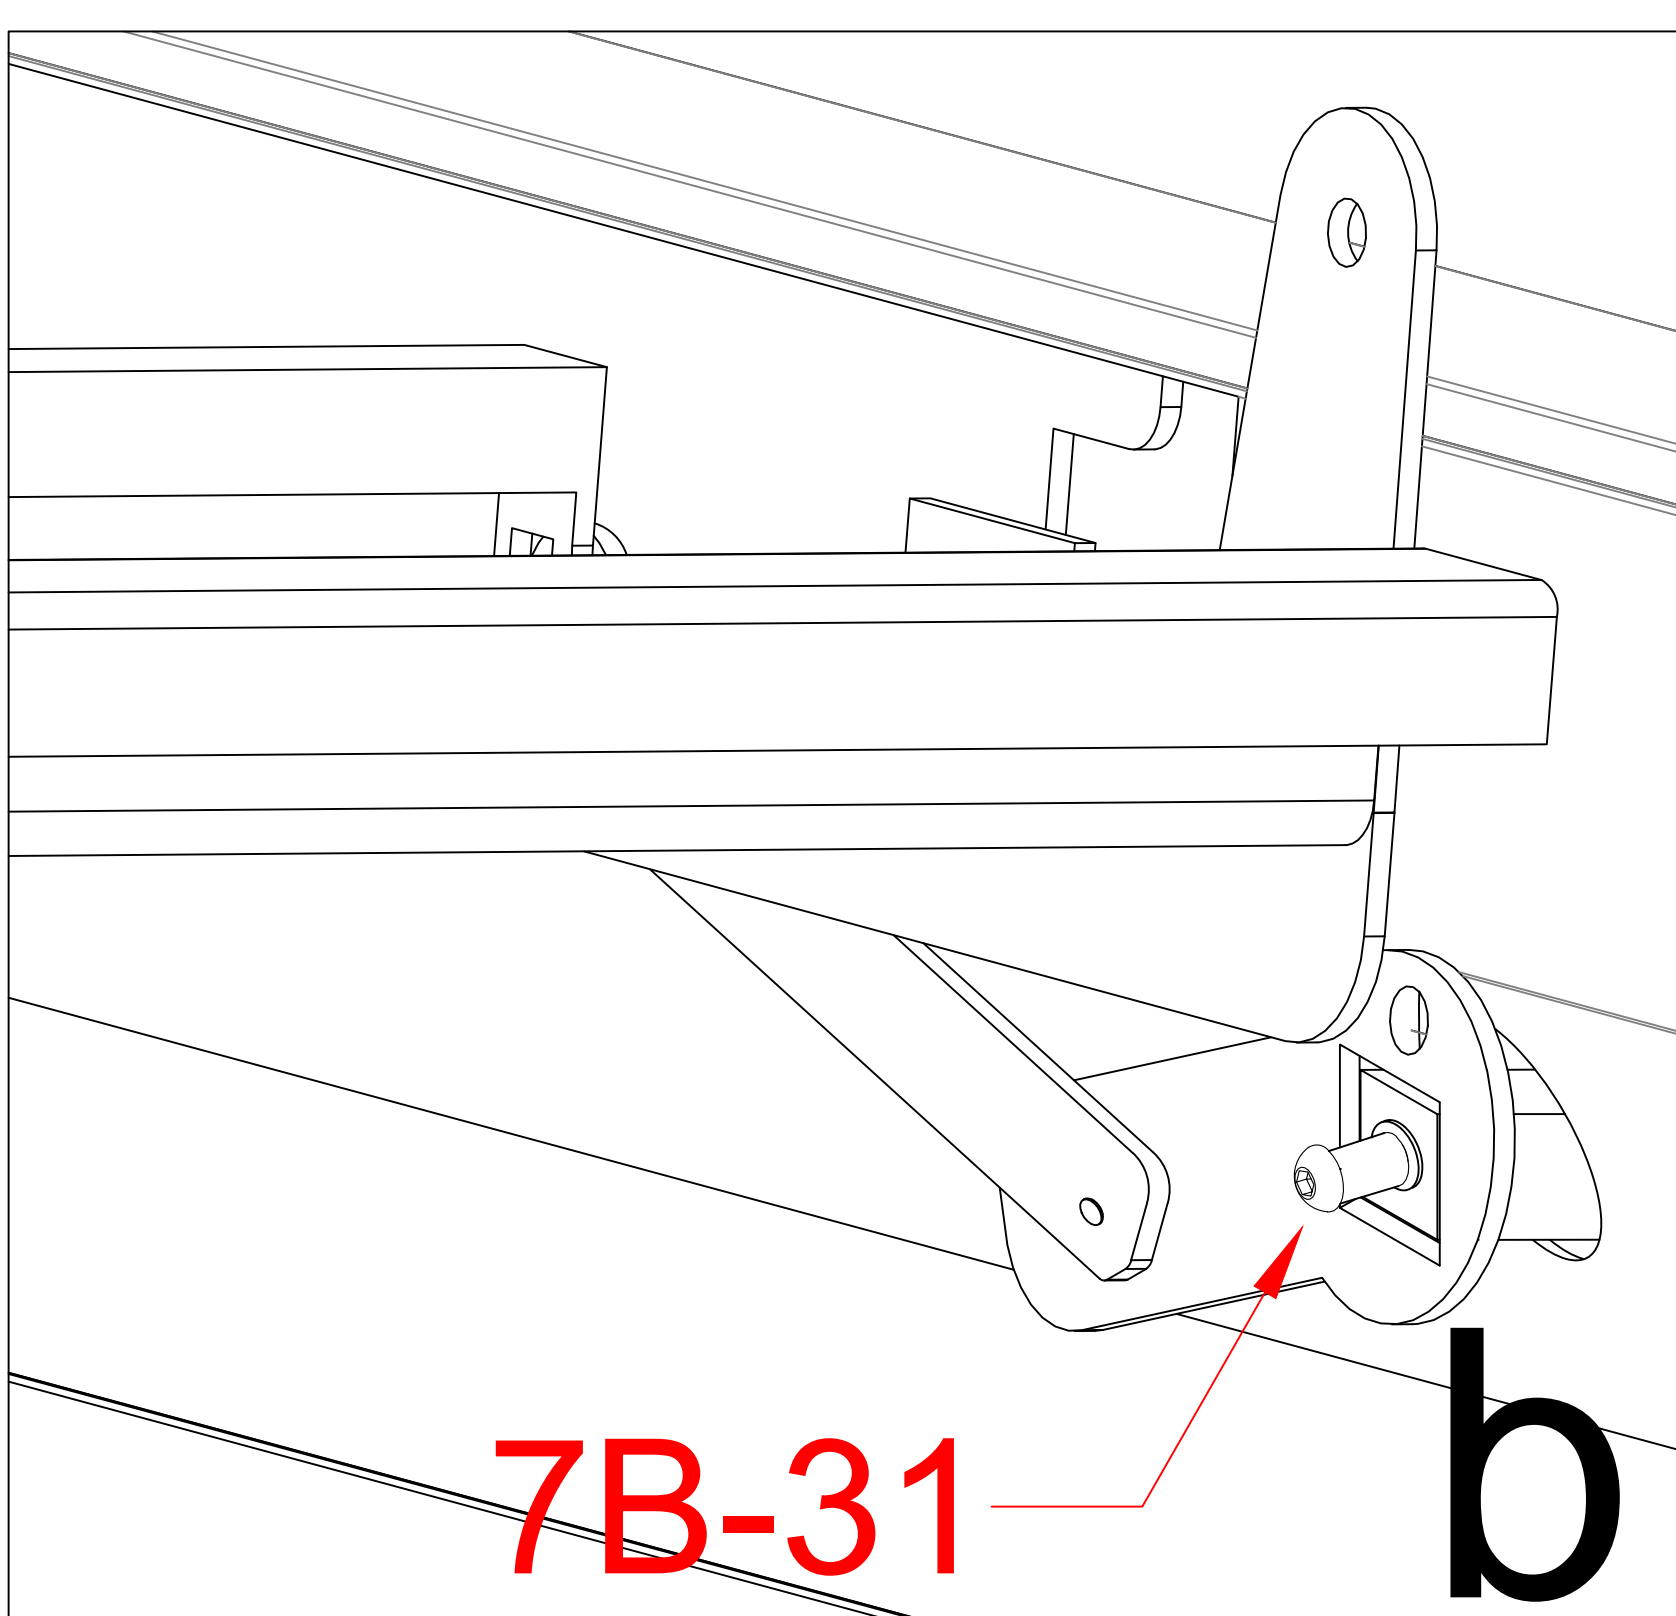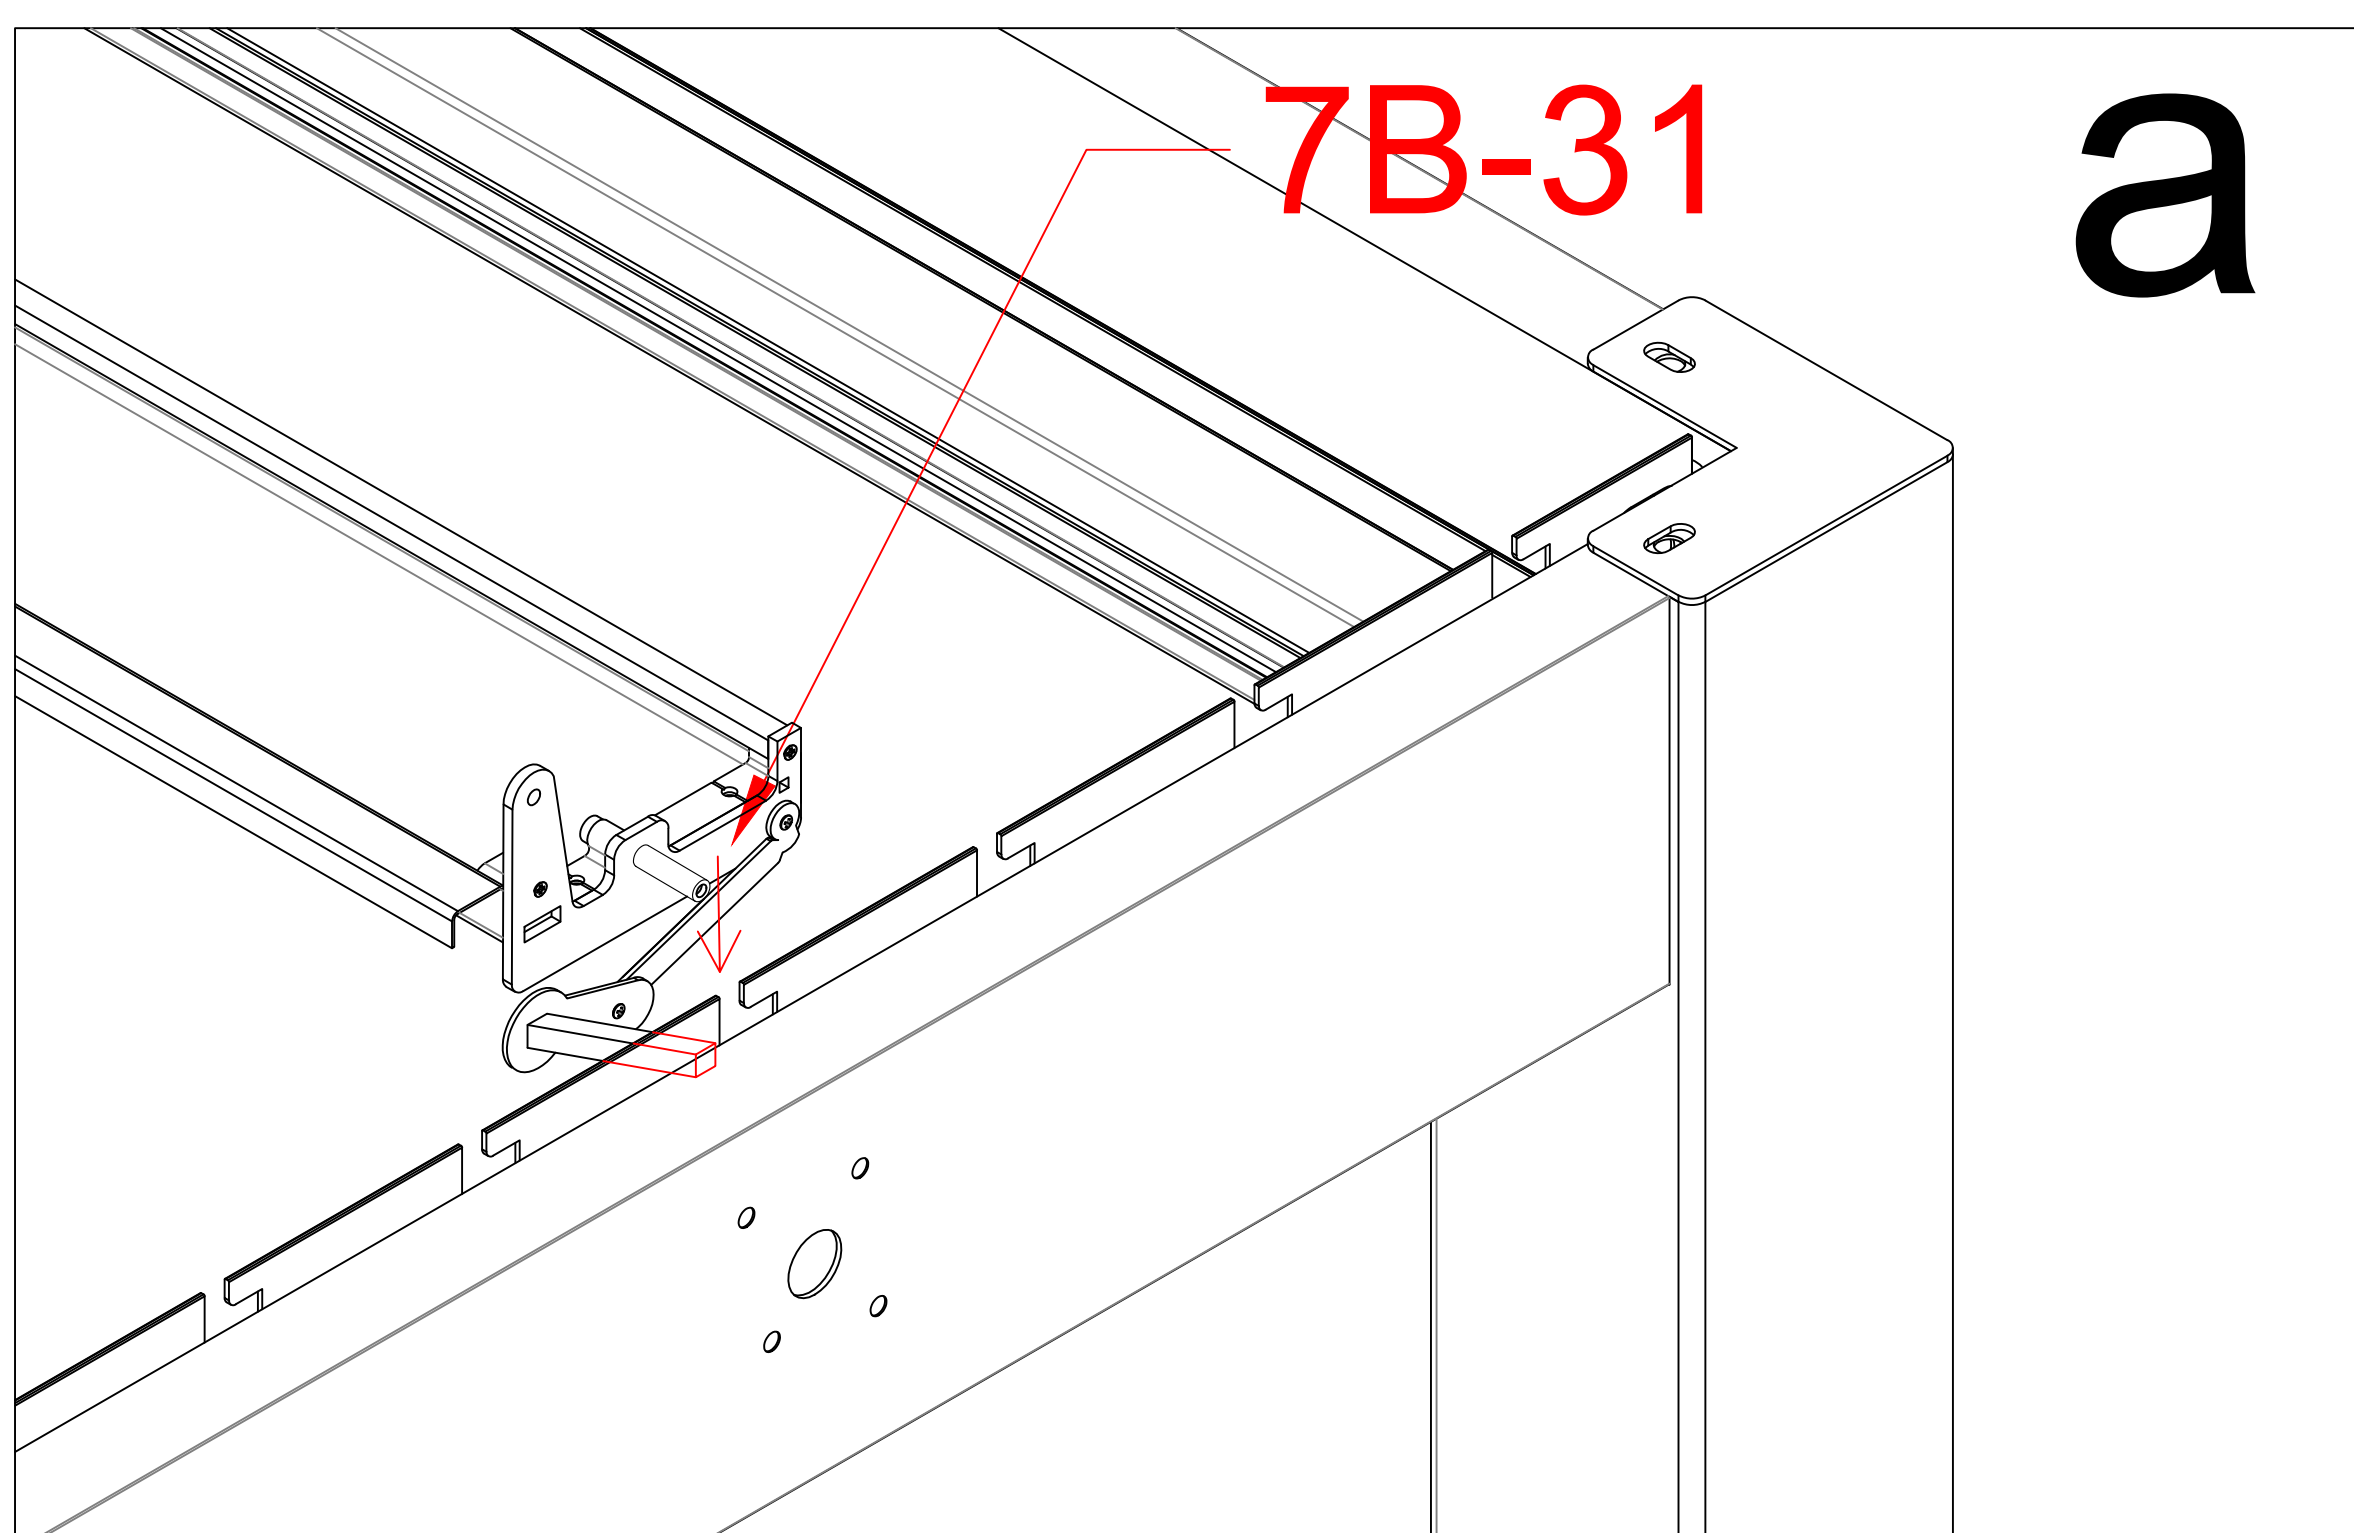


When installing louvers, first separate the two rubber gaskets and slide them to both ends of the circular shaft. Then, please ensure they are closed tightly before proceeding with the next steps of the installation.



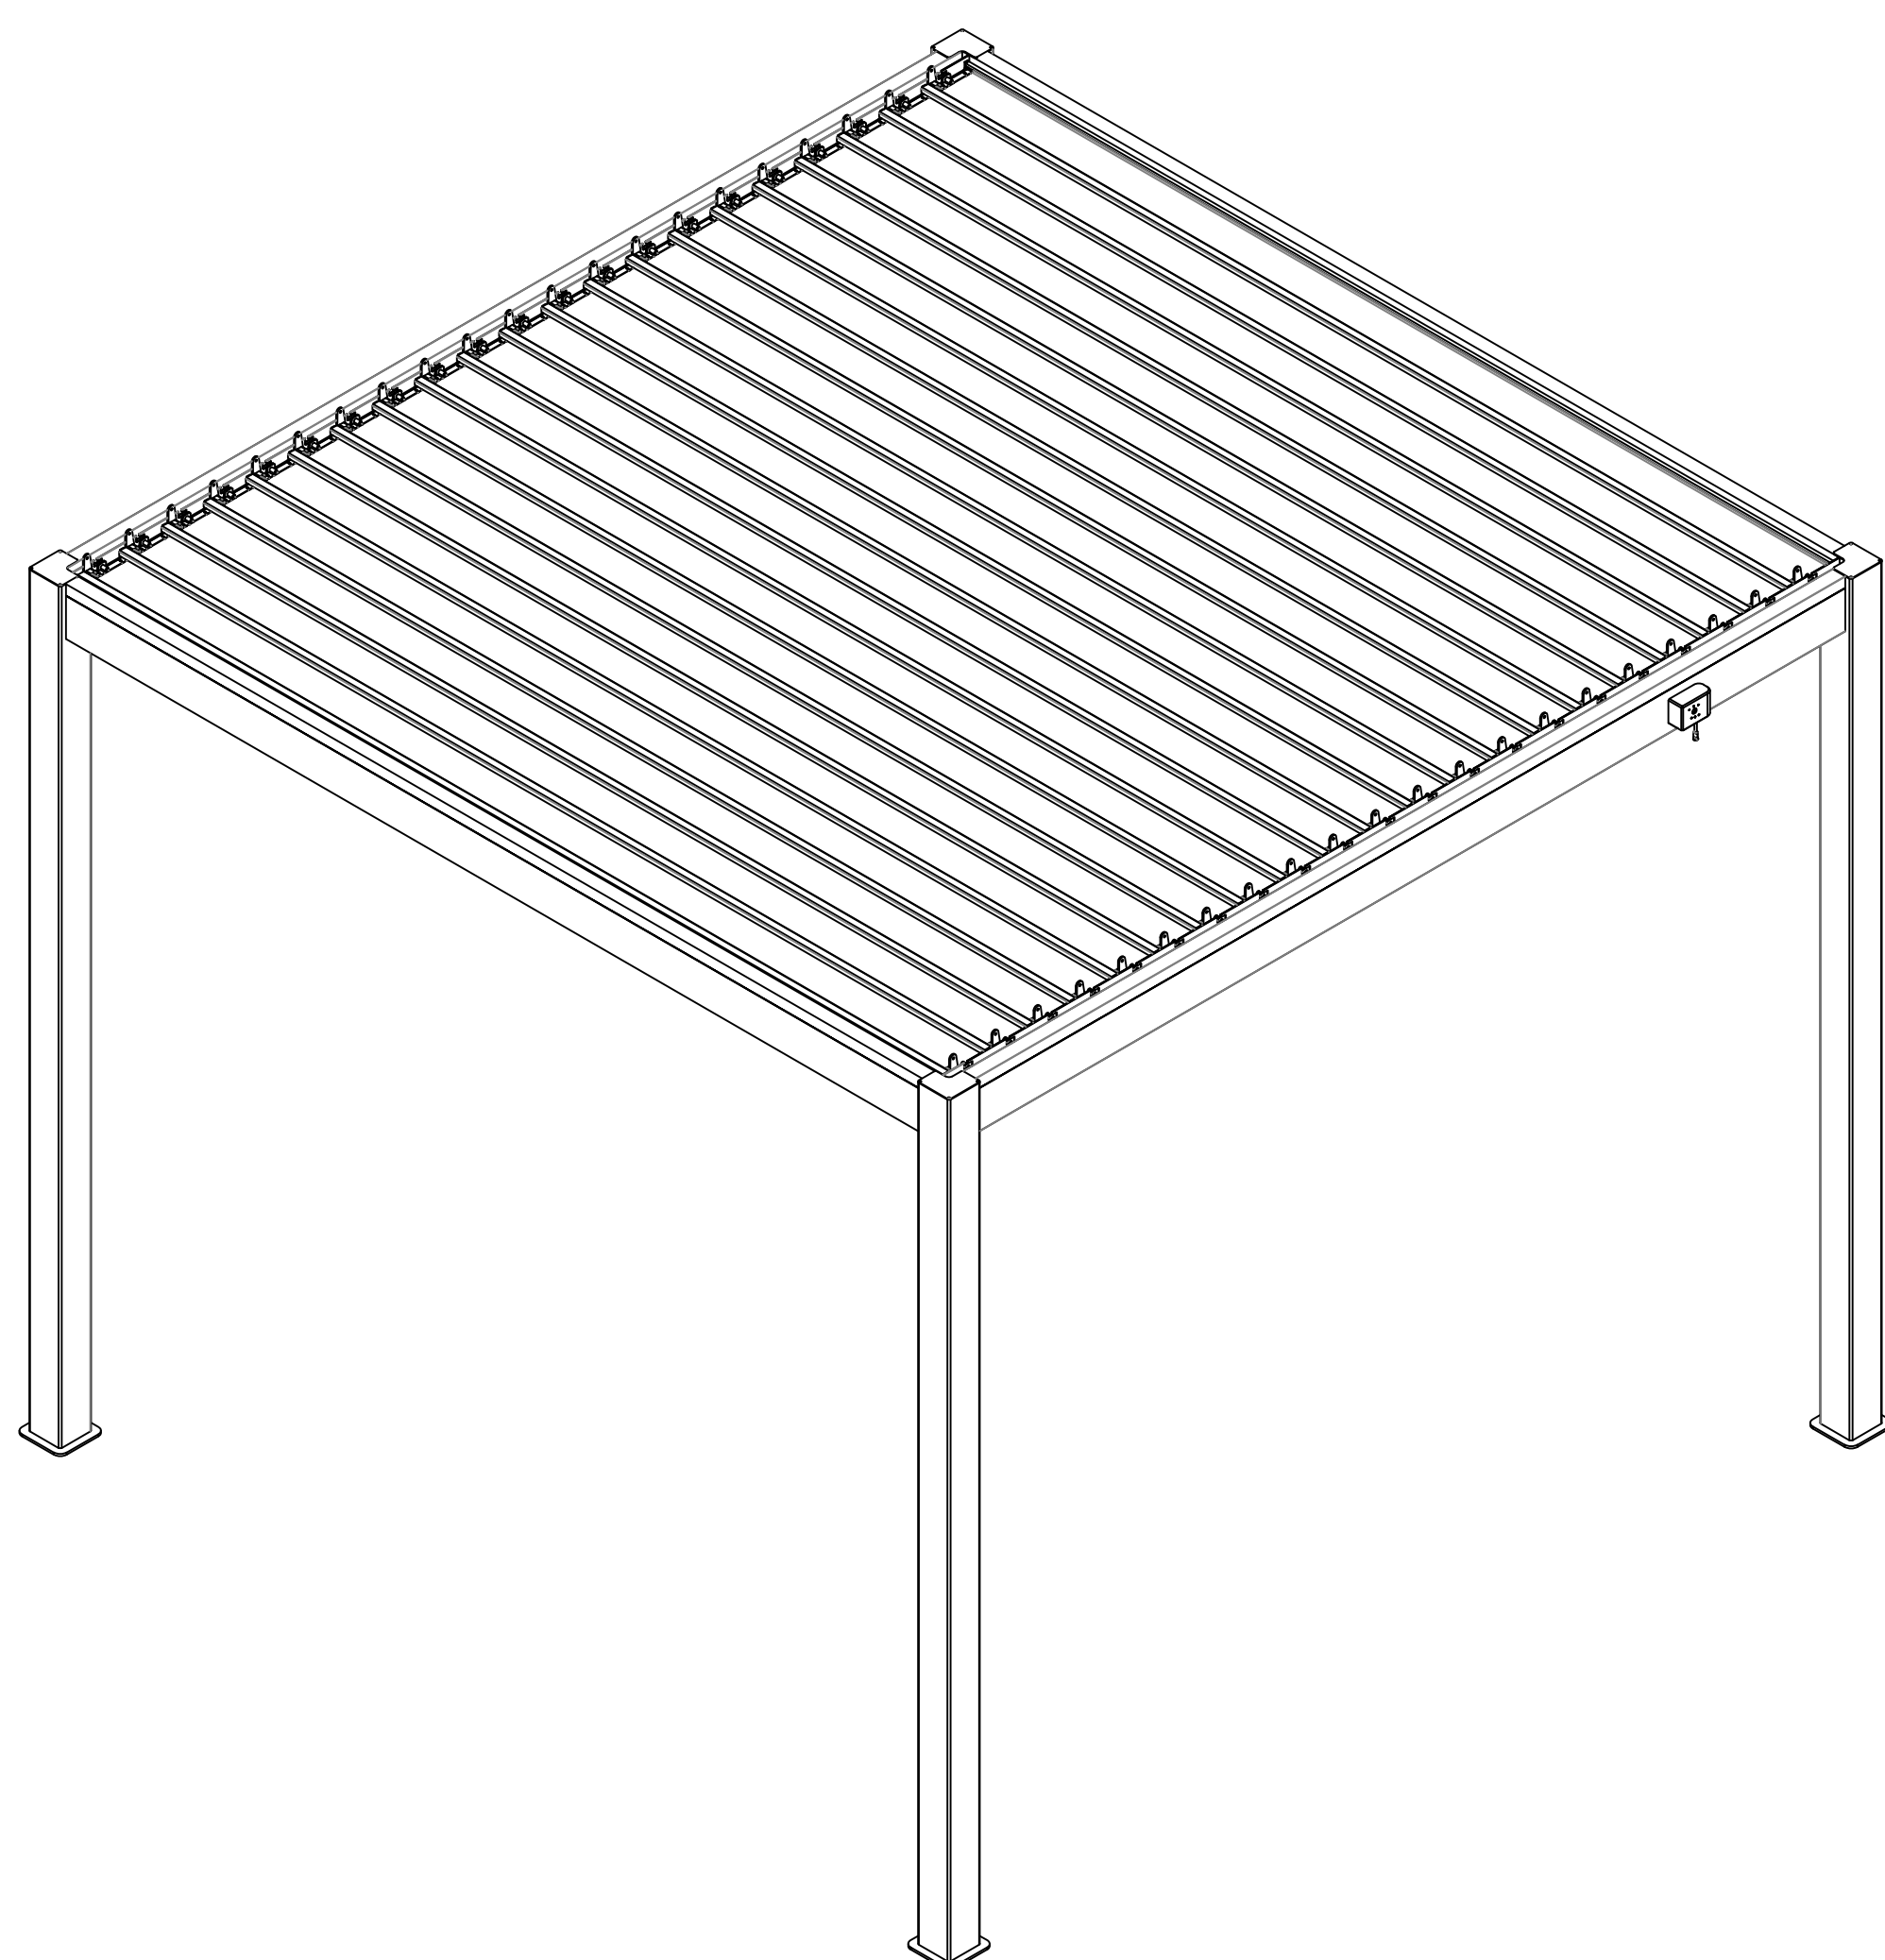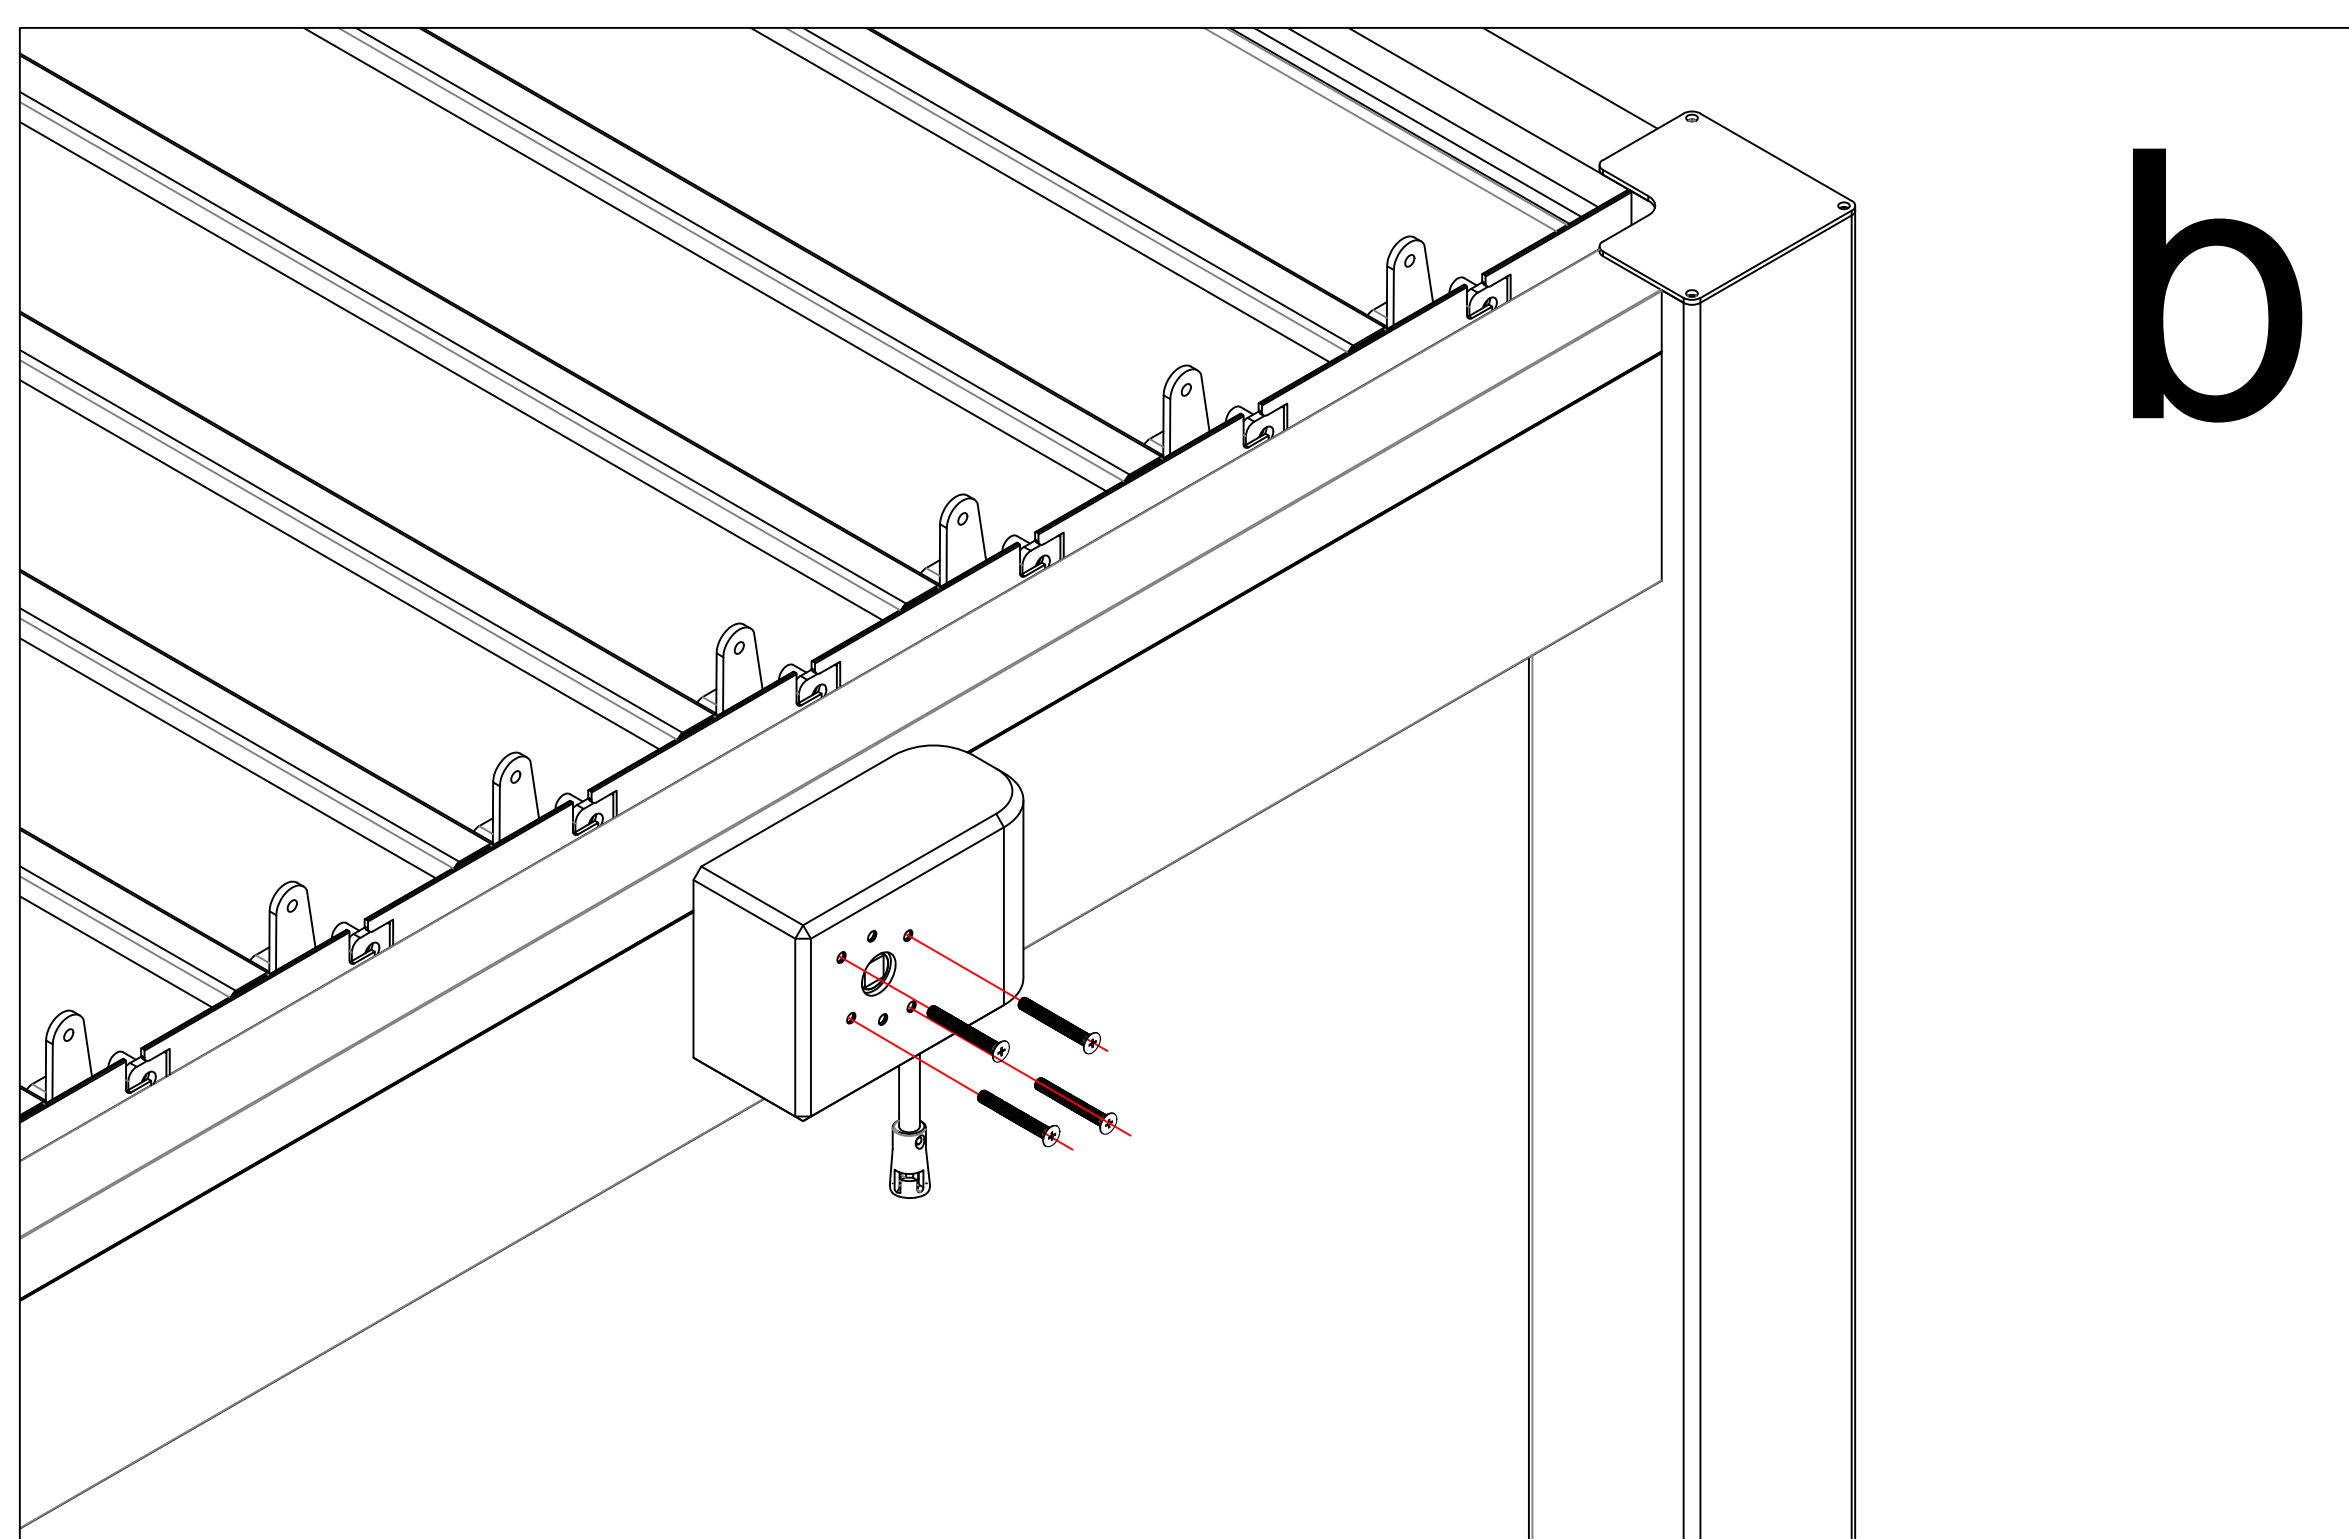
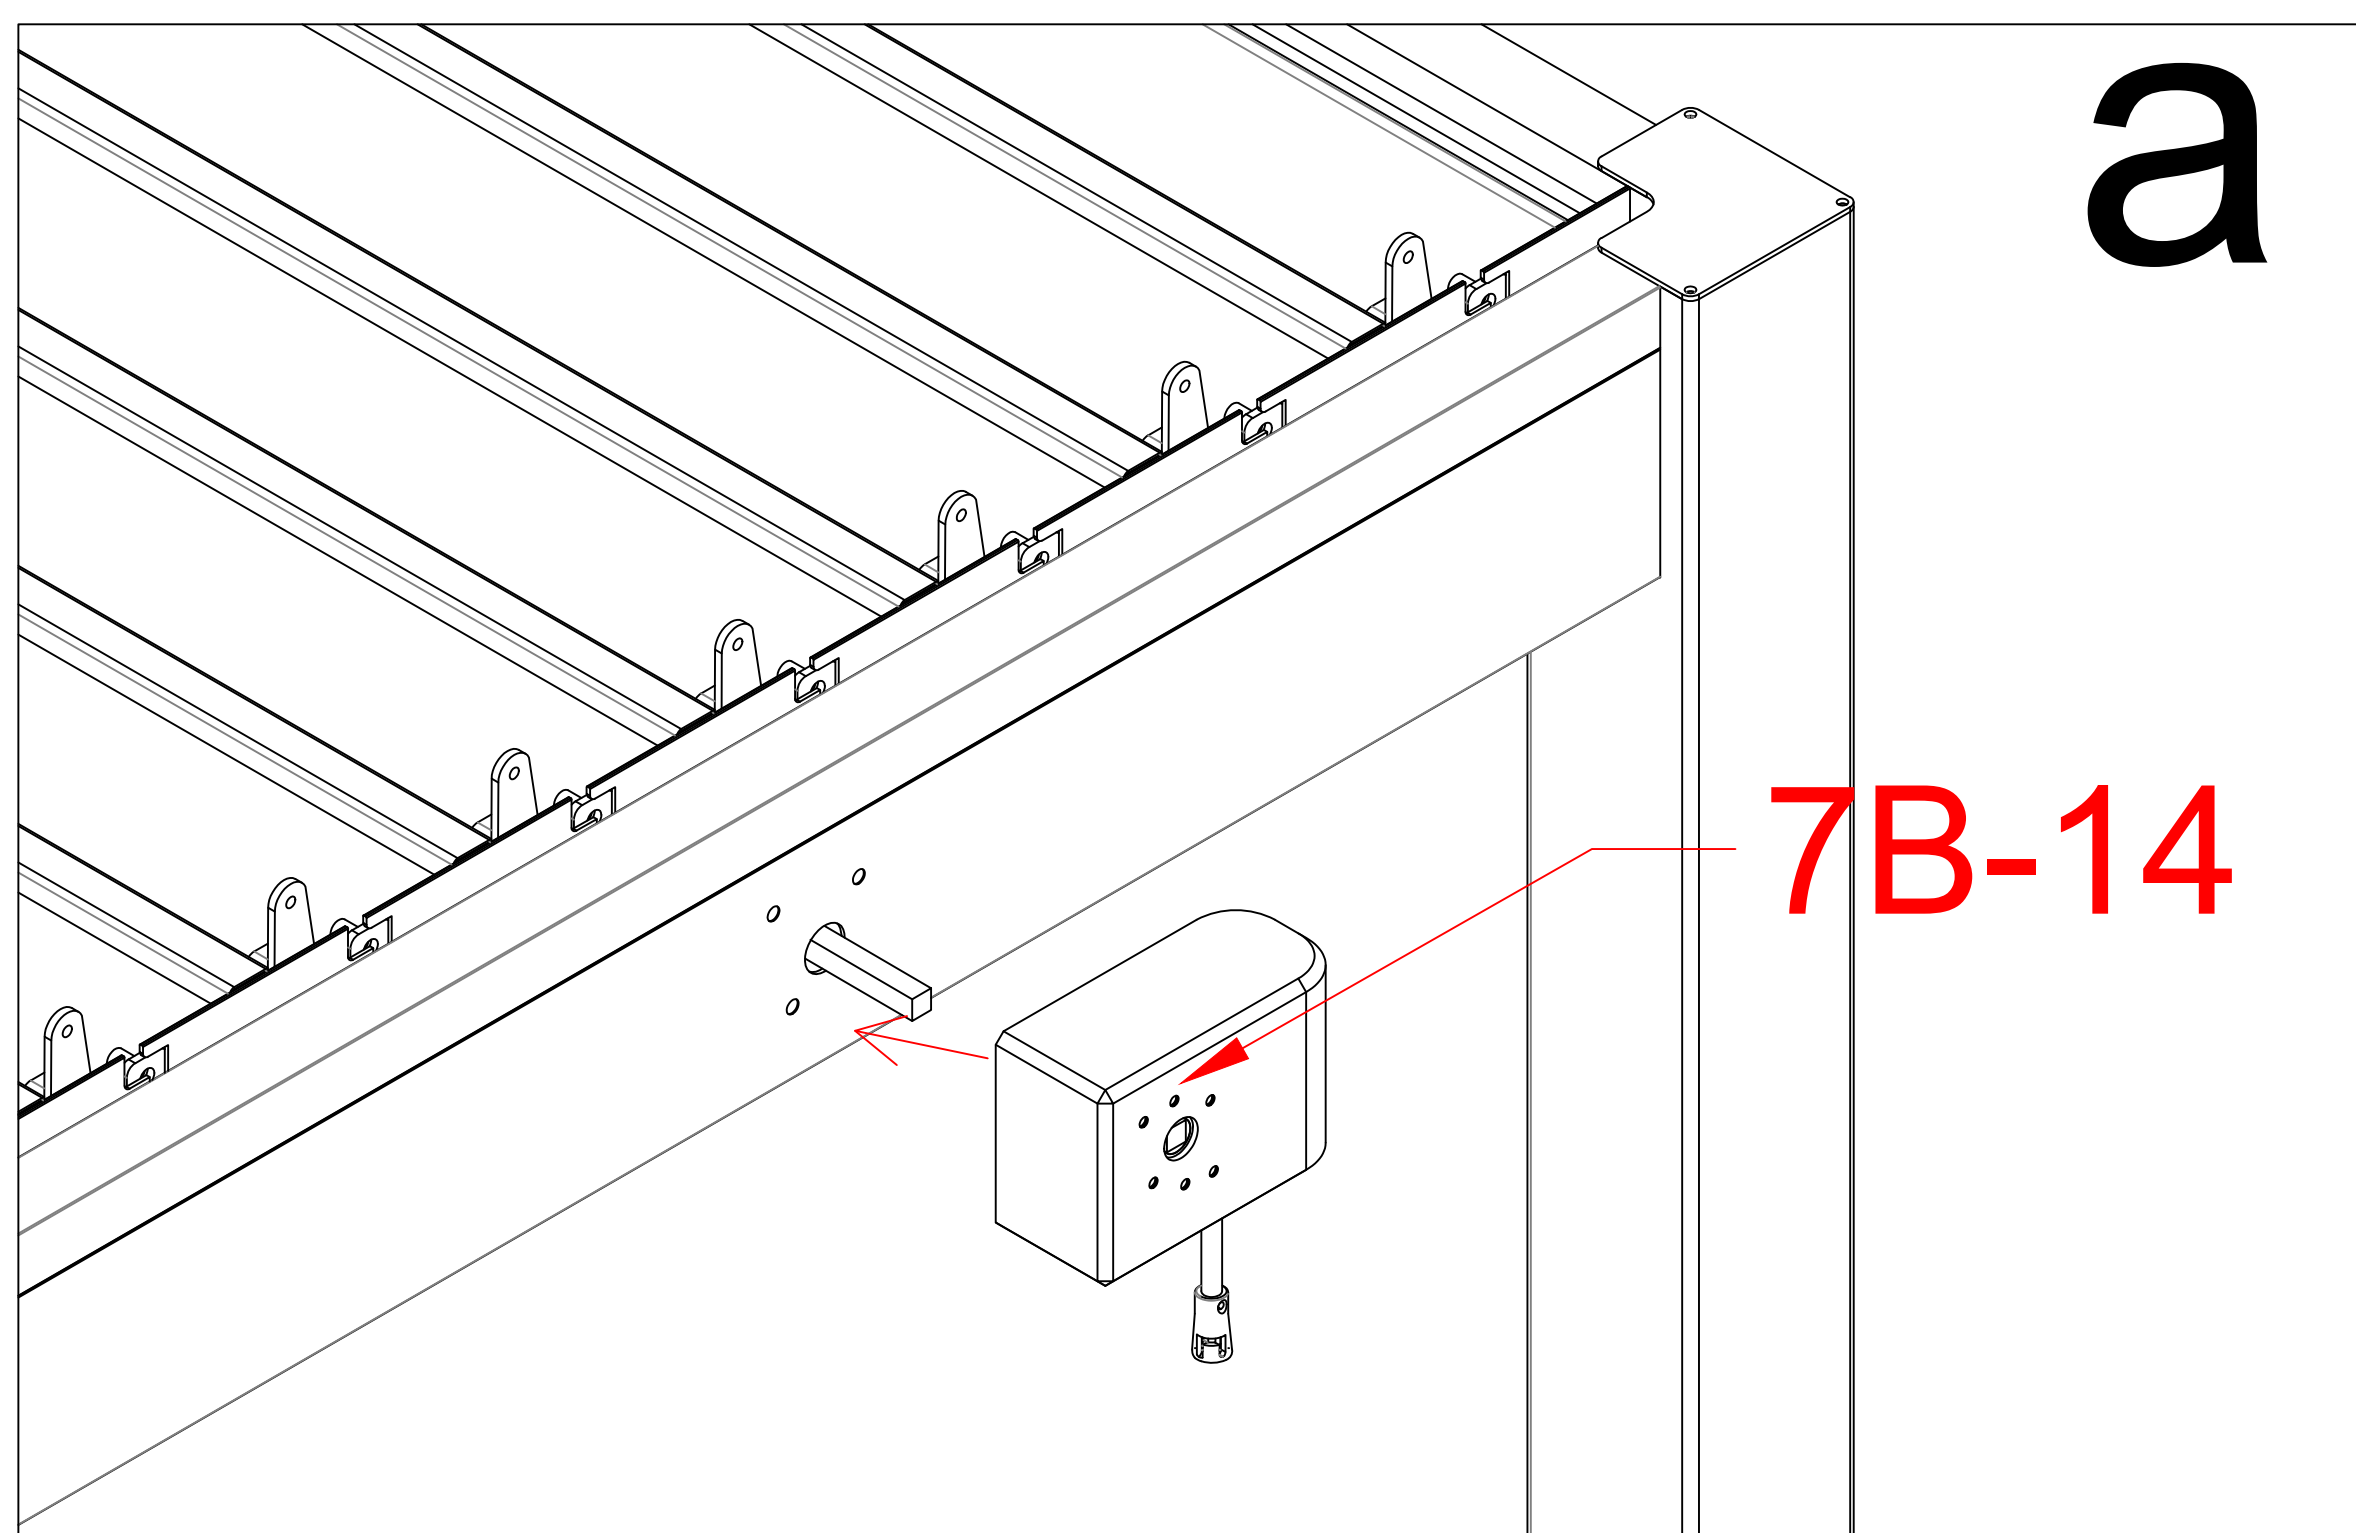


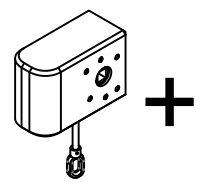7B-14	 + 	1
-------	---	---





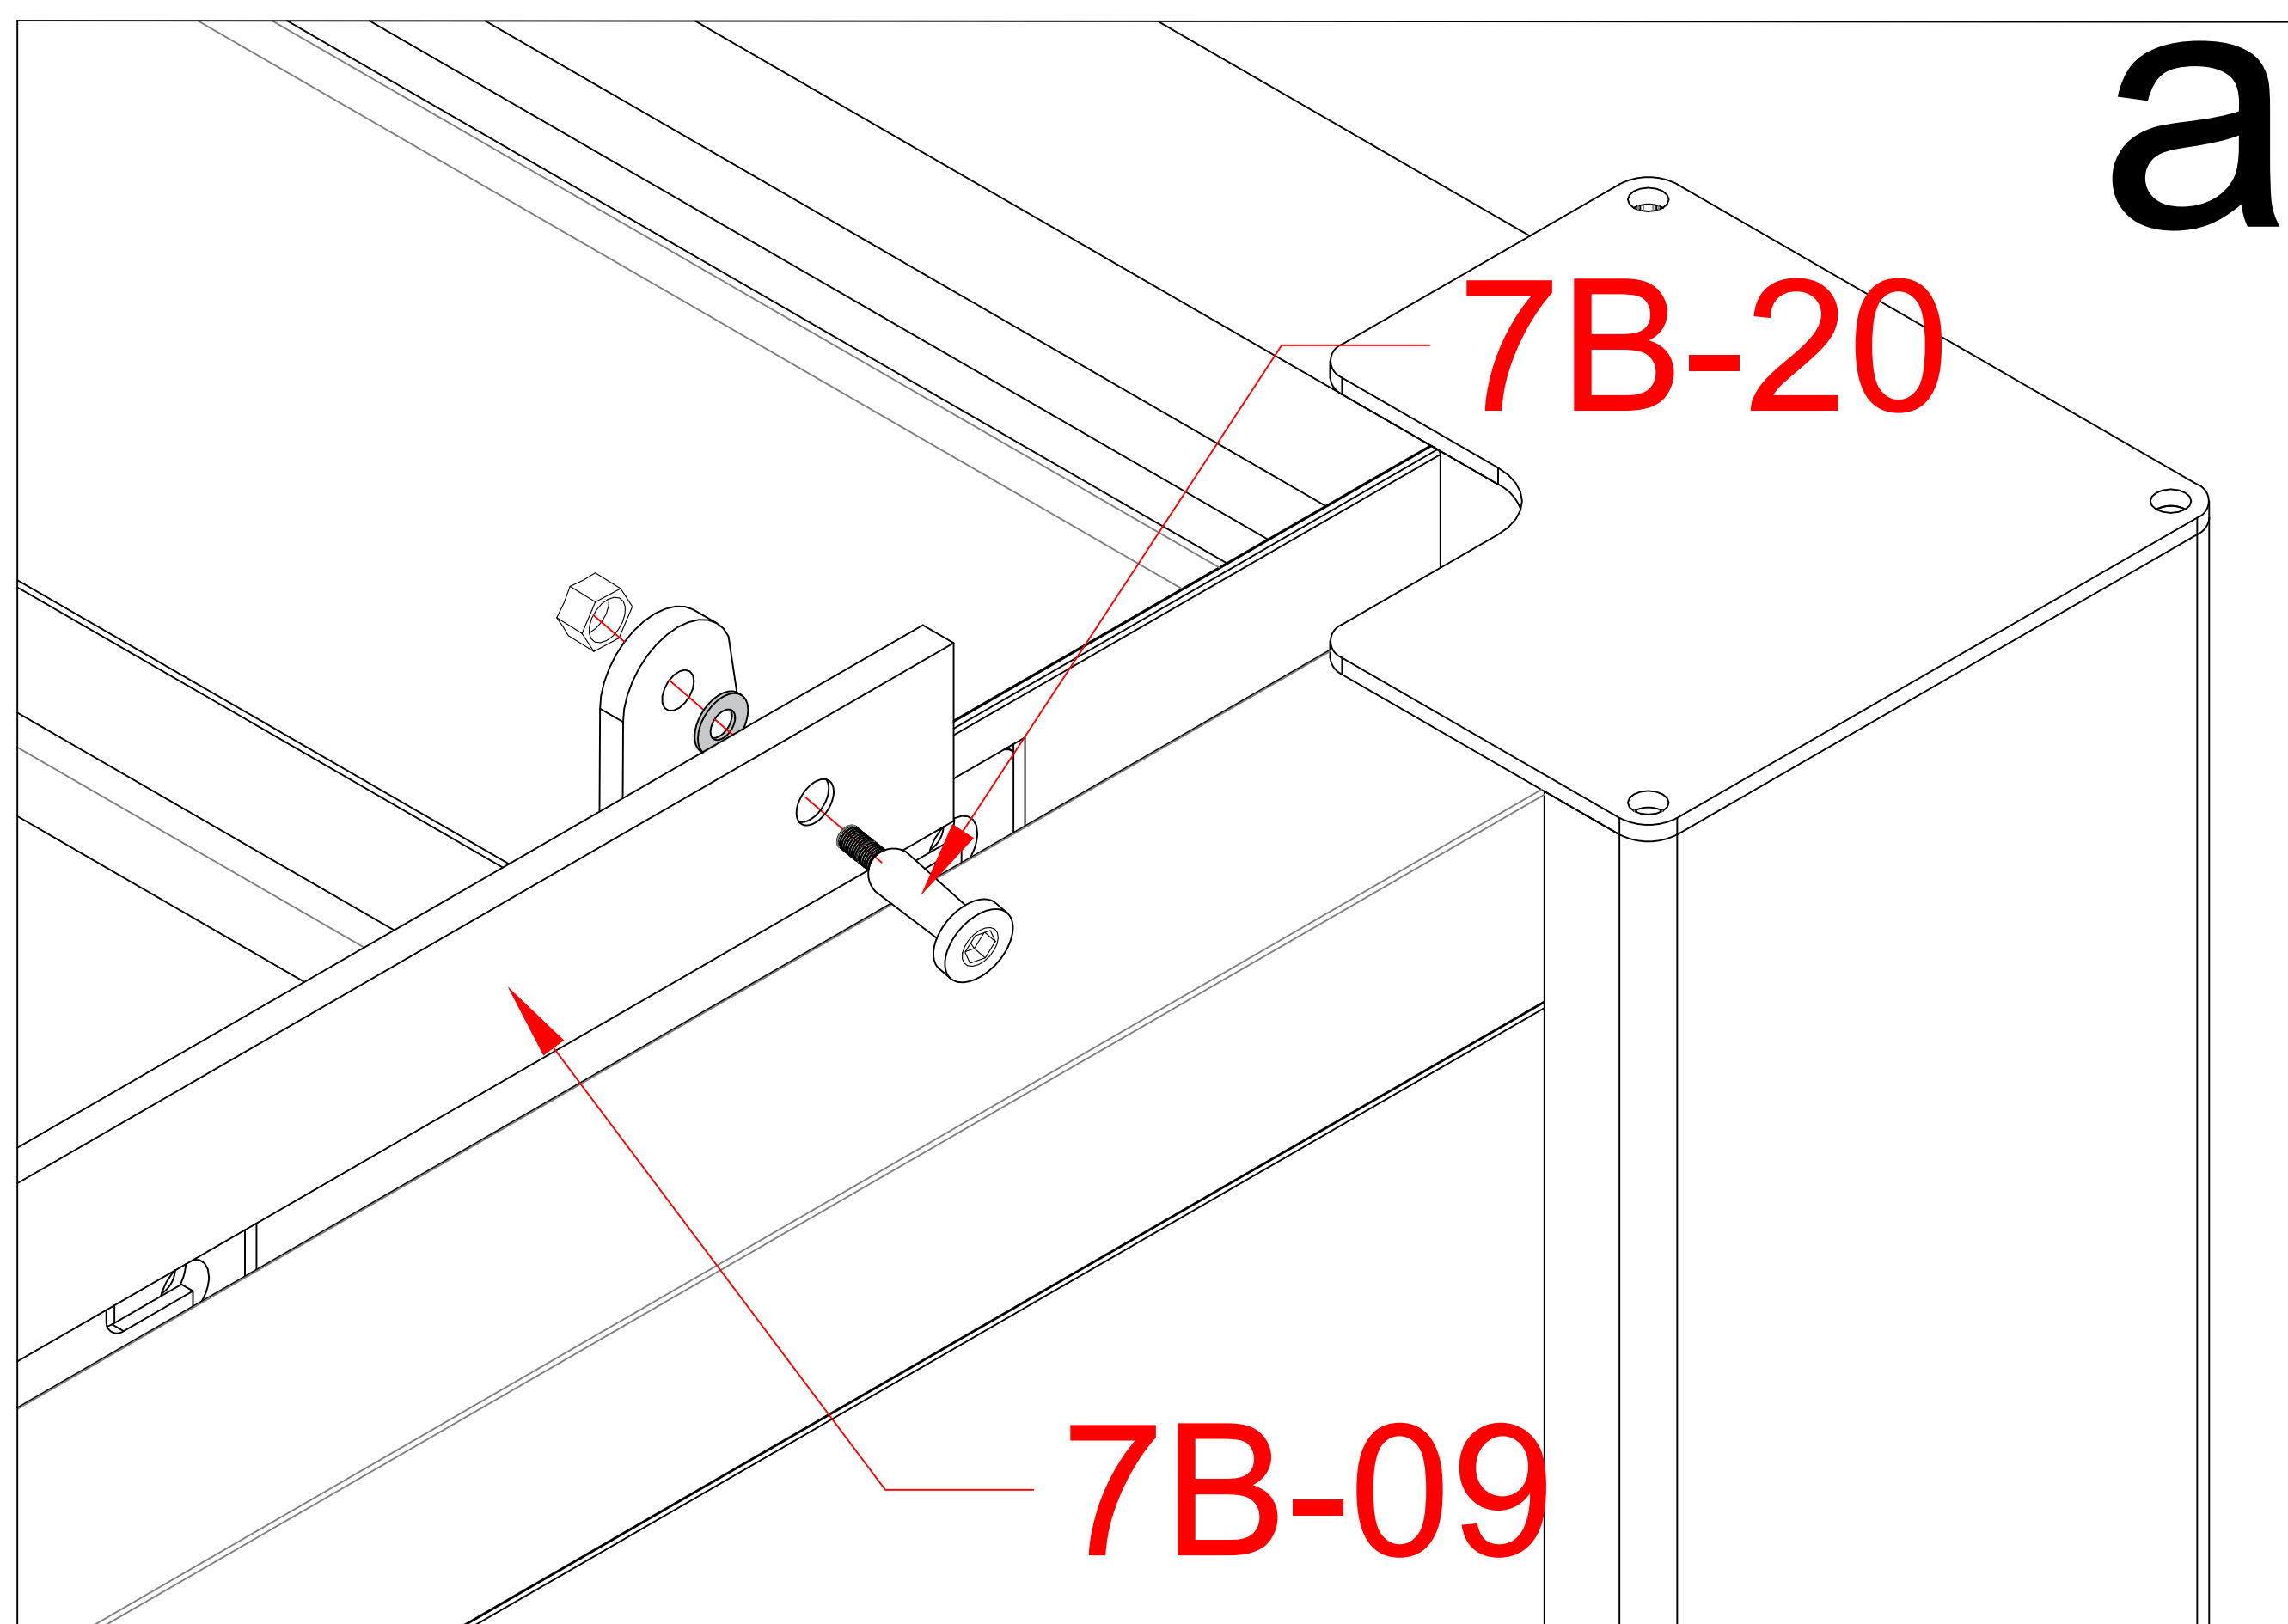


warning:
Bolts must be tightened

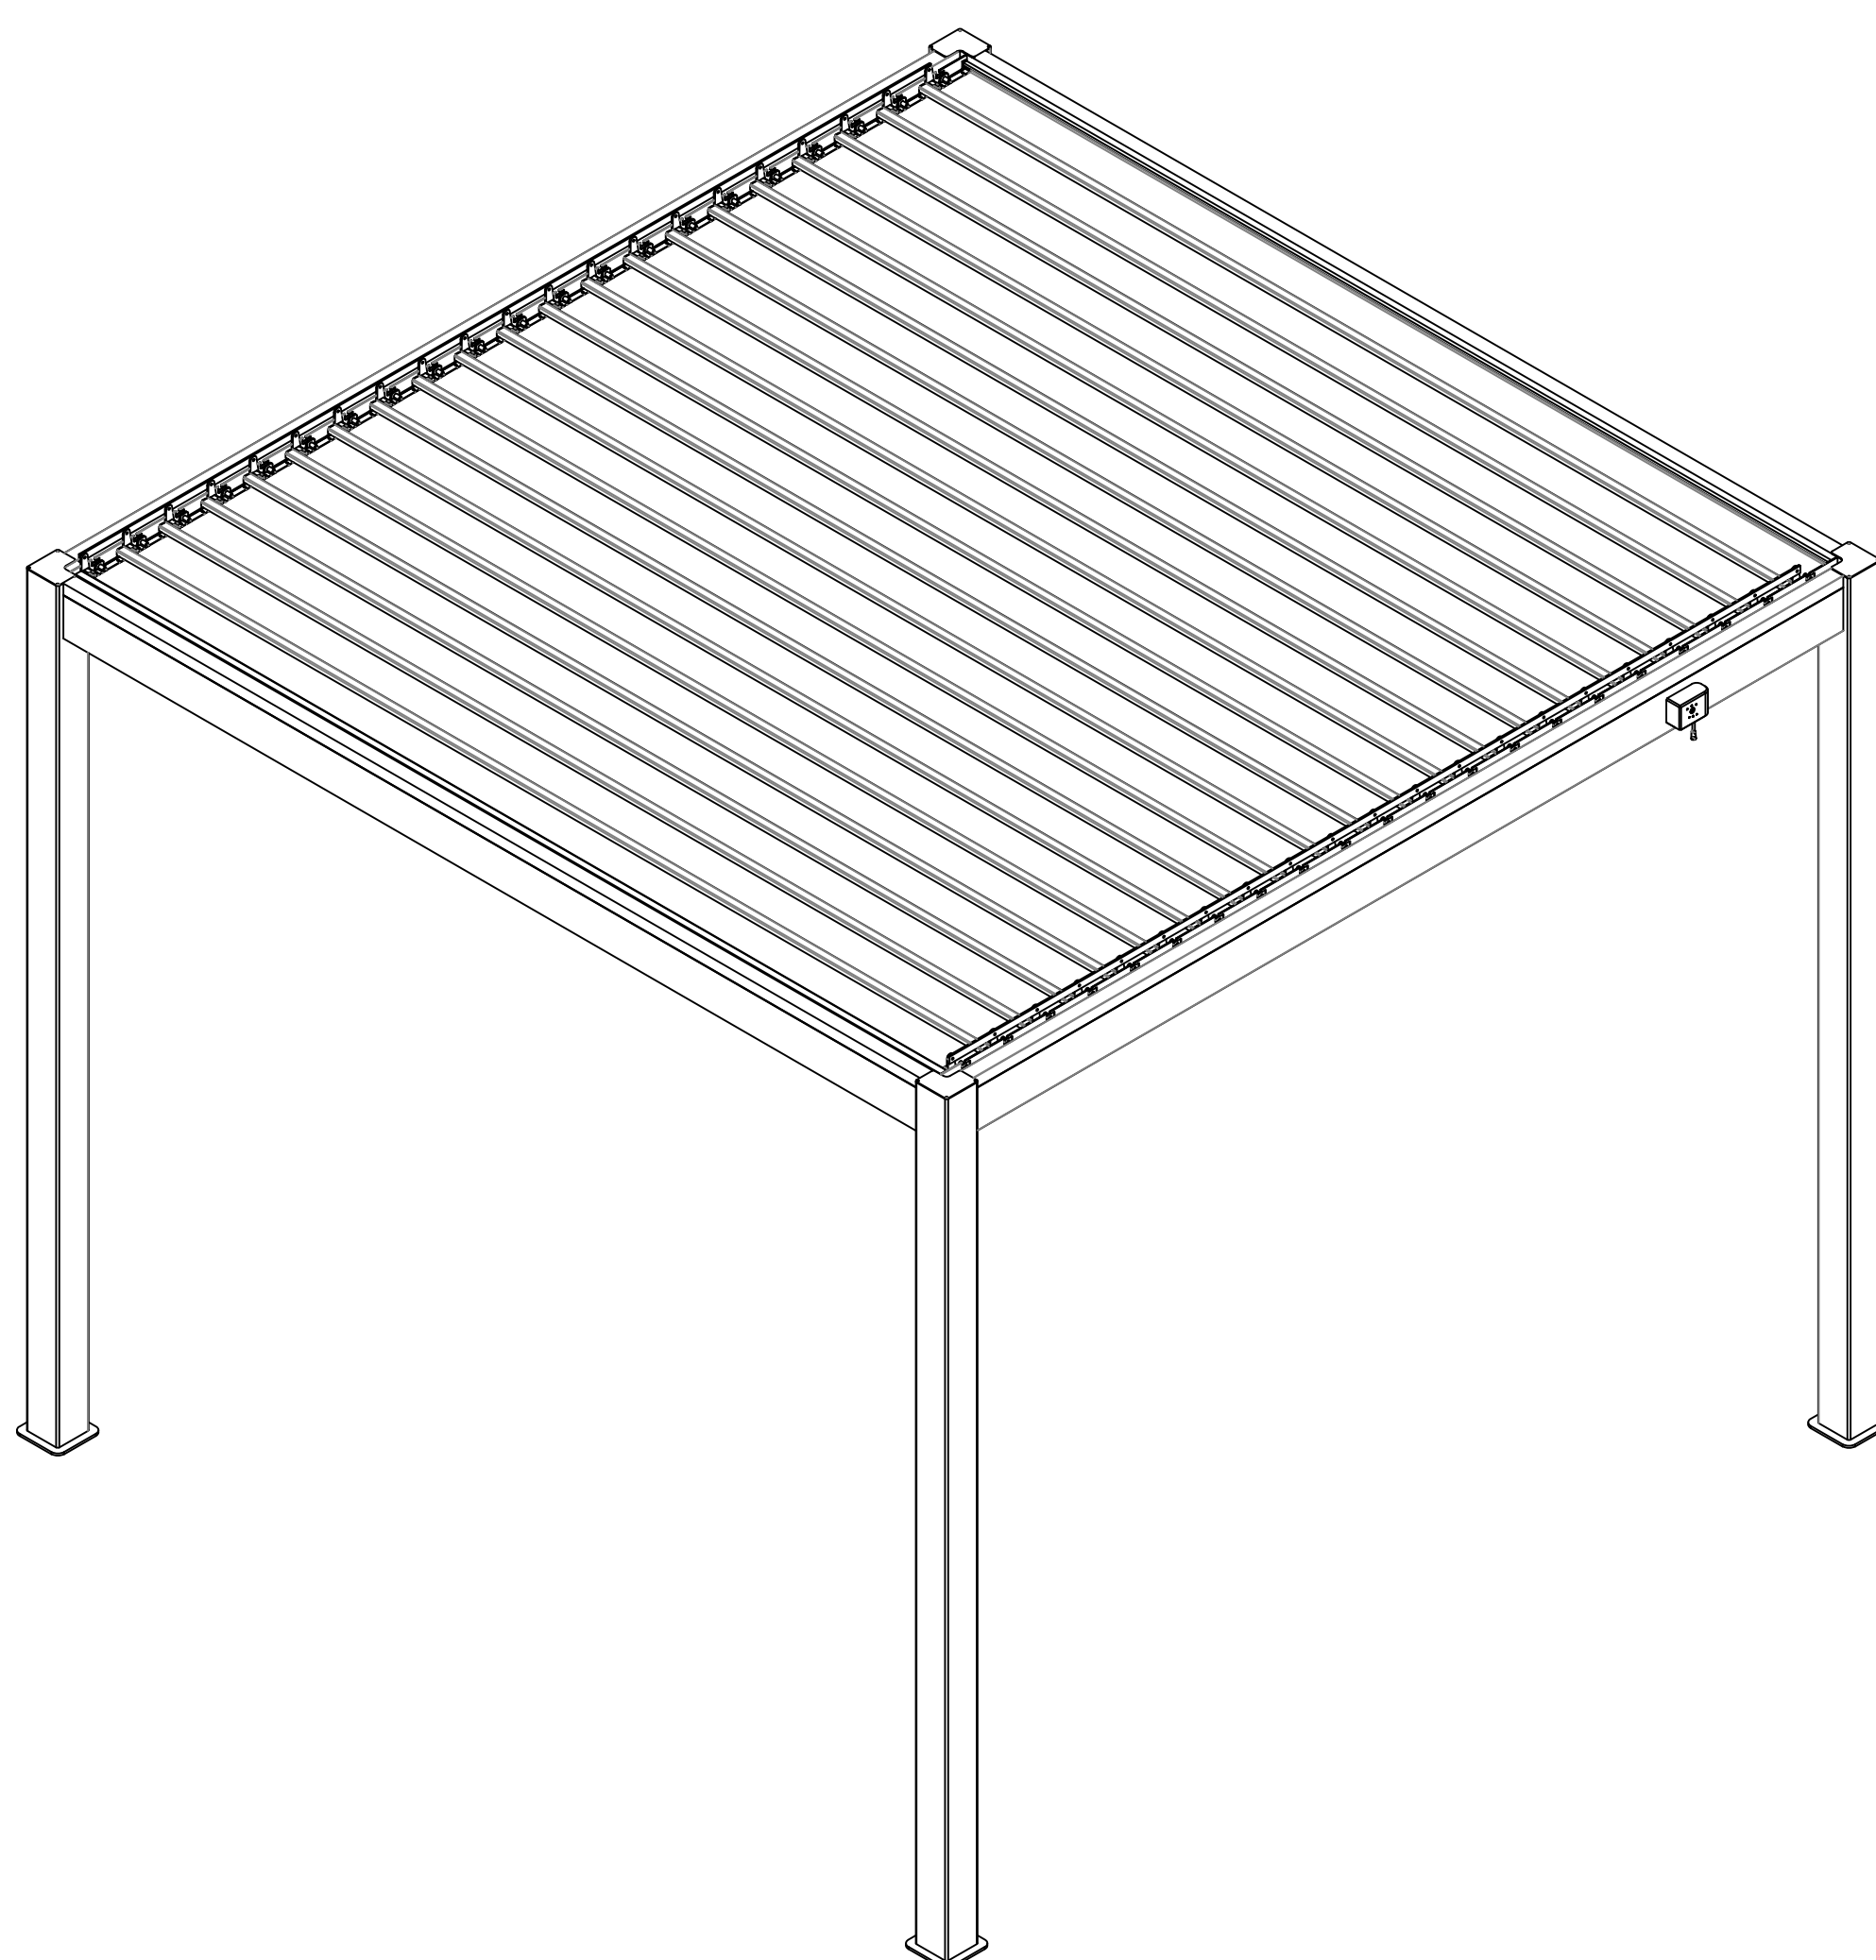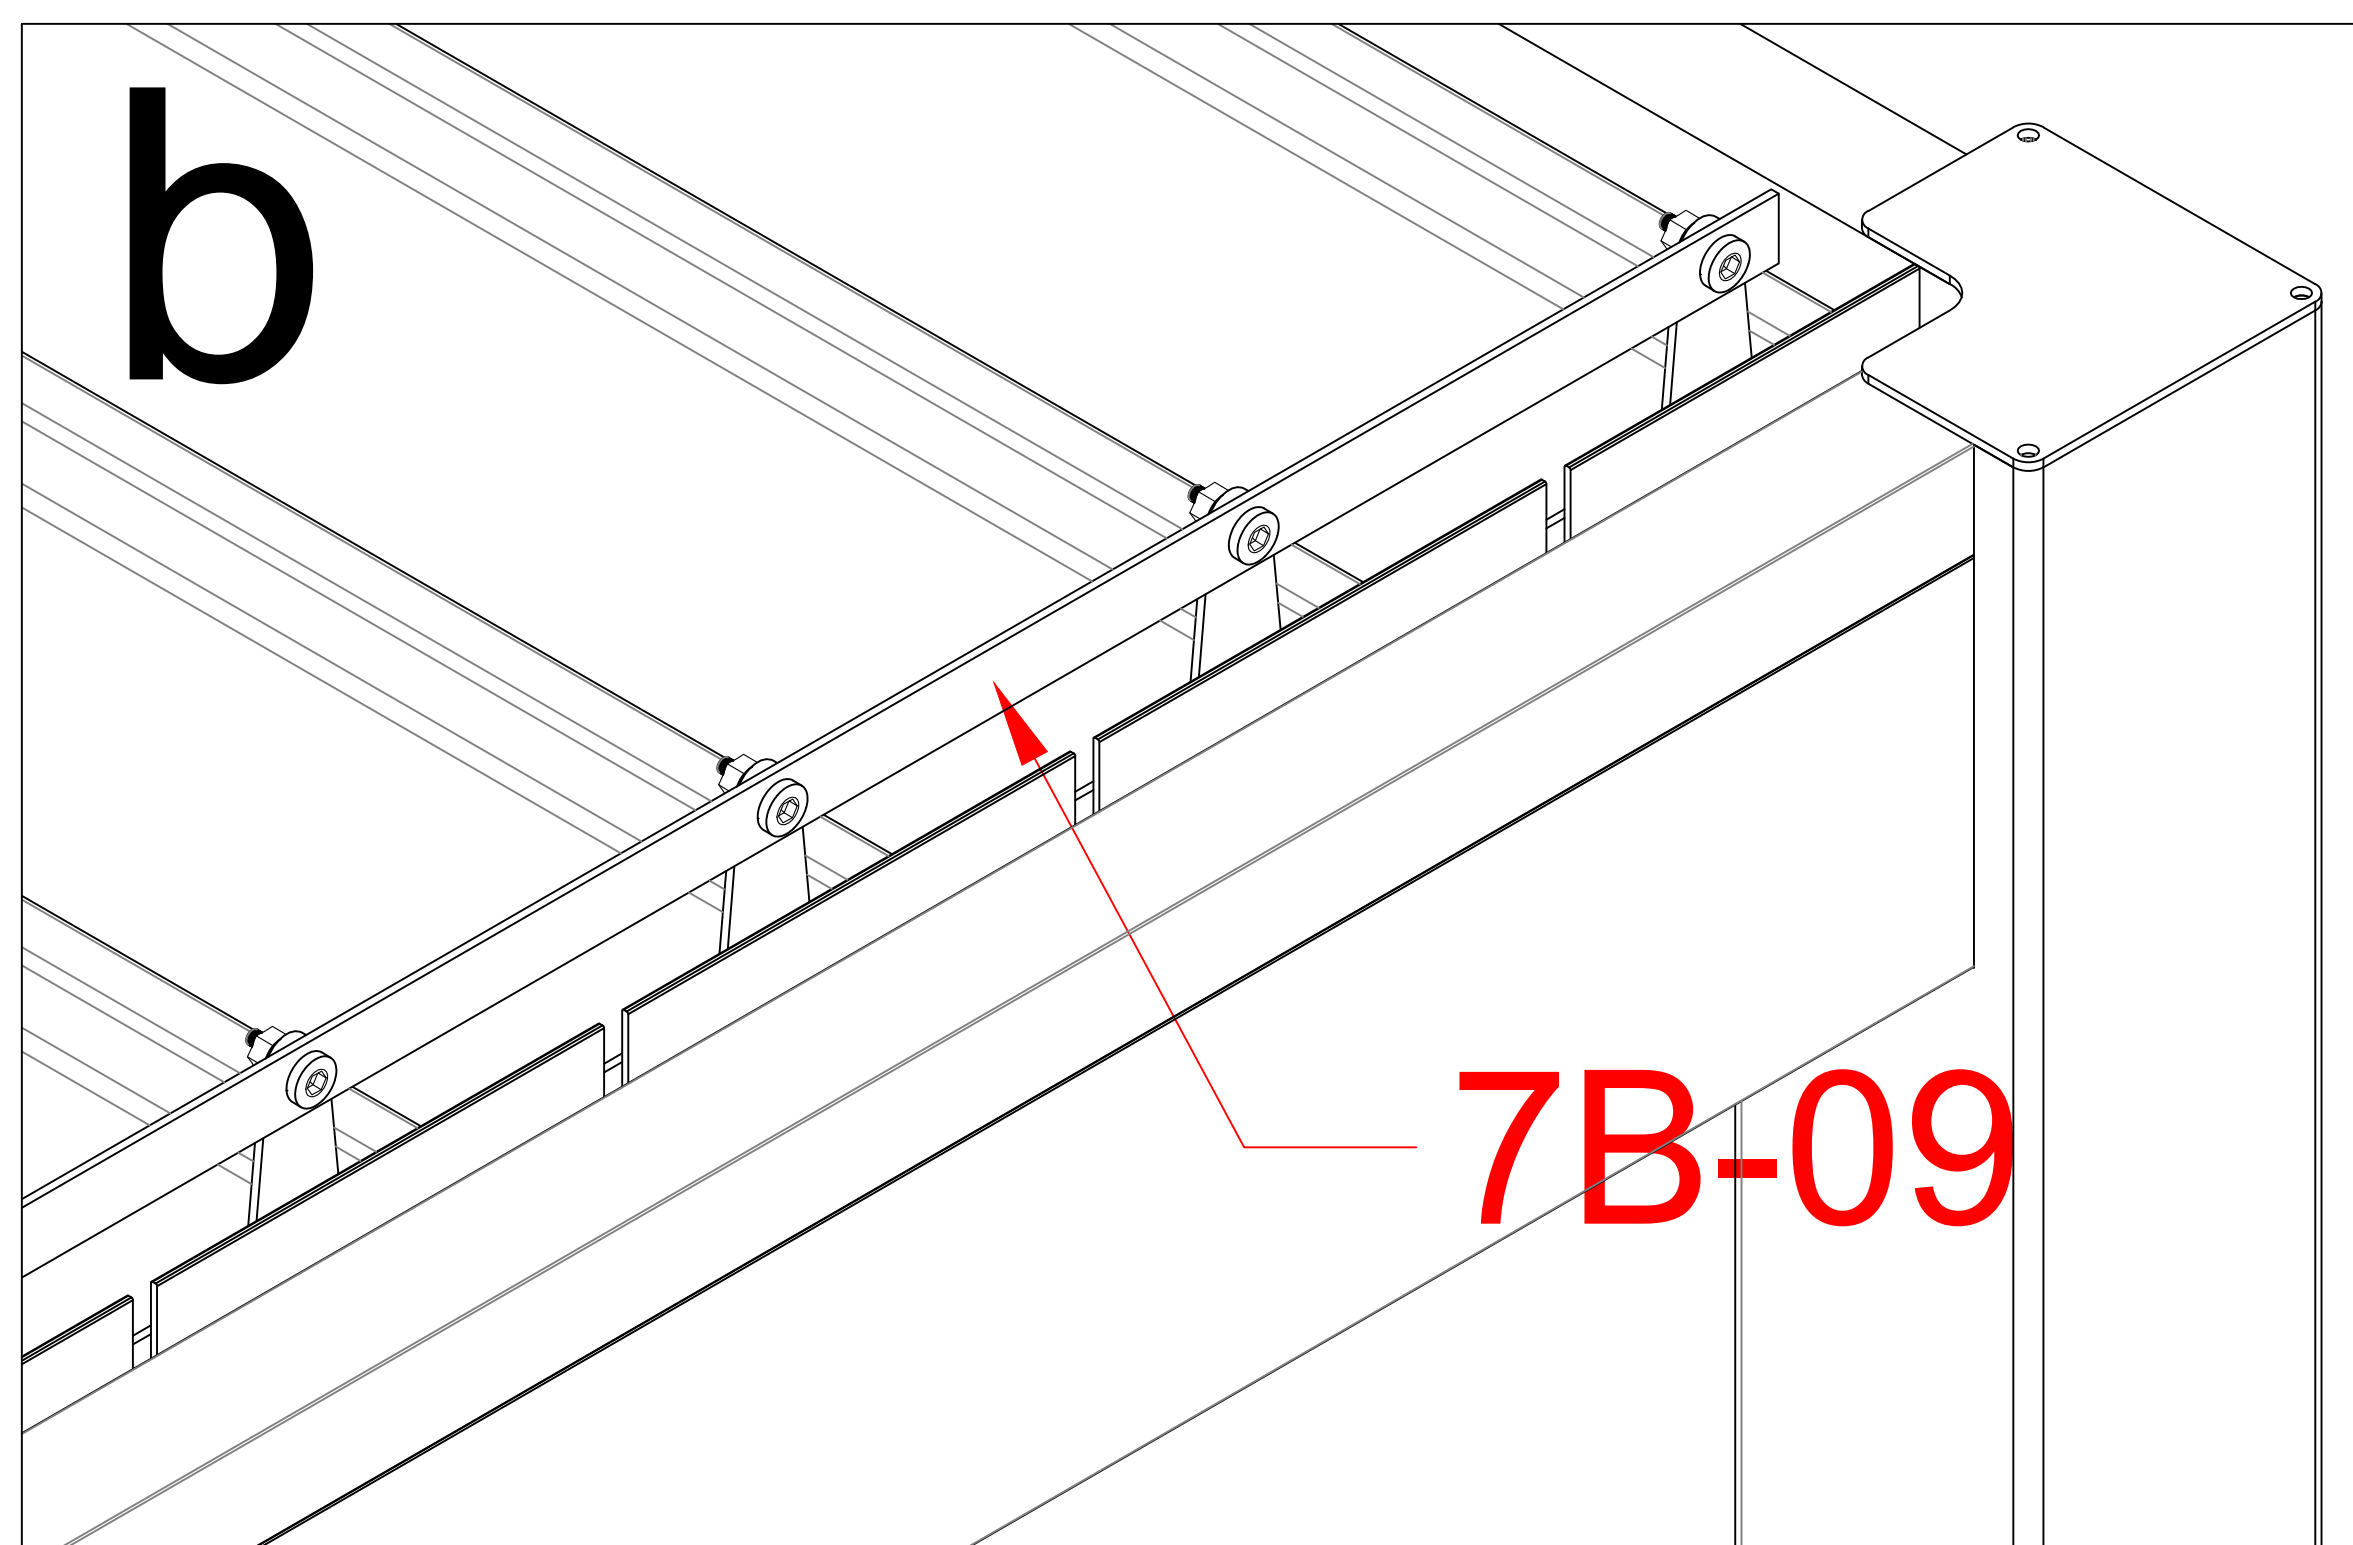





7B-09		2
7B-20		X

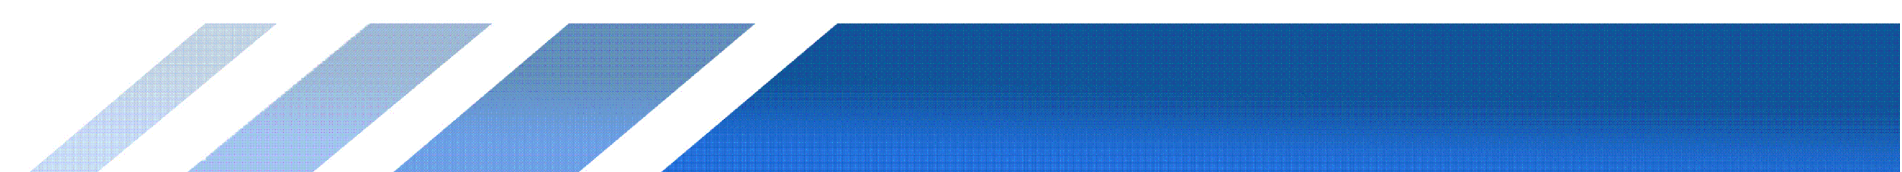


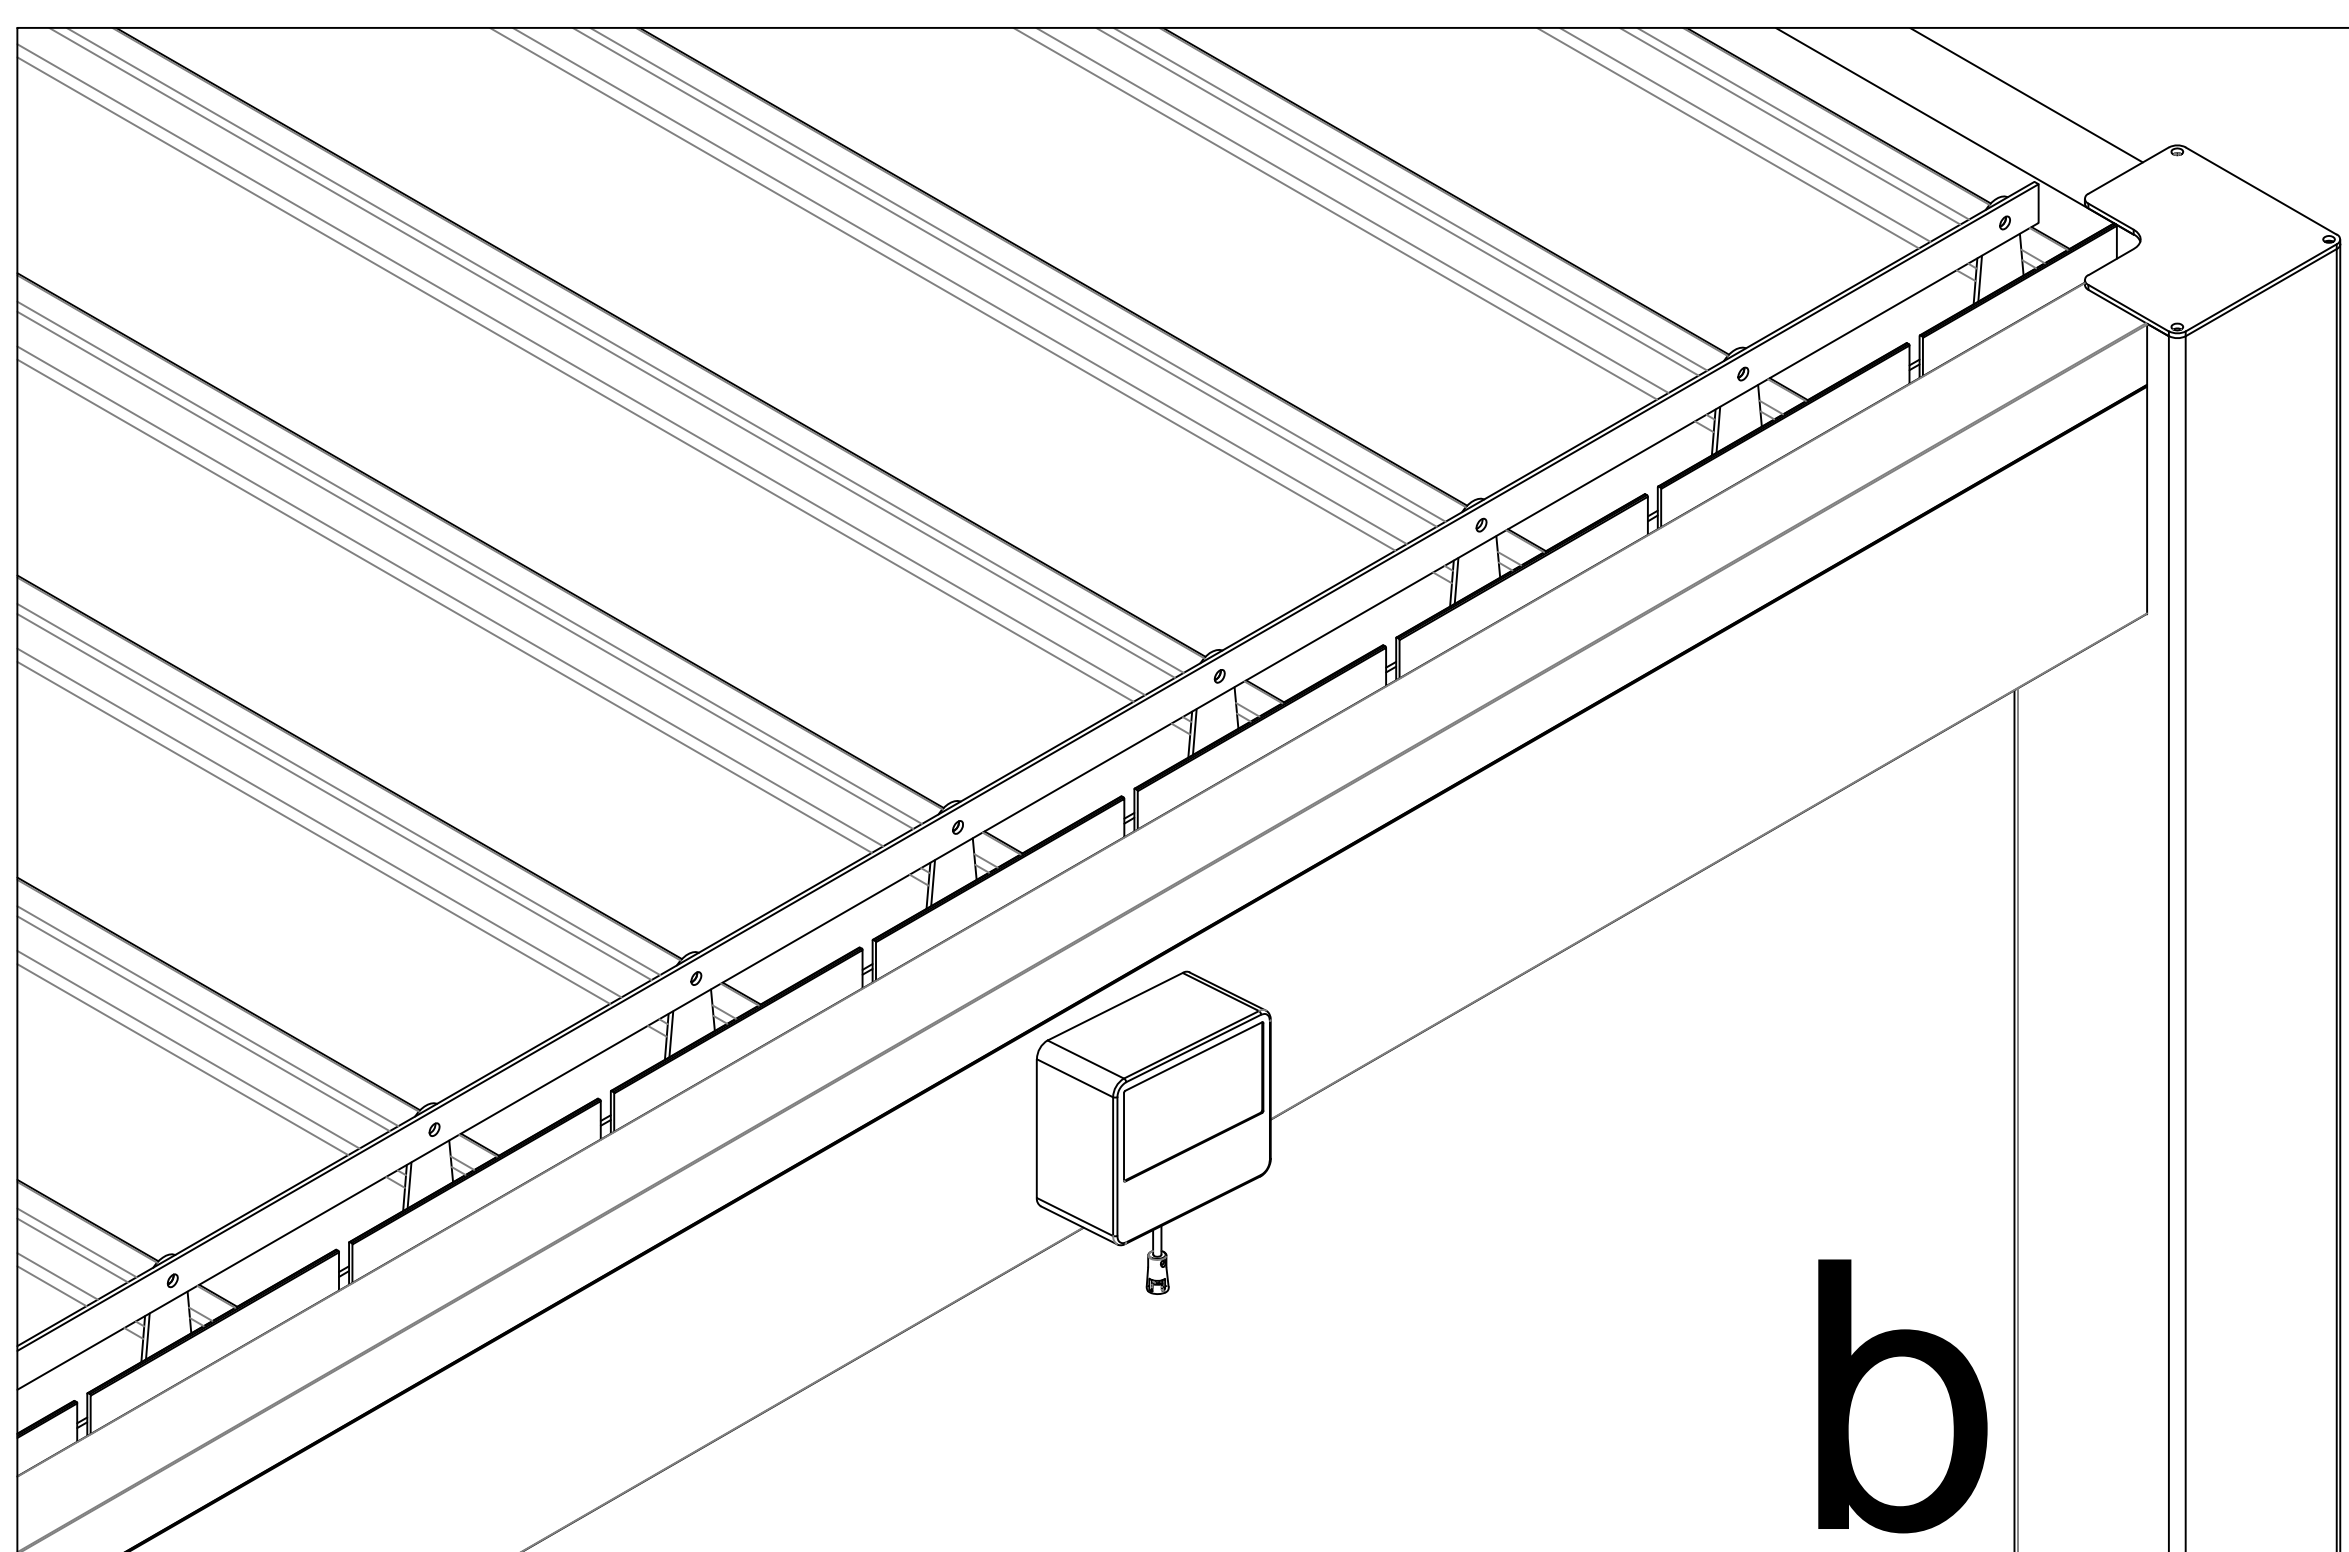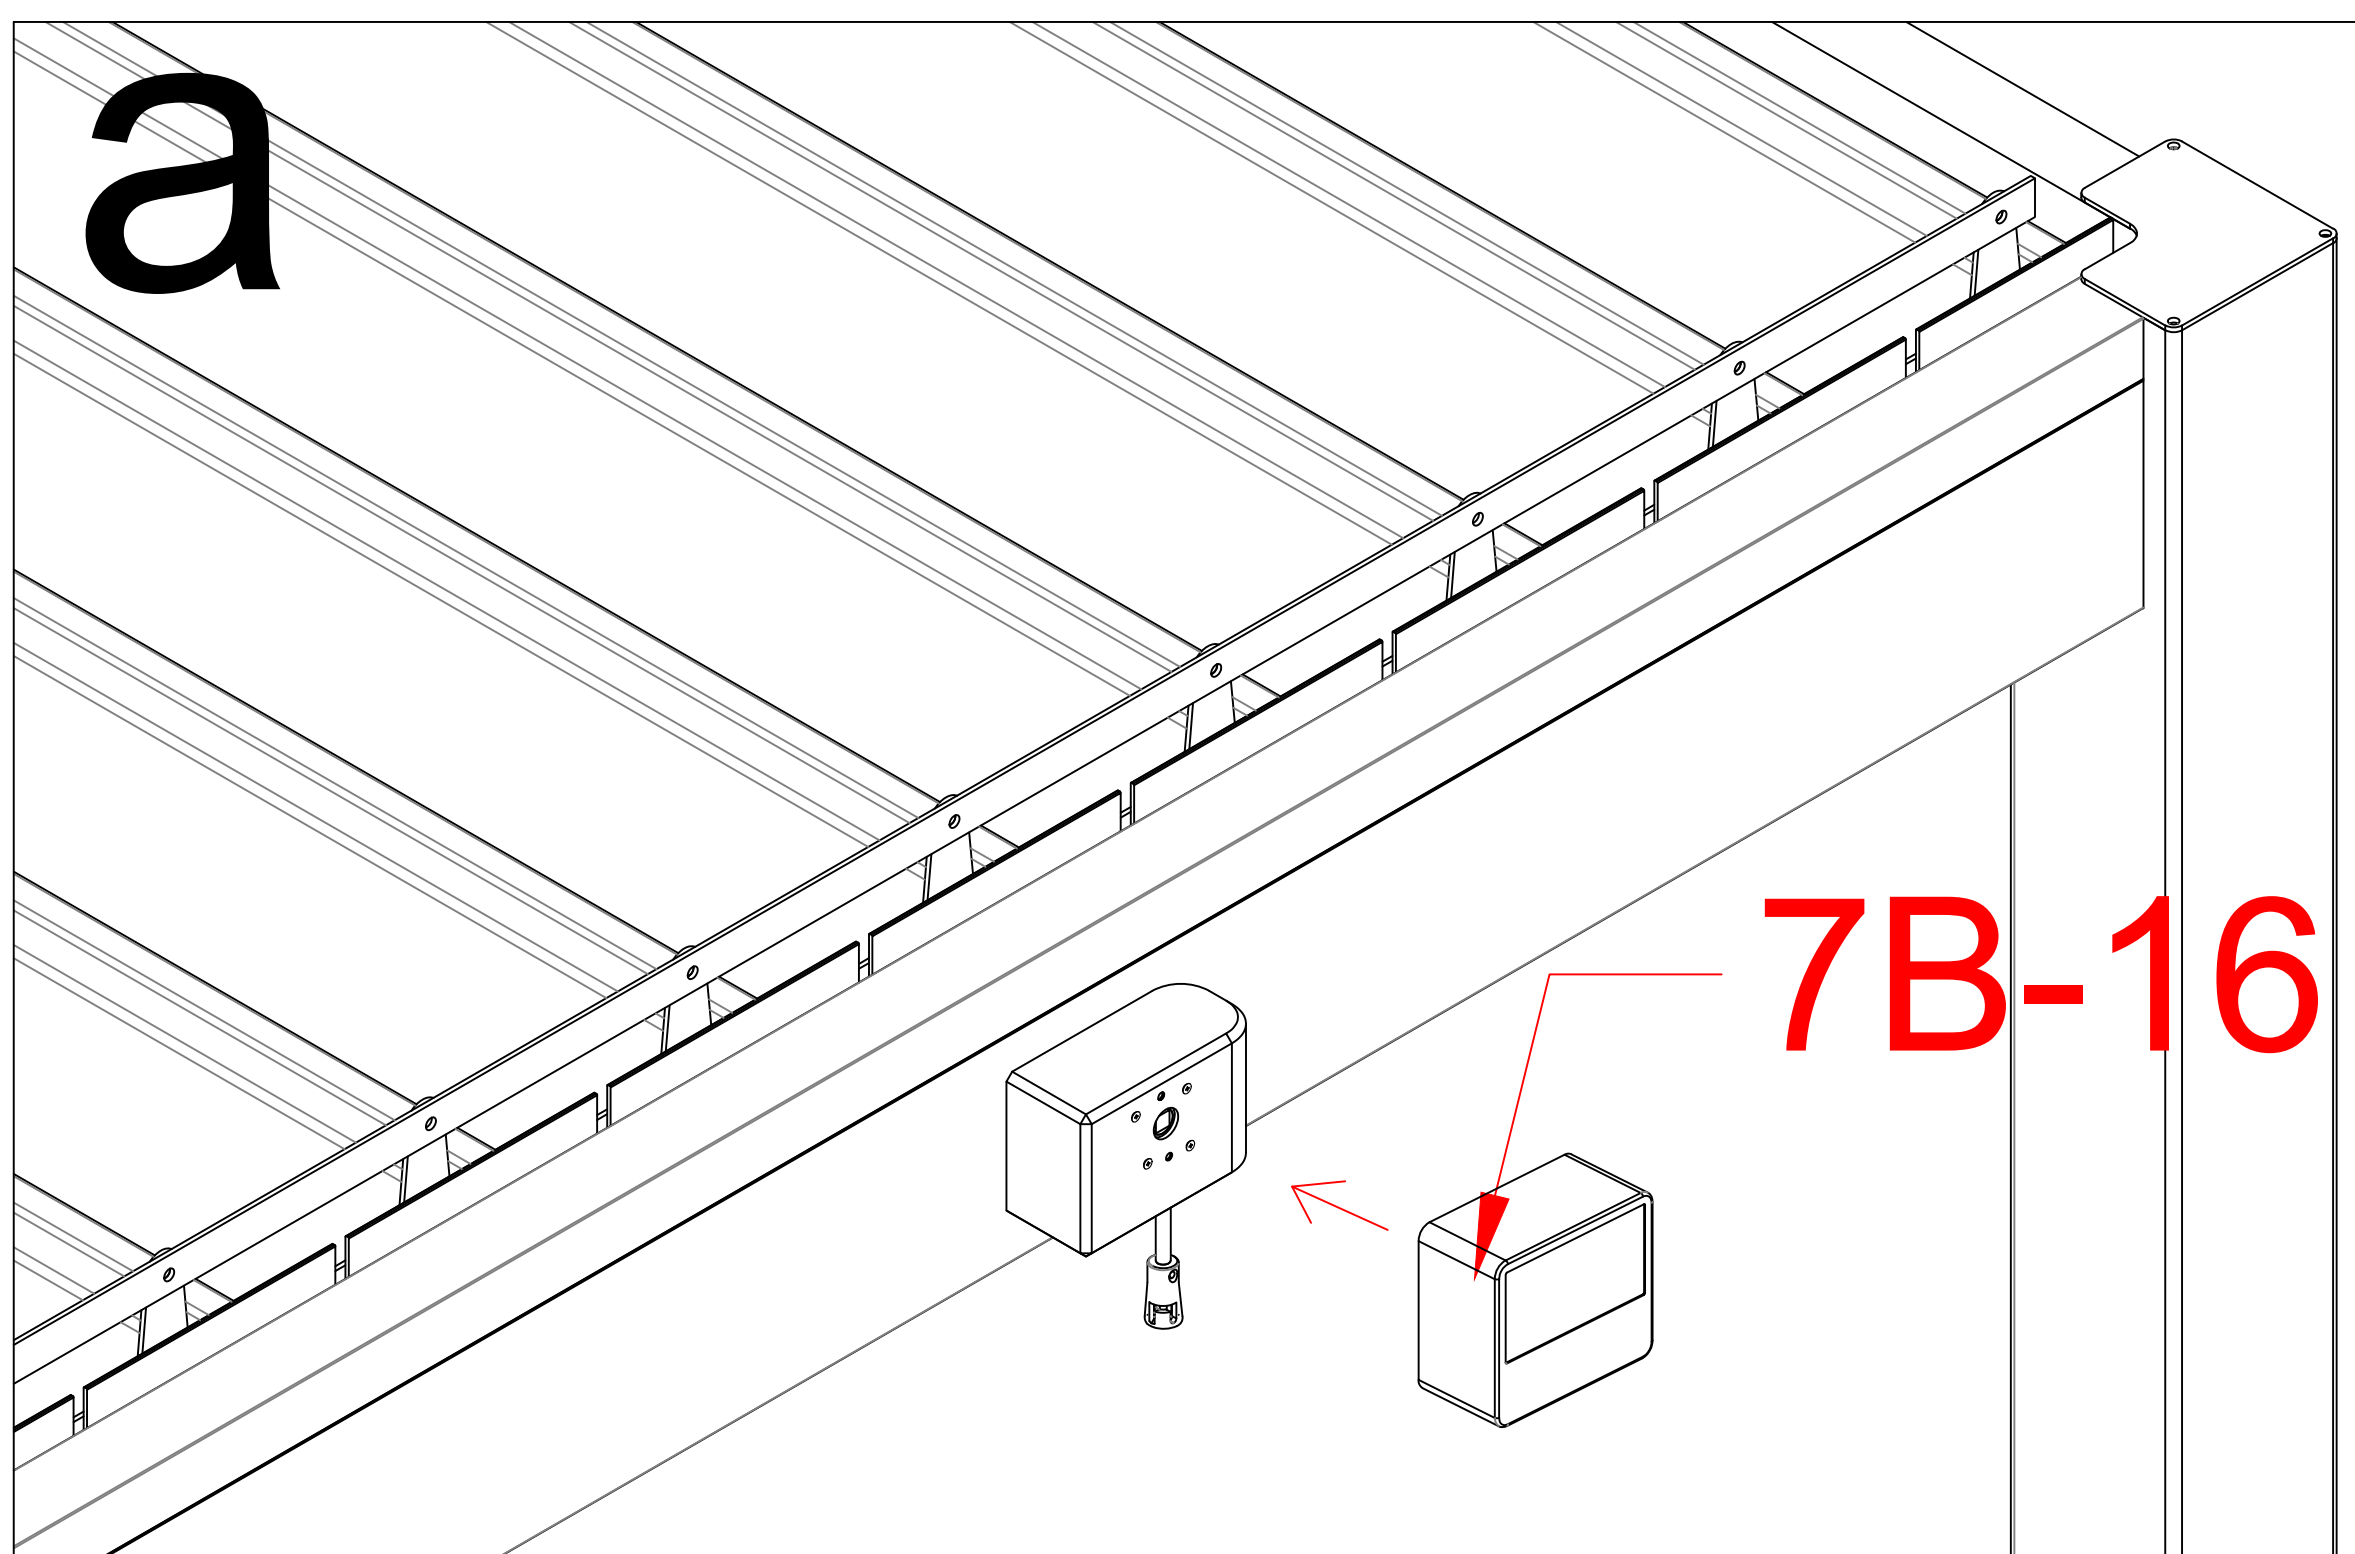



7B-16		1
-------	--	---

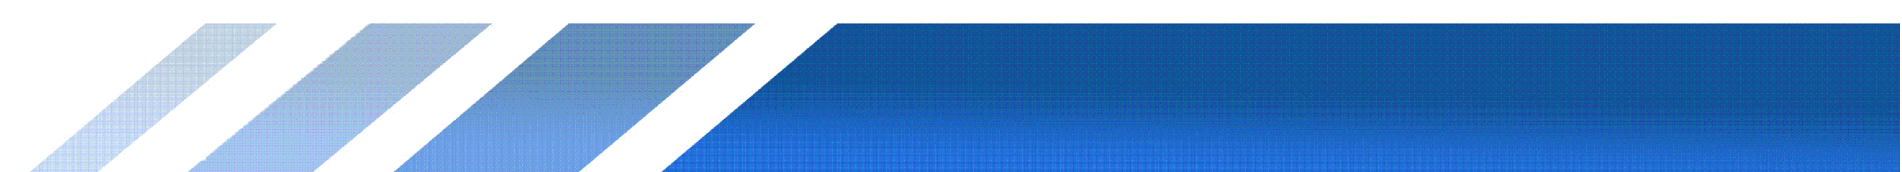

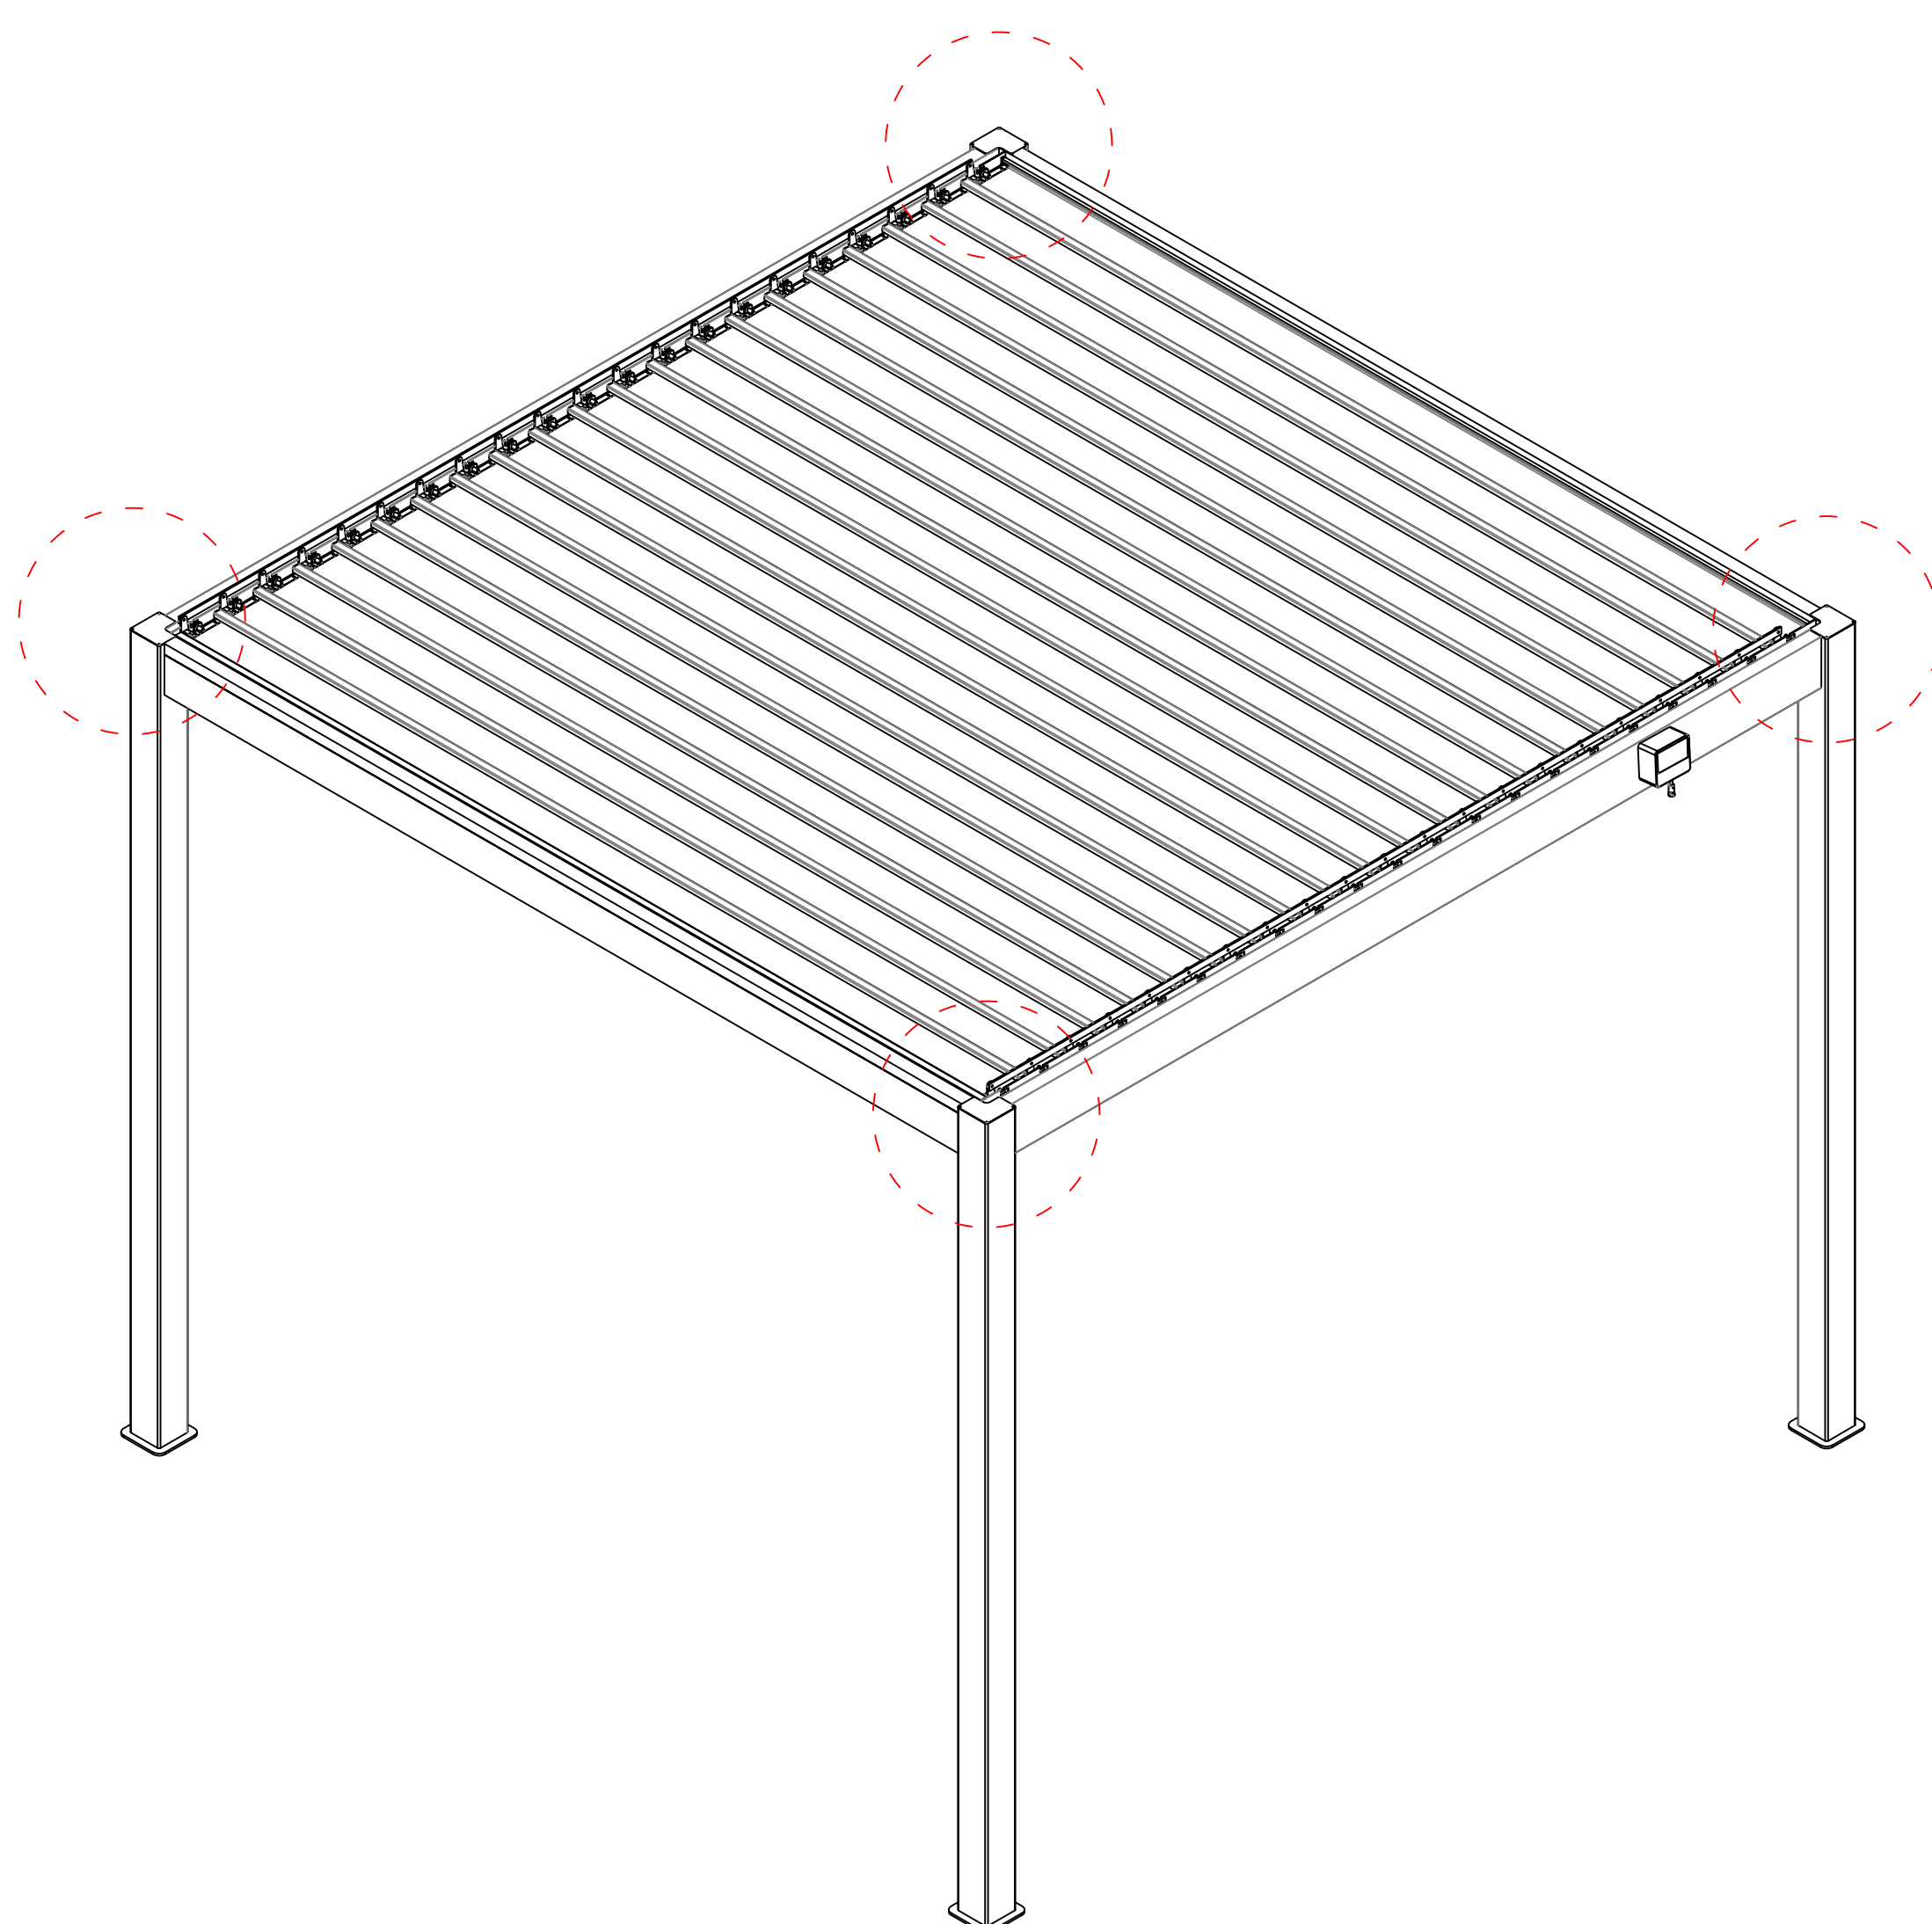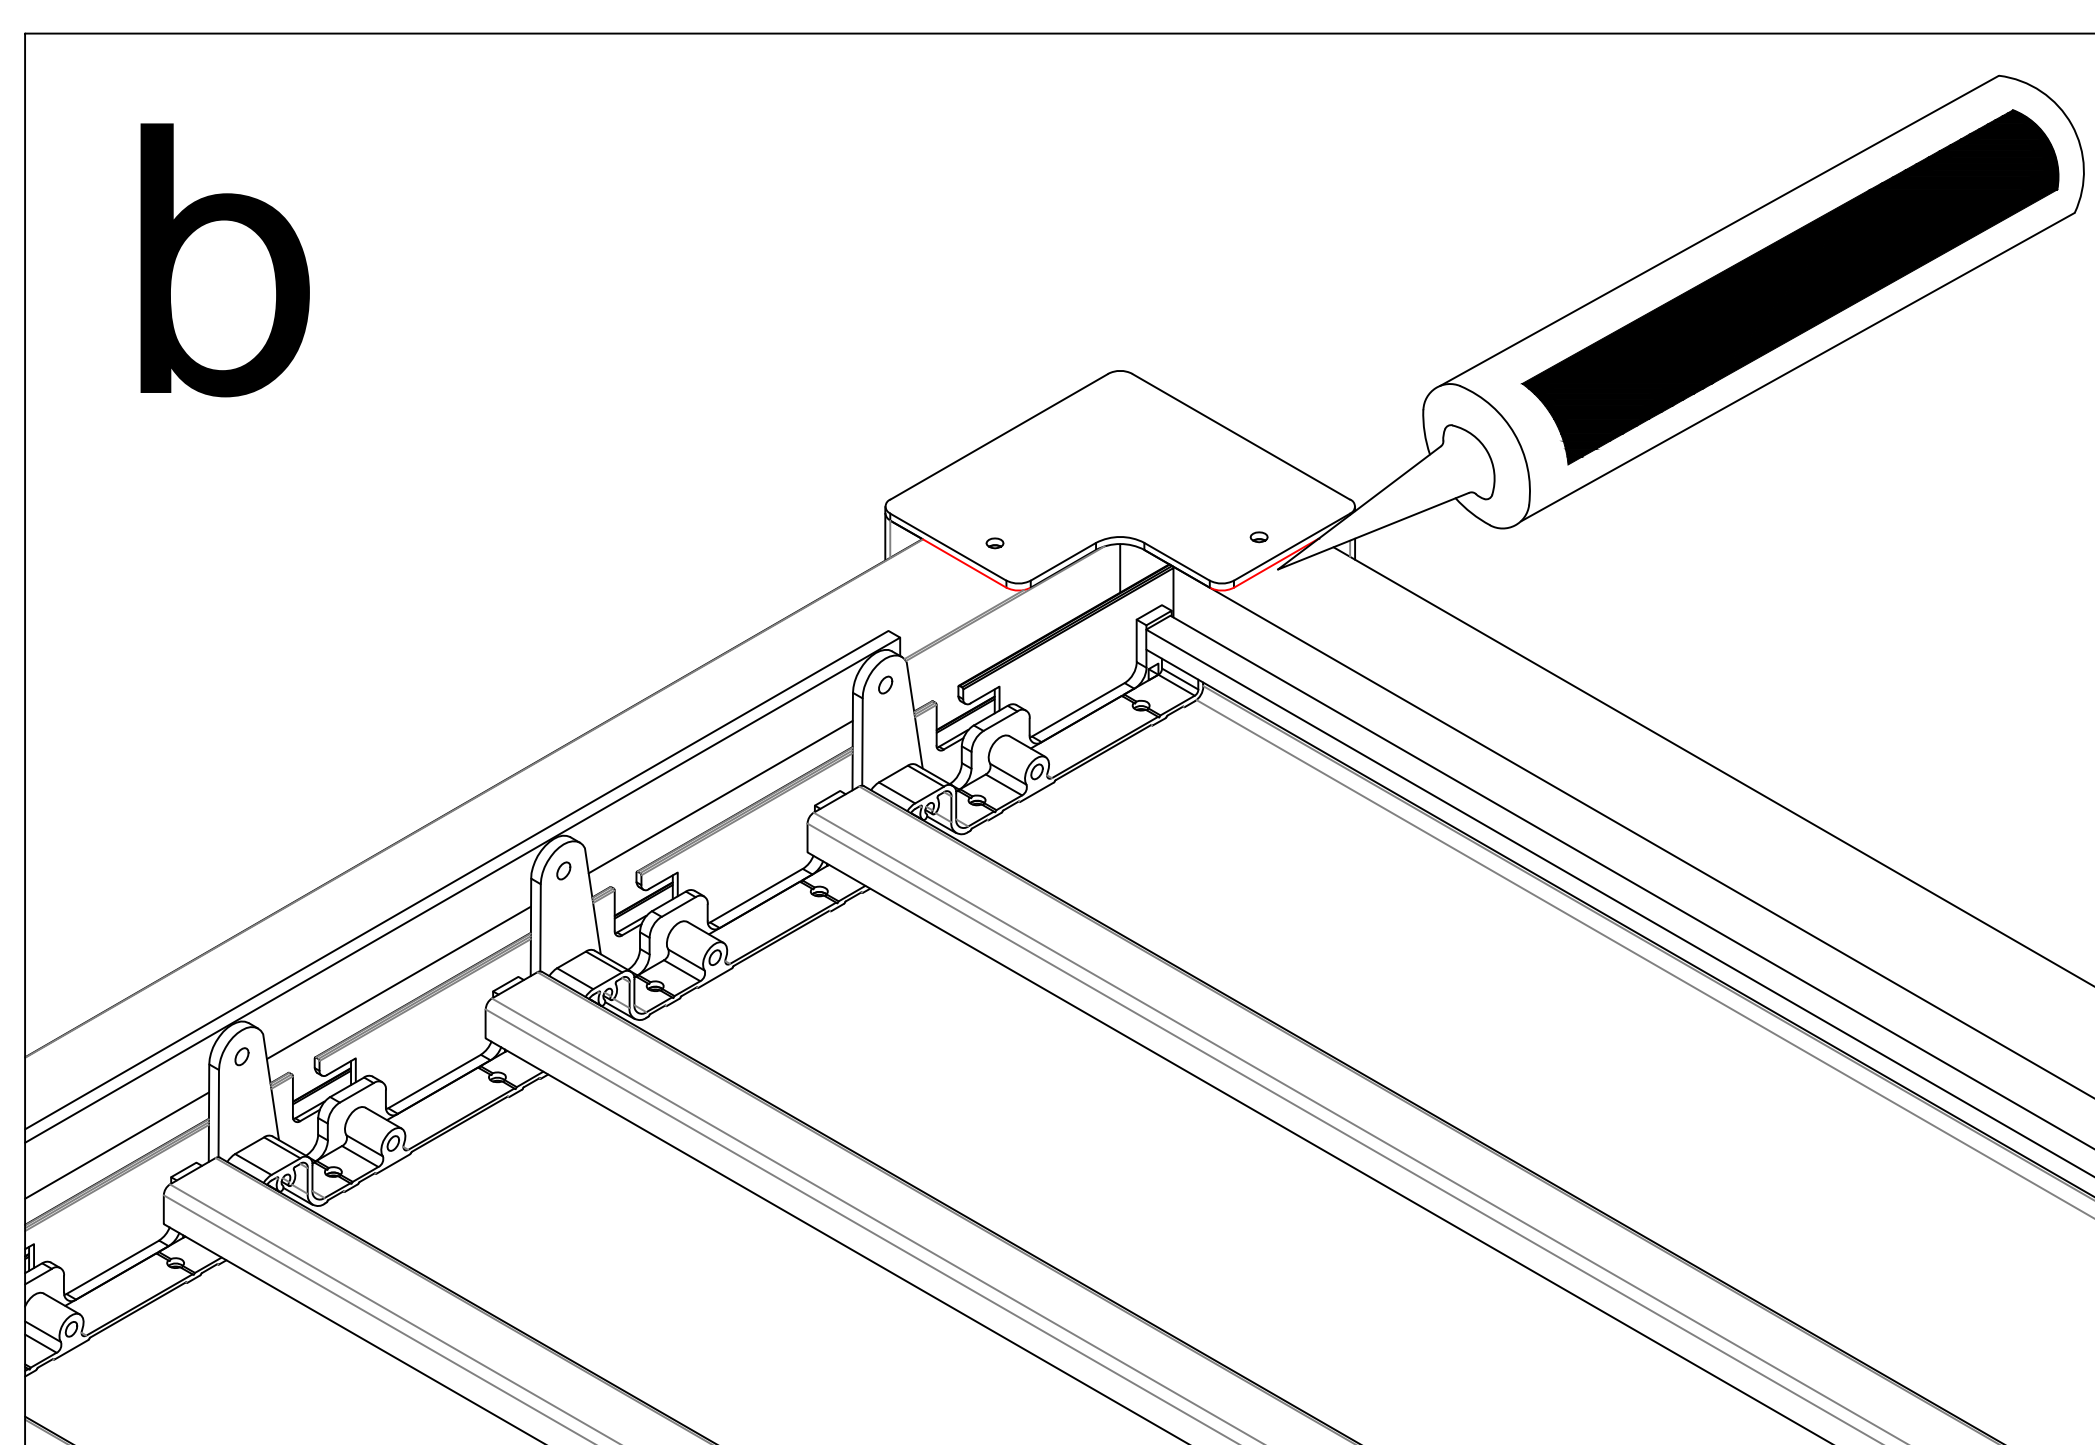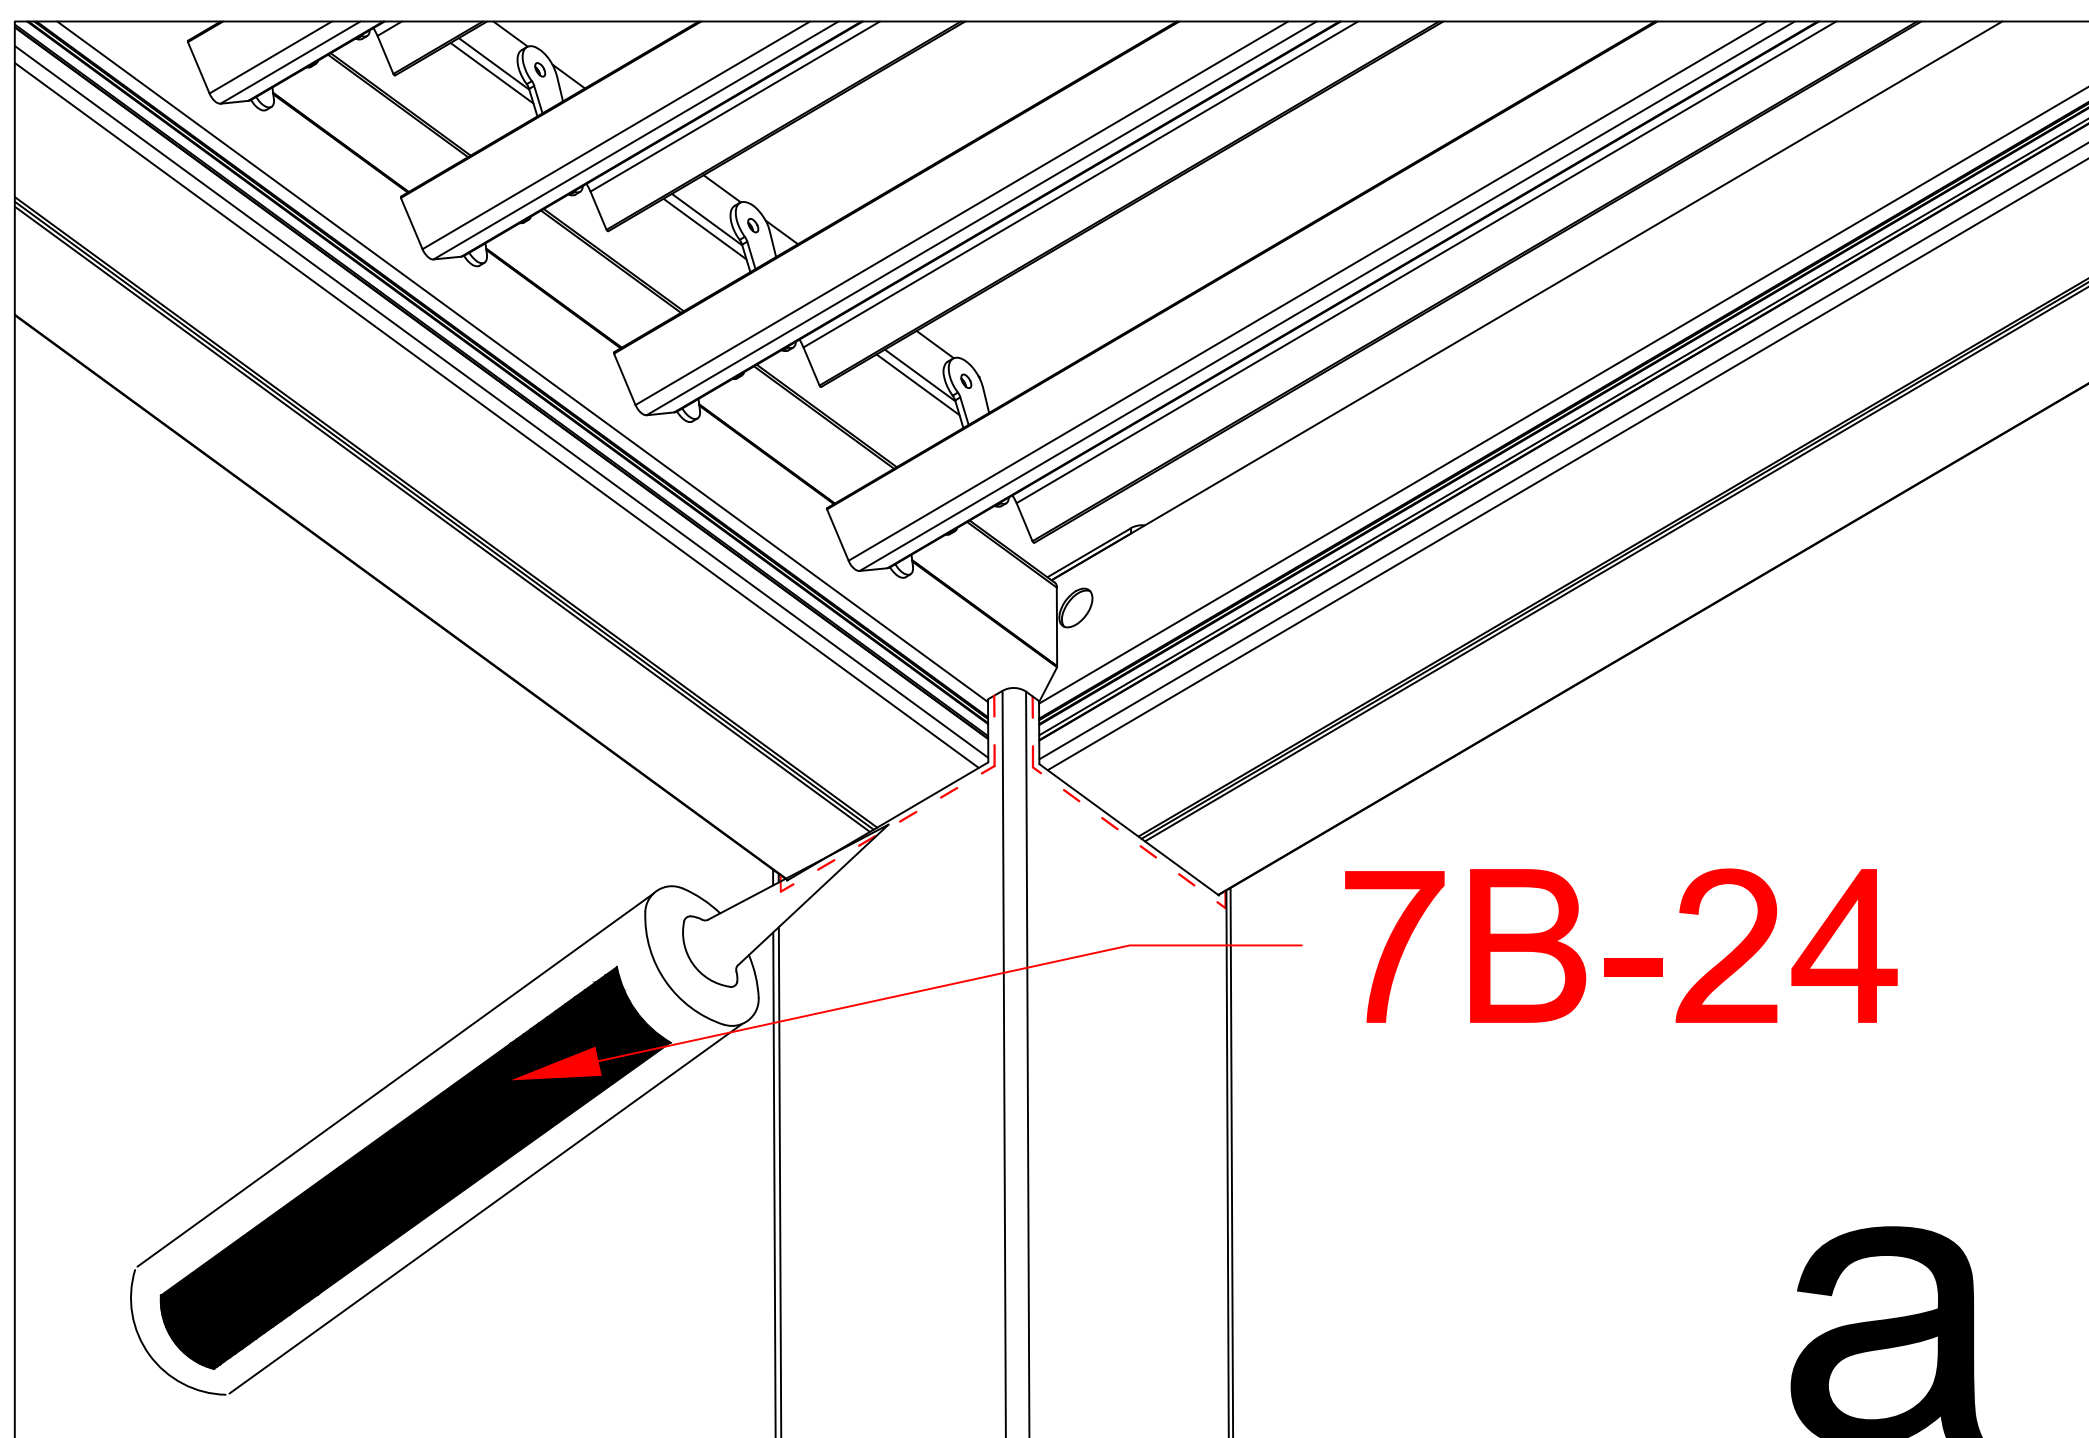


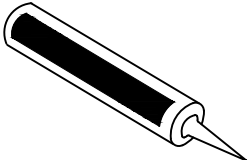
7B-24		1
-------	---	---

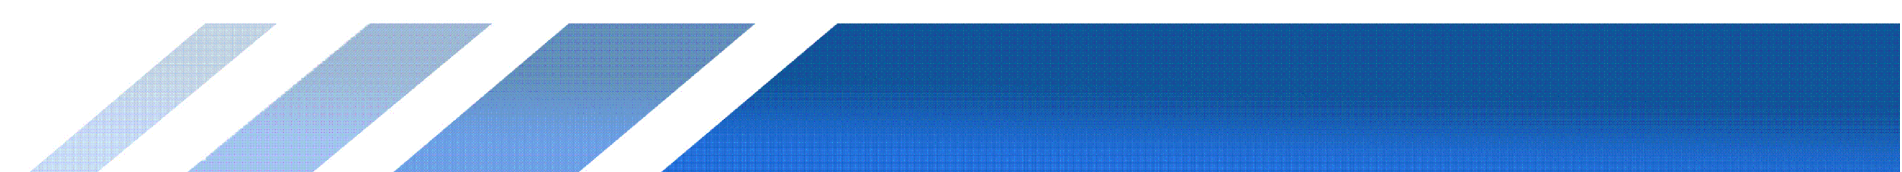

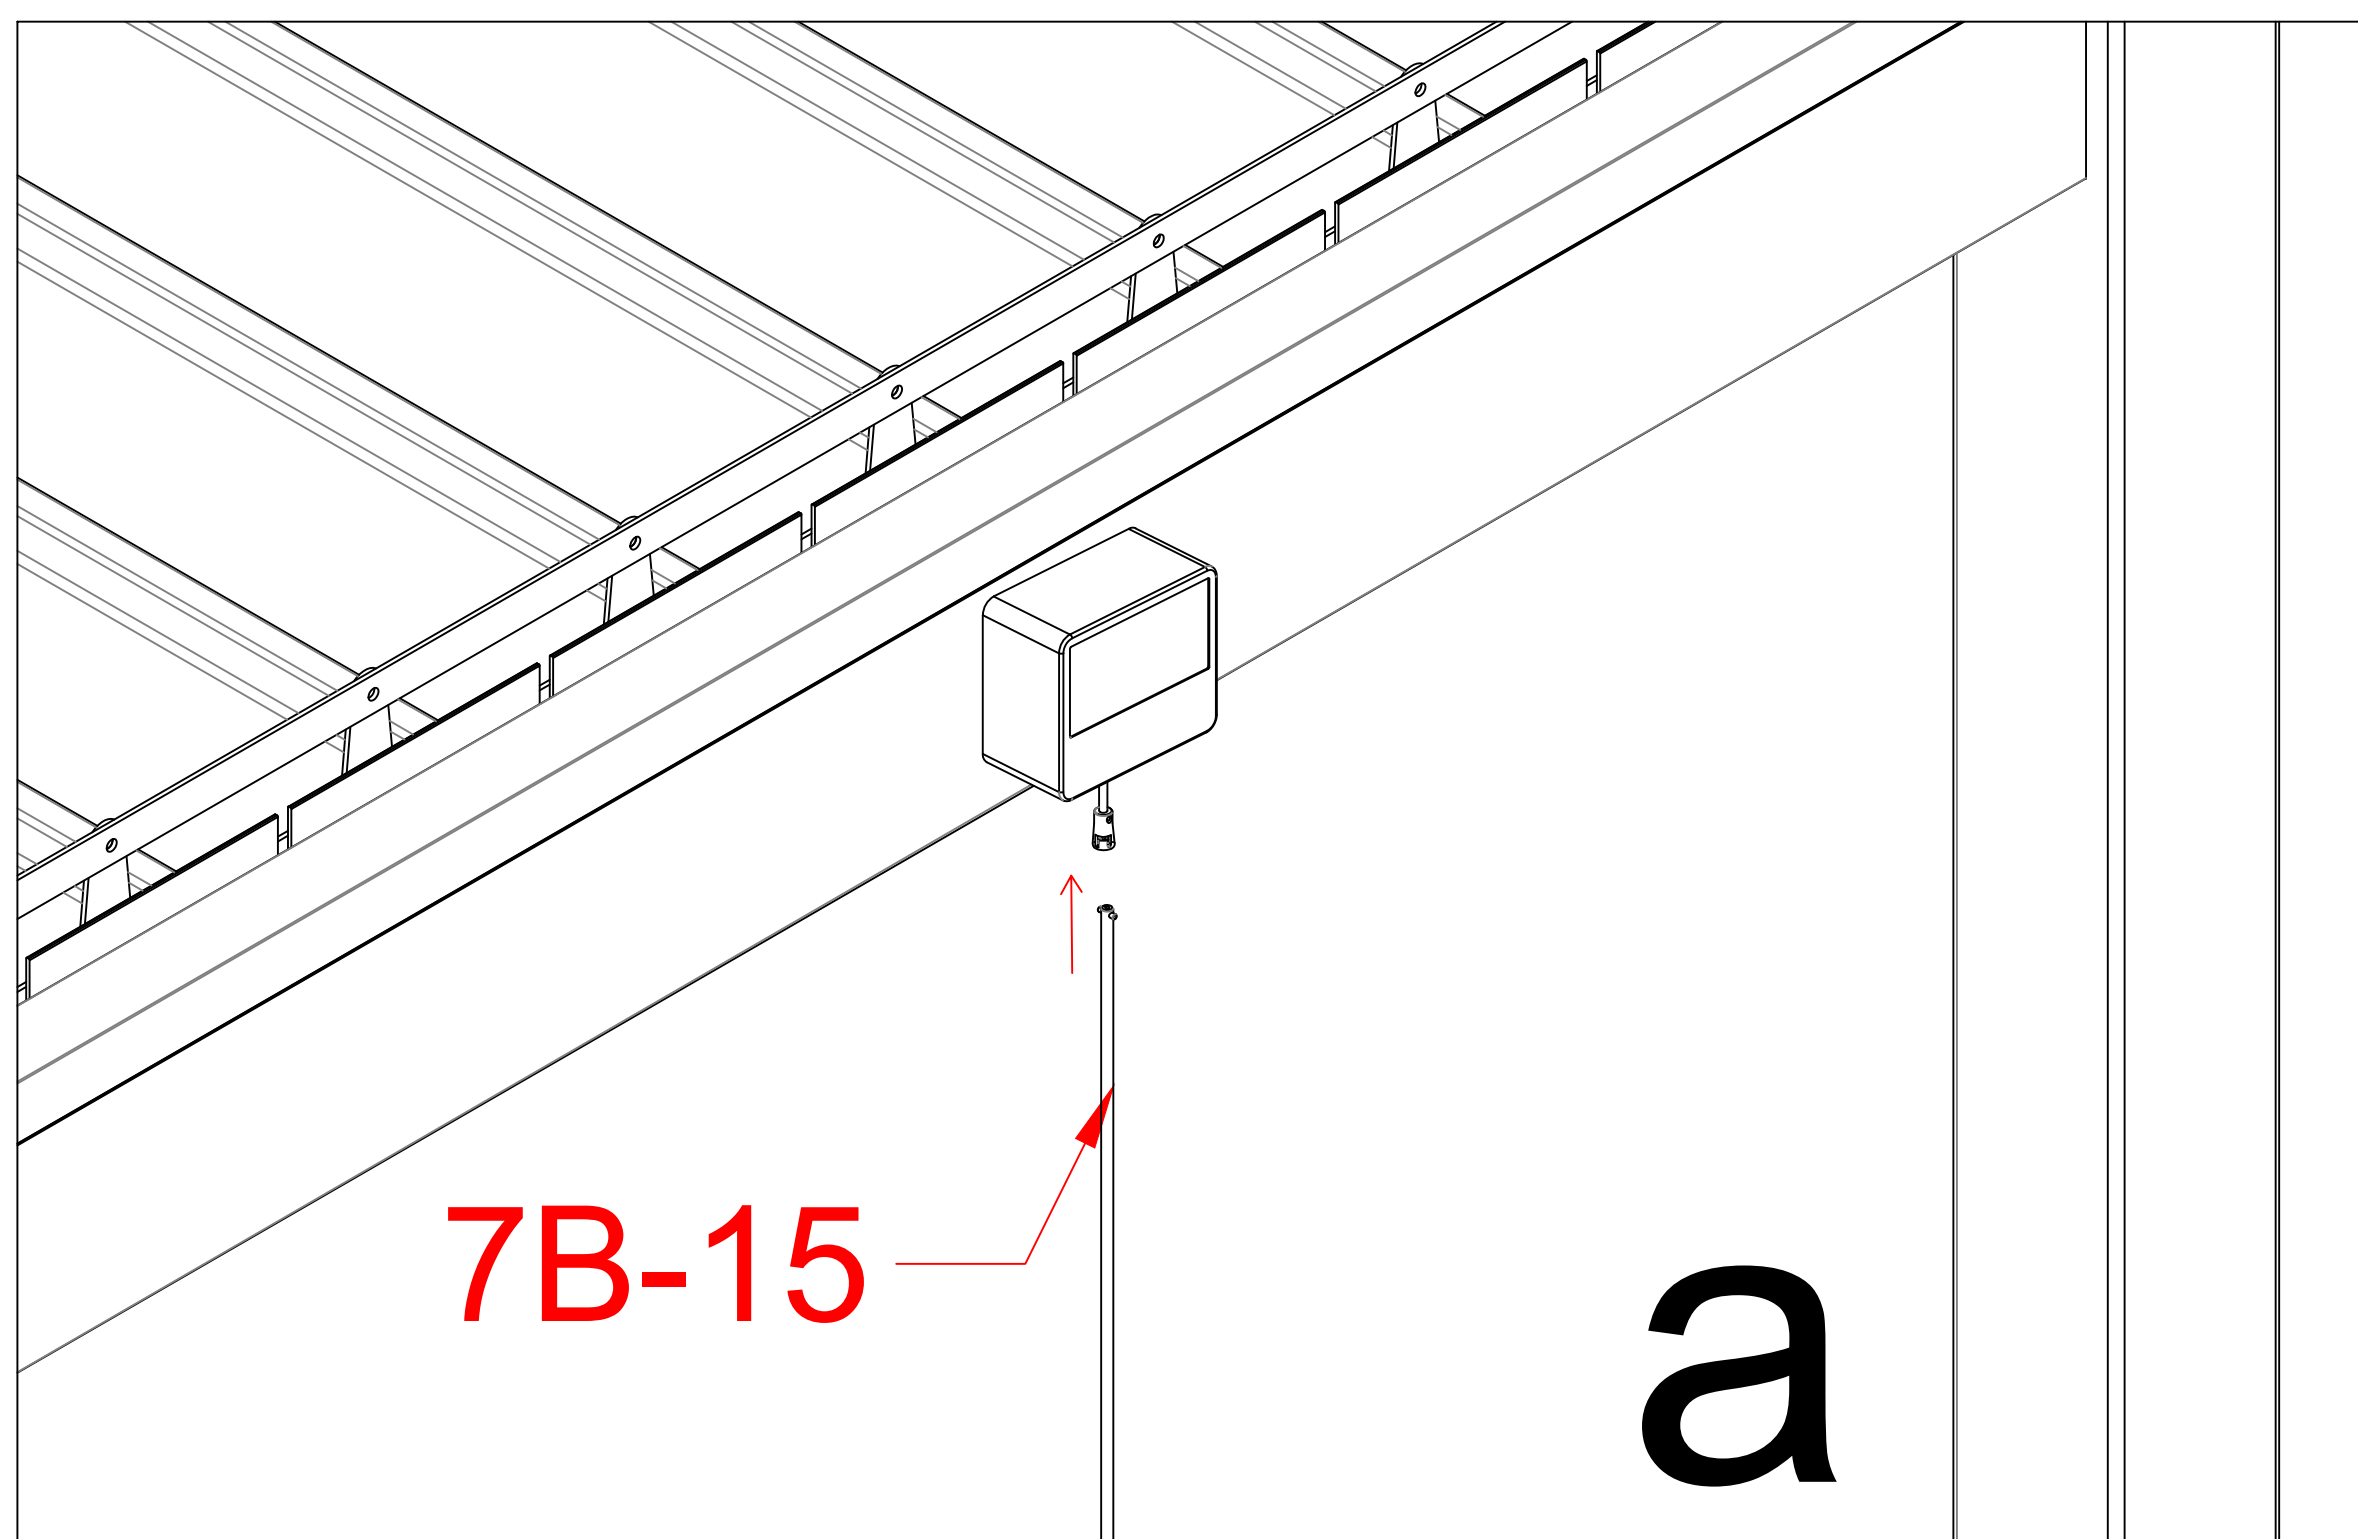

Warning

In Snow season or in case of snow forecast open up your shutters in vertical position to avoid any damaging on your pergola. .

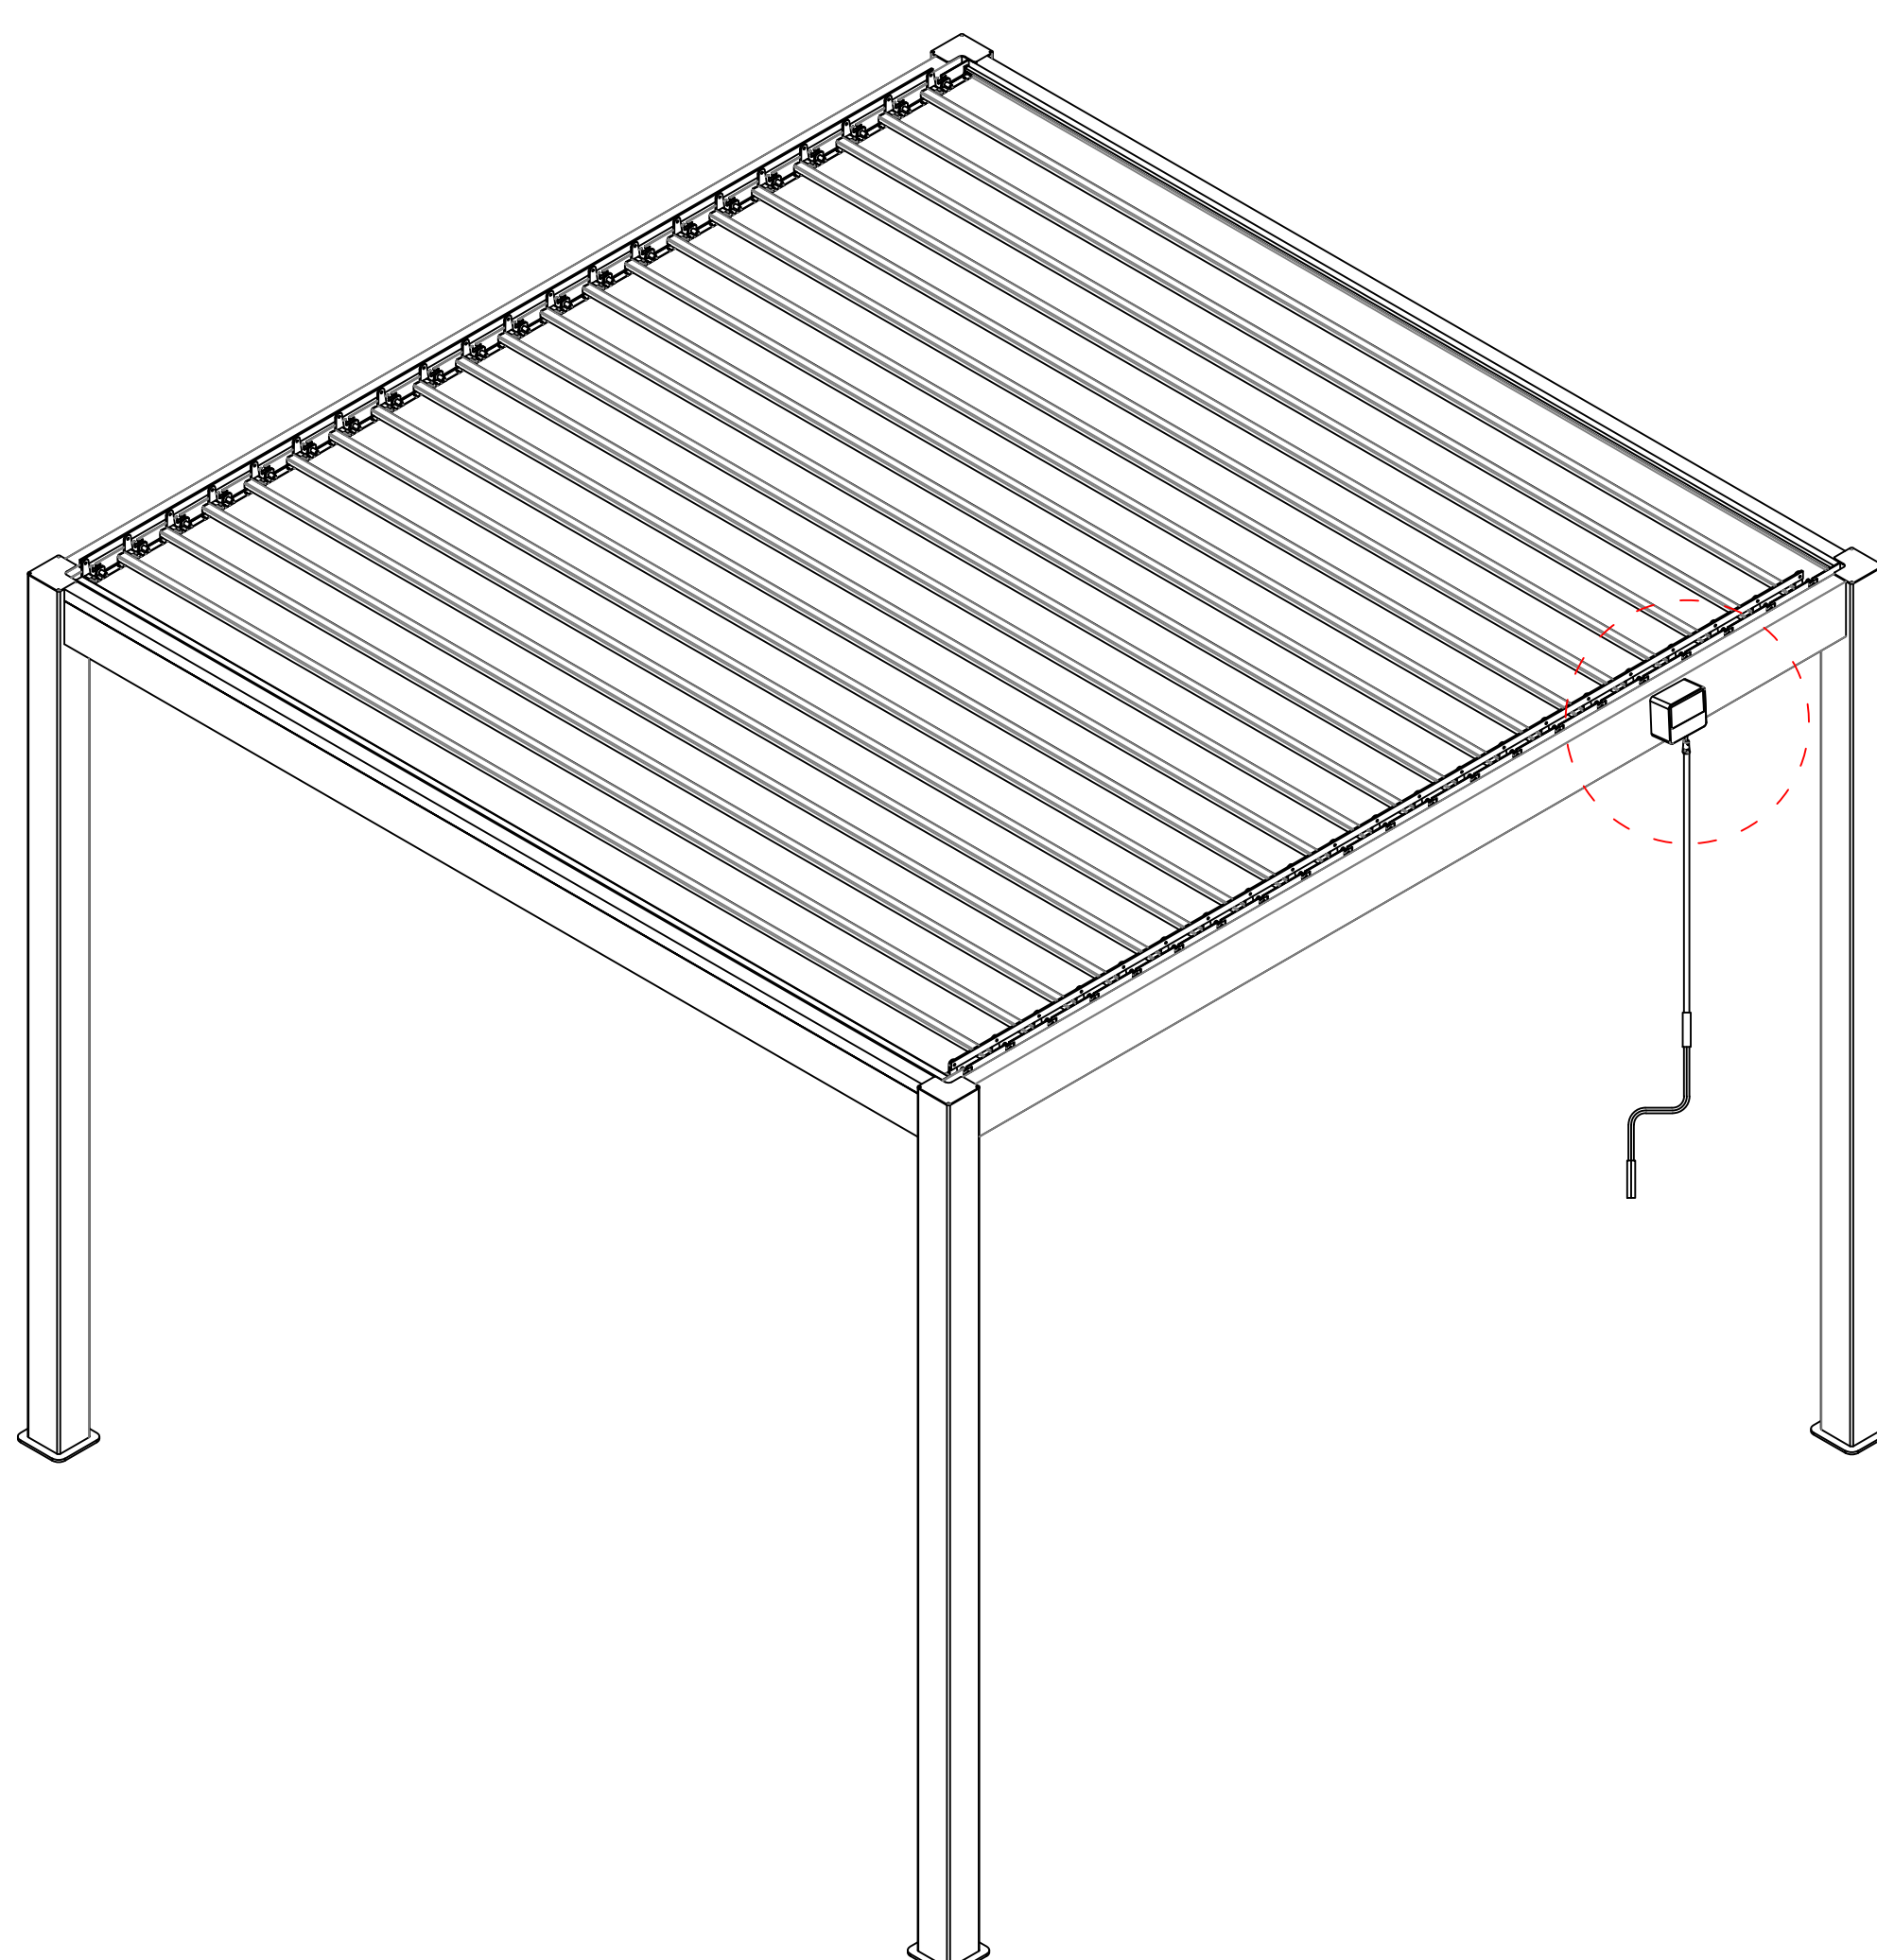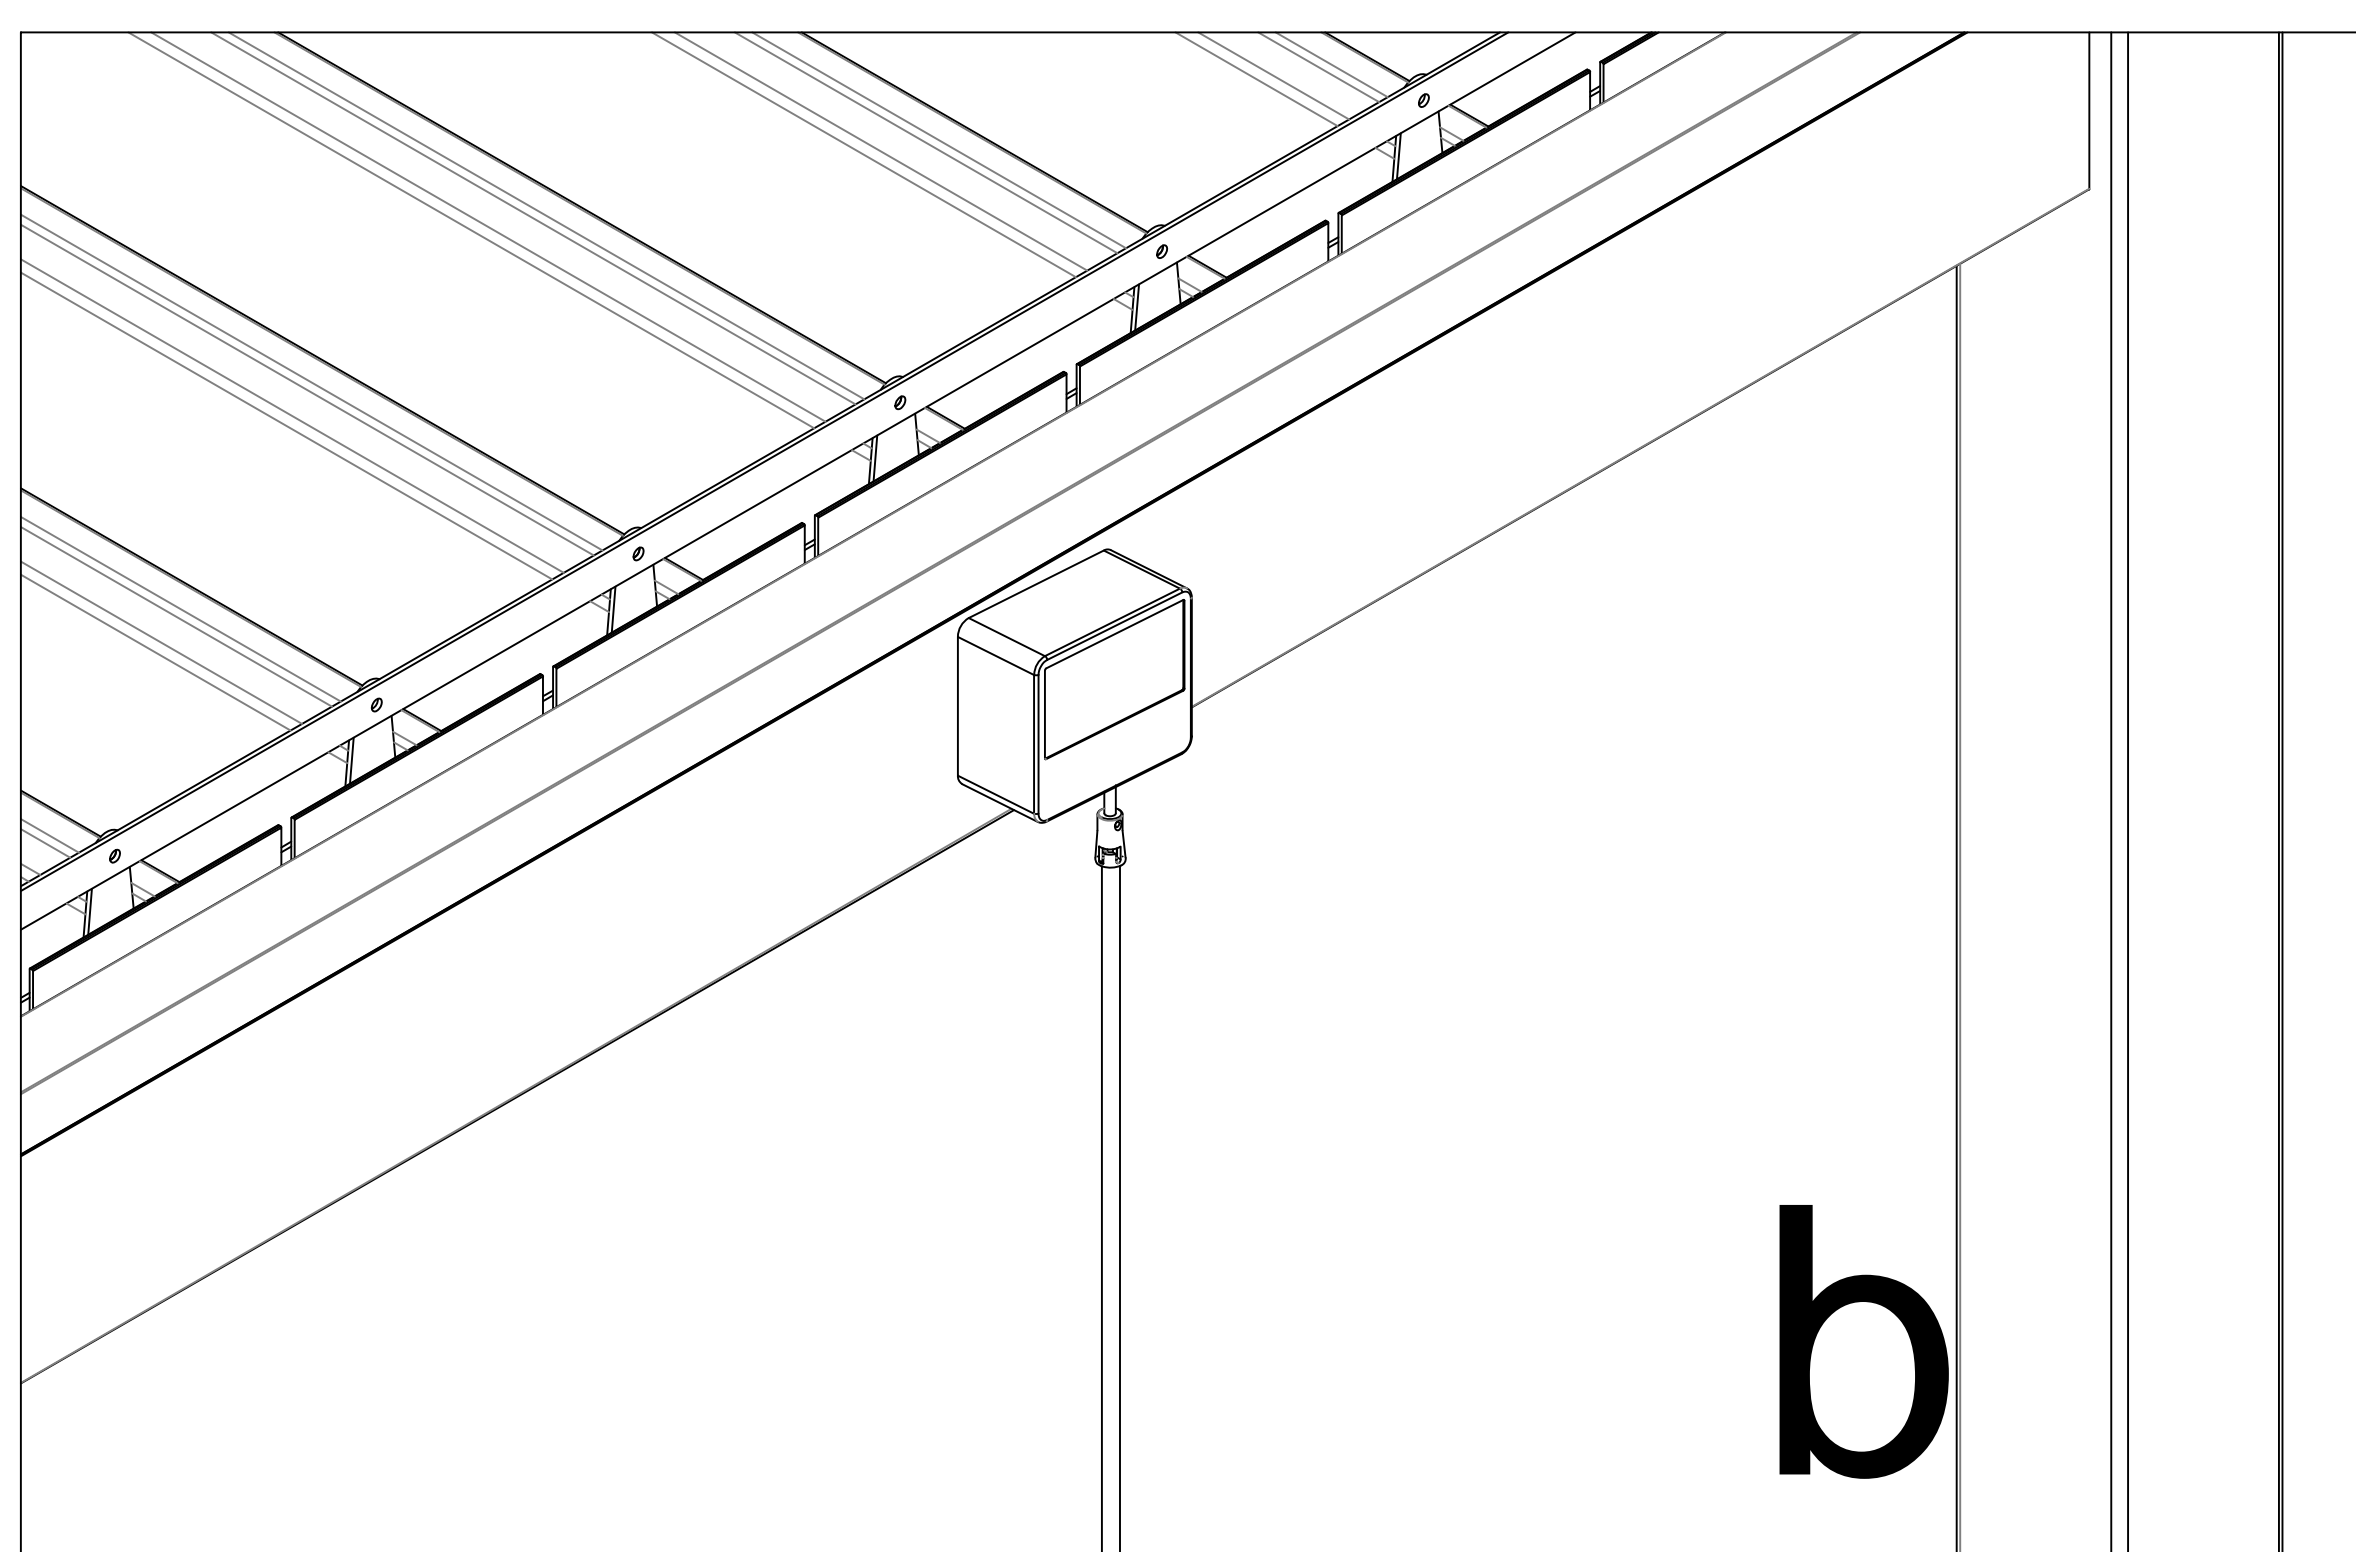

7B-15		1
-------	--	---

