



Wire Balustrade Kit P


Key Benefits

- ✓ Fast & simple install
- ✓ Angled & straight balustrade
- ✓ Self-adjusts to any angle
- ✓ Professional finish

Maximum Run Span


6 Metres

About This Kit

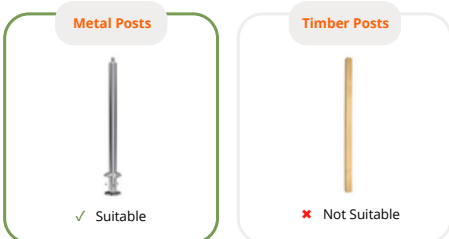


Post Material

This kit is only suitable for metal posts.

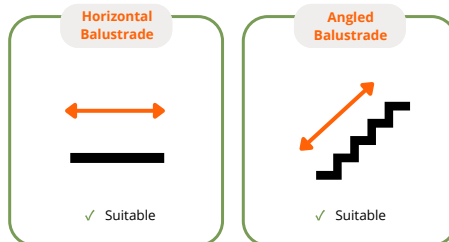

Post Type

This kit is suitable for both horizontal & angled balustrade.

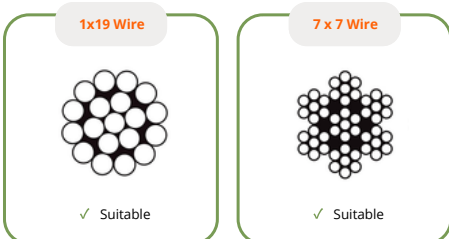

Wire Type

This kit can be used with any wire.

Wire Balustrade Kit P



Tools Required




Instructions



Step 1


Mark RH & LH Posts
Draw out a map of your end posts & decide which will take left-hand flip locks, and which will take right-hand flip locks.

There should be one right-hand post, and one left-hand post per run.




Step 2

Pre Drill Holes
Mark out and pre-drill holes on all end and intermediate posts. 80mm spacing is recommended.
Recommended hole size:
- 8.5mm for end posts (horizontal balustrade).
- 10mm for end posts (angled balustrade).
- 4mm for intermediate posts.




Step 3

Crimp RH threads
Crimp the wire into the right hand fitting, then screw it into the right flip lock.

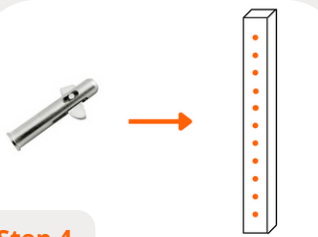

Step 4

Insert Flip Locks
Insert your right-hand flip lock into the pre-drilled post, and rotate to lock in place.

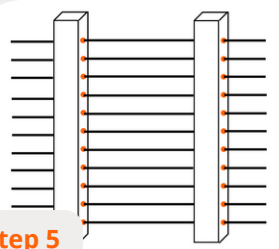

Step 5

Pass Wire Through & Repeat
Pass the wire through the intermediate posts and then repeat step 3&4 with your left hand threads.



Step 6

Tension Wire
Tighten the nuts against the body of the thread to lock in place.