



INSTALLATION GUIDE

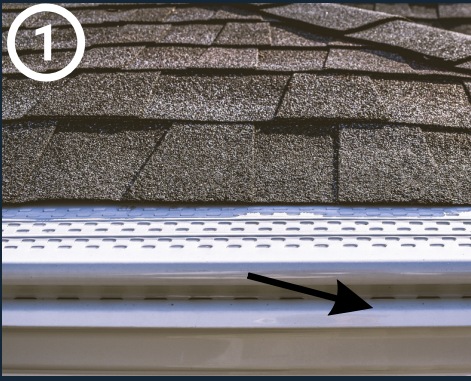

Straight Runs: Work left to right as viewed from the ground. Lay Leaf4go gutter guards completely flat over existing gutters with the front edge of the panel lined up with the top front edge of the gutter and slide the back end under the first shingle.

RECOMMENDED SCREW PATTERN

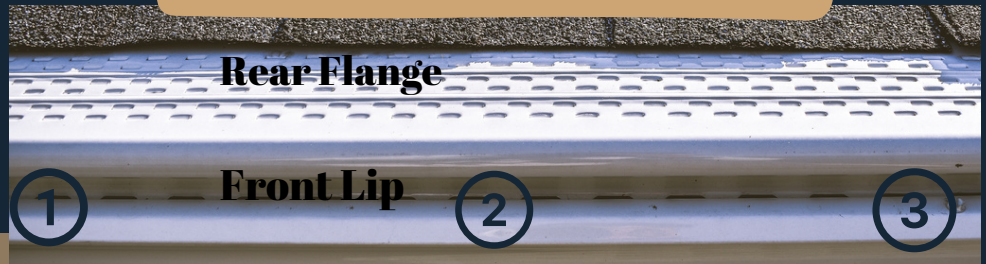


The tab on the left end of each panel installs under the adjoining panel. Use screw holes along the front lip of Leaf4go gutter guards to zip screw the panel - 3 or 4 screws (1, 2 & 3) to the front lip of the gutter. **DIAGRAM 2:** Shows screw holes along the front lip of Waterlock Pro.



FOR INSIDE CORNERS:

Cut a diagonal line from the front edge of Leaf4go gutter guards to the back using a saw or snip scissor. Repeat for other piece. Place first piece on top of the other to connect the two pieces. Zip screw to gutter and you now have a seamless connection.

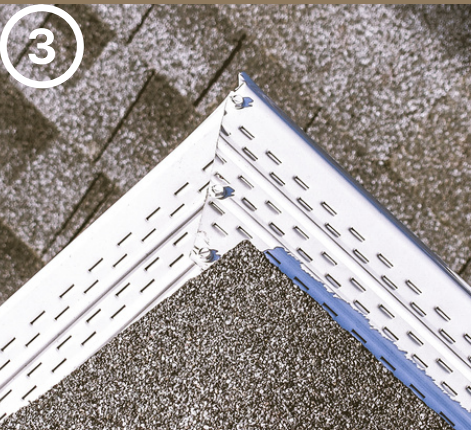

FOR OUTSIDE CORNERS:

Cut a diagonal line from the back of Leaf4go gutter guards to the front edge using a saw or snip scissor. Repeat for other piece. Place first piece on top of the other to connect the two pieces. Zip screw to gutter and you now have a seamless connection.

