



# Savannah Outdoor Shower Assembly Instructions



## **Requirements:**

- 2 People (recommended)
- Tape Measure
- Cordless Drill (we supply the bit)
- Rubber Mallet
- Carpenter's Hammer
- Step Ladder

Manufactured by:



tel: 888-923-9813 | [info@leisurecraft.com](mailto:info@leisurecraft.com) | web: [www.leisurecraft.com](http://www.leisurecraft.com)



# Savannah Outdoor Shower Assembly Instructions

## Parts List


<u>Part #</u>	<u>Description</u>	<u>Quantity</u>
620420	2"x 3"x 40" - Front/Back Floor Support	2
620421	2x3x38 ½" Floor Joists	4
620422	1" x 6" x 40" - Floor Boards	7
620423	1" x 6" x 42" - Shower Pillar Top Plate	1
620424	Assembled Savannah Shower Pillar Only	1
CTC205HARDWARE	Savannah Shower Hardware Package	1
720401	Stainless L Brackets to Mount Back Wall	2
CTC205MANUAL	Savannah Shower Owners Manual	1

### Options

720404 Economy Shower Hardware (Cold Water Only)

720405 Premium Shower Hardware

603022 Single Towel Hook - White Cedar

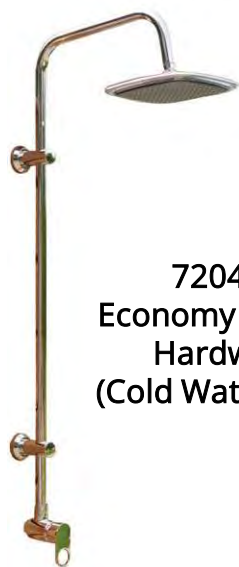

**720404**  
Economy Shower  
Hardware  
(Cold Water Only)



**720405**  
Premium  
Shower  
Hardware



**603022**  
Single Towel Hook  
(White Cedar)


Manufactured by:



# Savannah Outdoor Shower Assembly Instructions



Locate the shower pillar top plate and secure it to the top of the assembled pillar assembly with 1 ½" (38mm) screws ensuring it is even on both sides.

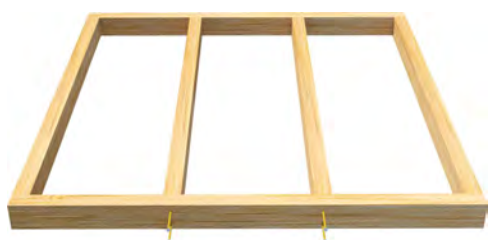

Secure the front/back floor supports to the 2 outside floor joists with 2 - 2 ½" (64mm) screws in each corner.

Center the inner floor supports and secure with 2 - 2 ½" (64mm) screws on both sides.



Space the floor boards out evenly over the base and secure into each of the floor joists using 2 - 1 ½" (38mm) screws into each joist.



Position the assembled pillar flush to the back of the shower base.

Secure the assembled pillar to the base with the provided lag screws.

*\* It is recommended to pre drill these holes first to prevent splitting.*

Manufactured by: