



# Sierra Outdoor Shower Assembly Instructions



## **Requirements:**

- 2 People (recommended)
- Tape Measure
- Cordless Drill
- Robertson Drill Bit
- $\frac{3}{4}$ "(19mm) Nut Driver Bit

Manufactured by:



tel: 888-923-9813 | [info@leisurecraft.com](mailto:info@leisurecraft.com) | [web: www.leisurecraft.com](http://www.leisurecraft.com)

# Sierra Outdoor Shower Assembly Instructions

## Parts List

<u>Part #</u>	<u>Description</u>	<u>Quantity</u>
620410	2"x 3"x 31" - Front/Back Floor Support	2
620411	2x3x28" Floor Joists	4
620412	1" x 6" x 31" - Floor Boards	5
620413	1" x 2 1/2" x 31" - Floor Boards	1
620414	1" x 6" x 15" - Shower Pillar Top Plate	1
620415	Assembled Sierra Shower Pillar Only	1
510SHARDWARE	Sunlight/Sierra Shower Hardware Package	1
720400	Stainless Brackets to Mount Pillar	2
510SMANUAL	Sunlight/Sierra Shower Owners Manual	1

### Options

720404 Economy Shower Hardware (Cold Water Only)

720405 Premium Shower Hardware

603022 Single Towel Hook - White Cedar



**720404**  
Economy Shower  
Hardware  
(Cold Water Only)



**720405**  
Premium  
Shower  
Hardware



**603022**  
Single Towel Hook  
(White Cedar)

Manufactured by:


# Sierra Outdoor Shower Assembly Instructions



Locate the shower pillar top plate and secure it to the top of the assemble pillar assembly with 1 ½" (38mm) screws ensuring it is even on both sides.



Secure the front/back floor supports to the 2 outside floor joists with 2 - 2 ½" (64mm) screws in each corner.

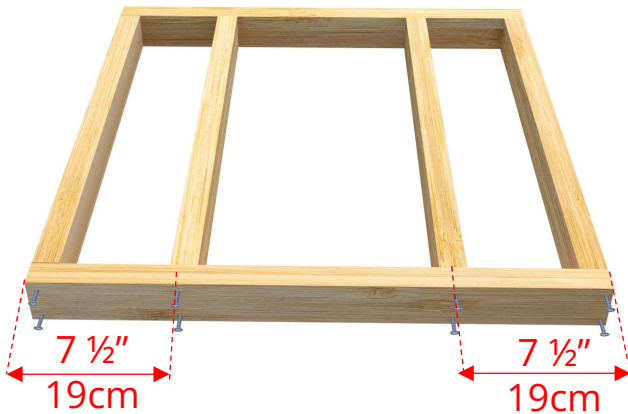

Measure 7 ½" from each end and center the inner floor supports and secure with 2 - 2 ½" (64mm) screws in on each end.

*\* It is important these are measured correctly as the shower pillar will bolt into these supports.*



Space the floor boards out evenly over the base and secure into each of the floor joists using 2 - 1 ½" (38mm) screws into each joist.

Manufactured by:

# Sierra Outdoor Shower Assembly Instructions



Position the assembled pillar centered and flush to the back of the shower base.



Secure the assembled pillar to the base with the provided lag screws and brackets.

*\* It is recommended to pre drill these holes first to prevent splitting.*

*Congratulations on the assembly of your Sierra Outdoor Shower!*

Manufactured by:



tel: 888-923-9813 | info@leisurecraft.com | web: www.leisurecraft.com