




Need Help? Contact us at: help@goldenrovers.com


Digital instructions are available on the product page.

Discovery 1 & 2 Center Console Locking Cubby Box

Remove the two screws inside of the center console compartment.

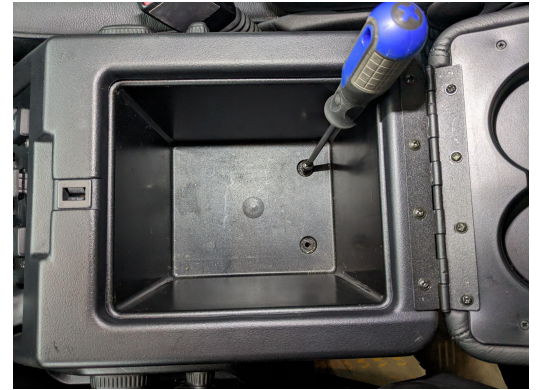

Insert the first side as shown.

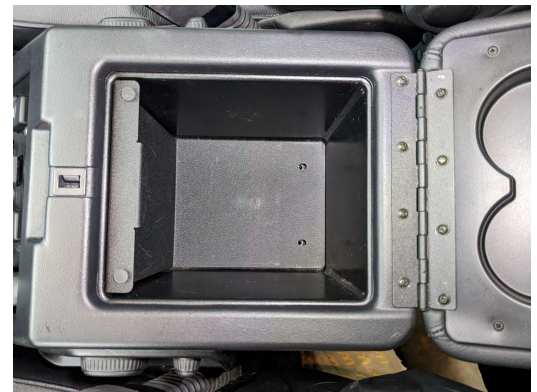


Insert the side with the hinge as shown.



Use two M6 screws and two washers to secure the locking insert to the center console.

If you have a Discovery 1, use the M5 screws in the bag labeled "D1".

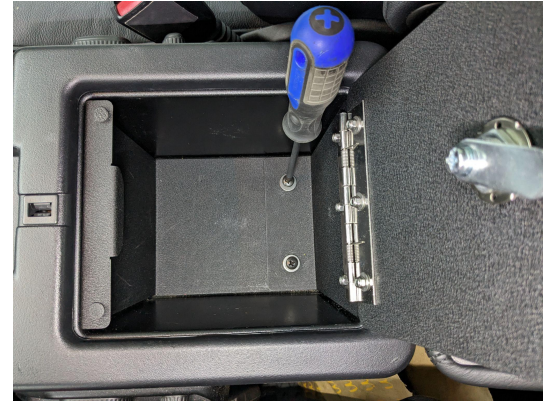

For the best fit, hold the panels in place while tightening down the screws



Done! Now you can change your combination with the Combi-Cam instructions provided separately.

Or at:
<https://www.combi-cam.com/Combination-Cam-Lock-Instructions.pdf>



Take a picture and tag us on instagram: @goldenrovers.
We would be so grateful if you left a review on the product page!

Thank you for your purchase.
Stay Golden 🌐🙌