




DESIGNED FOR LIFE

Assembly Instructions

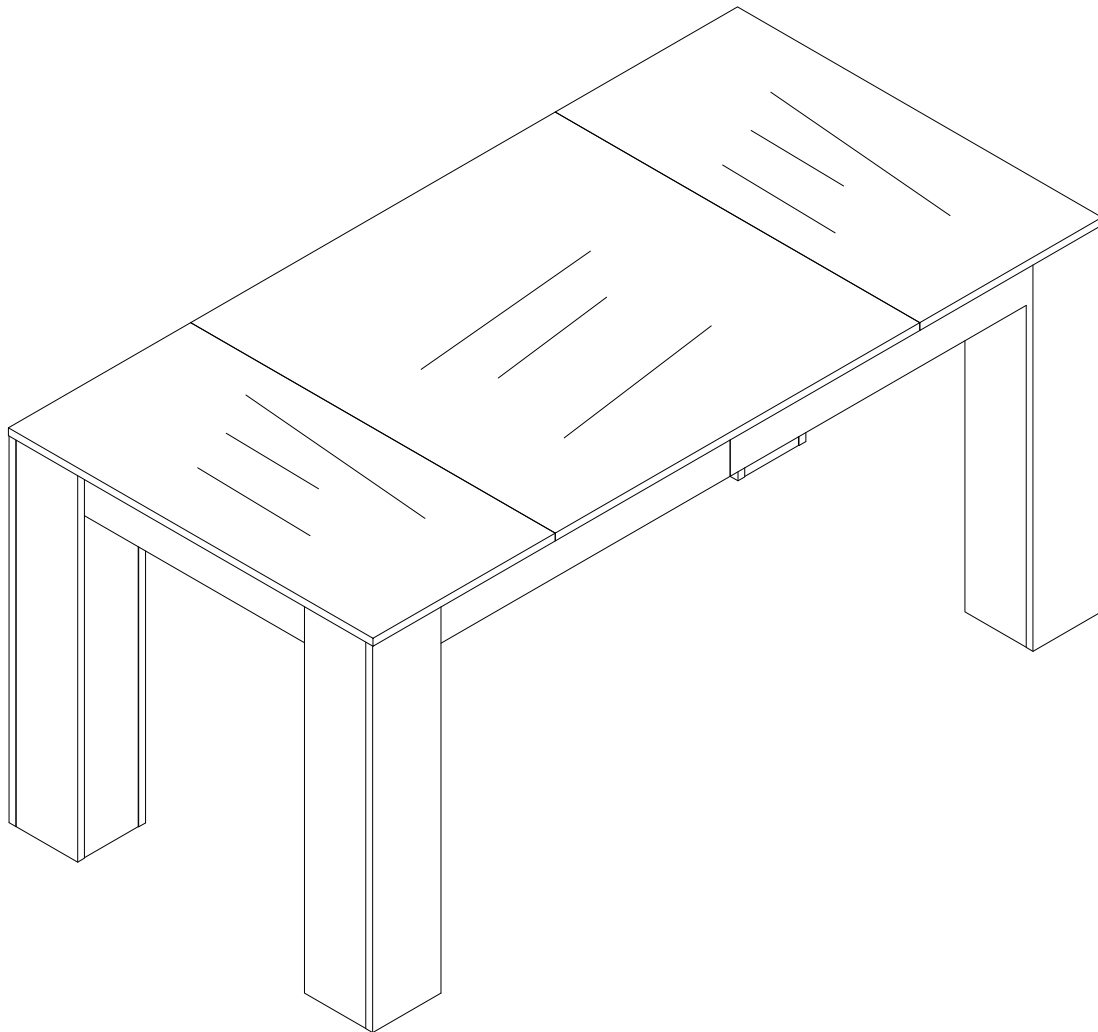

Dining table

Model No.
HOGA-JW0988



LITTLE TREE
Little Tree by Tribesigns

www.tribesigns.com



Contact Us

We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

How to Get the Assembly Video

Step 1


Scan the QR code.



Installation Video




Step2

Search with the Model No.
(on the bottom left corner of the title page)

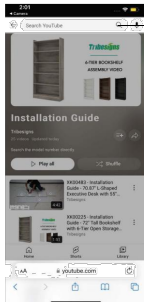


HOGA-JW0988

Note: If you can't find the assembly video, please contact us.

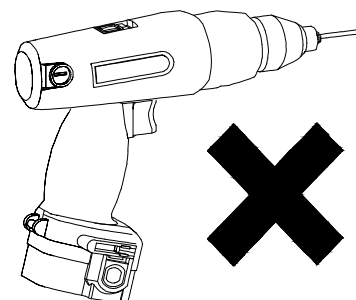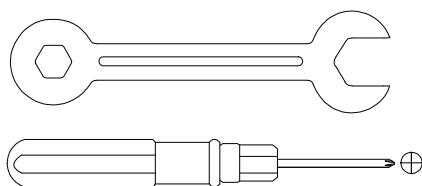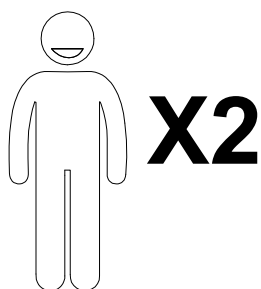



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

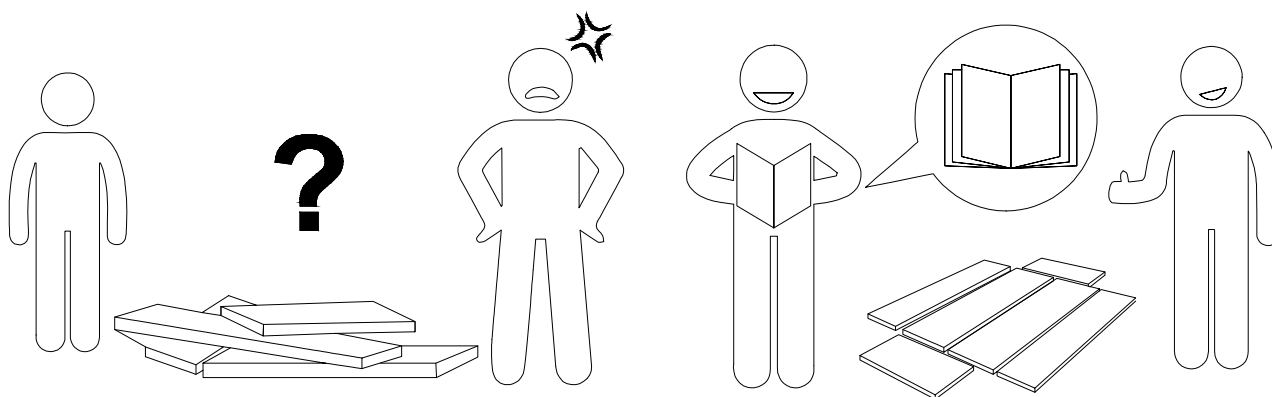

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.













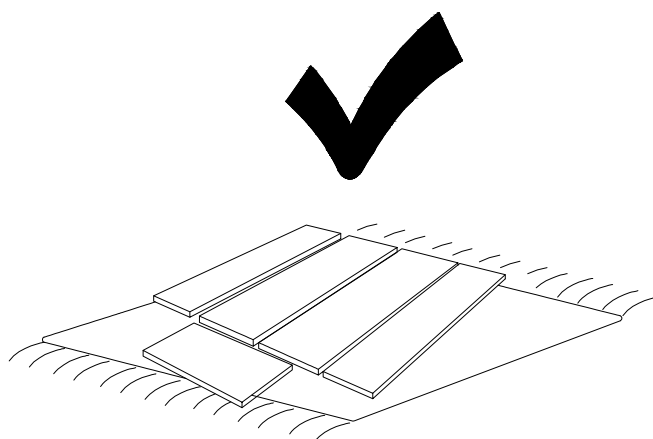
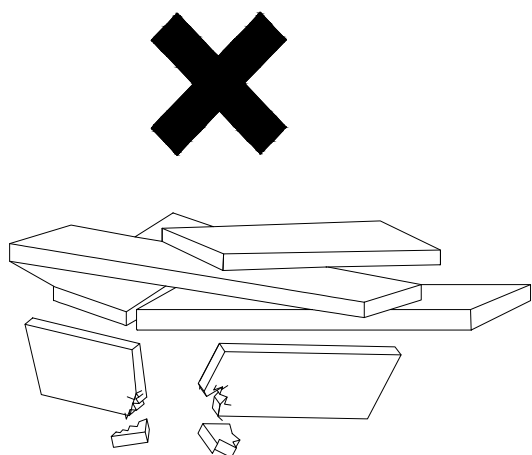


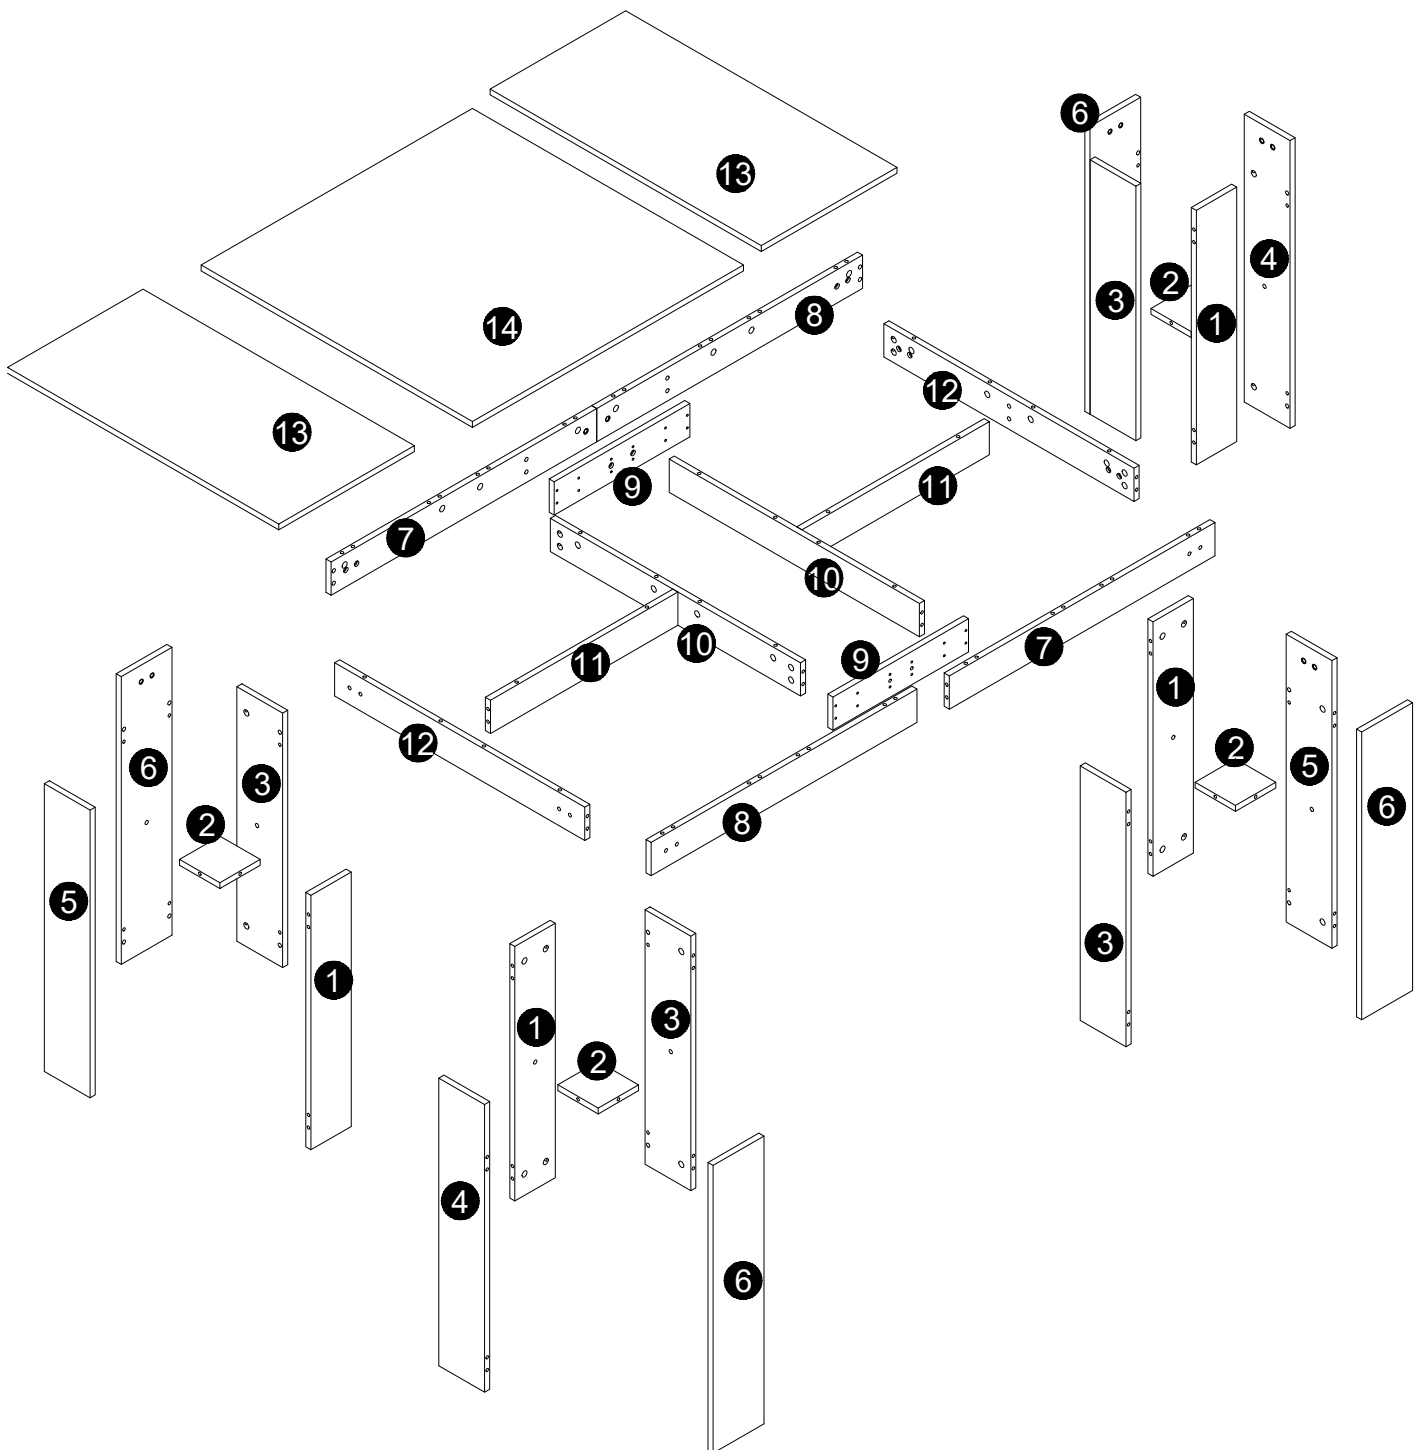**Caution**

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.







Parts List

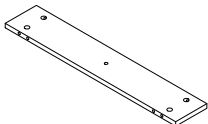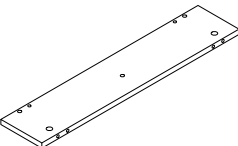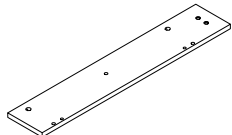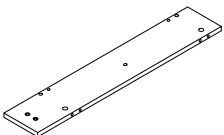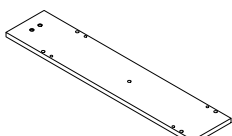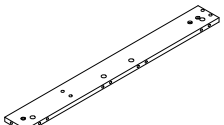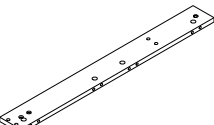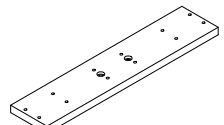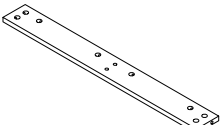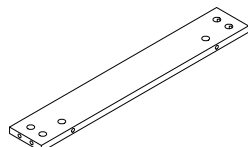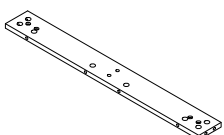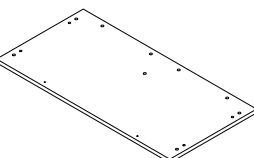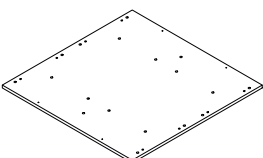1  4 pcs	2  4 pcs	3  4 pcs	4  2 pcs	5  2 pcs
6  4 pcs	7  2 pcs	8  2 pcs	9  2 pcs	10  2 pcs
11  2 pcs	12  2 pcs	13  2 pcs	14  1pc	



Hardware List


A	B	C	D	E	F
 M6x35mm	 Ø15x12mm	 Ø8x30mm	 Ø8x40mm	 Ø3.5x14mm	 Ø3.5x25mm
108 pcs	108 pcs	48pcs	4 pcs	16 pcs	24 pcs

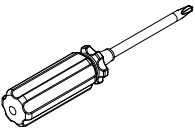G	H	I	J		
 Screwdriver	 M6x20mm				
1 pc	20 pcs	4 pcs	16 pcs		




Installation of Cams and Pins

Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

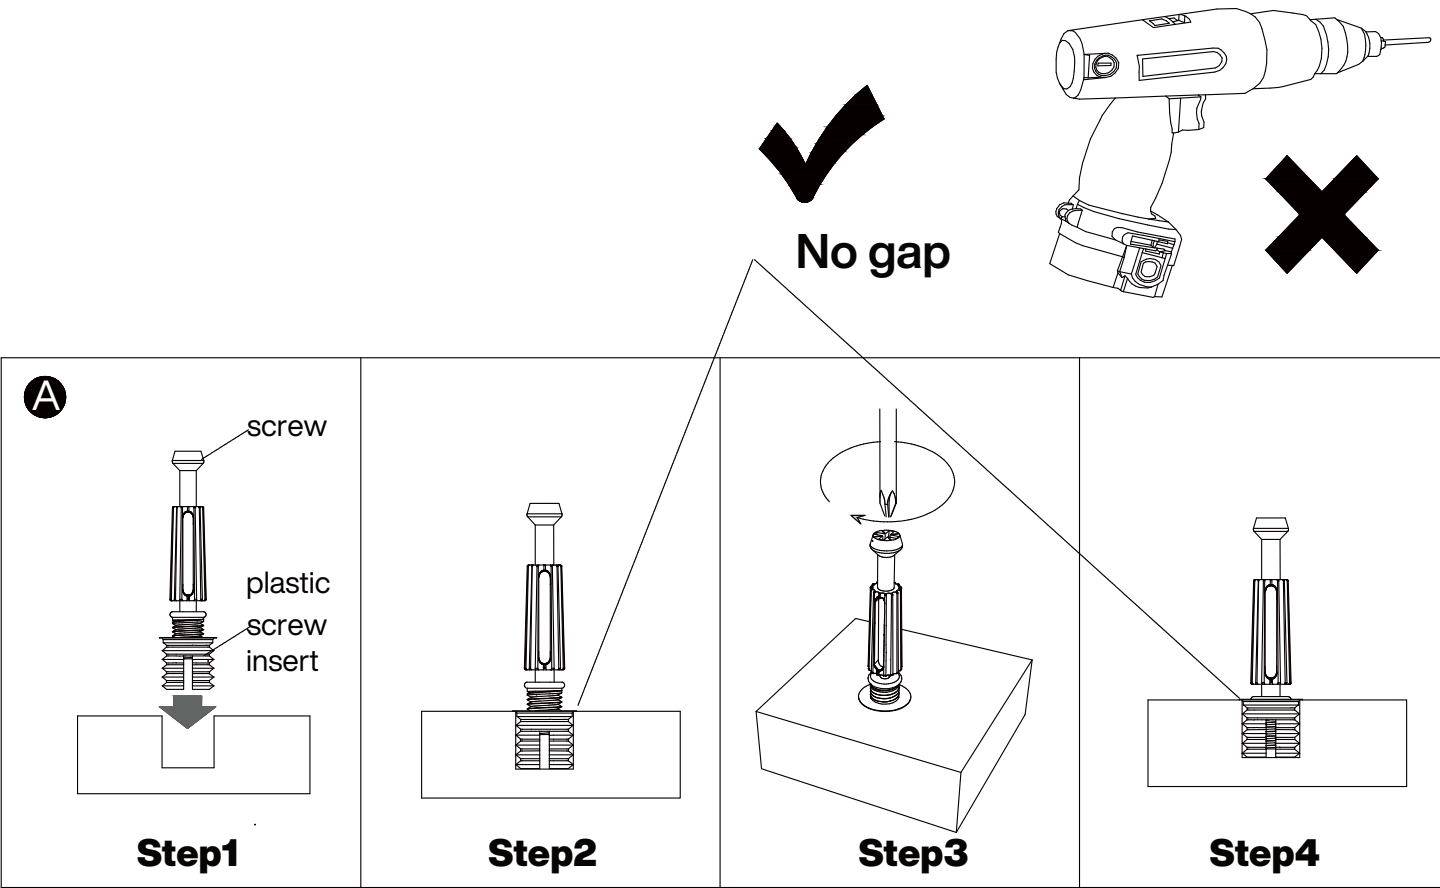

Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.


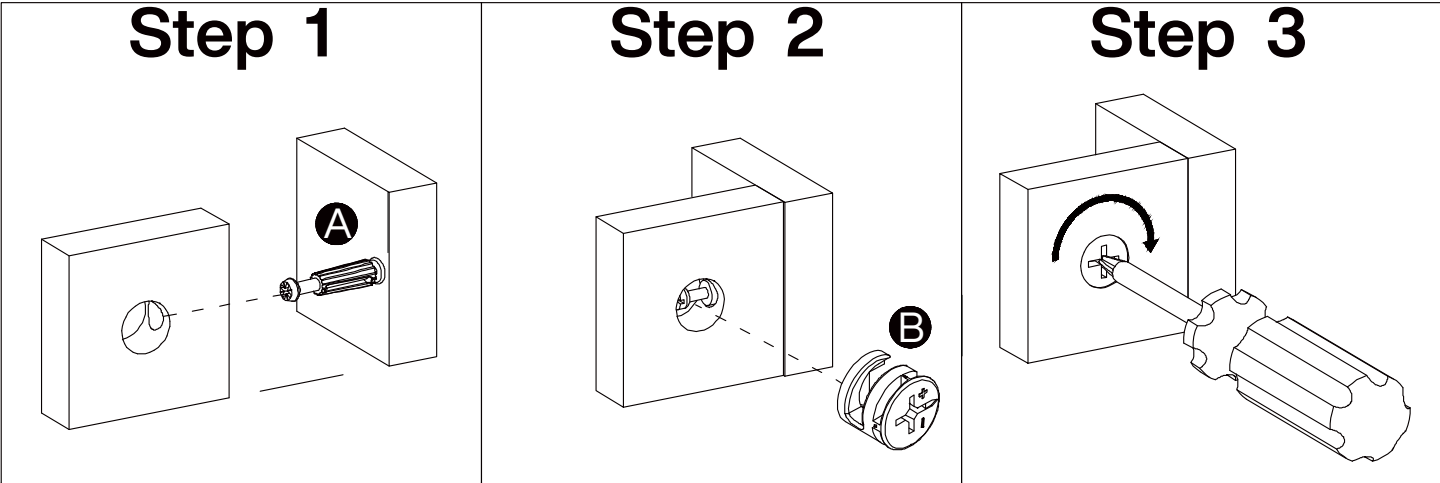




1

A

M6x35mm
4pcs

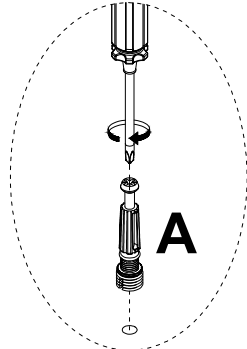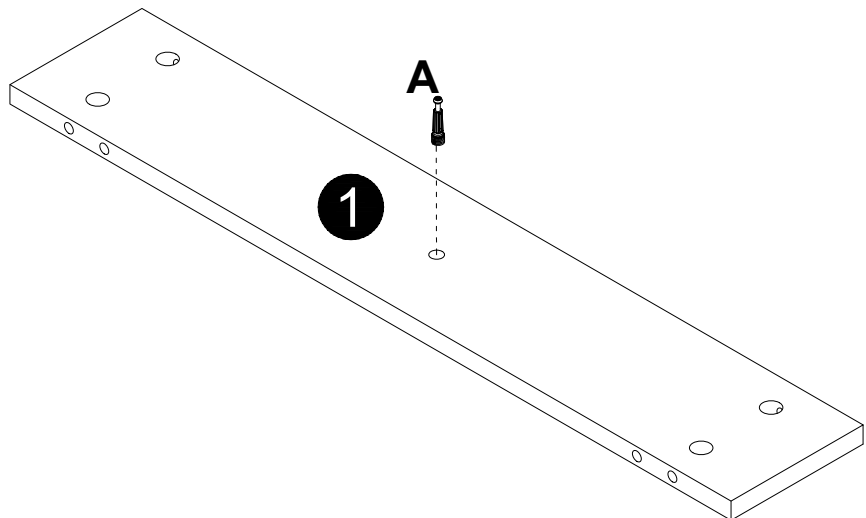


x4

2


B

Ø15x12mm
4pcs


Step 1




Step 2



Step 3




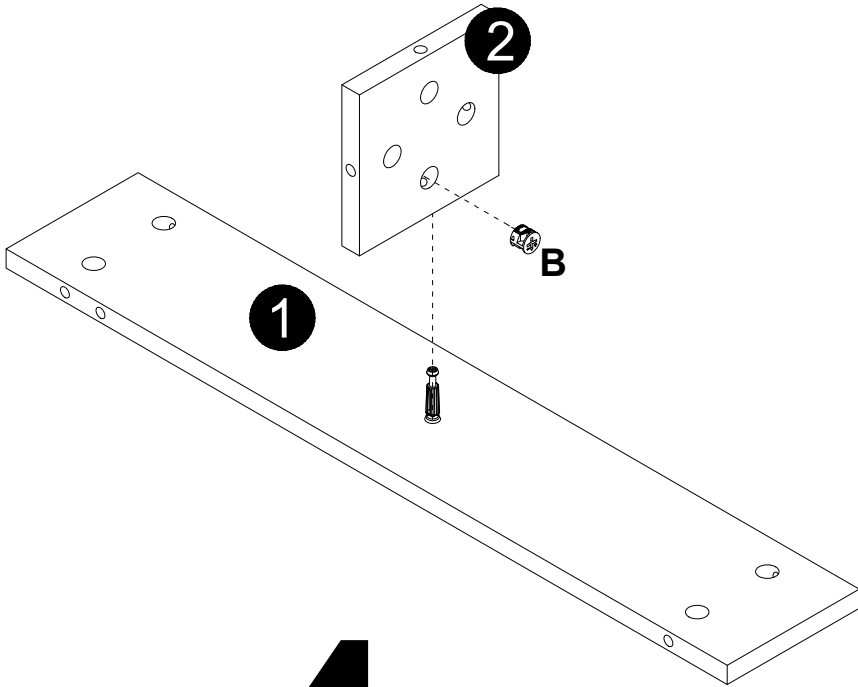


x4




3

A	C
	
M6x35mm	M8x30mm
12pcs	8pcs

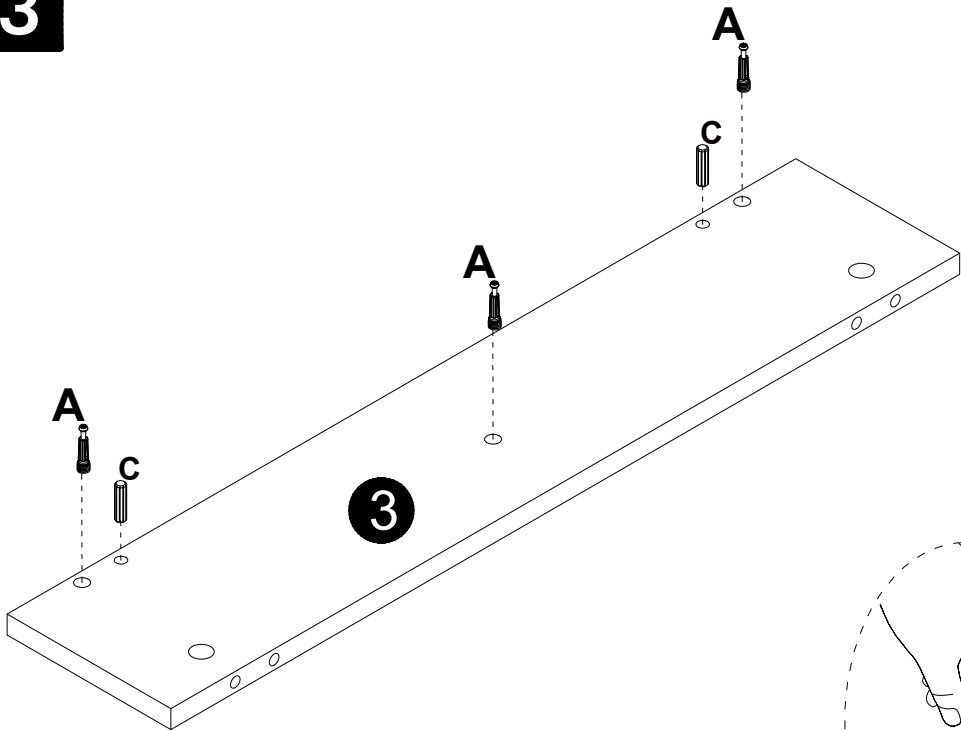

x4

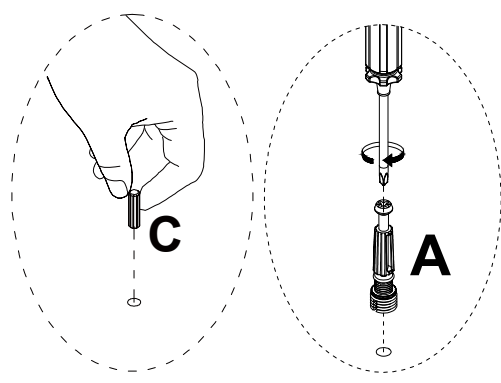


4


B

Ø15x12mm
12pcs


Step 1




Step 2



Step 3





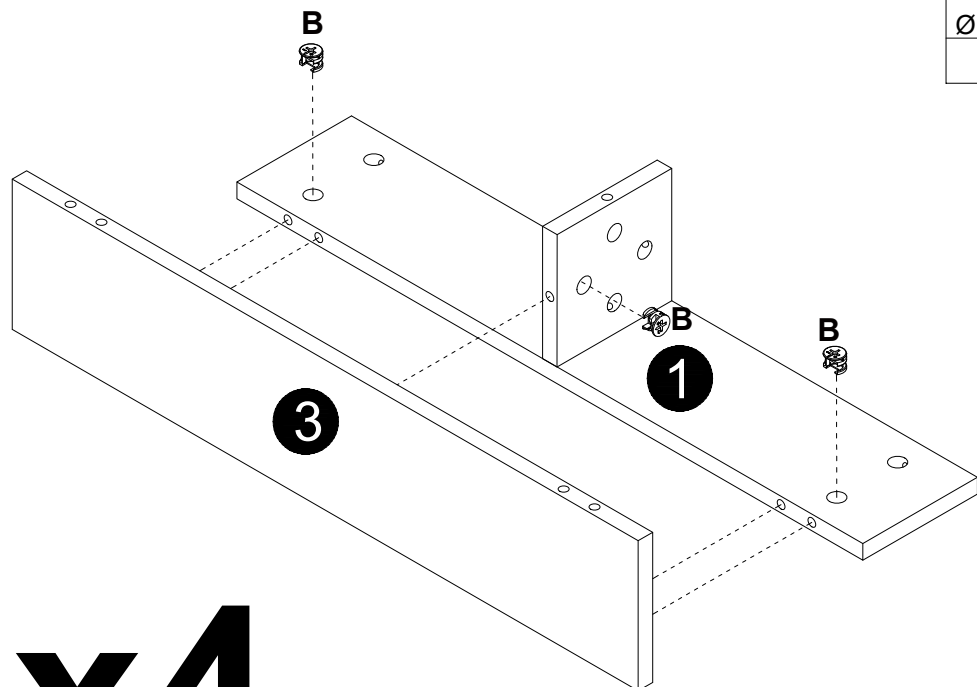


x4



5

A	C
	
M6x35mm	M8x30mm
6pcs	4pcs

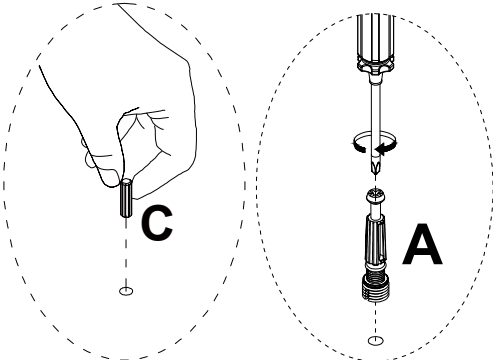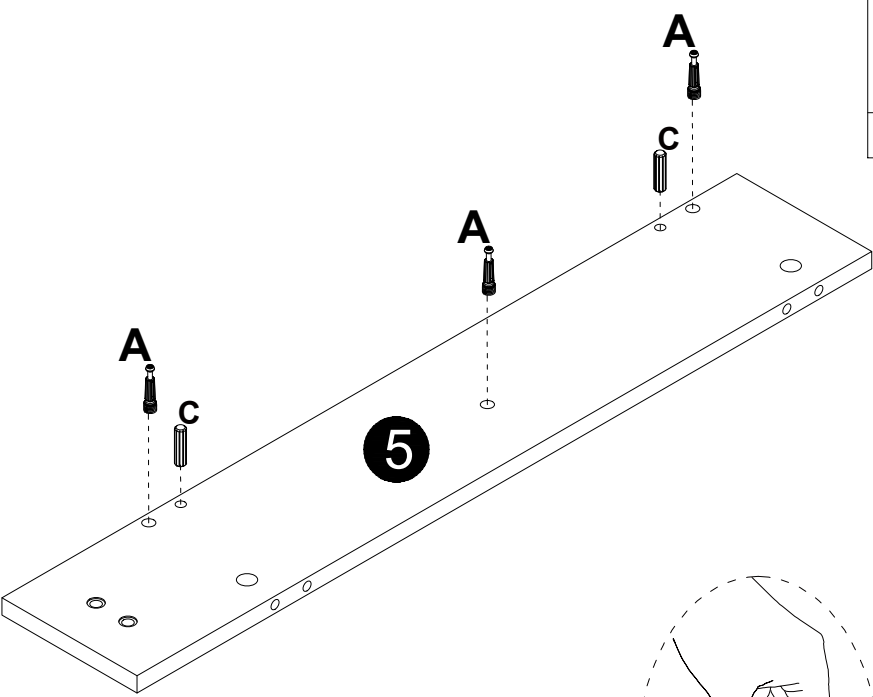


x2

6

B

Ø15x12mm
6pcs


Step 1




Step 2



Step 3




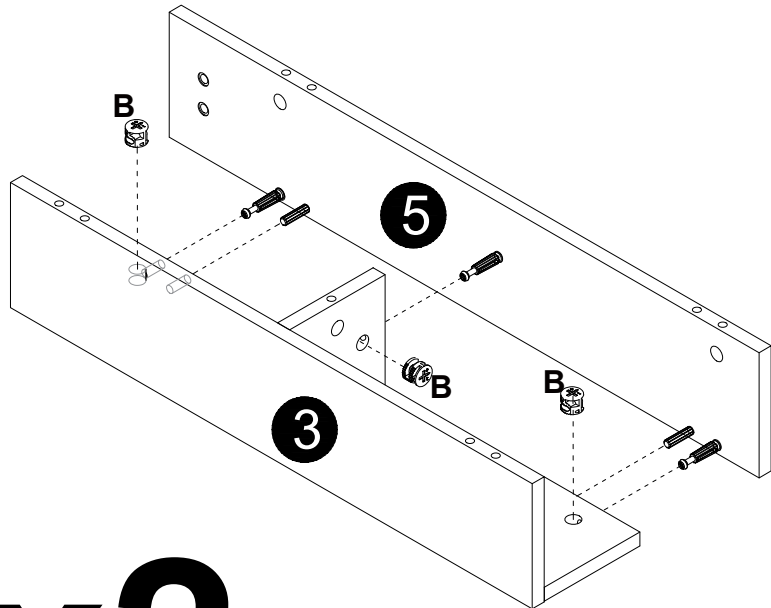


x2




7

A	C
	
M6x35mm	M8x30mm
6pcs	4pcs

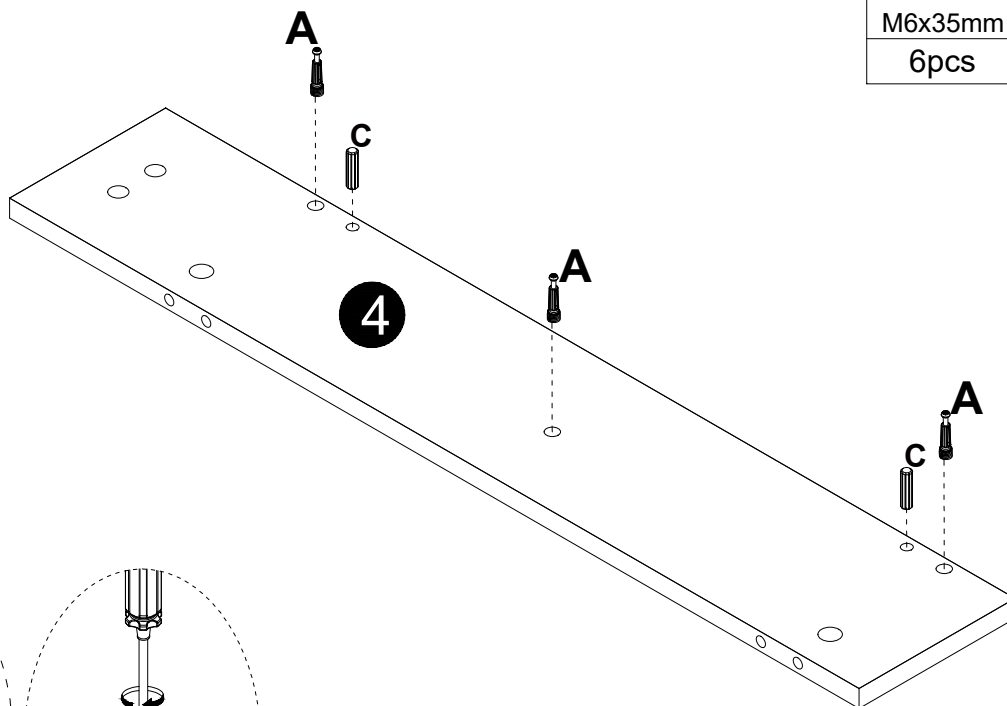


x2

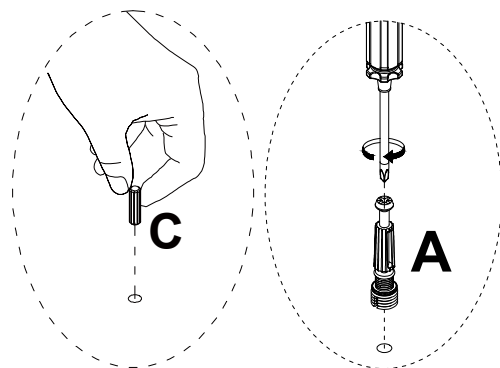


8

B

Ø15x12mm
6pcs

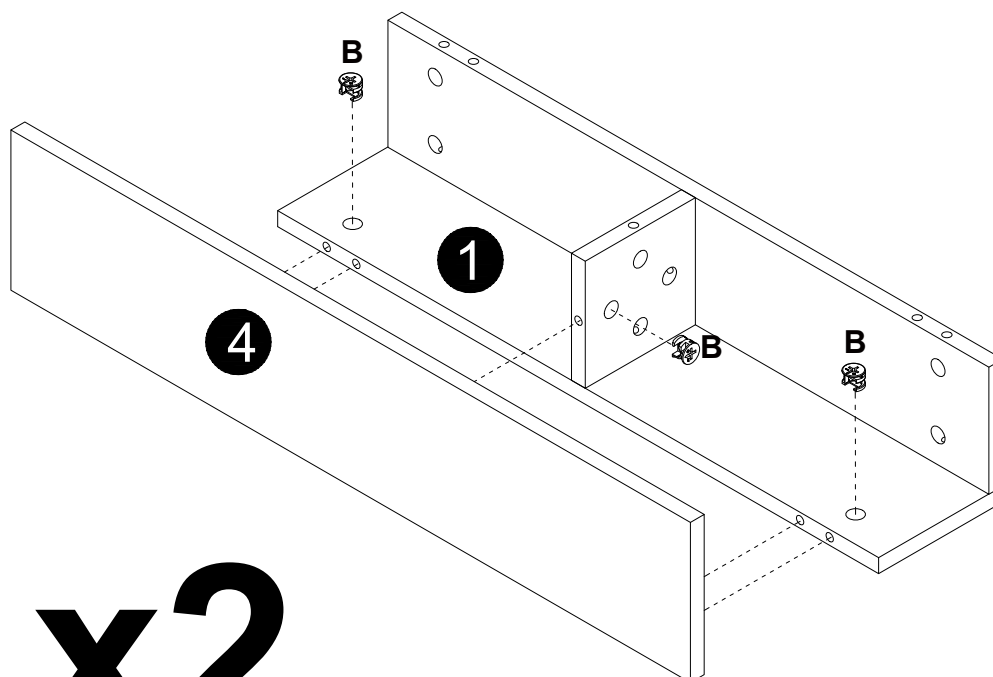




x2

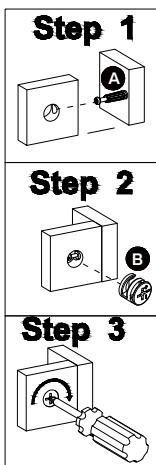



9

A	C
	
M6x35mm	M8x30mm
20pcs	16pcs

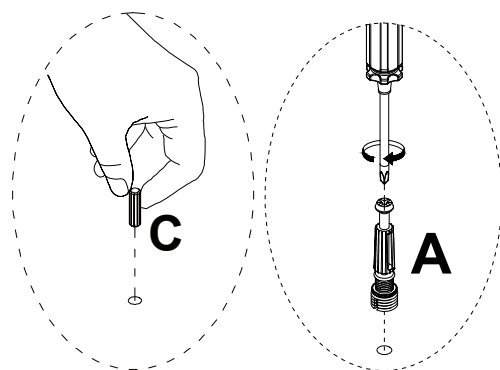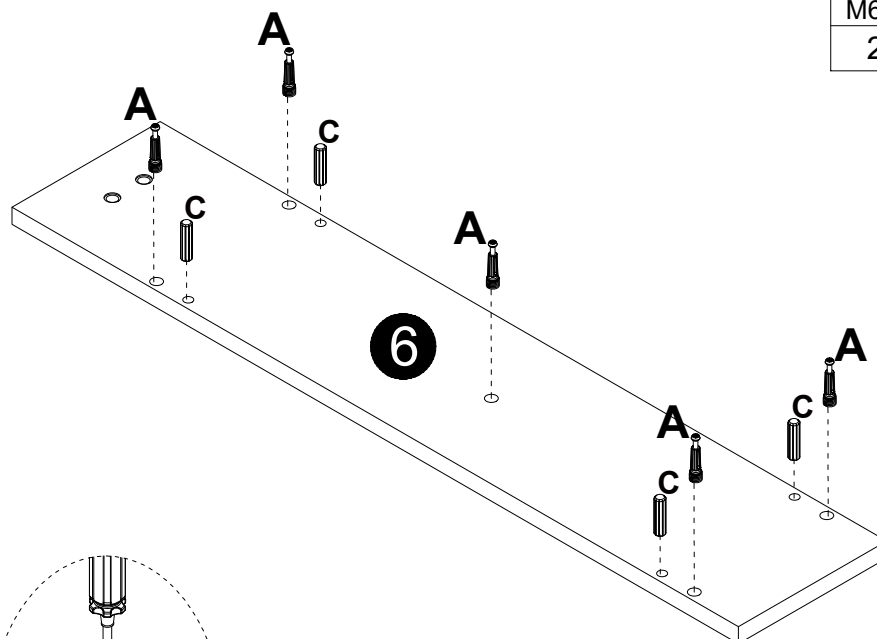


x4

10

B



Ø15x12mm
20pcs

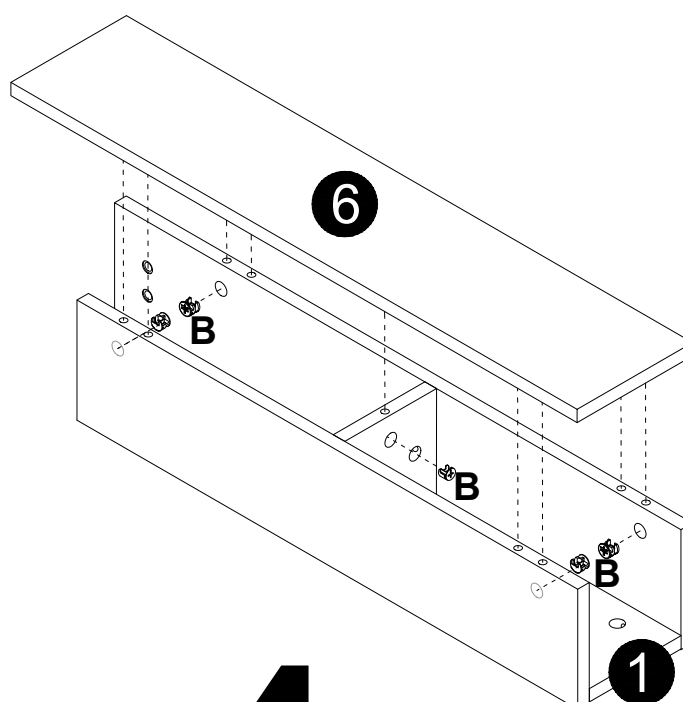

x4


**11****J**

16 pcs

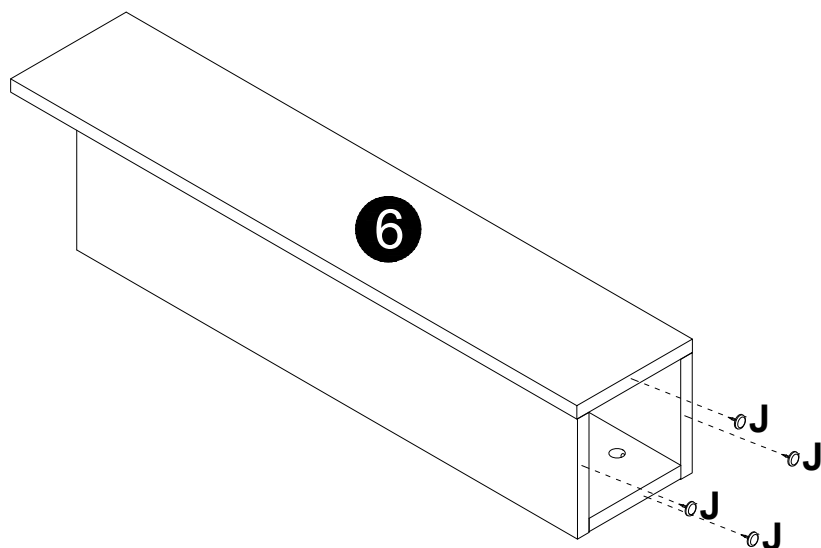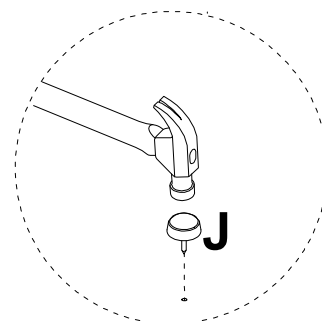**x4****⚠ Caution! Tap lightly****12****A**


M6x35mm

16pcs

D


M8x40mm

4pcs

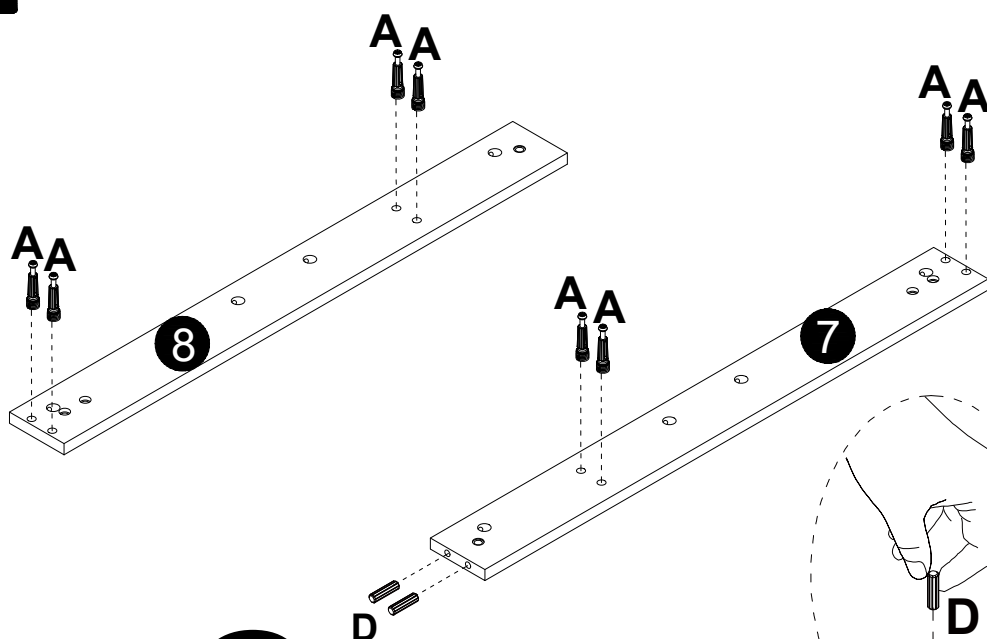
**x2**



13

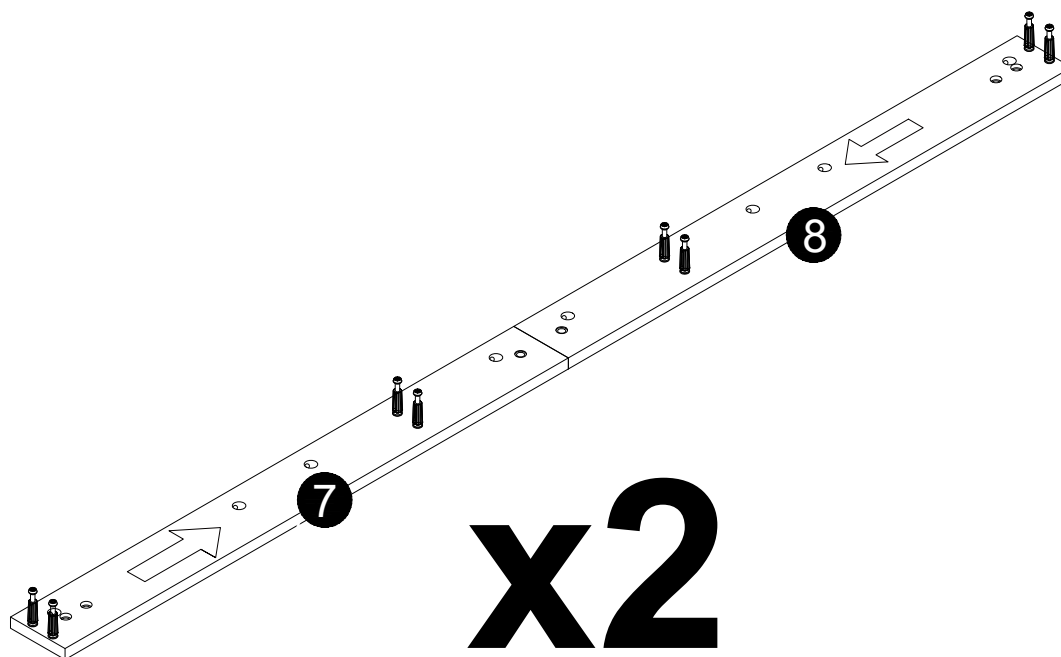


14

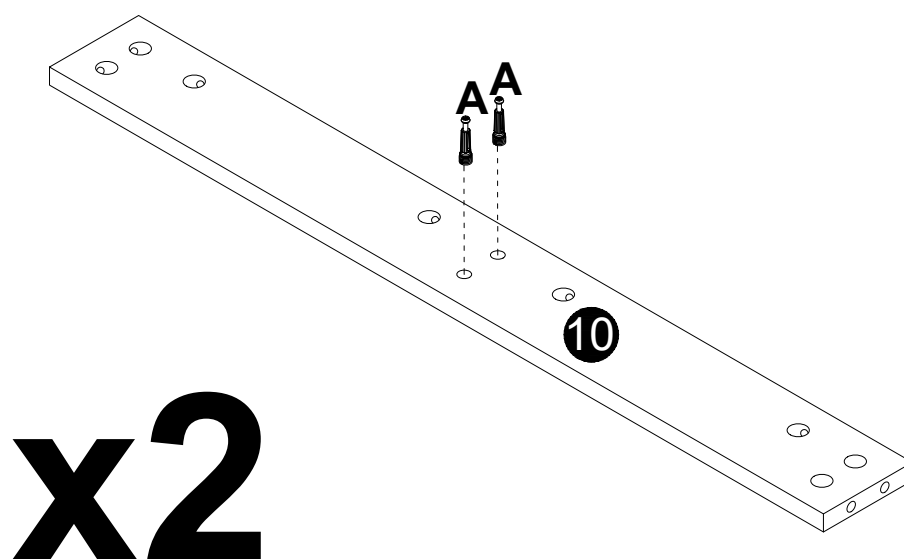

A

M6x35mm
4pcs

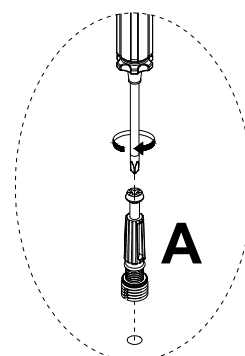





15

A

M6x35mm
4pcs

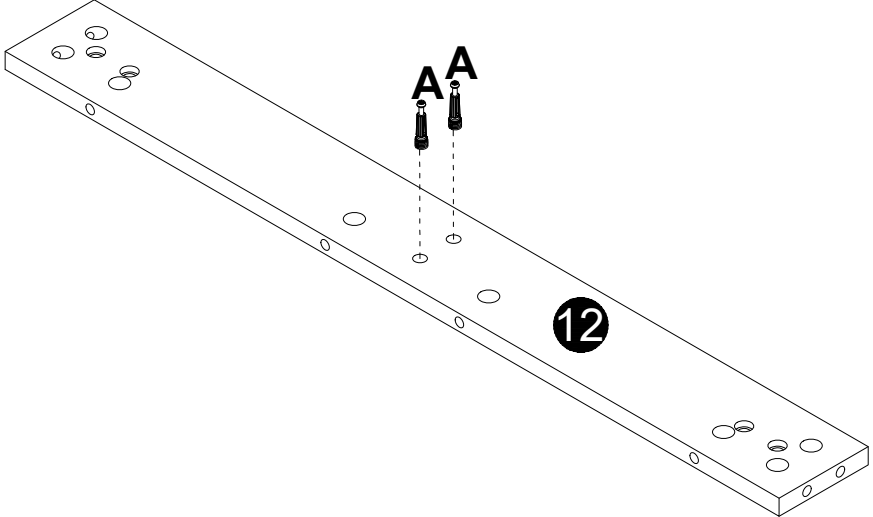


x2

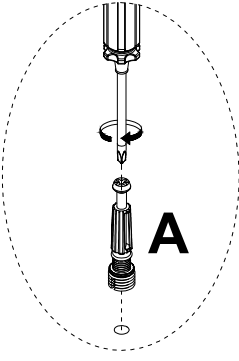


16

B

Ø15x12mm
8pcs

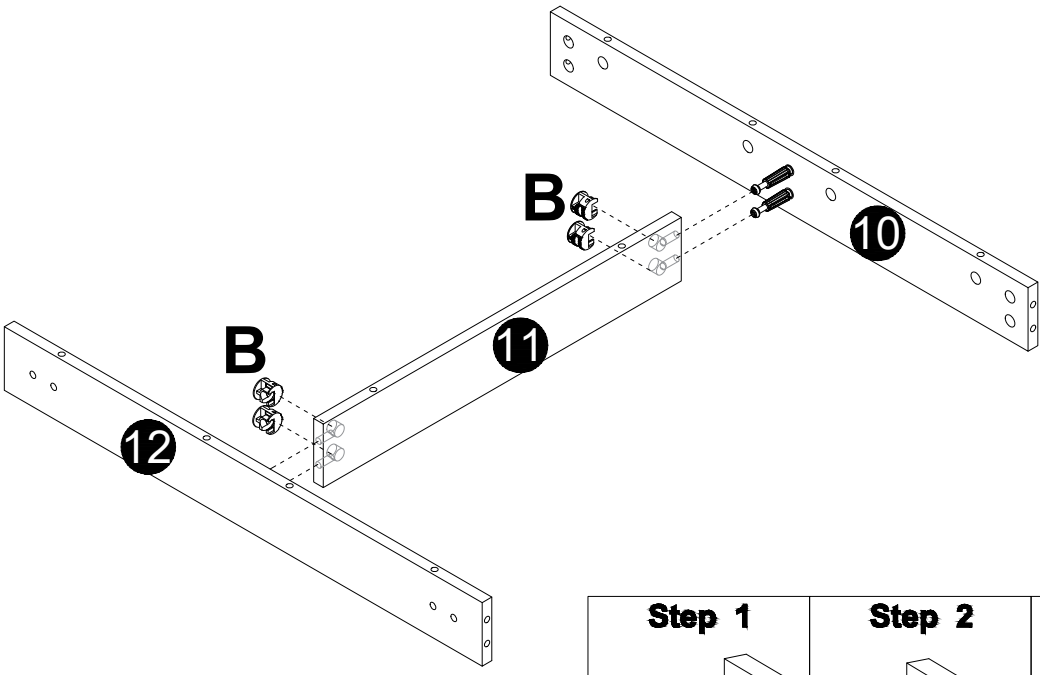

x2


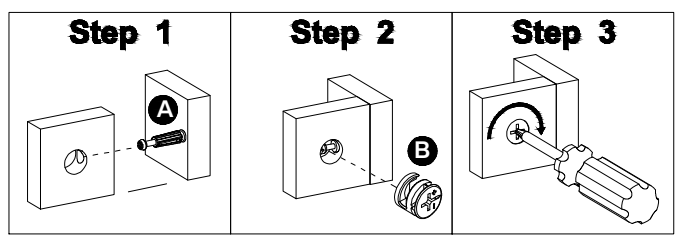






17


B

Ø15x12mm 16pcs

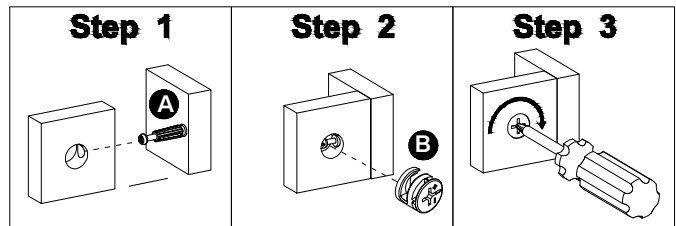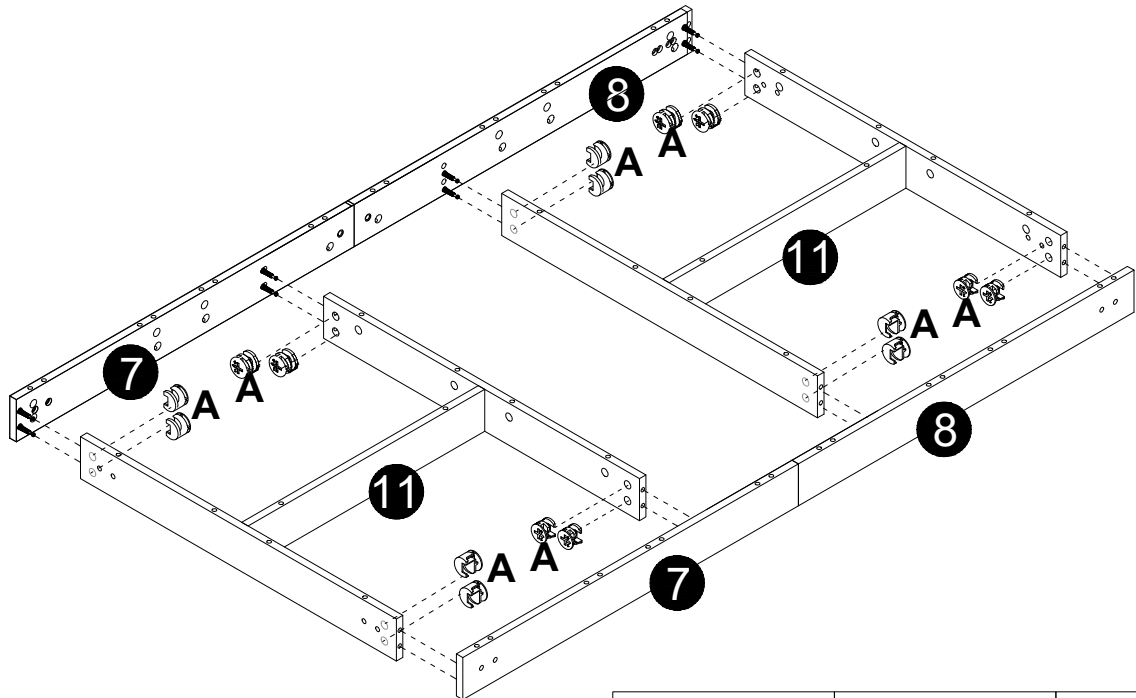


18

A	C
	
M6x35mm 18pcs	M8x30mm 8pcs

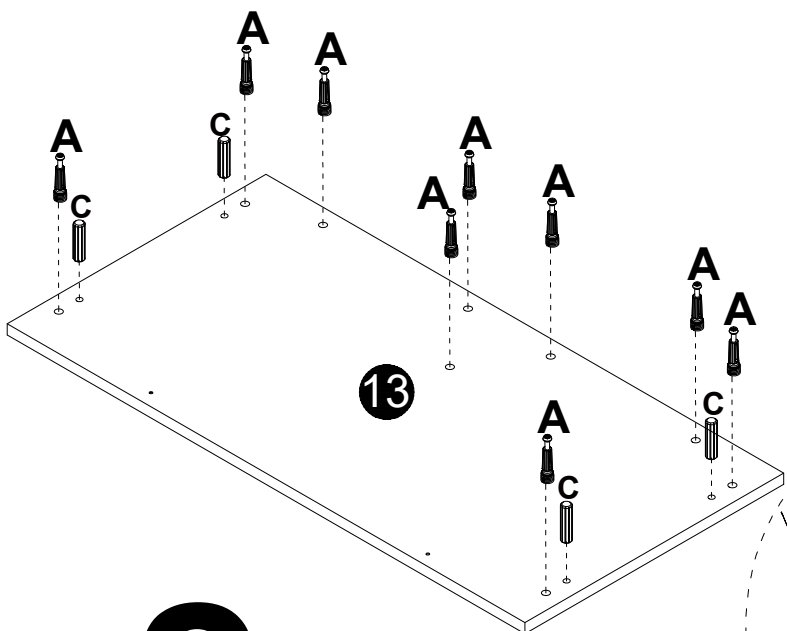




x2

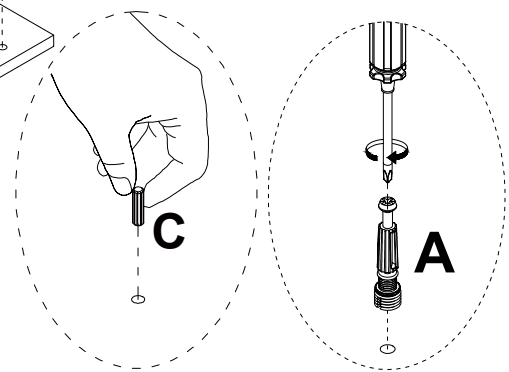






19

A	C
	
M6x35mm	M8x30mm
18pcs	8pcs

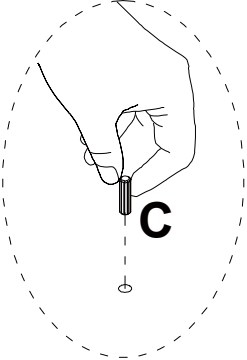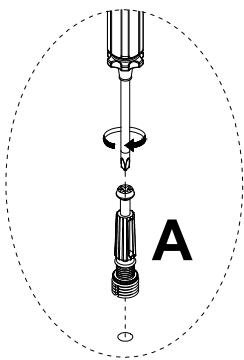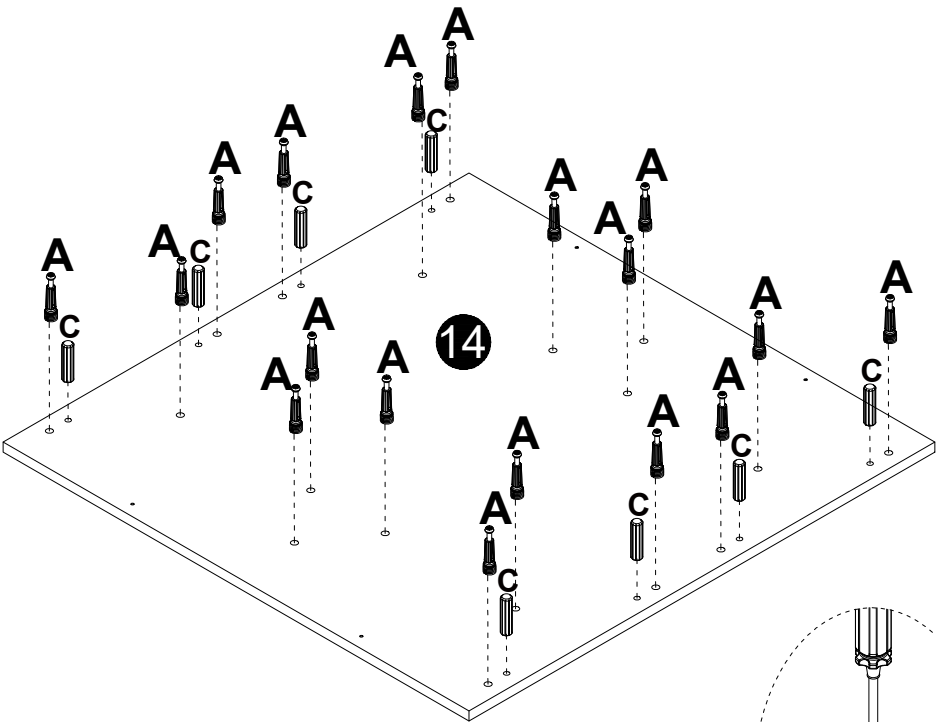



20

I	E
	
	M3.5x14mm
4pcs	16pcs

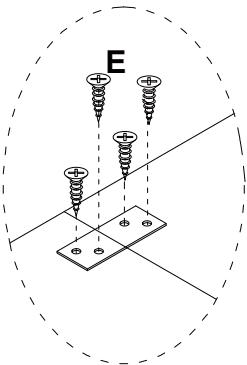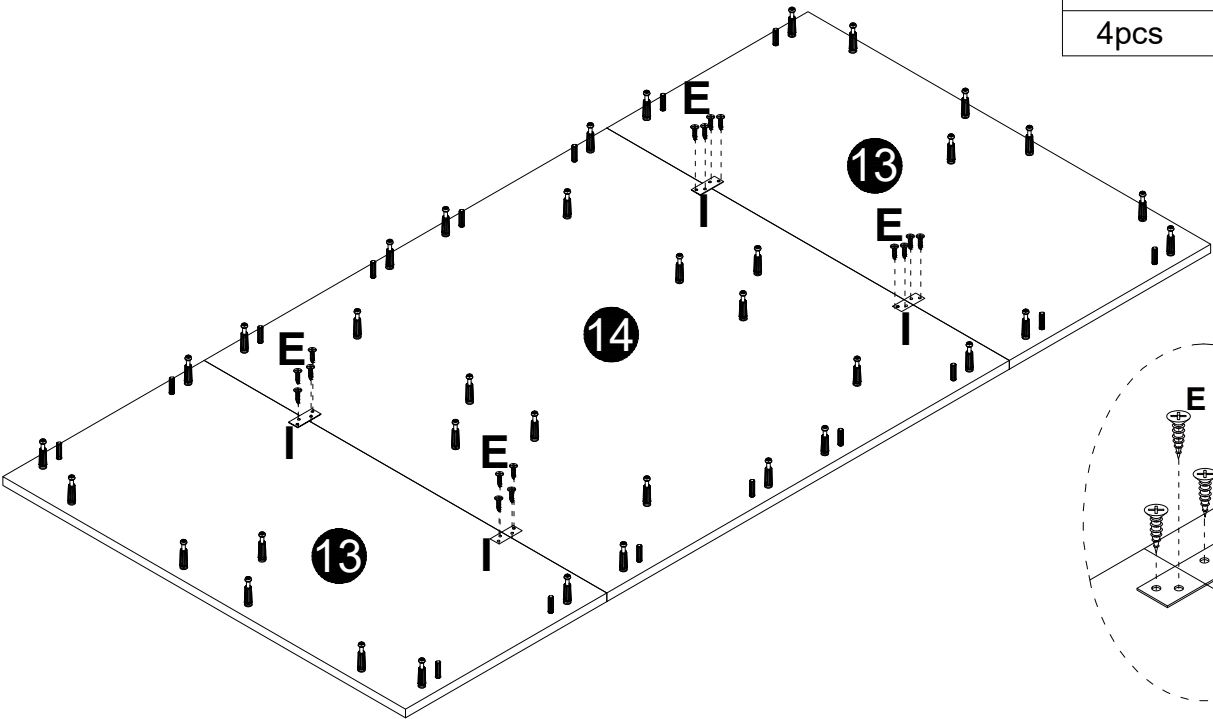




21

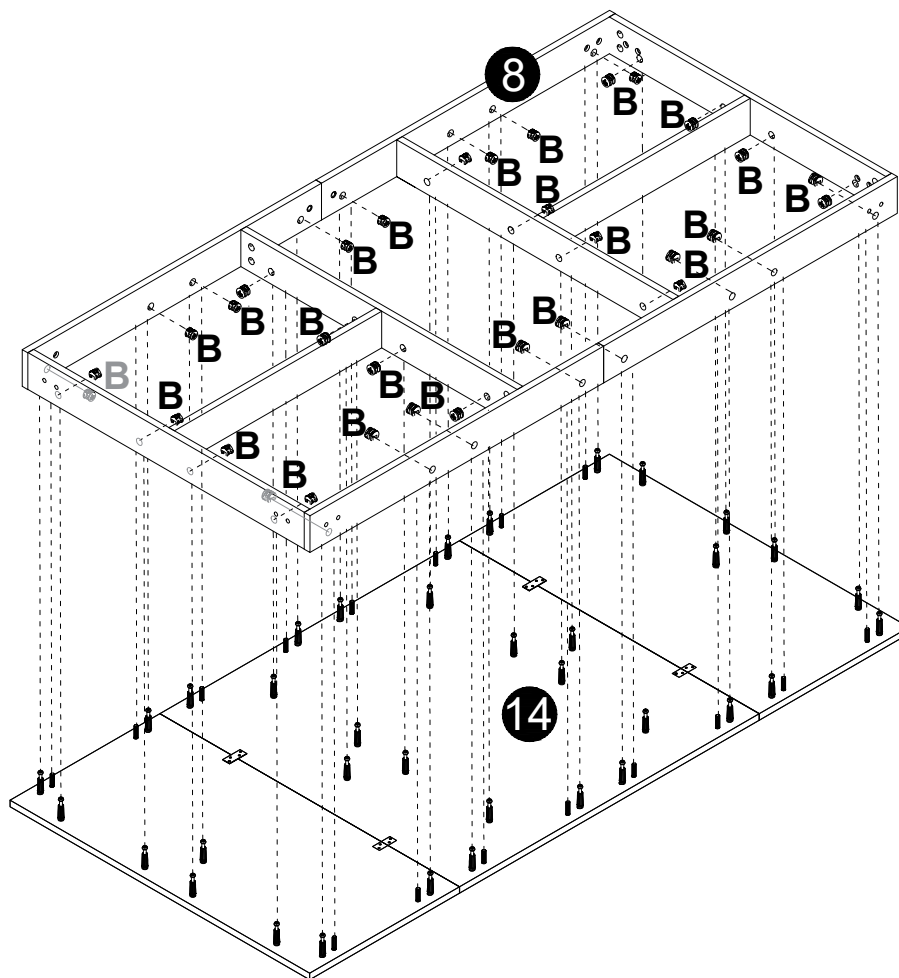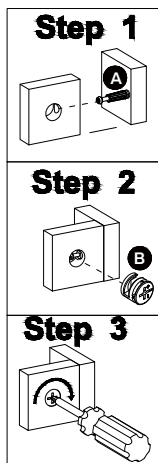

B
Ø15x12mm 36pcs

22

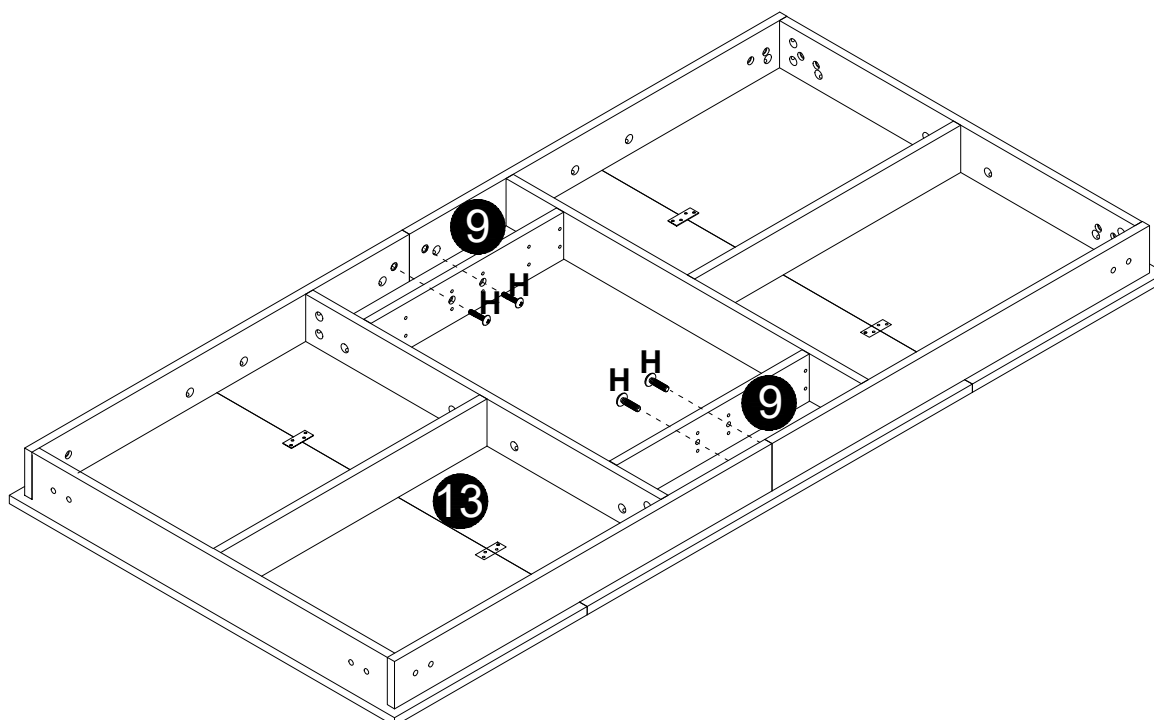


H
M6x20mm 4pcs



23

F


Ø3.5x25mm
24pcs

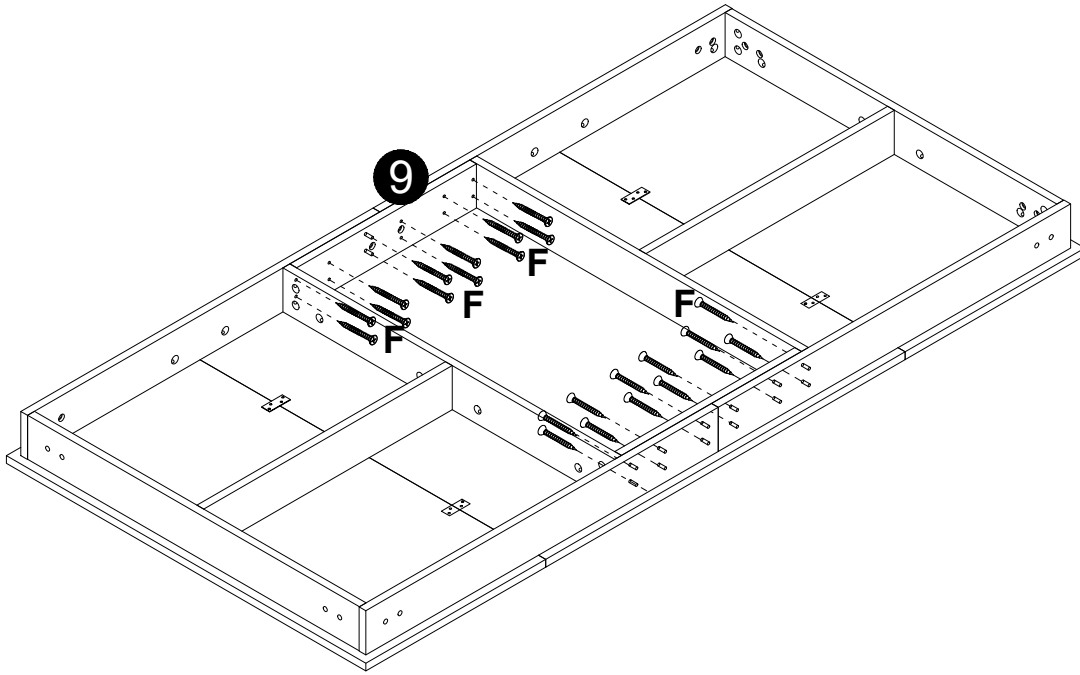

24

H


M6x20mm
16pcs

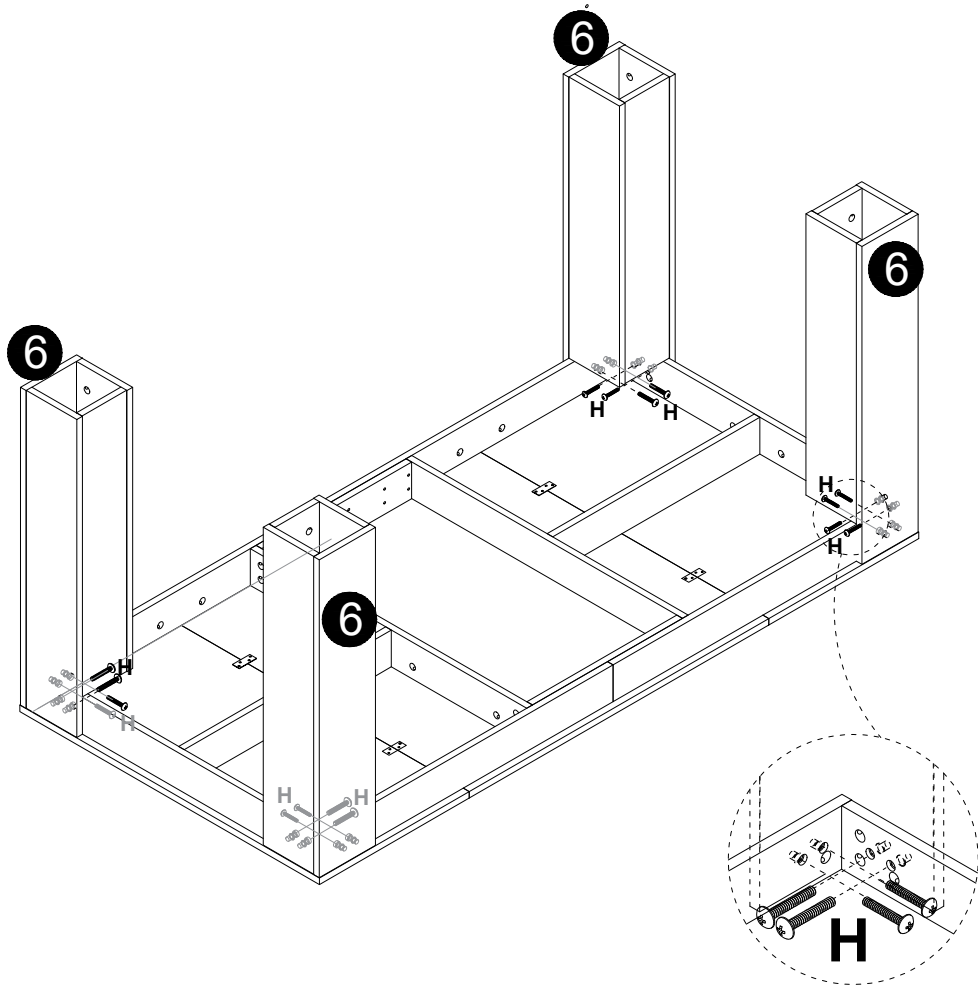



DESIGNED FOR LIFE

Thank you for your support!

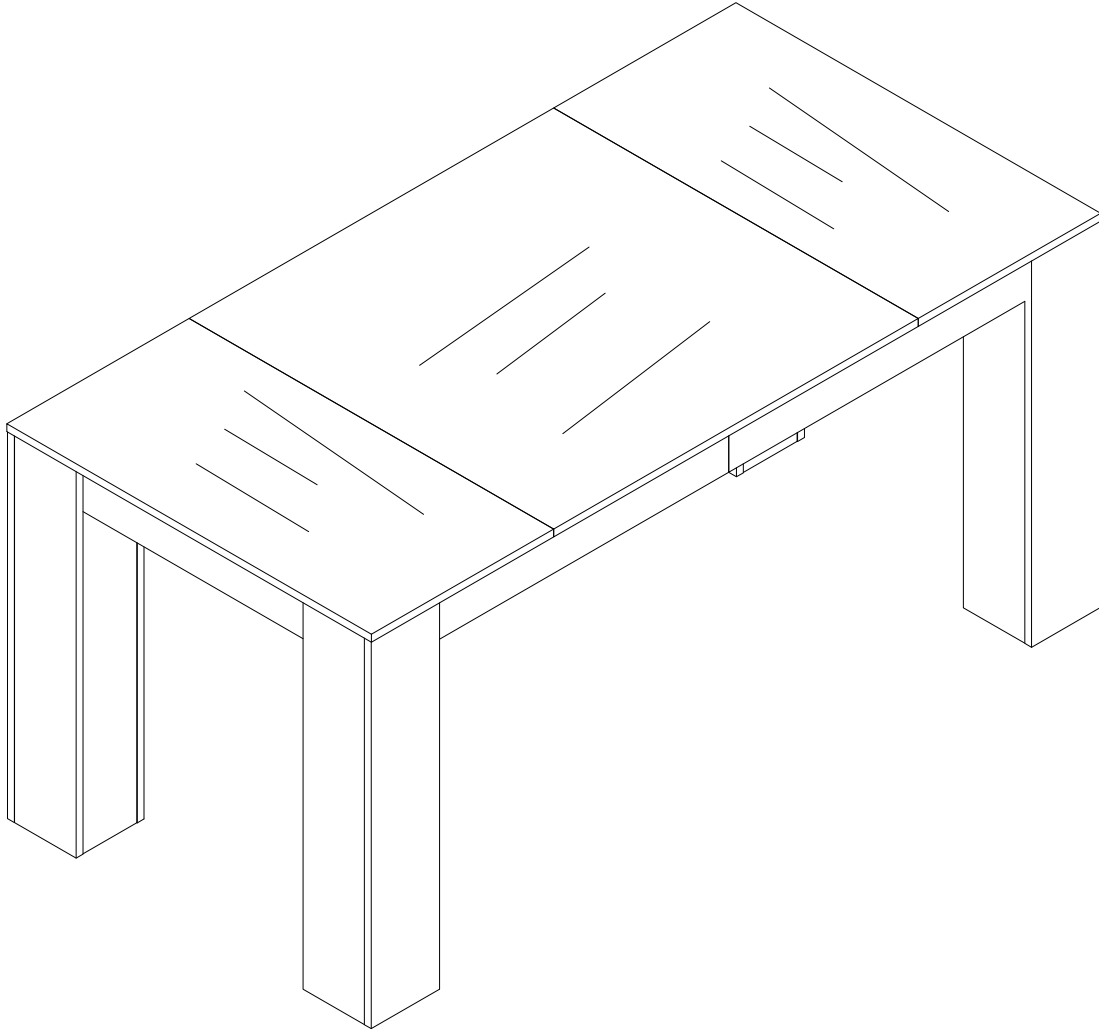

Contact our customer service team



support@tribesigns.com
www.tribesigns.com



1-424-220-6888

7 AM to 8 PM EST,
Monday to Friday

Follow Tribesigns



Facebook



Instagram



Pinterest



Twitter



YouTube



TikTok



WhatsApp