
# **Assembly Instructions**

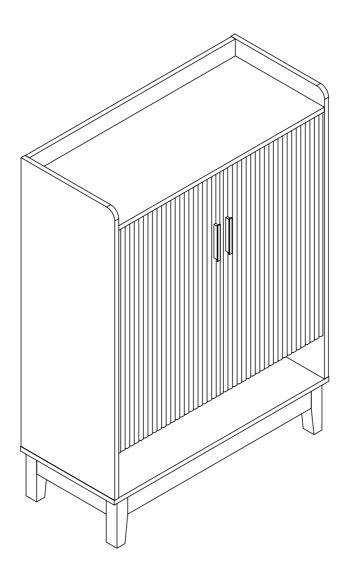

**Shoe Cabinet** 

Model No.

HOGA-F2362


# Contact Us We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


### **Warm Tips**

- 1. Carefully read these instructions and keep them for future reference.
- 2. Check the parts list and confirm everything's there before starting assembly.
- 3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
- 4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

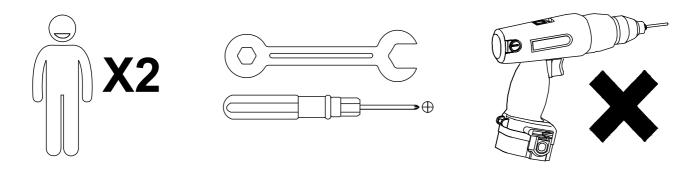


We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

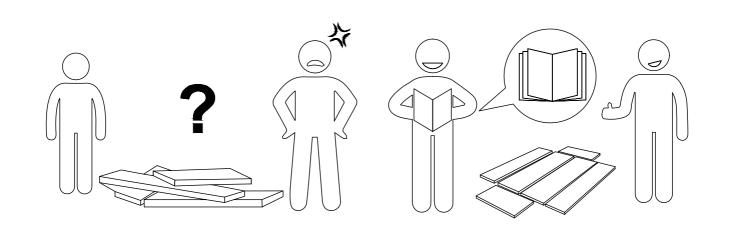


# **Install the Anti-Tip Straps**

Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.

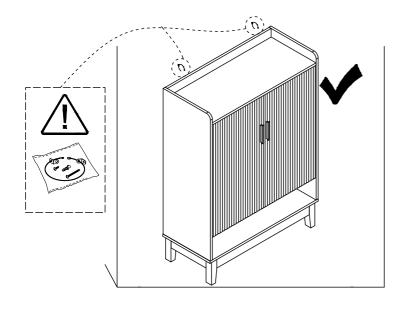


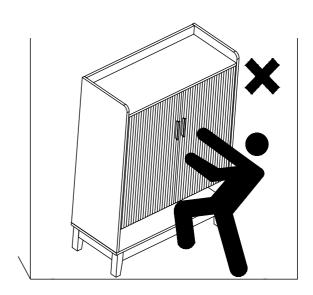

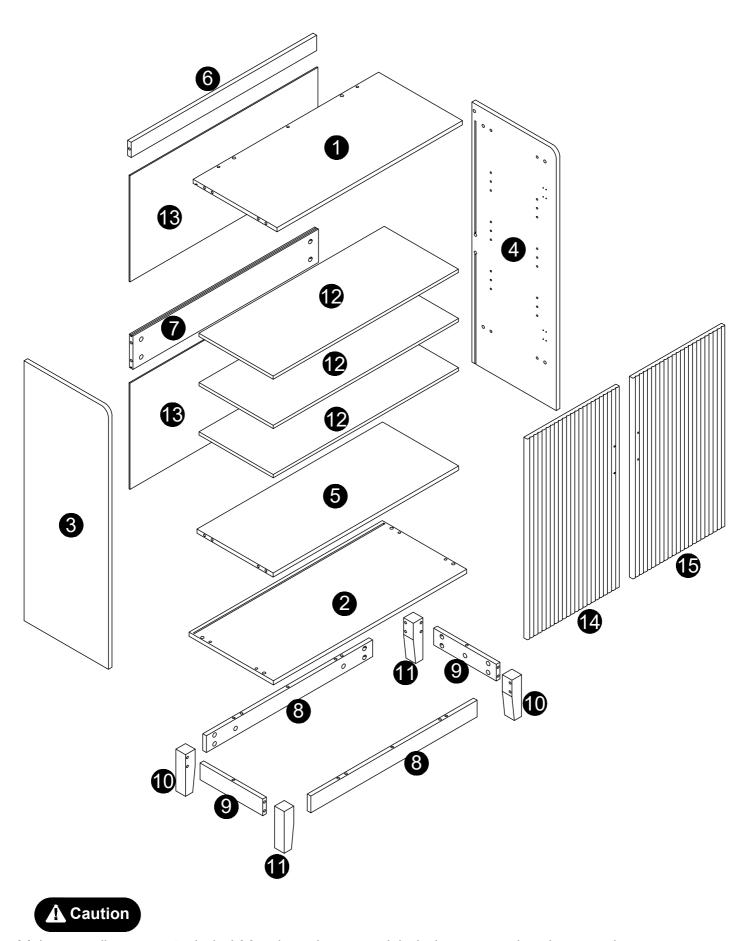

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

# **Parts List**

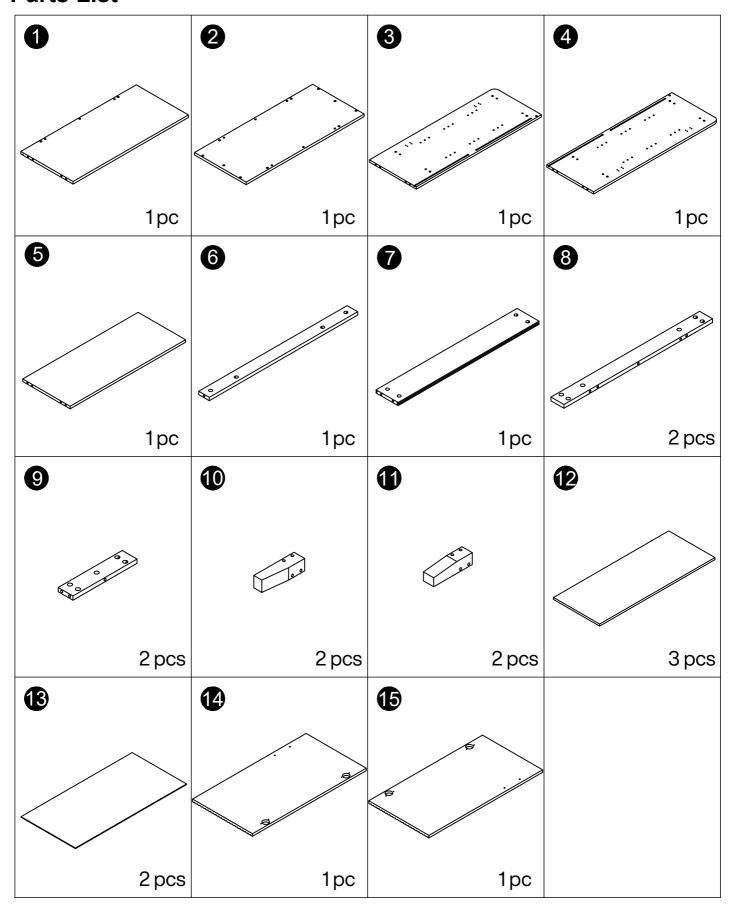

# **Hardware List**


Α	В	С	D	E	F
				Ominin	
Ø6x40mm	Ø15x12mm	Ø8x30mm		M4x18	114x17x11mm
38 pcs	38 pcs	21 pcs	4 pcs	4 pcs	2 pcs

G	Н	I	J	K	L
Ø5x10mm	Ø14x4mm		17x16x10.5mm	3x18mm	3.5x14mm
12 pcs	4 pcs	1 pc	16 pcs	16 pcs	26 pcs


М	N	0	Р	
Ø7x47mm			M4	
4 pcs	2 pcs	2 pcs	1 pc	


#### **Installation of Cams and Pins**


Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again. Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

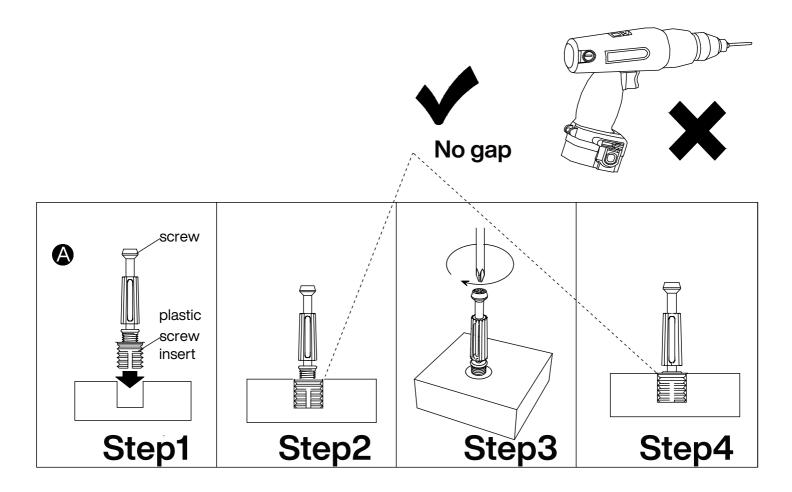


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

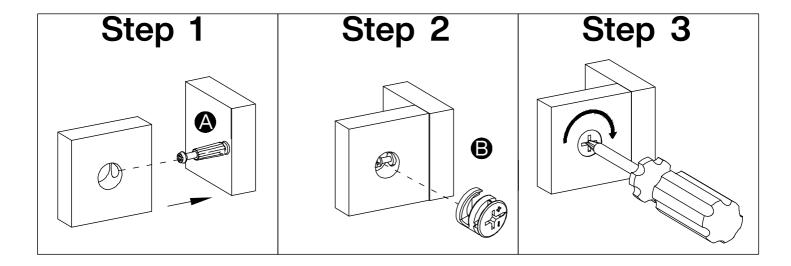


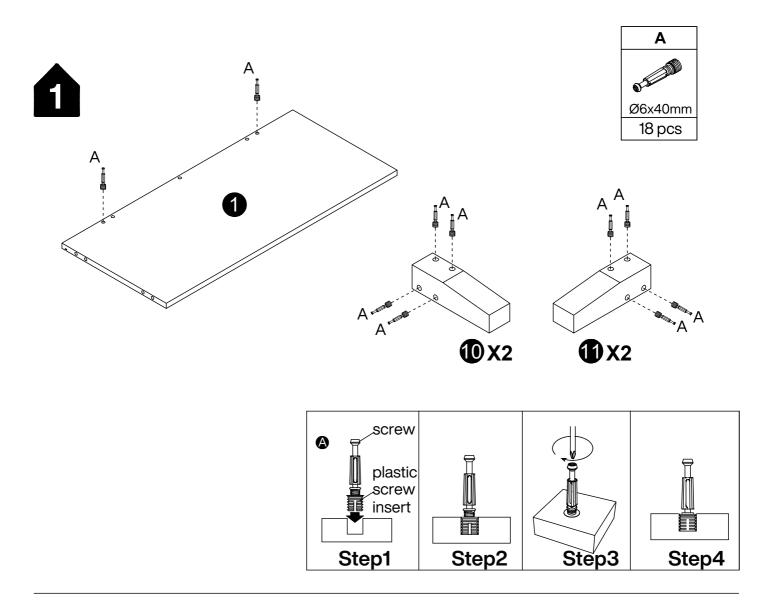


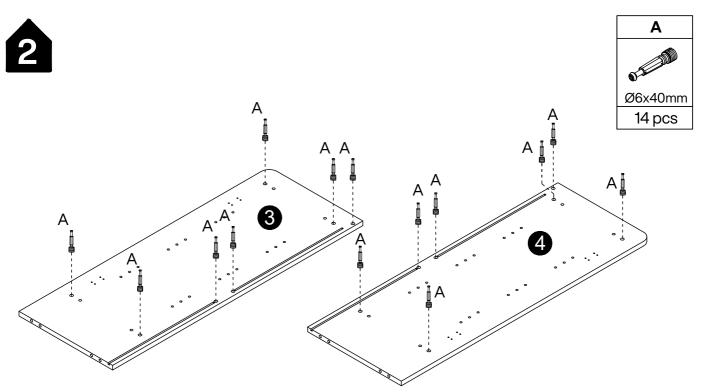







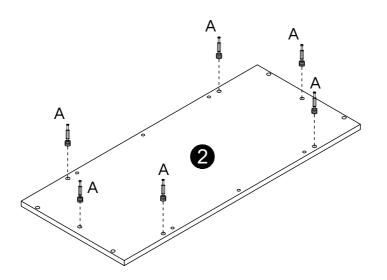

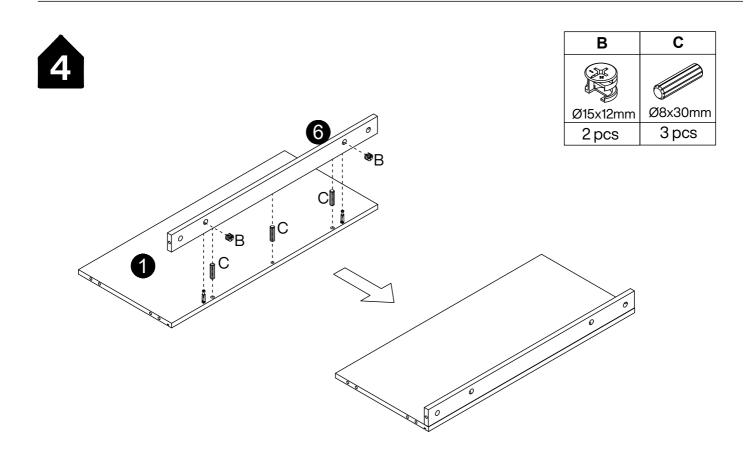




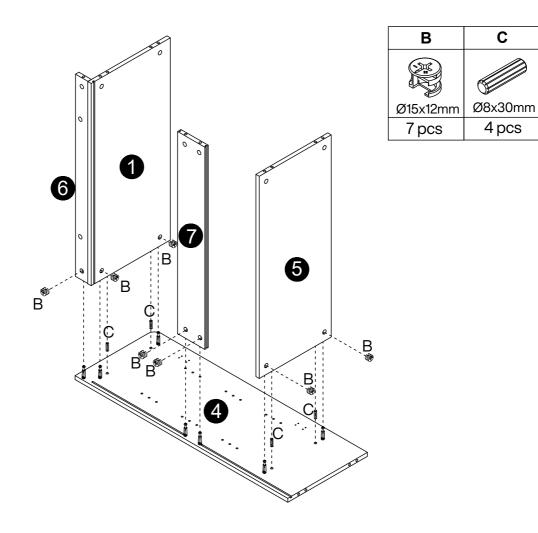


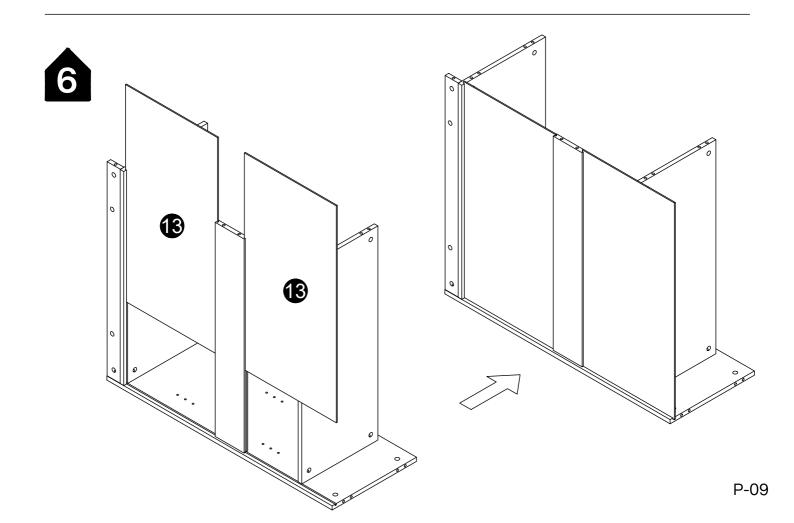





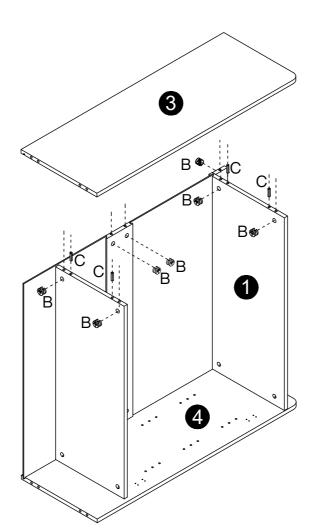

В	С	
Ø15x12mm	Ø8x30mm	
7 pcs	4 pcs	

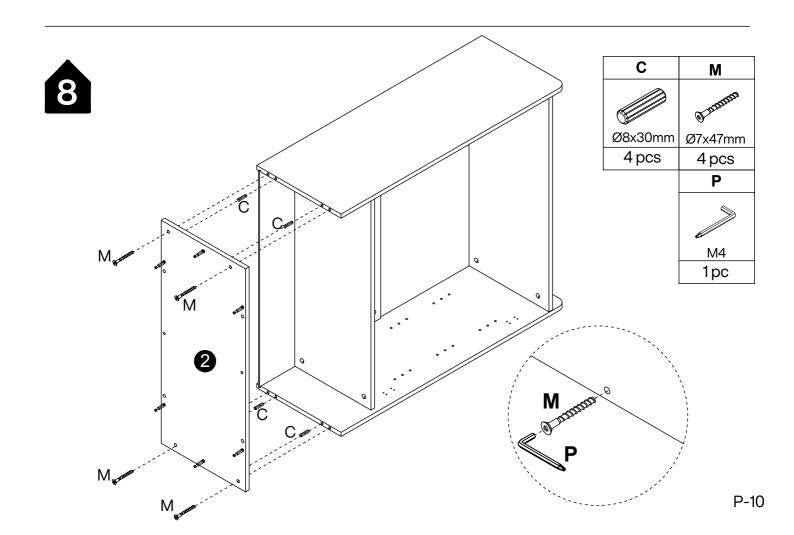


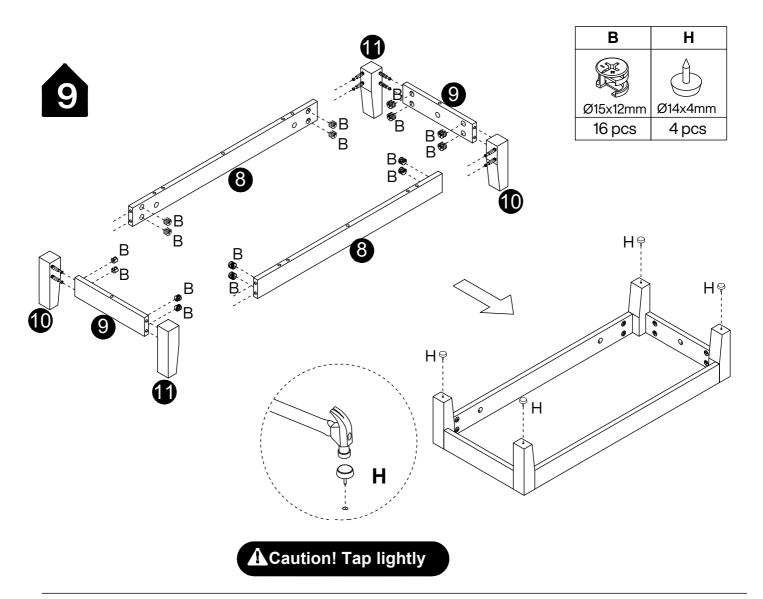


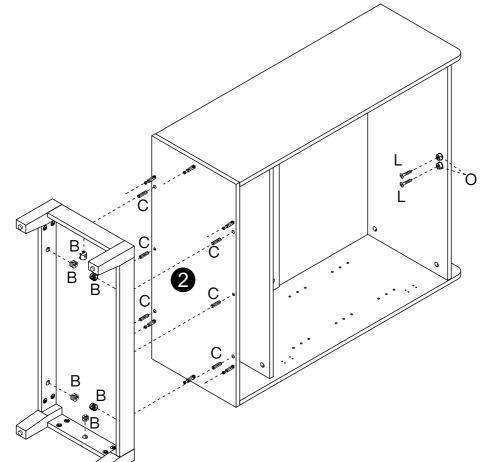


В	С	
N. N		
Ø15x12mm	Ø8x30mm	
6 pcs	6 pcs	
L	0	
	0	
3.5x14mm	Ø10x10mm	
2 pcs	2 pcs	



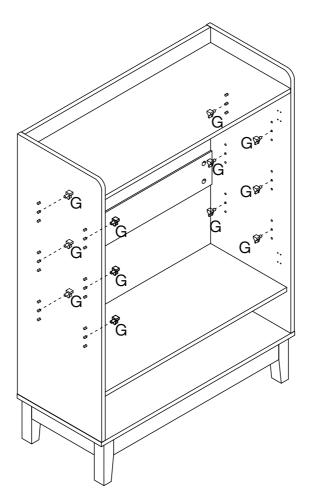







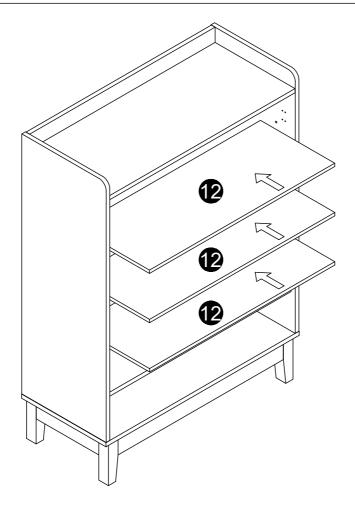




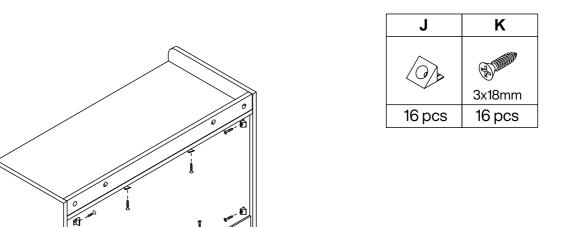


K

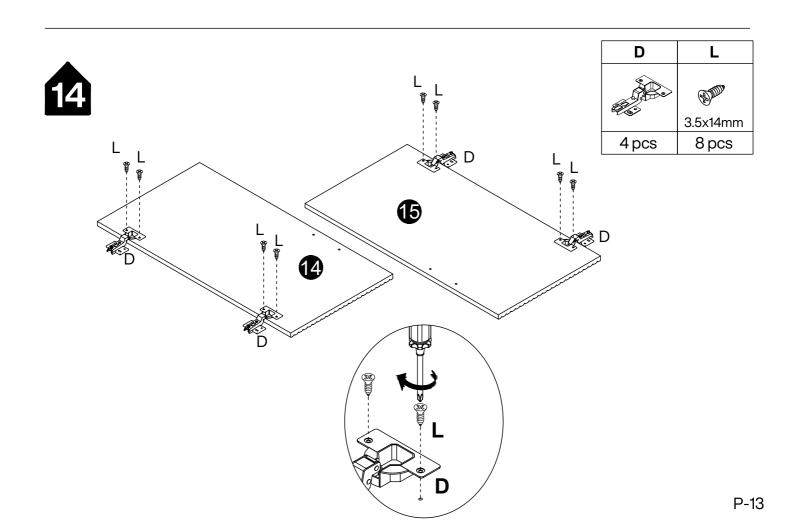



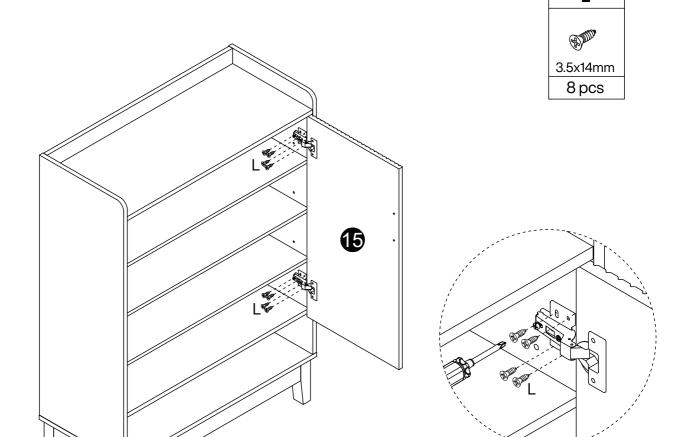


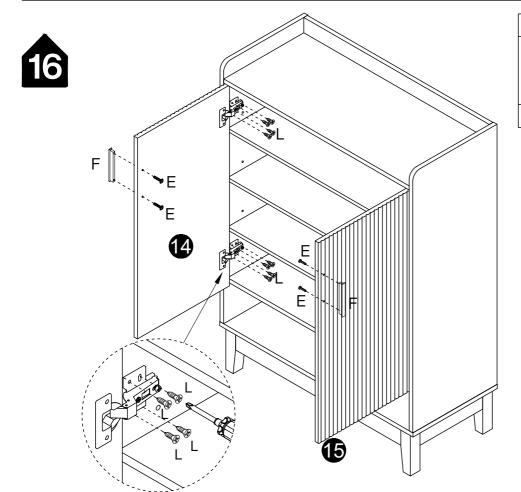


Ε	F	L
Opining.		3.5x14mm
4 pcs	2 pcs	8 pcs

#### TO ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).

Step 1 Open the door.

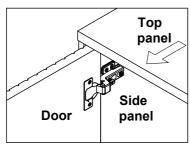


Step 2 Adjust the door panel to be flush with side panel and top panel edge.

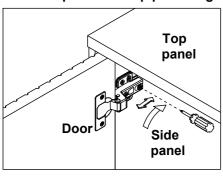


Loosen the screw indicated a little. adjust the hinge to right position (see step 2a & 2b), then tighten the screw.


Step 2a MOVE DOOR OUT Top panel Door

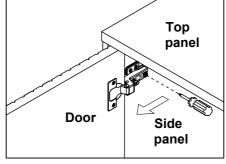

Pull the hinge forward a little.


## Step 2b MOVE DOOR IN

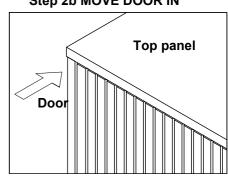

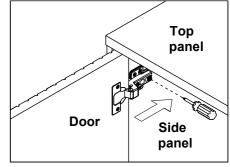


Push the hinge back a little.


#### Step 3 Adjust the gap betweem door panel and side panel.

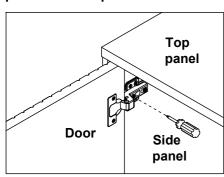

Loosen or tighten the screw indicated a little to adjust the gap between the door panels, adjust the hinge to right position (see step 3a & 3b).


## Step 3a MOVE DOOR LEFT

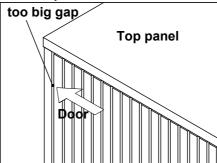


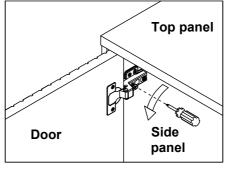

Turn the screw clockwise a little as shown to make the gap small.


#### Step 3b MOVE DOOR RIGHT

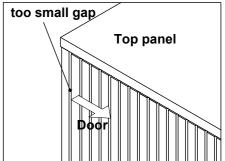


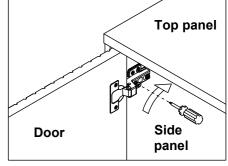

Turn the screw counterclockwise a little as shown to make the gap big.





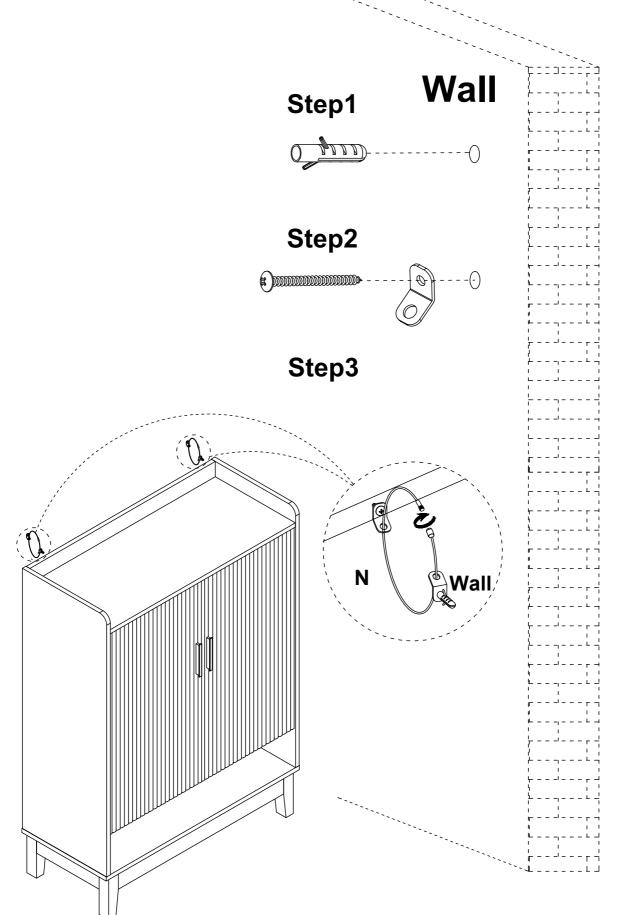

# Thank you for your support!

