


ASSEMBLE YOUR RAISED BED IN 8 SIMPLE STEPS!

STEP ONE




Take a post and place it upright where you want the front corner of your bed to be, ensuring that the side with no slot faces the front.

STEP TWO

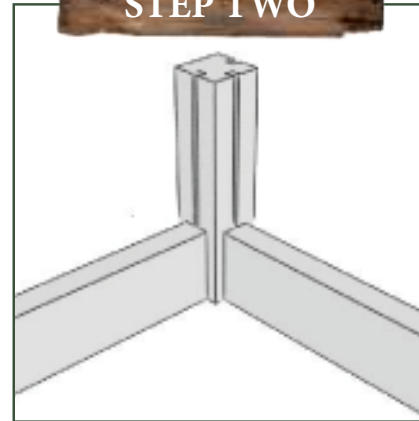

Insert one side board and another board at the front by sliding the end of each board evenly into the appropriate post slot.

STEP THREE

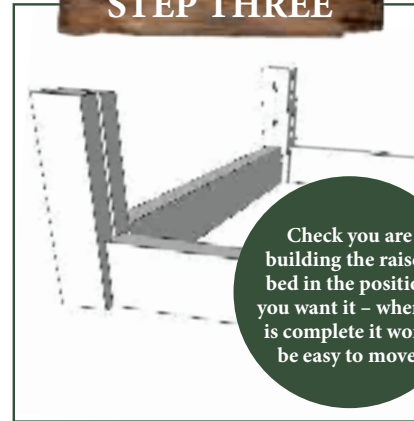

Check you are building the raised bed in the position you want it – when it is complete it won't be easy to move.

The boards should slide in easily with no need to force them or hammer them in. If you are having difficulty, ensure your post is upright and try sliding the board more slowly. You should now have an L shape.

STEP FOUR



Ensuring that from the front and from the back the unmachined side of the post faces you, use three more posts and two more boards to build a square – simply slide the boards into the posts as before.

STEP FIVE



The boards will go easily if you slide them slowly and evenly and you keep the post upright.

Slide more boards down between the posts to complete each side of the bed. Lay out the weed suppressant liner in the base of your bed covering the ground. It can be trimmed to fit if necessary.


IF YOU ARE ASSEMBLING A SINGLE-BAY RAISED BED, YOU'VE FINISHED!

STEP SIX




If your raised bed has 2 or 3 bays, there is a bit more to do... Take two more boards and using the posts on one of the completed sides of the raised bed, slide in the bottom board at the front and back.

STEP SEVEN

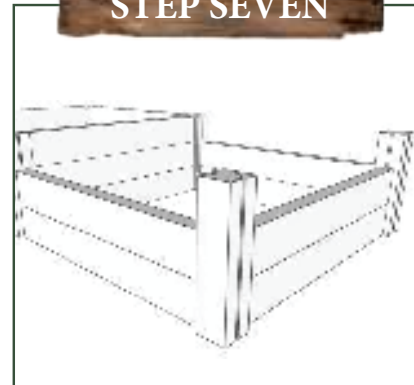

Take two more posts and again ensuring it is the unmachined side of the post facing outwards at the back and at the front, slide the other end of the two boards you have just positioned into the post.

STEP EIGHT

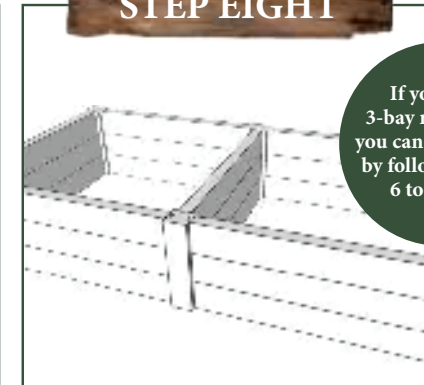

If yours is a 3-bay raised bed, you can complete it by following steps 6 to 8 again

Slide in the bottom board on the remaining side. Slide the remaining boards between the posts to complete each side of the bed.

YOUR RAISED BED IS NOW READY TO USE.

ONCE YOU HAVE ASSEMBLED YOUR RAISED BED, THERE IS NOTHING MORE YOU NEED TO DO TO THE BED ITSELF.

All of the timber has been pre-treated against rot and unlike some timber garden products, requires no additional routine treatment. You do not need to apply wood or timber preservatives, however, it will not harm the timber at all or invalidate your 15-year guarantee if you prefer to apply a timber treatment such as wood preservative/colourant.





ASSEMBLING AND LOOKING AFTER YOUR AGAMEMNON RAISED BED

THANK YOU FOR BUYING AN AGAMEMNON RAISED BED.
THE GUIDANCE IN THIS LEAFLET WILL HELP YOU TO SUCCESSFULLY
ASSEMBLE AND LOOK AFTER YOUR RAISED BED.

PREPARATION

Before you start putting your raised bed together, you may like to check that everything is ready. A few minutes spent doing this first could save you a lot of time later.

WILL IT FIT?

Measure the area you have selected and check it is big enough for your raised bed and there is enough room for access during assembly. You will find details of the ground area of your bin on your invoice/delivery note.

REMEMBER

You may not be able to move a fully-assembled raised bed. If you want to move it later, you will need to dismantle it!

IS THE AREA LEVEL?

It is much easier to build your raised bed on flat, level ground, and doing so will improve the look and longevity of your raised bed. You may need to do some preparatory groundwork if your site is not level.

DO YOU HAVE ALL THE TIMBER?

Your packing list/delivery note shows the number and size of the posts and boards you should have received. If anything is missing or damaged, please contact us on 01284 848731 for further advice.

DONE!

THAT'S IT!

Our raised beds do not require you to dig holes or lay any type of base for the raised bed.

YOU DO NOT NEED ANY TOOLS, SCREWS OR NAILS DURING ASSEMBLY.
YOU ARE NOW READY TO START ASSEMBLING YOUR RAISED BED.

TELEPHONE: 01284 848731