
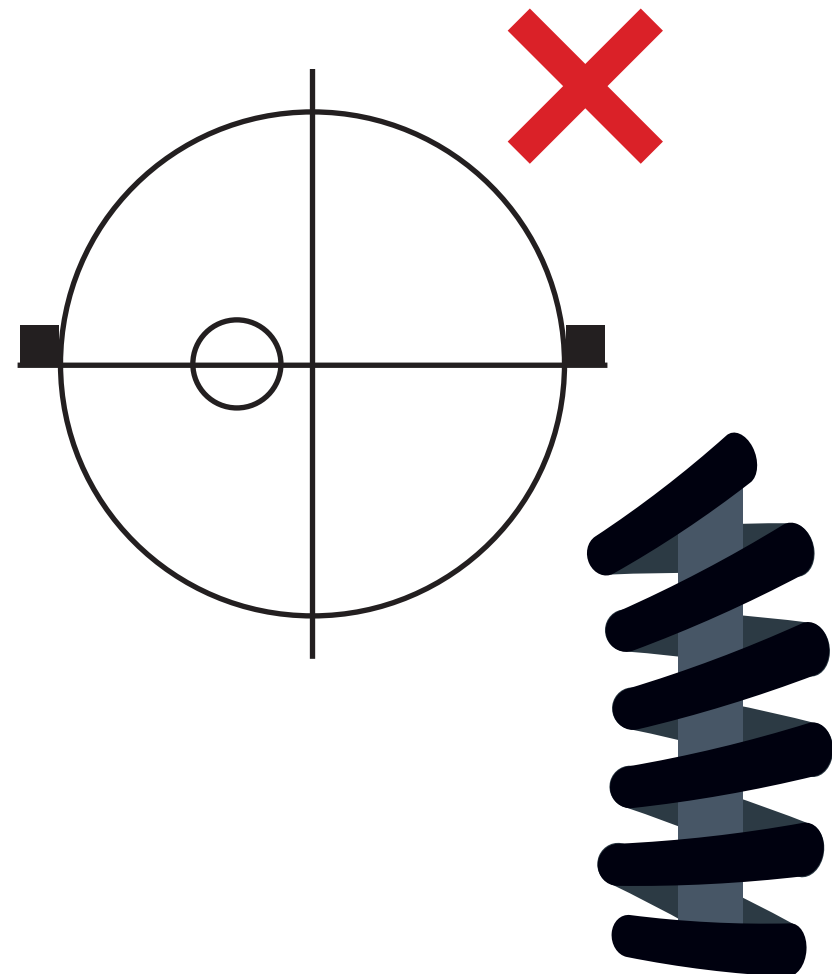


HOW TO LOAD SPRING & STRUT WITH CORRECT ALIGNMENT

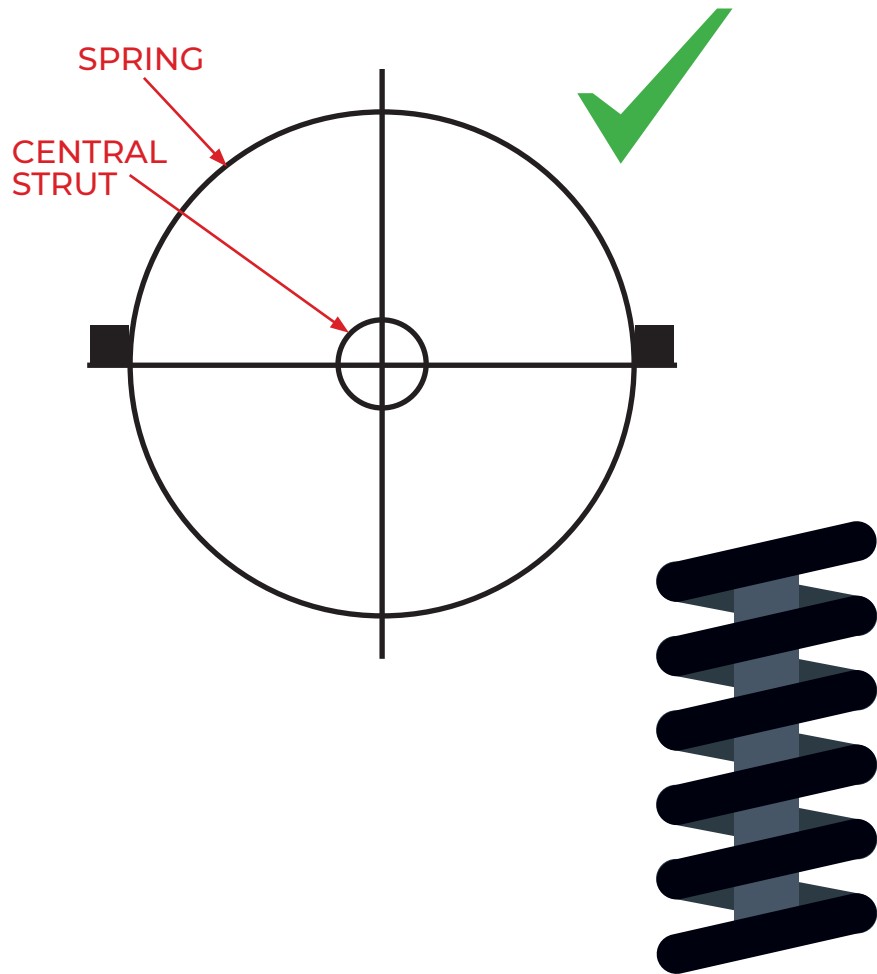

N.B. As the central shaft of the strut is offset on a lot of modern vehicles, care must be taken to ensure that the offset shaft is centralised prior to compression. Misalignment will make compression more difficult.