


Easily Converts From Squeezing To Widening

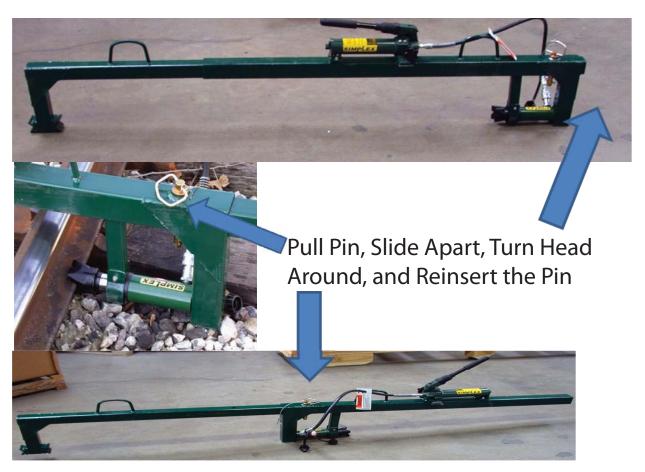


Pump Handle a Few Times To Make Sure the Unit is Tilted So Pressurize the System Fluid is in the Head





Check to Make Sure "V" Block is Fully Threaded to Cylinder Before Using



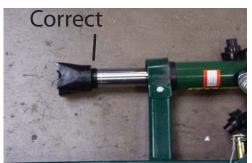



Rail Manipulator



You Can Squeeze or Widen Track

* Squeeze the Track



* Widen the Track



You can go base to base or base to ball

* Base to Base

Base to Ball



