



Front Bumper


Installation Instructions

What's Included

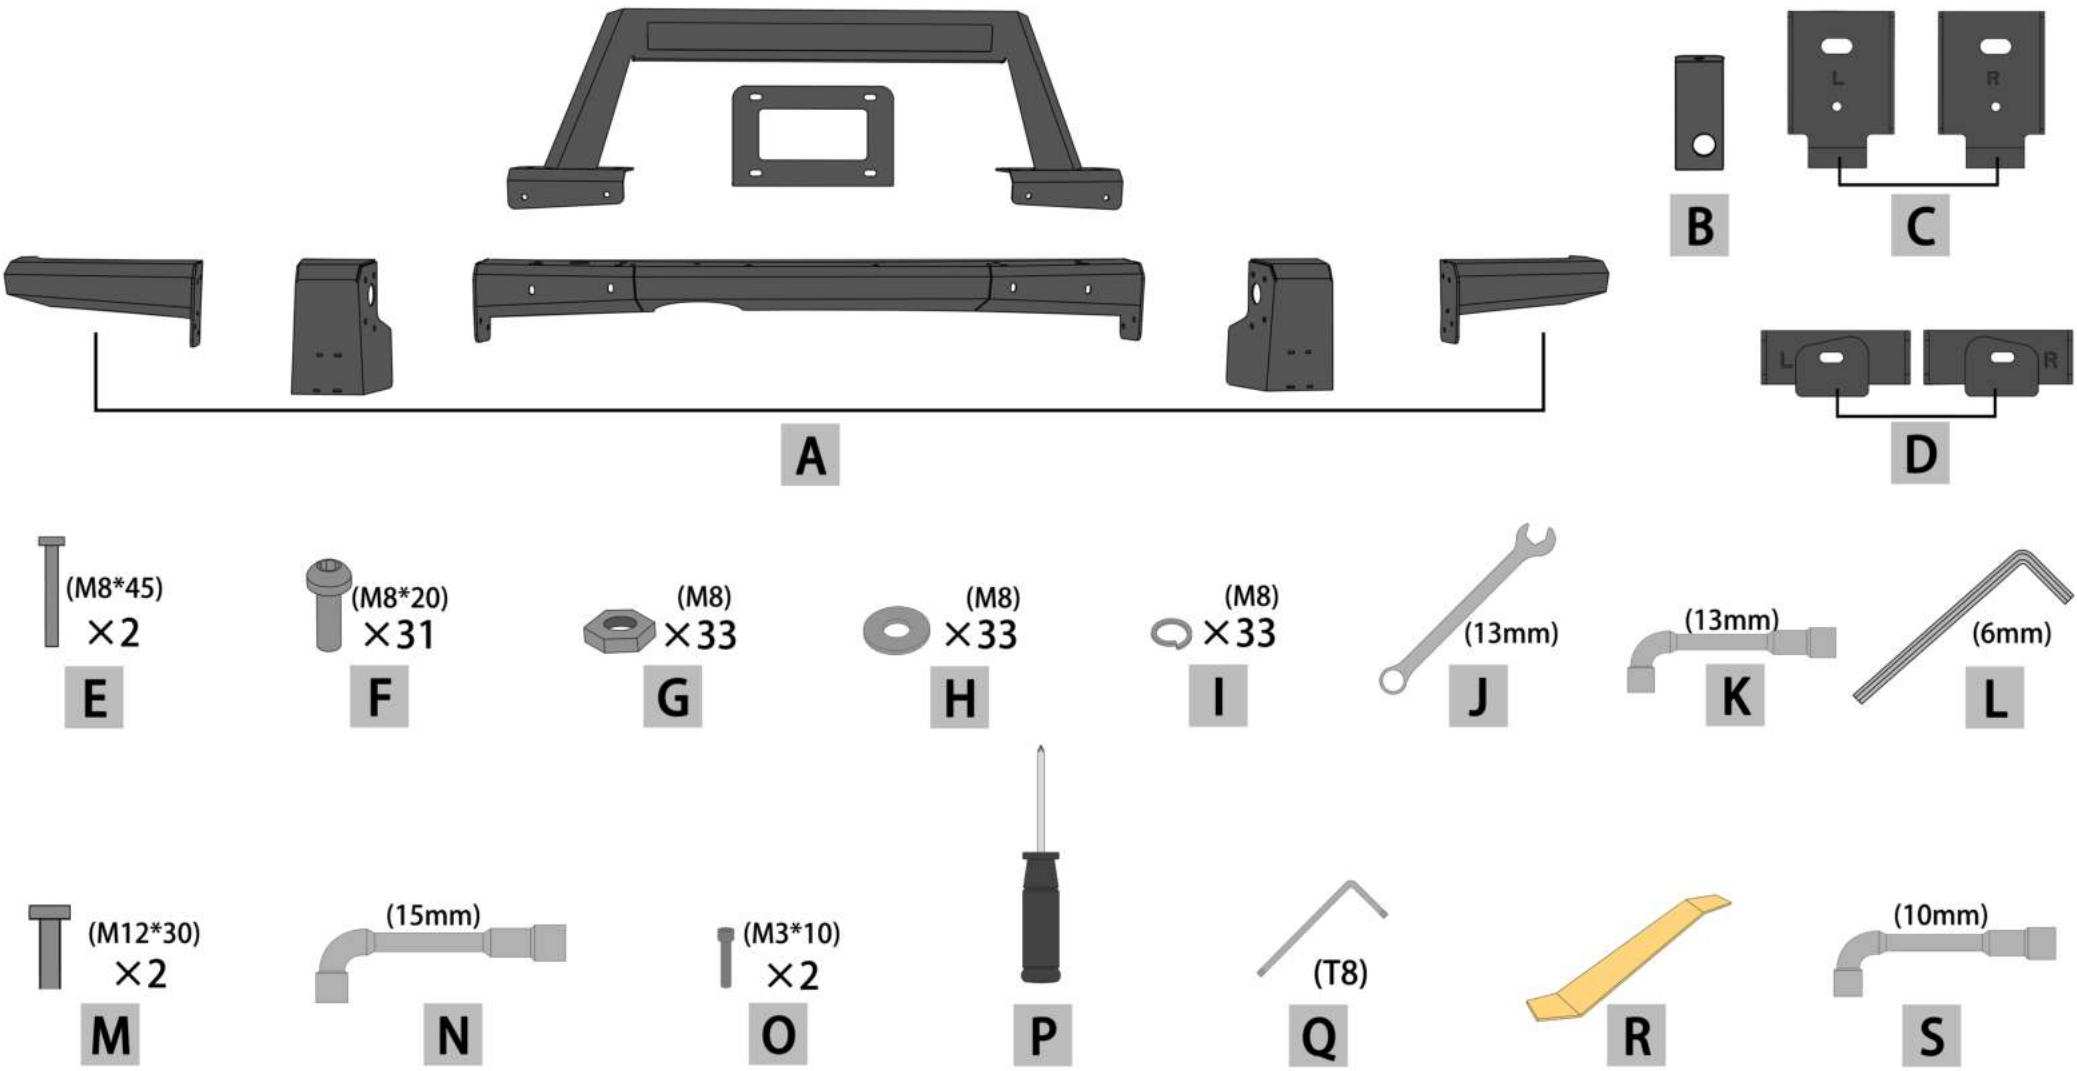


Note: Please keep the removed original car parts safe to prevent loss.

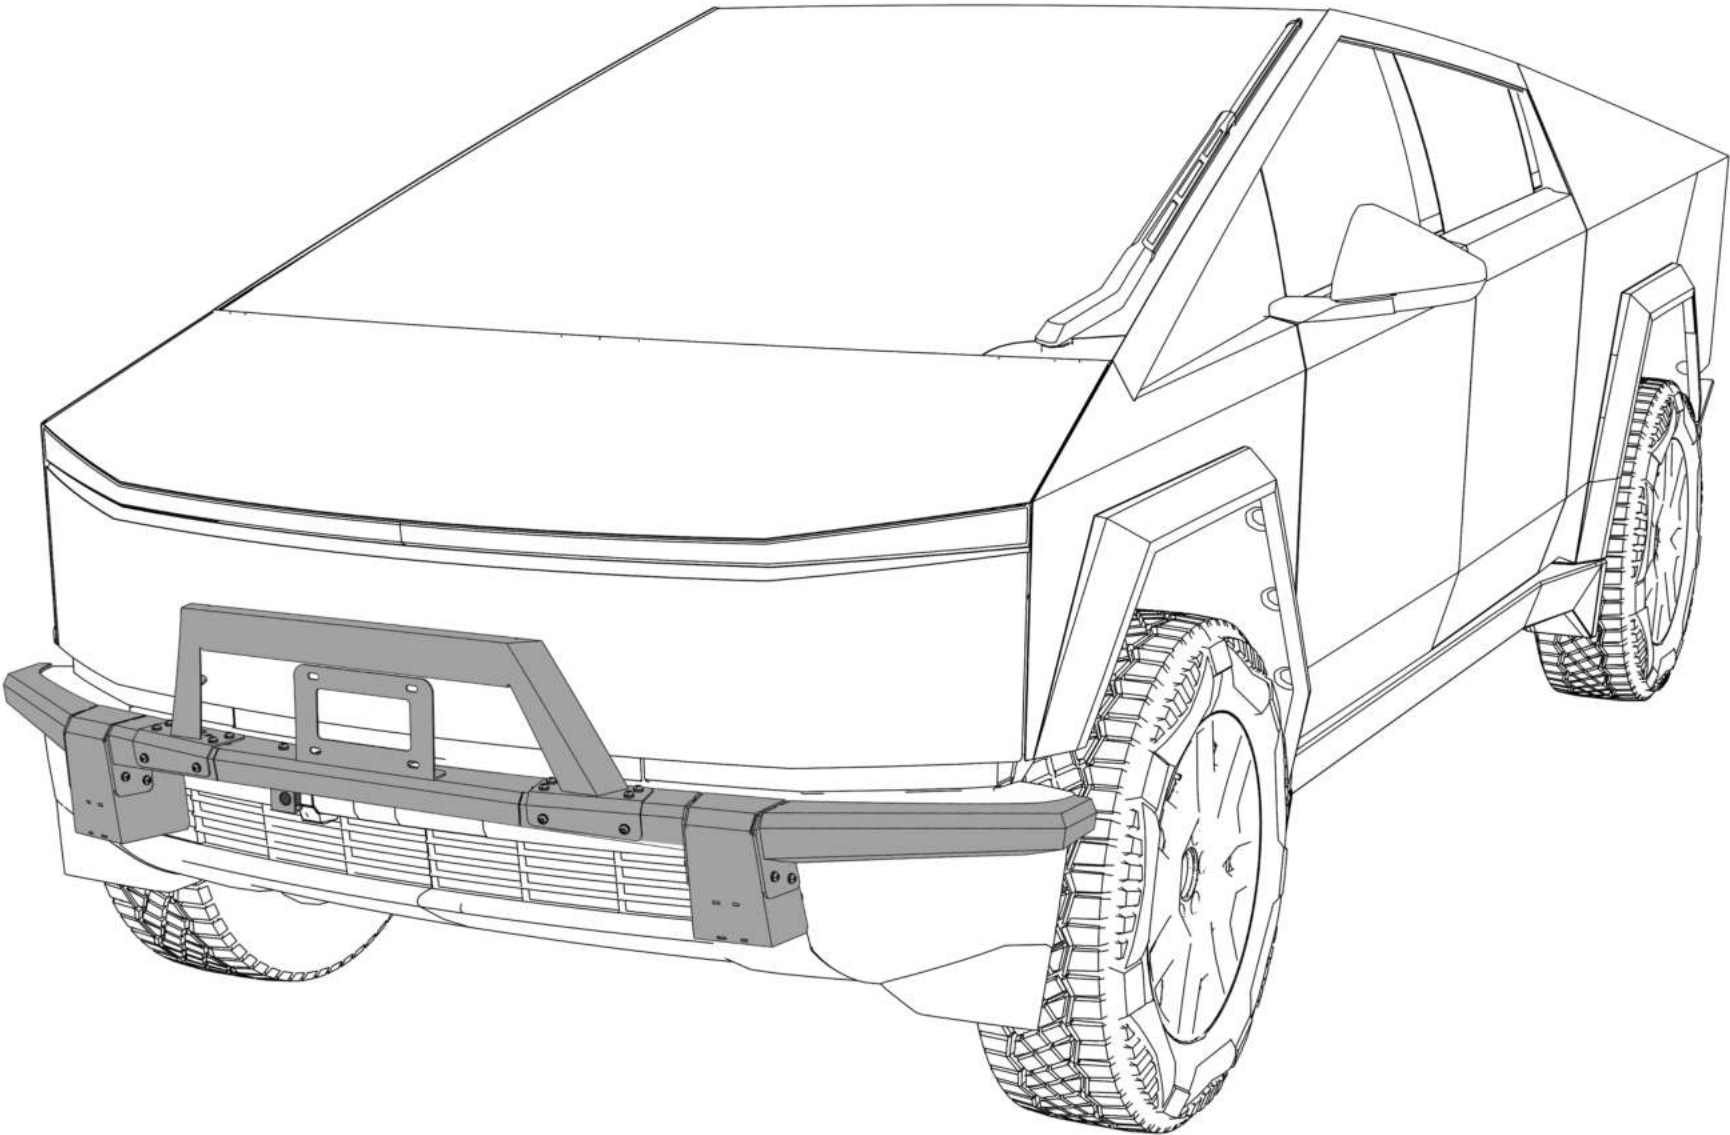


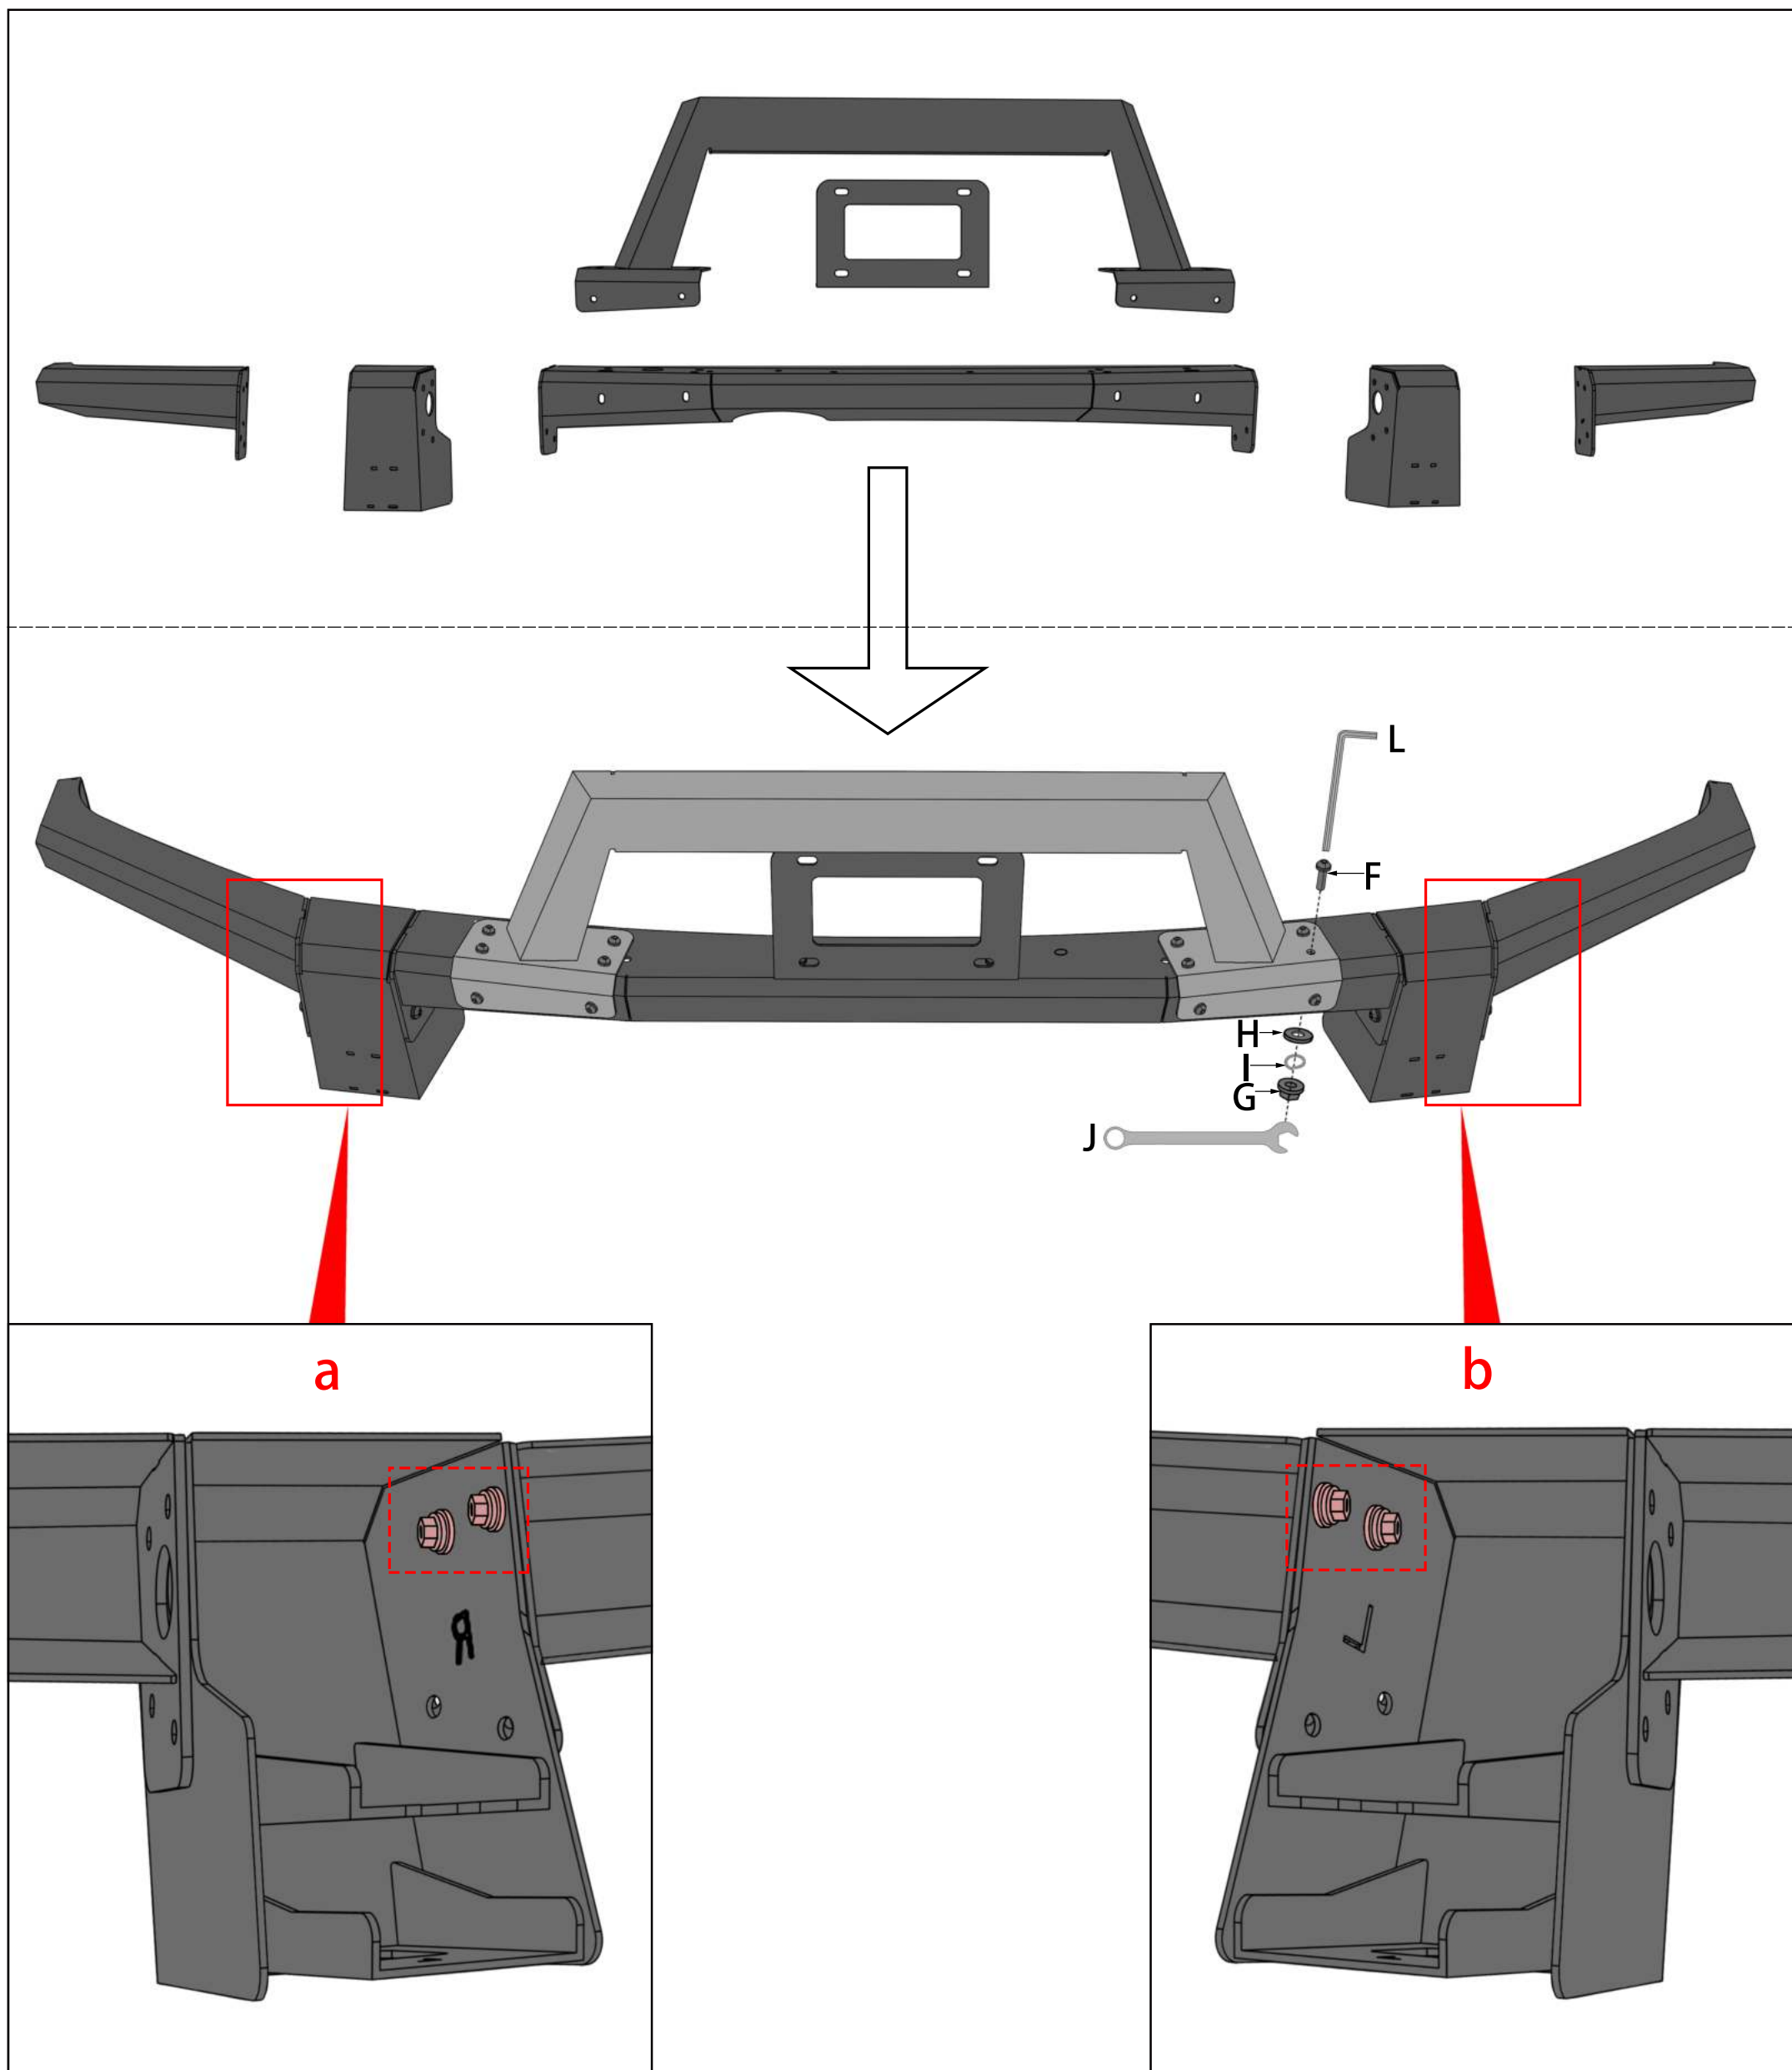


1. Assemble the front bumper parts as shown in the diagram. Pay special attention: do not tighten the two screws above the "a and b" area, while all other screws must be fully tightened.

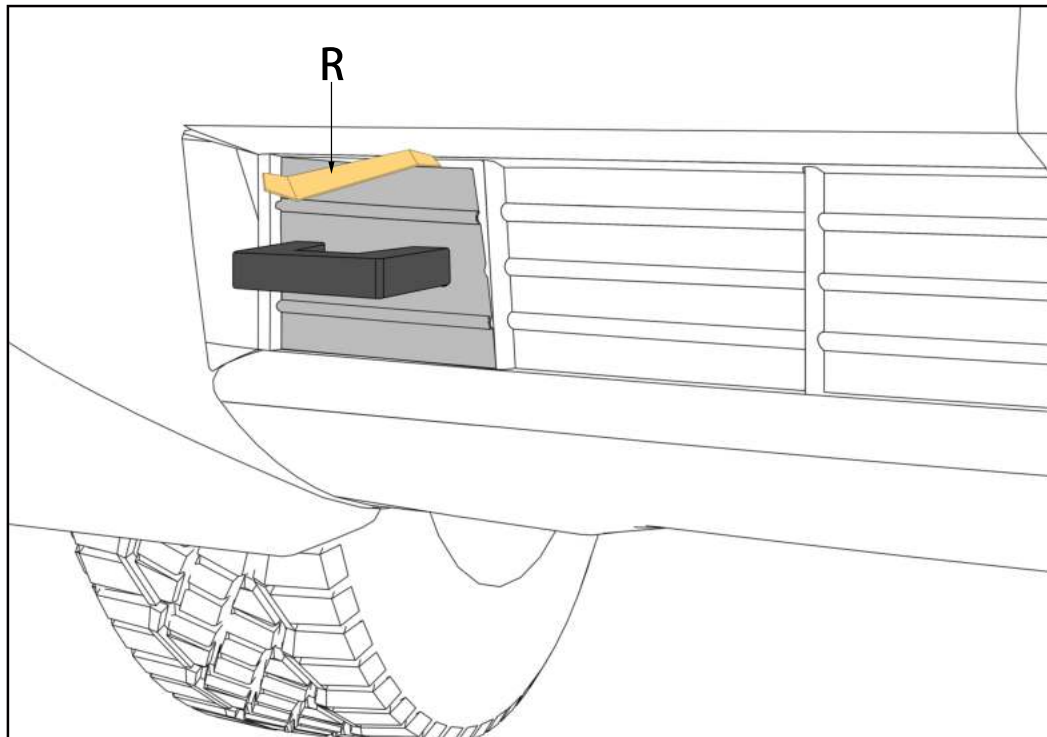


2. Remove the rubber caps from the towing hook positions on both sides of the vehicle.

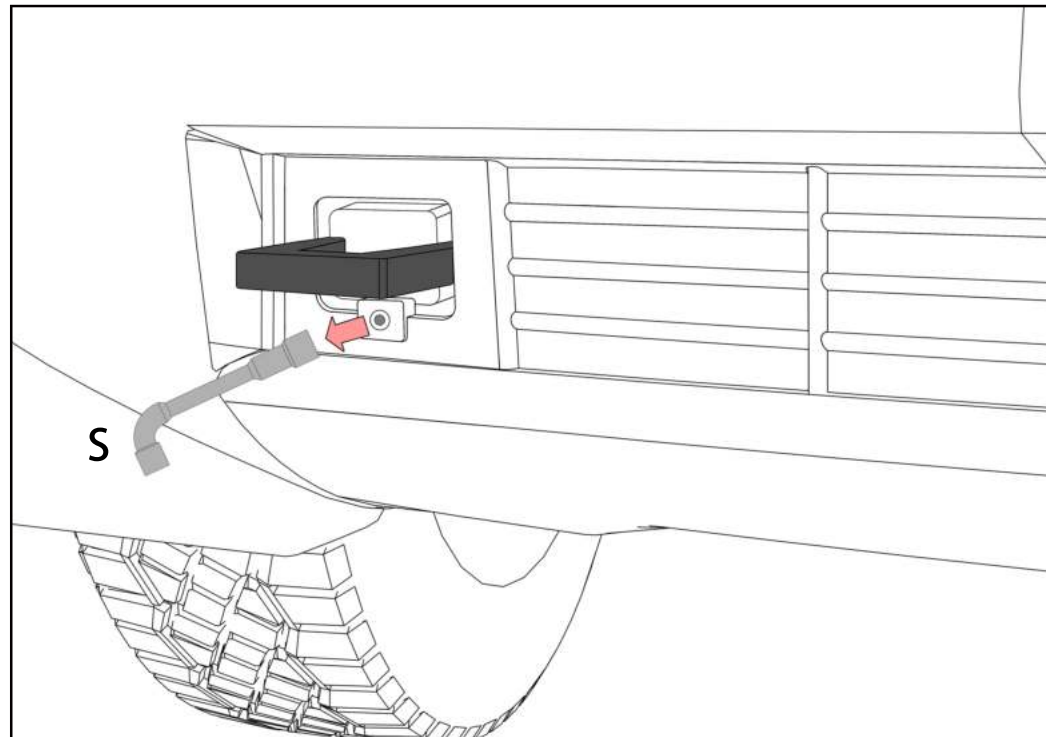


3. Take off the factory screws.

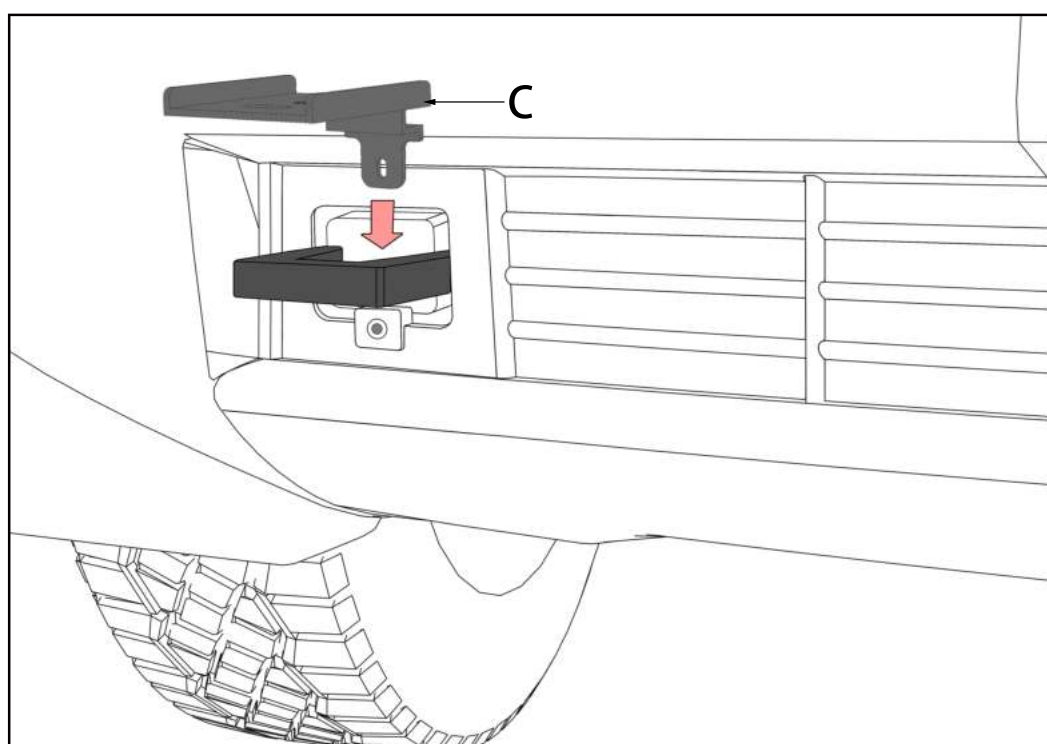


4. Install part C to the towing hook position as shown in the diagram, ensuring it is pushed all the way to the back.

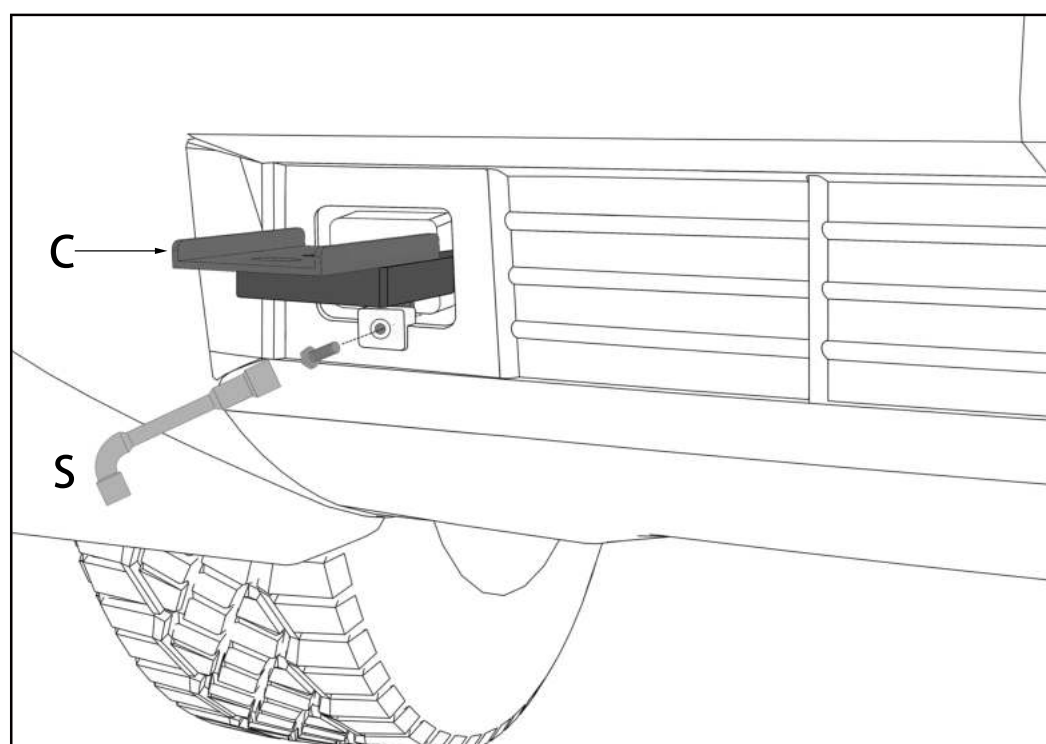


5. Use the factory screws to secure part C.

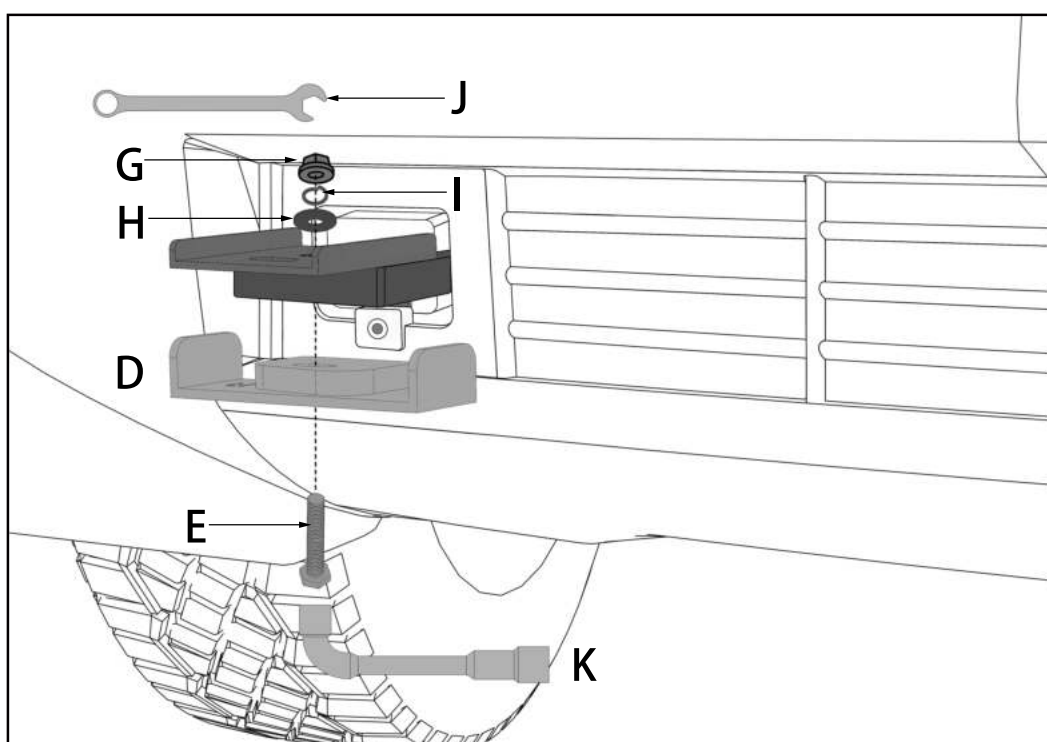


6. Attach part D to part C, and the same step applies to the other side.

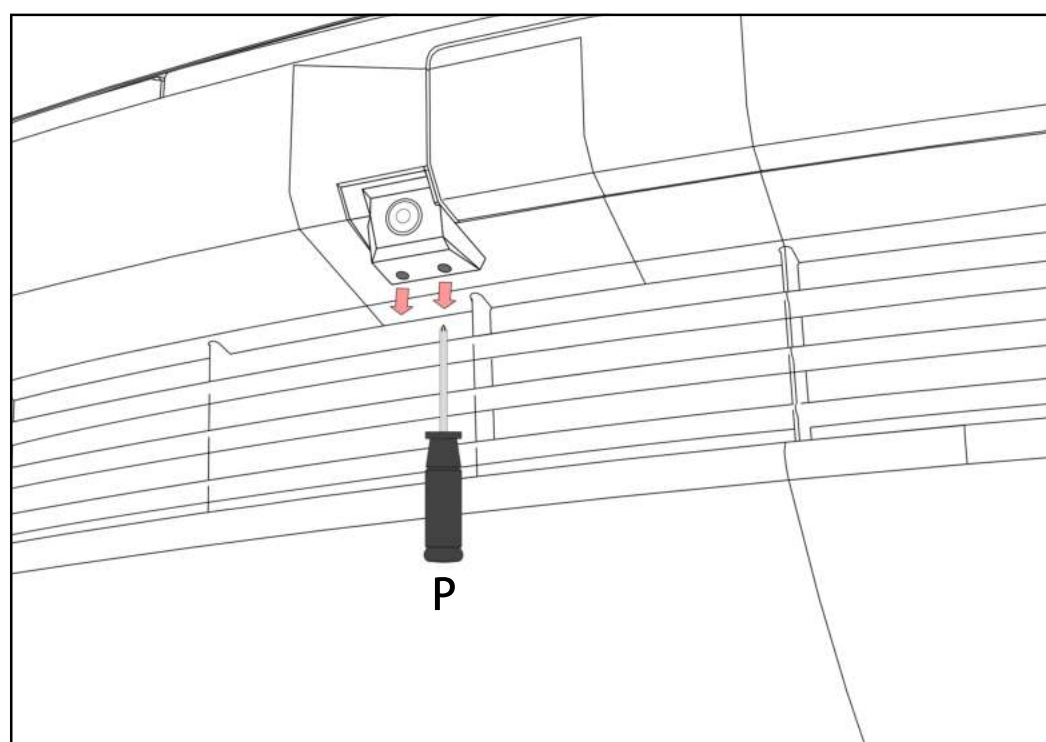


7. Use tools to remove the outer casing of the front bumper camera.

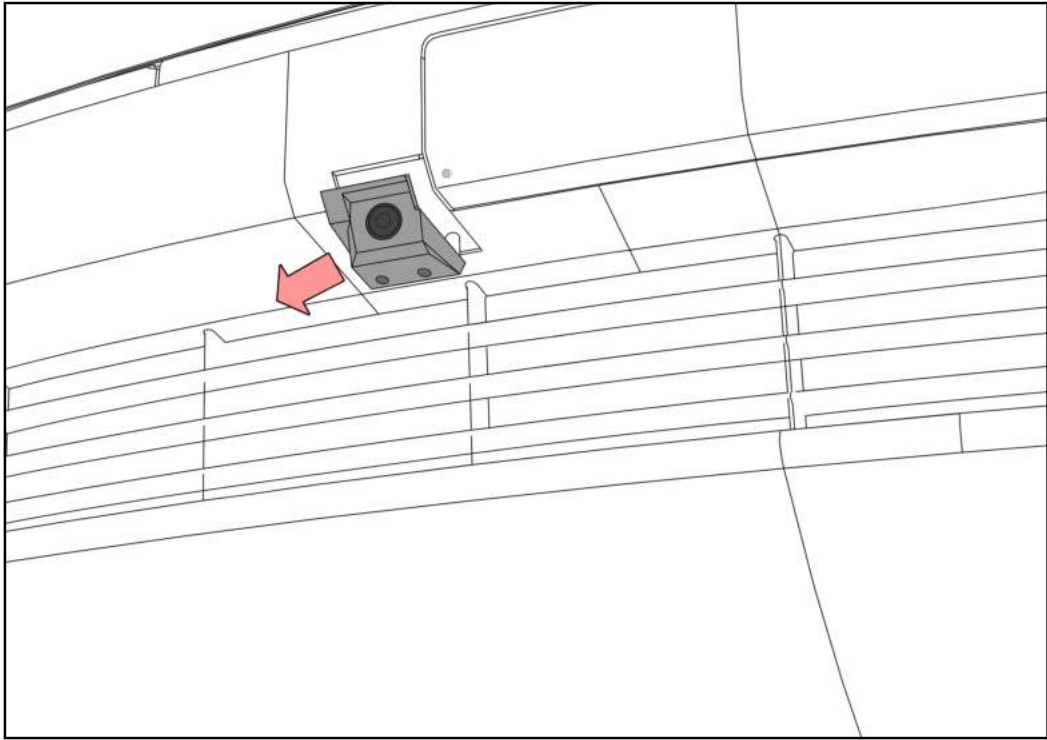


8. Remove the camera housing.

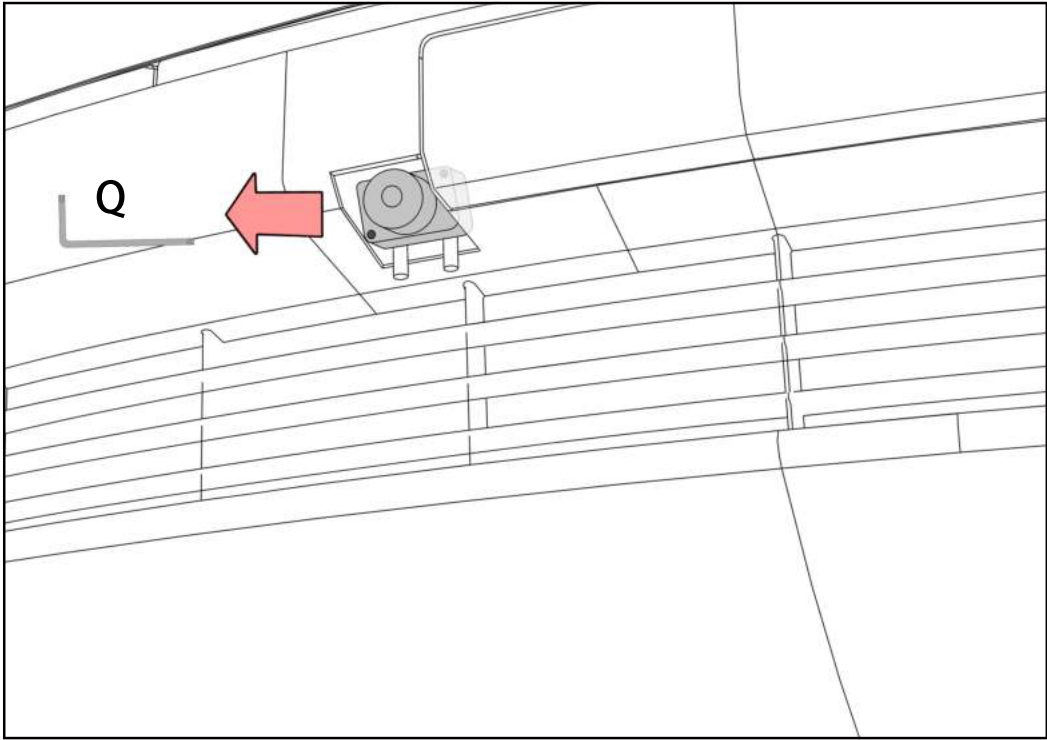


9. Use tools to remove the screws fixing the camera.

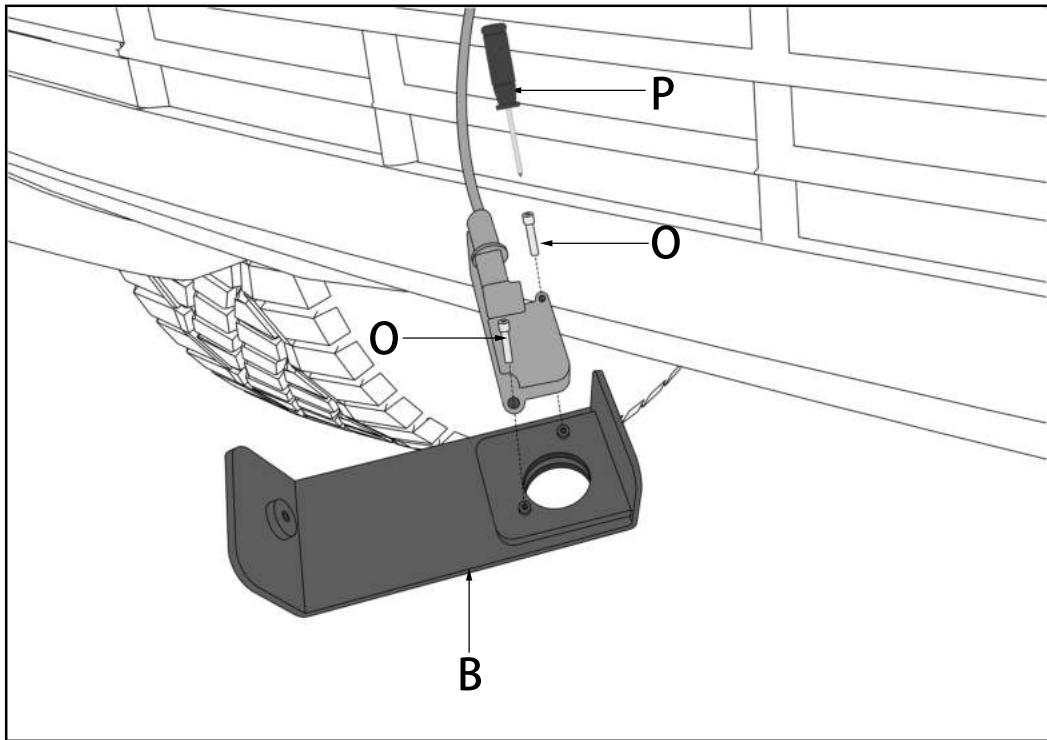


10. Install the camera onto the designated camera bracket B using the provided screws.

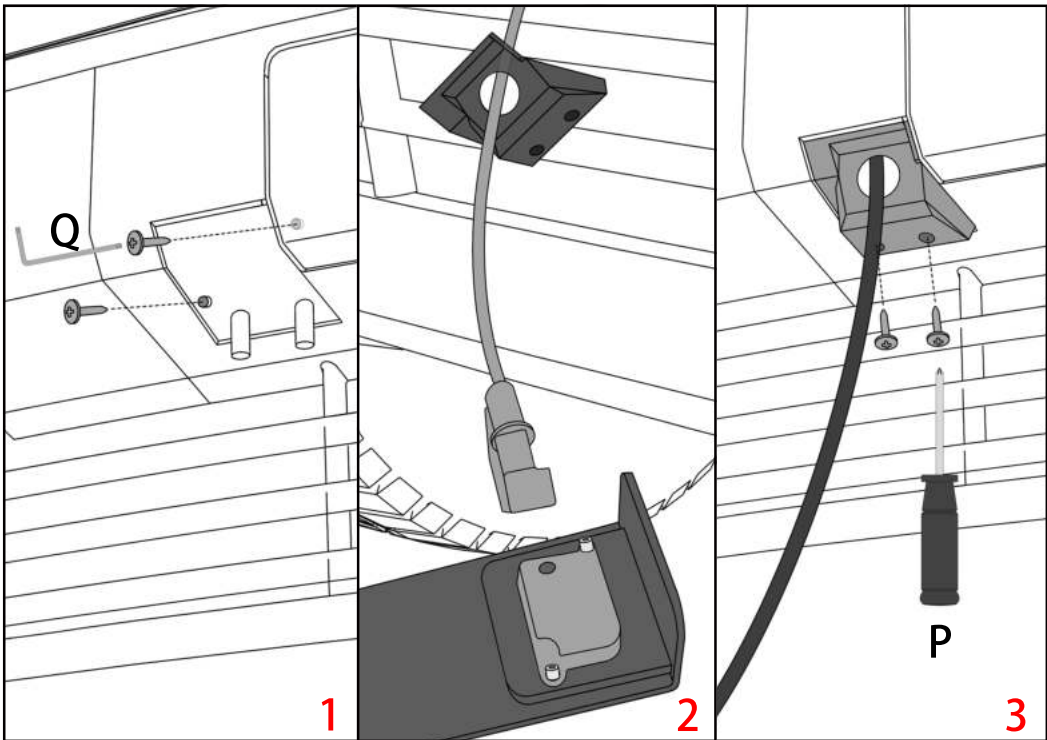


11. Tighten the factory screws back into the camera mounting holes, pull out the camera connector cable and thread it through the casing, ensure the camera casing is secured back into place, and then reconnect the cable to the camera.

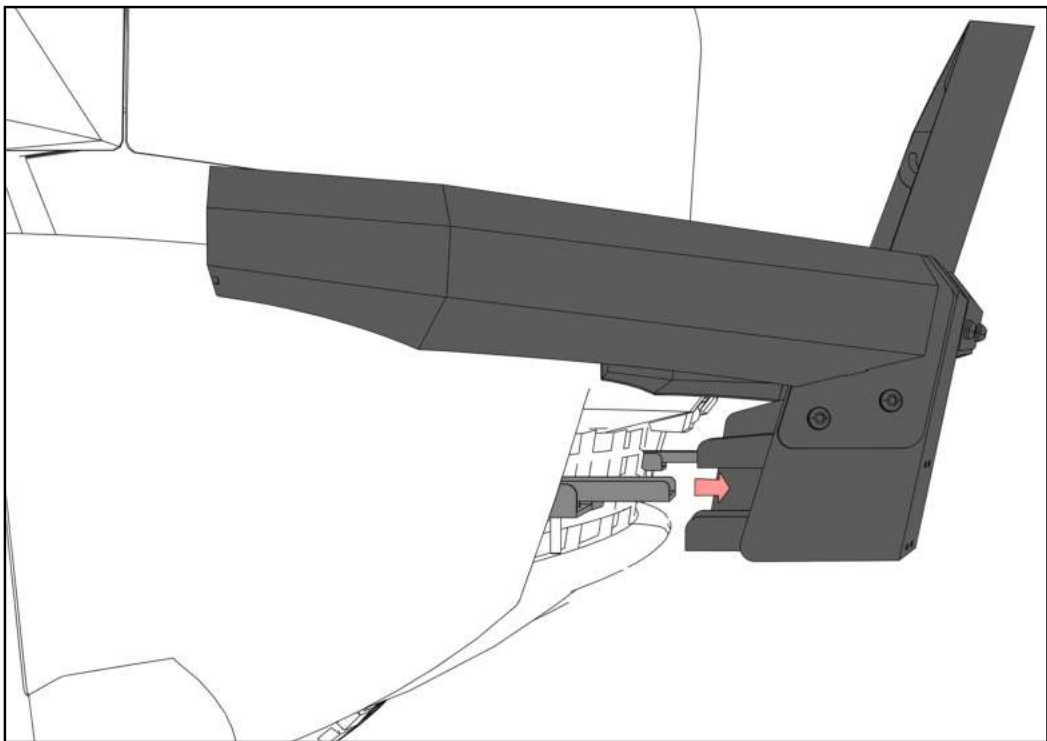


12. Install the front bumper onto the mounting brackets as shown in the diagram.

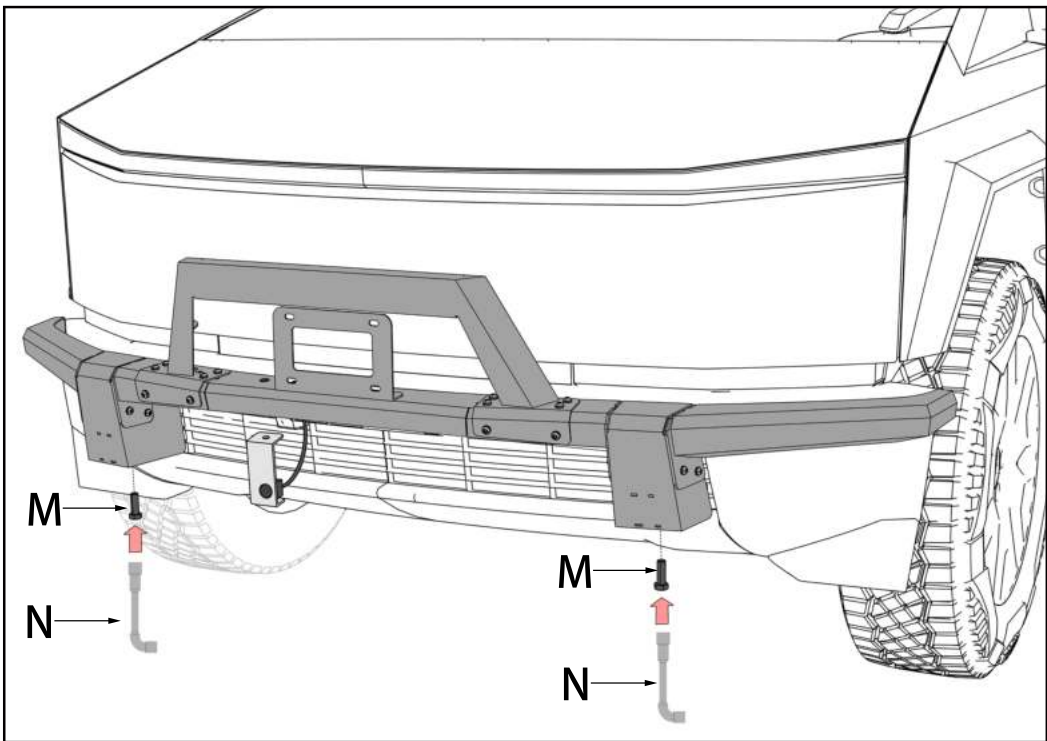


13. Fix the front bumper with screws.

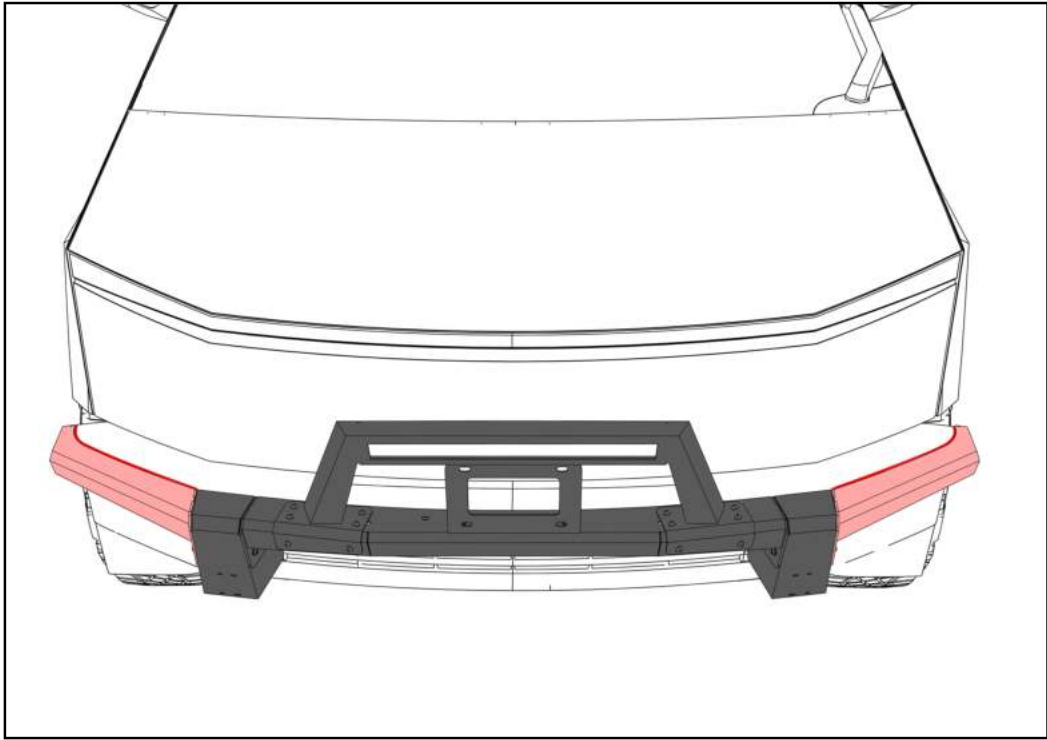


14. Check whether the corner of the front bumper is parallel to the factory front bumper.

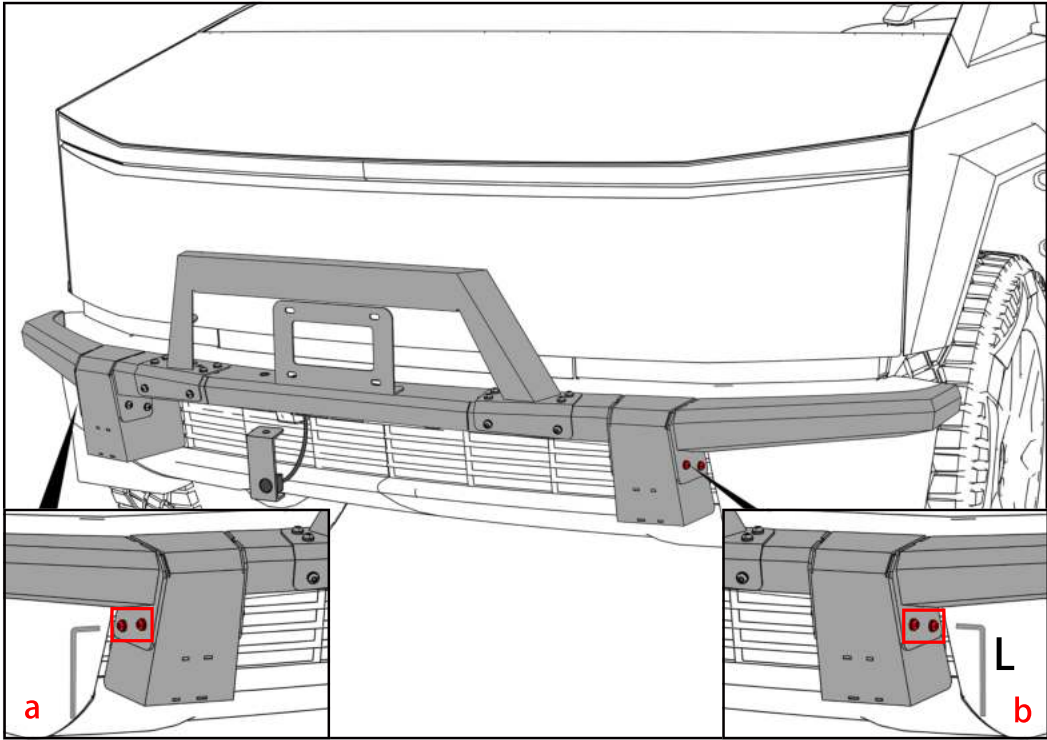


15. If the corners are not parallel, loosen the two screws below the "a and b" area, adjust the corner position to an appropriate alignment, and then tighten the screws.

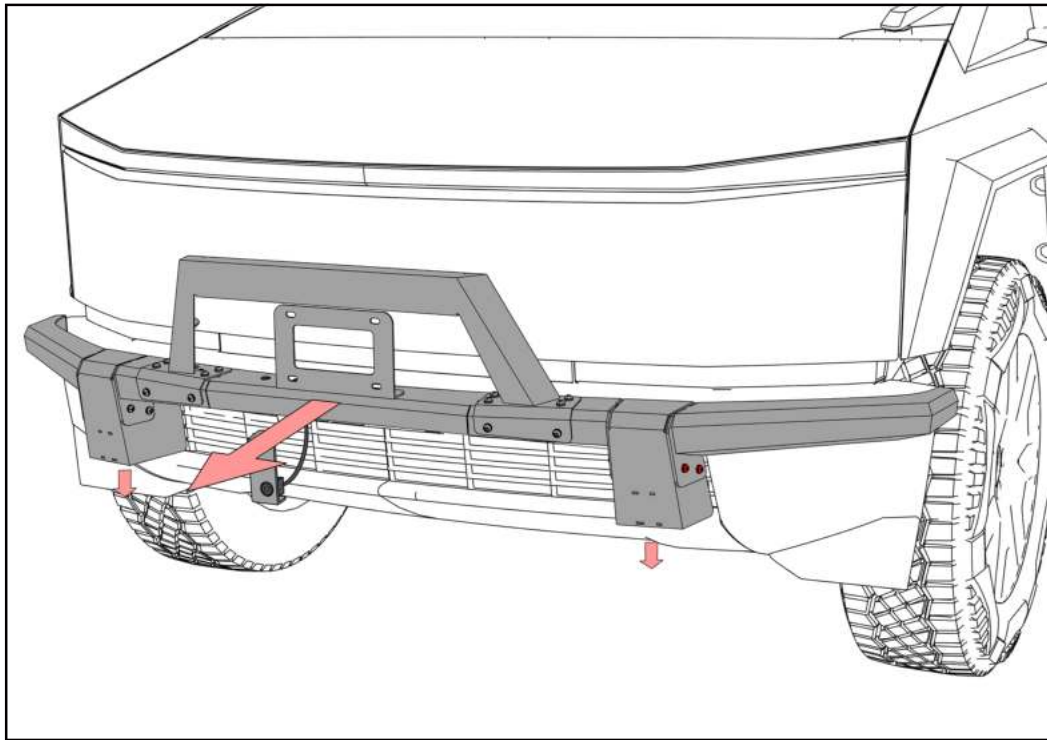


16. Remove the front bumper.

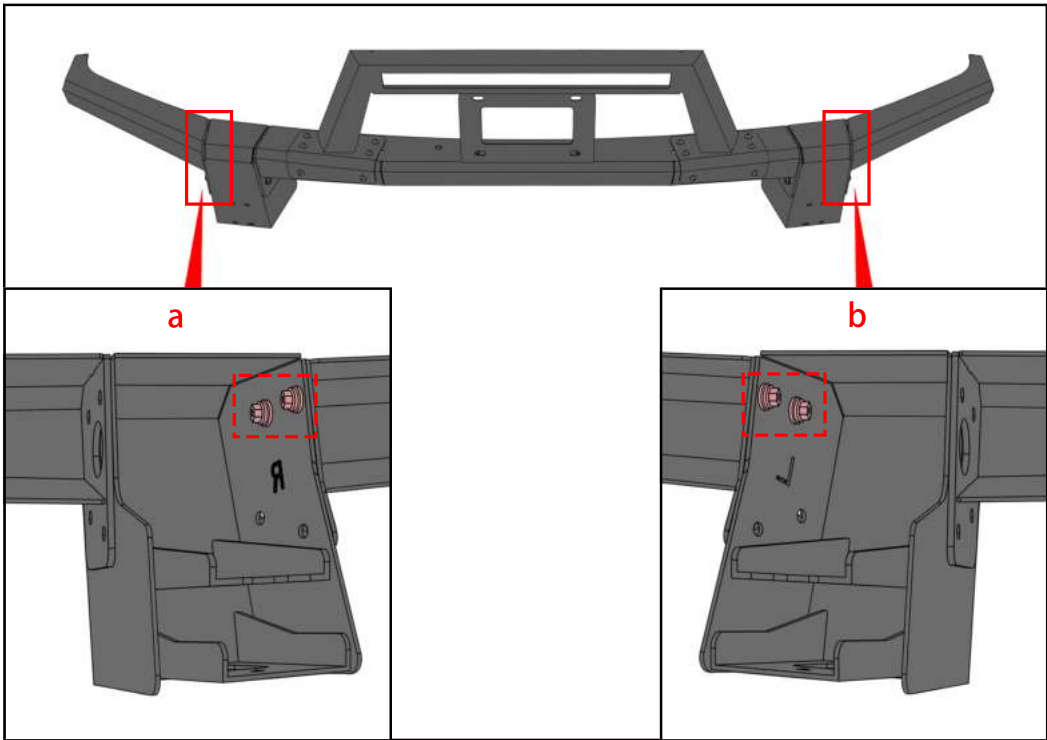

17. Tighten the two screws above the "a and b" area.

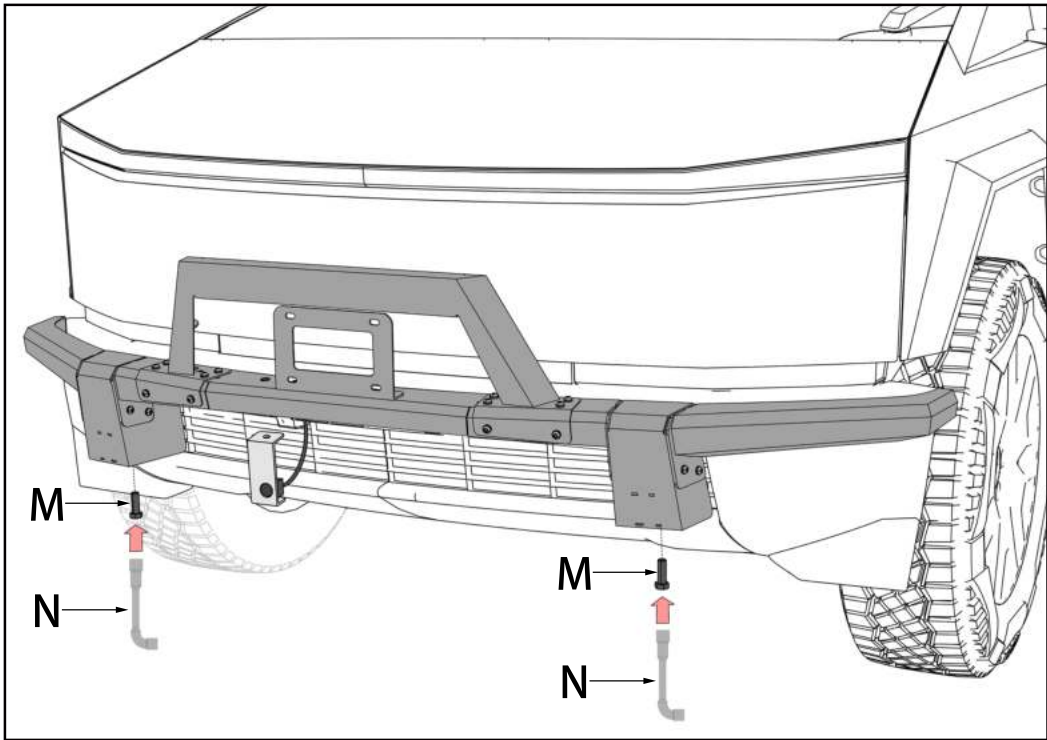

18. Repeat the steps to reinstall the front bumper.

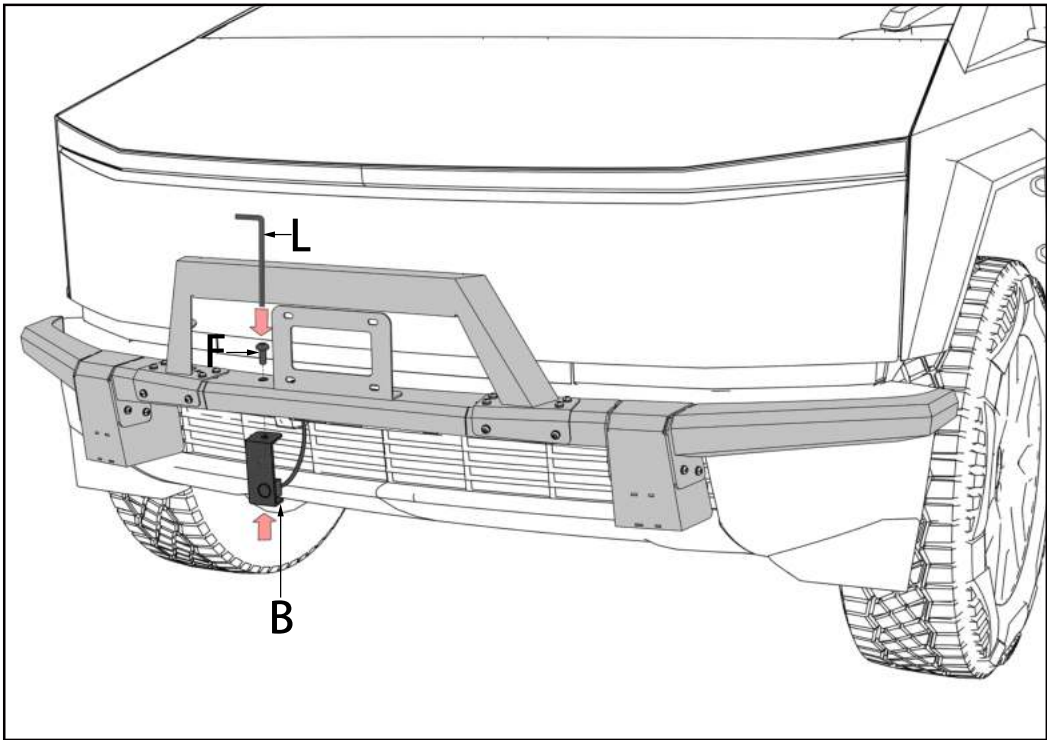

19. Install the camera bracket into position, and the installation is complete.
Note: If the camera does not turn on after installation, please restart the power.