


Alka Fluoride-Free Benchtop Maintenance

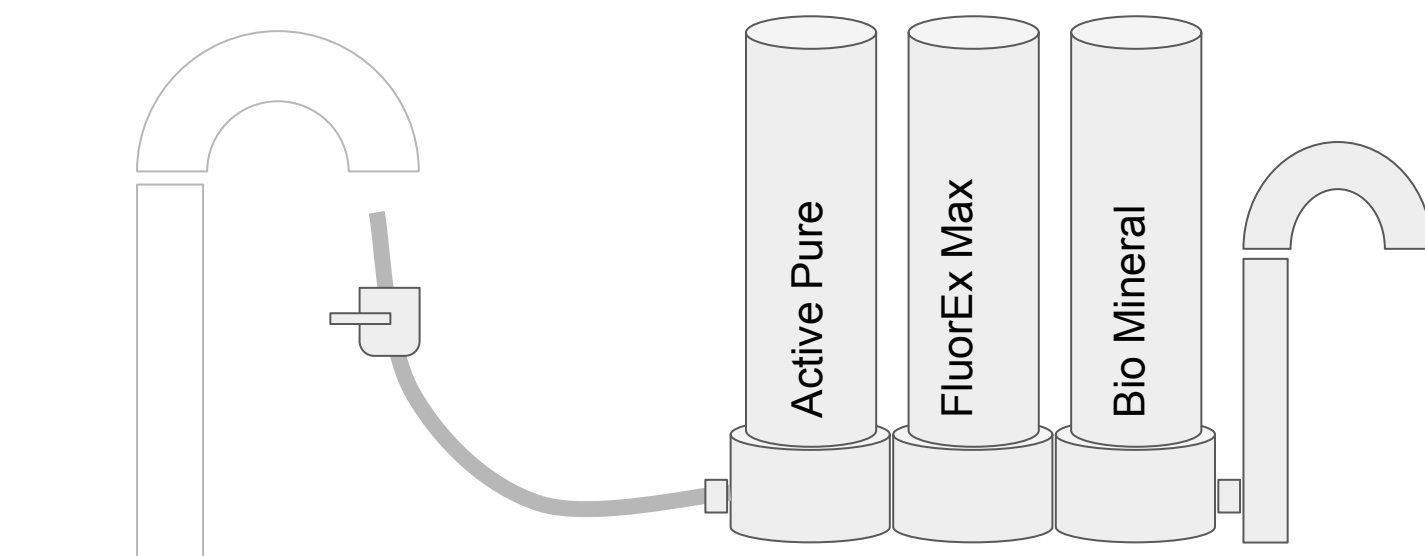

Follow the Filter Order: Arrange and install the filters as illustrated in the provided diagram.

Prep the Active Pure Filter: Flush the Active Pure pre-filter first to avoid its carbon residue from clogging the FluorEx Max filter.

Install FluorEx Max: After flushing the Active Pure, install and then flush the FluorEx Max filter. Follow this by installing the Bio Mineral filter and flushing it with about 4 liters of water.