




**Do you prefer video Instruction ?**  
Scan Code for a brief video on how to insert/remove tube from john guest fittings and cut the tube



## Ultra - Rural Filter System

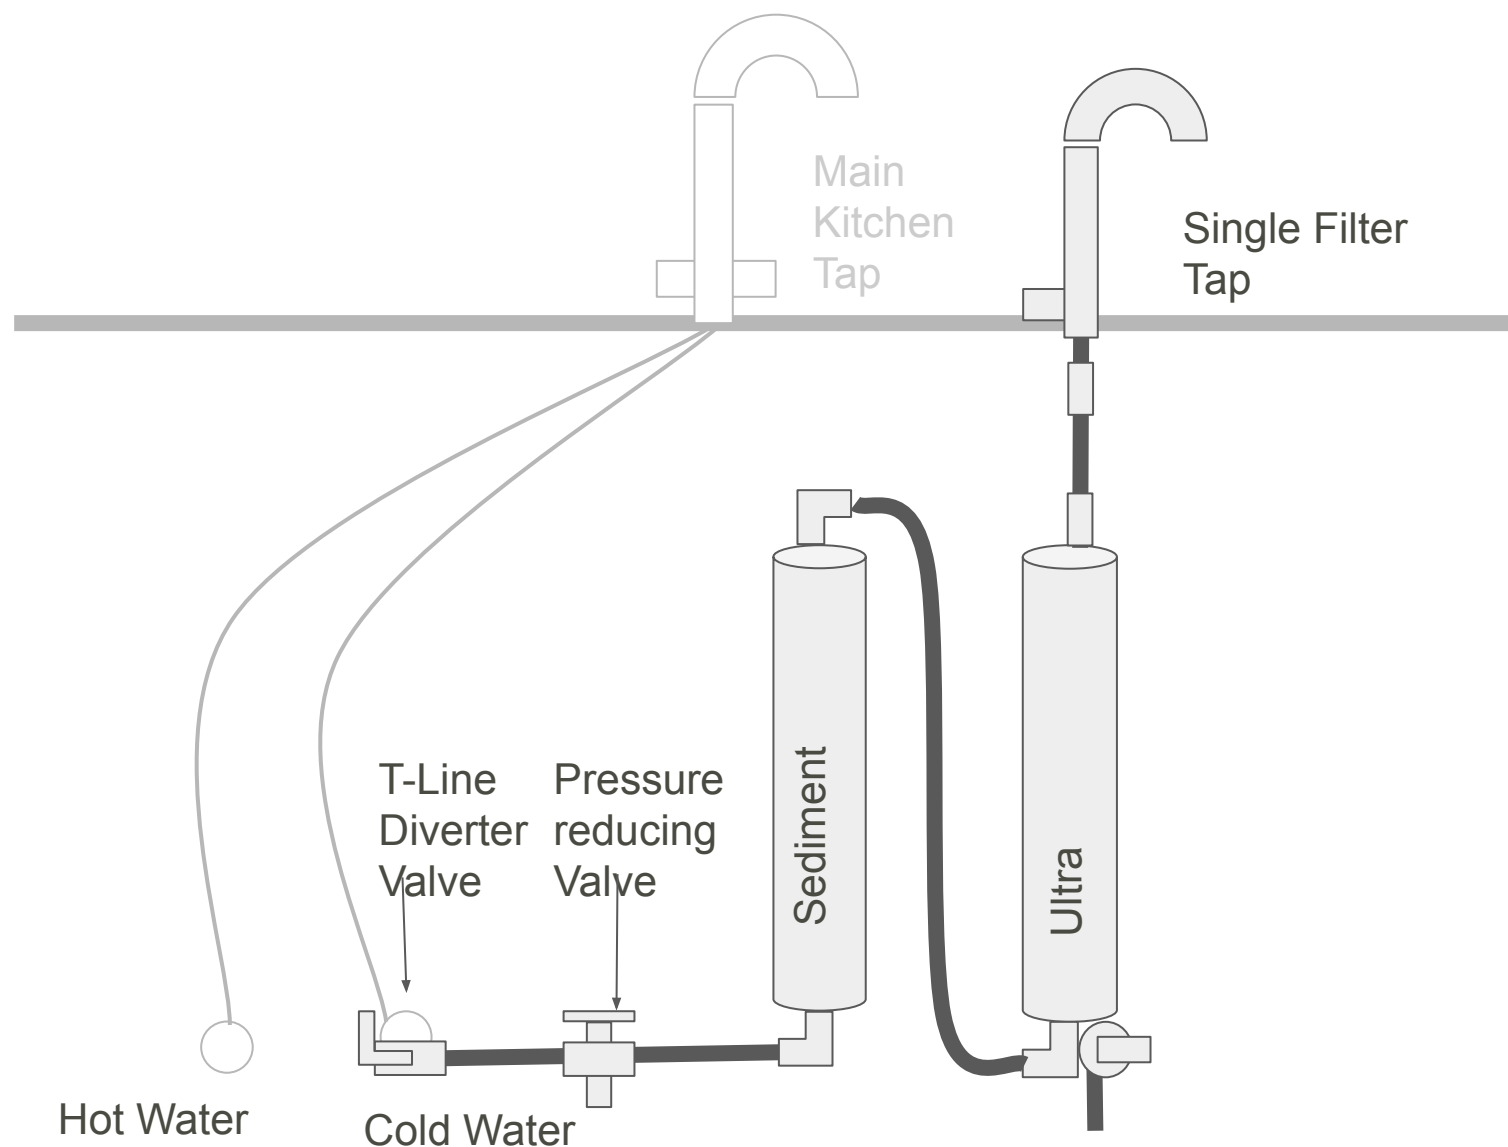

Establish position for the tap on the sink and drill an appropriate sized hole. Install the T-line diverter valve into the cold water line. Install pressure reducing valve upstream of the filters. Install the Filters in the order shown in this diagram

**Please read:** The individual filter instructions as well as the instructions for the John Guest connectors.

**Working Pressure:** 15 - 60 PSI

Please note: the pressure reducing valve needs to be installed for higher water pressures than 55PSI.

**Working Temperature:** 5 - 40°C

Wall brackets are provided for mounting of the System and cartridge to the cupboard wall.

**Waterflow speed:** Tune T-line valve so water flow is approx 2 l/min

**Please note: Professional installation is recommended.**

**Ionza is not responsible for any damage resulting from incorrect installation.**