


SUSPENDED TOOL SHELF

FOR SCHACHT CRANBROOK LOOMS

FL5571
FL5572
FL5573

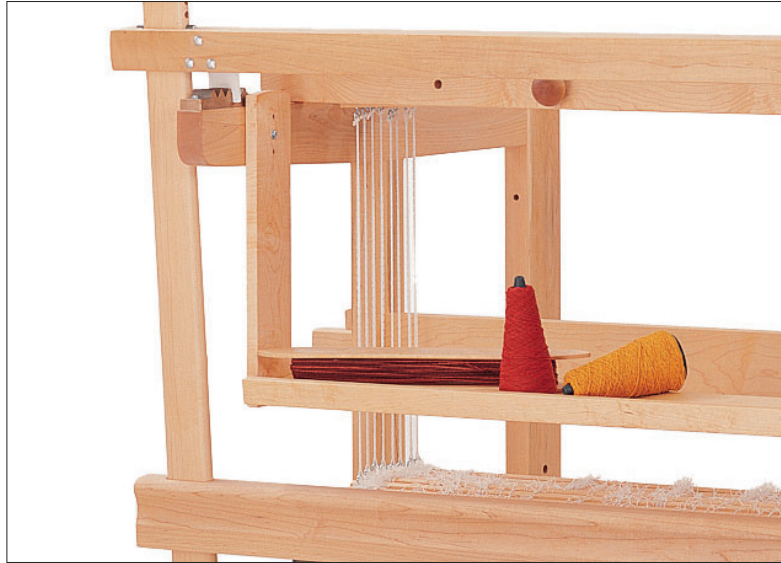

PARTS

left tool tray side
right tool tray side
tool tray
6X #10 x 1-3/4" Phillips pan head sheet metal screws
2X #12 SAE washers

TOOLS REQUIRED

#2 Phillips screwdriver

ASSEMBLY

1. Attach the tool tray sides to the tool tray: Slip each tray side into its appropriate dado groove, matching the "L" or "R" on each side to the "L" or "R" on the tray. Attach each side with two #10 x 1-3/4" Phillips pan head sheet metal screws. When assembled, the side of the tool tray that has the attached lip should slant downward, facing the front of the loom.
2. Attach the assembled tool tray to the inside of the loom: Align the tool tray so that the tray slants slightly downward—this way your tools will stay in the tray. Place a washer on each #10 x 1-3/4" Phillips pan head sheet metal screw and attach the tool tray to the loom with these screws. ■



Find out more at schachtspindle.com
Schacht Spindle Company 6101 Ben Place Boulder, CO 80301
303.442.3212

© 2021 Schacht Spindle Company, Inc.