

FL3811

FL3813

BENCH BAG FOR SCHACHT LOOM BENCH

ASSEMBLY


PARTS

- 2X steel rods
- 1X cloth bag
- 1X wood bag end

TOOLS REQUIRED

- hammer or mallet
- scrap wood
- bar soap

1. Rub the bar soap on each end of the steel rods, so they fit into the wood parts more easily.
2. Using a hammer or mallet, gently tap the steel rods into the holes of the bench seats. Place a scrap of wood between the hammer and rods to protect the rods.
3. Slip the sleeves of the cloth bag over the steel rods.
4. Place the wood bag end on the steel rods, aligning its holes to fit over the rods. Using a hammer or mallet, and scrap wood to protect the wood, gently tap the bag end into place. ■

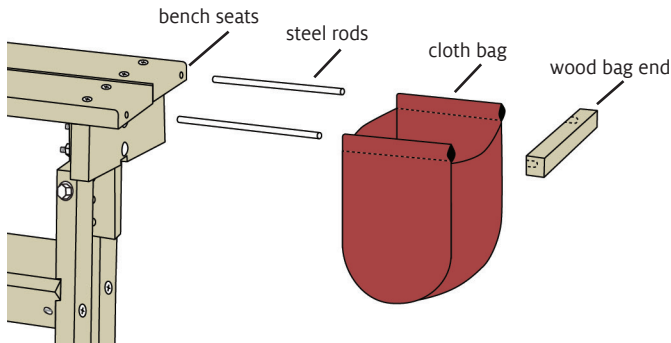

Find out more at schachtspindle.com
Schacht Spindle Company 6101 Ben Place Boulder, CO 80301
303.442.3212

© 2022 Schacht Spindle Company, Inc.