


General Instruction Sheet

Stahldas™ Silver Glass Counter Display Cabinet - 1200 x 500mm

Contents

- A** 1 x Front Panel Frame
- B** 1 x Back Panel Frame (With Glass)
- C** 4 x Side Supports
- D** 1 x Bottom Floor Panel
- E** 4 x Feet Plugs
- F** 4 x Feet
- G** 8 x Shelf Supports
- H** 2 x Glass Side Panels
- I** 2 x Glass Shelves
- J** 1 x Left Glass Door
- K** 1 x Right Glass Door (With Lock)
- L** 1 x Top Glass Panel
- M** 4 x Top End Caps

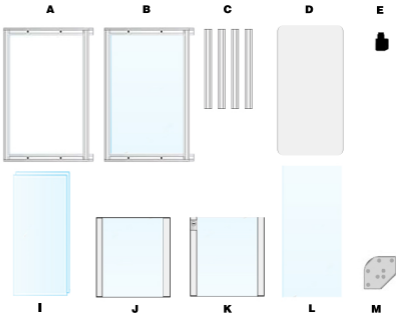

Please note: One Person is required to construct this cabinet.

1 x Allen Key is supplied with this cabinet.

This cabinets is made using toughened safety glass. Estimated assembly time: 60 minutes

Step One:

Take 1 x Back Panel Frame (**B**), lay it down flat on its back, then take 1 x Side Support (**C**), at one of the four corners of the Back Panel Frame (**B**) Slide the Side Support (**C**) Into the Back Frame. Once secured, tighten the screw found on the inner side of the side support (**C**) using an Allen key. Repeat this process for the other three side supports



Step Two:

Next, take 1 x Glass Side Panel (**H**), carefully slide the panel down the Side Support (**C**) runners until the bottom edge of the Side Panel slots into the Back Panel Frame (**B**). Repeat this process for the other side.



Step Three:

Take 1 x Front Square Frame, slide over the top of the Side Supports (**C**) and Glass Side Panels (**H**), once connected tighten the screws at the top of Side Supports (**C**) using an Allen key.



Step Four:

Facing the bottom of the counter cabinet, take 4 x Feet Plugs and insert one into each of the four corners (Ensure that that the rounded corners faces the exterior of the cabinet) Next Take 4 x Feet (F) and screw one into each of the Feet Plugs (E) . Screw clockwise until secure.



Step Five:

Stand the counter cabinet onto its feet. Now take 1 x Bottom Floor Panel (D) and lower it into the cabinet carefully. First slot one edge of the Floor Panel (D) into the frame and proceed to lower the other edge down.



Step Six:

1 x Glass Shelf (I) onto the lower set of Shelf Supports (G) place carefully. Ensure the back edge of the shelf is secured first, then lower the front edge onto the front two supports. (Shelf Supports Should be pre-installed.) Repeat this for the other Glass Shelf on the higher set of Shelf Supports (G)



Step Seven:

Take 1 x Top Glass Panel (L) and insert into the top edges of the counter cabinet, place carefully. Now take 4 x Top End Caps (M) and insert one into each of the four exposed corners.



Step Eight:

Take 1 x Left Glass Door (J) first slot top edge, up into the Front Frame's (A) top back runner. Lower the glass door until it connects with the Front Frame's Bottom Back runner, side the door to test it is attached correctly.



Repeat this process for the Right Glass Door (K) ensuring the door inserts into the Front Frame's (A) front runners.

