


Assembly Instructions

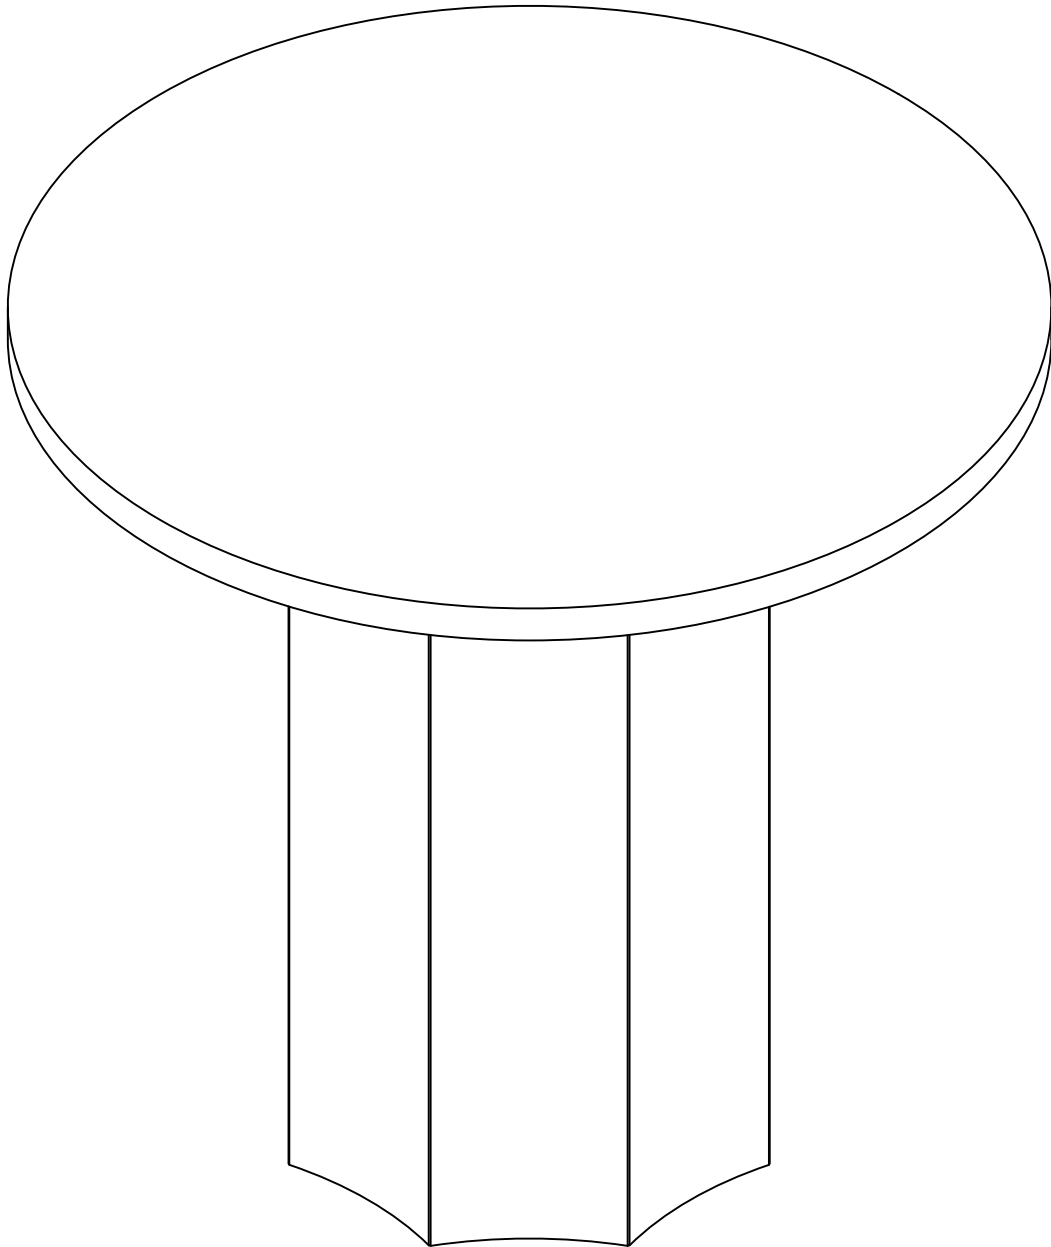


Round Dining Table

Model No.
HOGA-JW1176

Contact Us




We're here to help you.

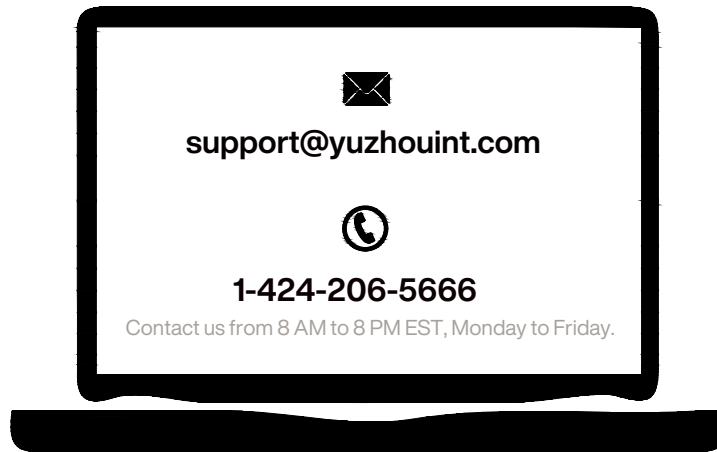

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.



Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

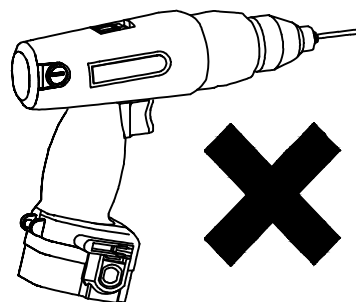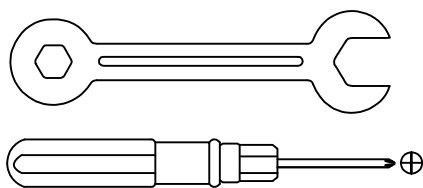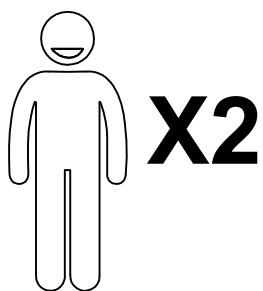



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

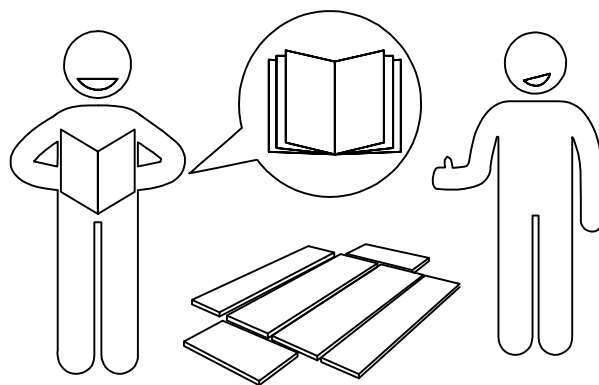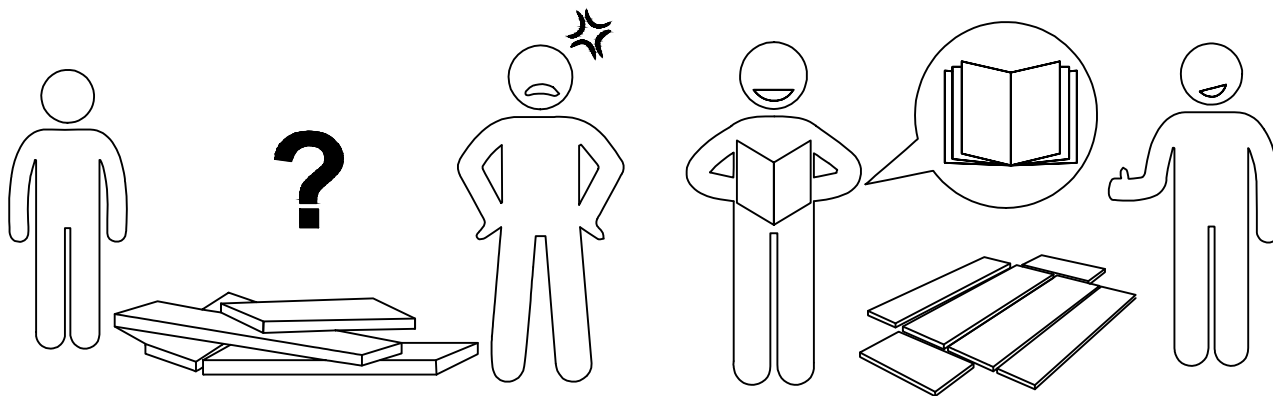

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.



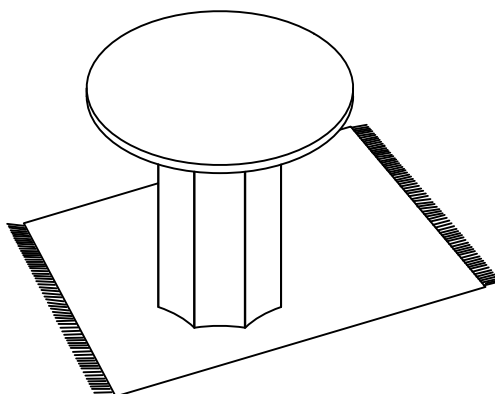
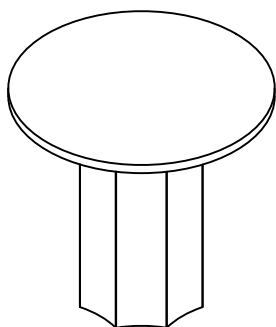


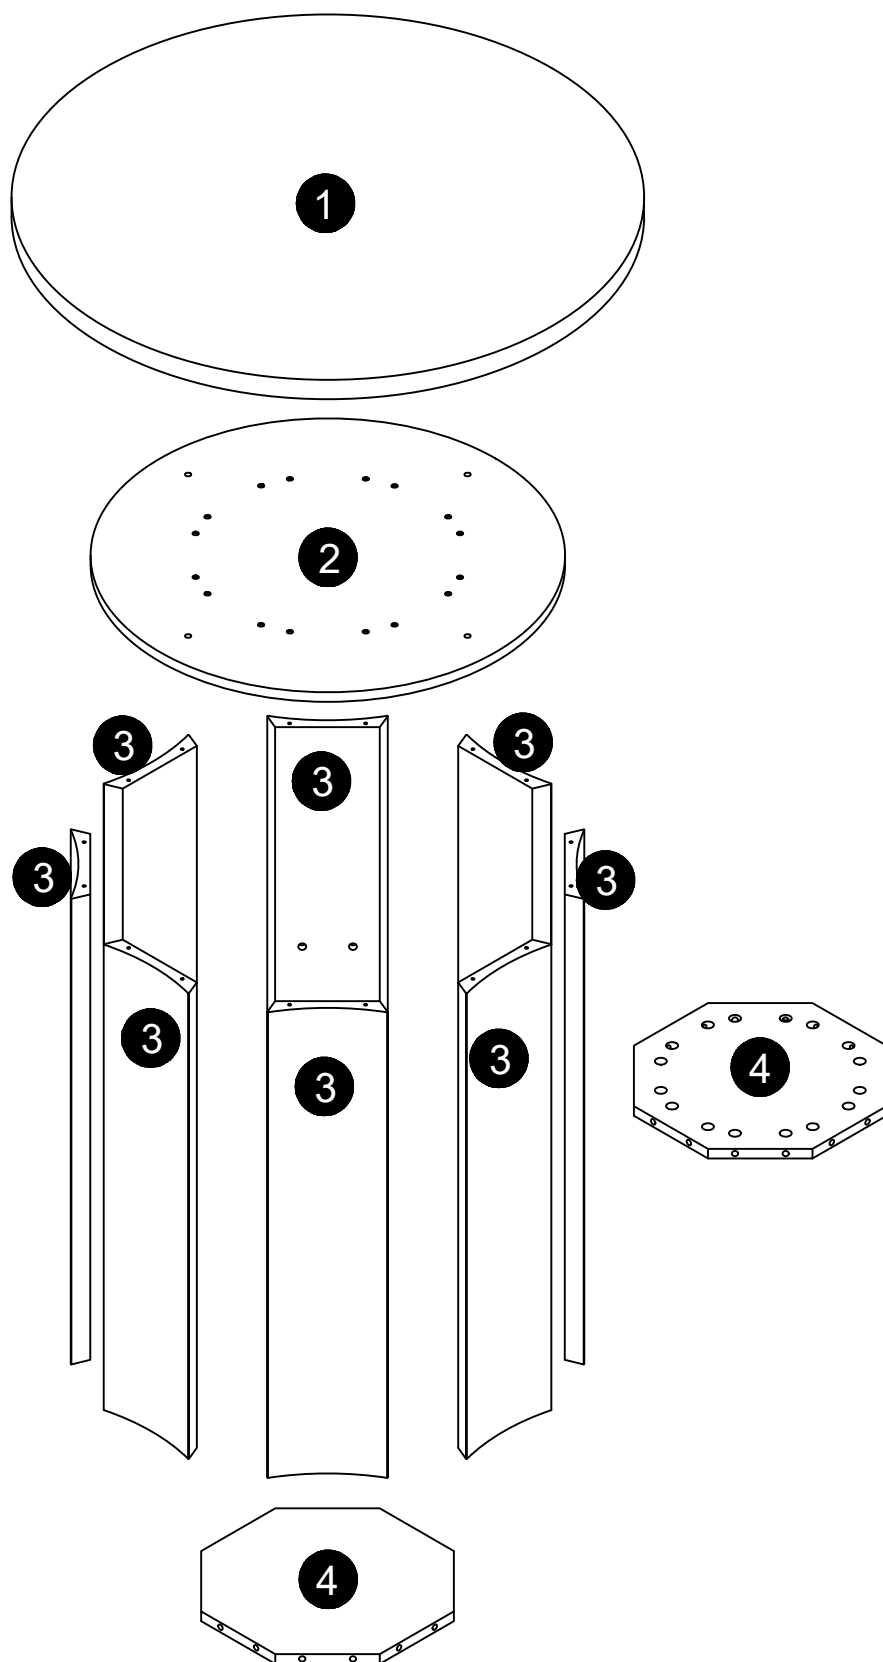




Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

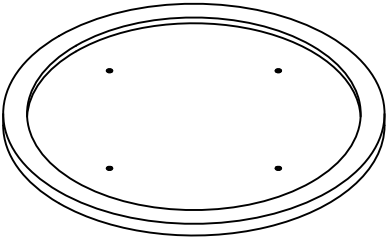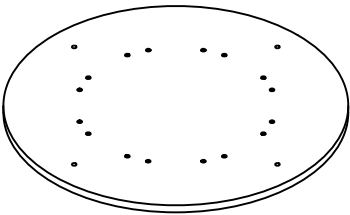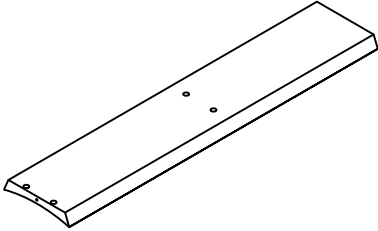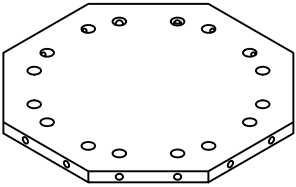1  1 pc	2  1 pc	3  8 pcs
4  2 pcs		


Hardware List

A	B	C	D
			
M6x25mm	Φ6x40mm	Φ15x12mm	Φ5x40mm
4 pcs	32 pcs	32 pcs	16 pcs


E	F	G
		
Φ14x4mm	M4	M3
8 pcs	1 pc	1 pc

Installation of Cams and Pins


Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

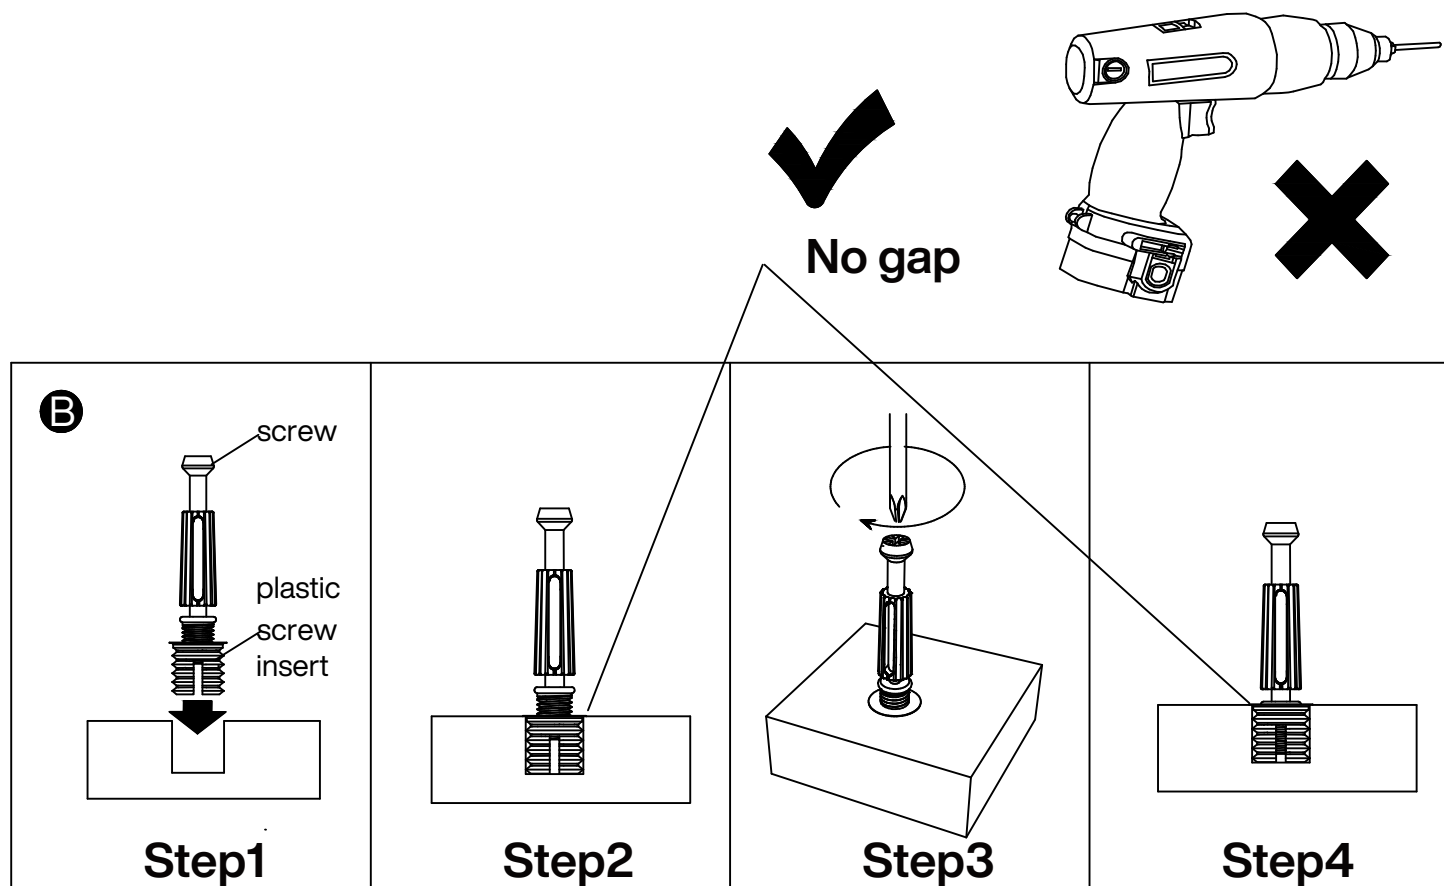



Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

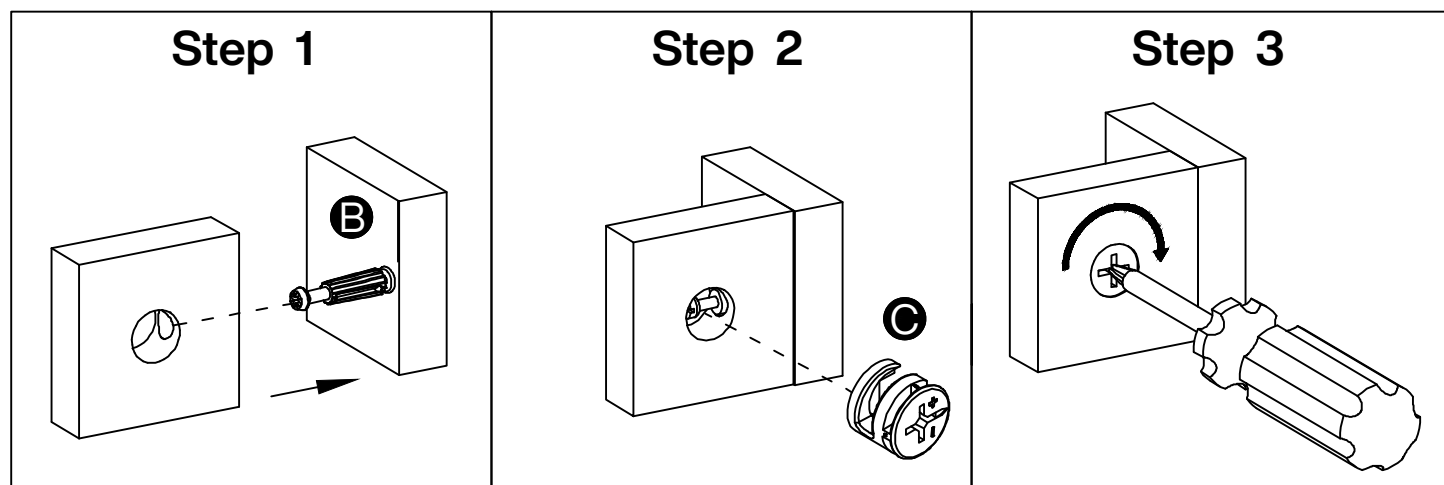

1

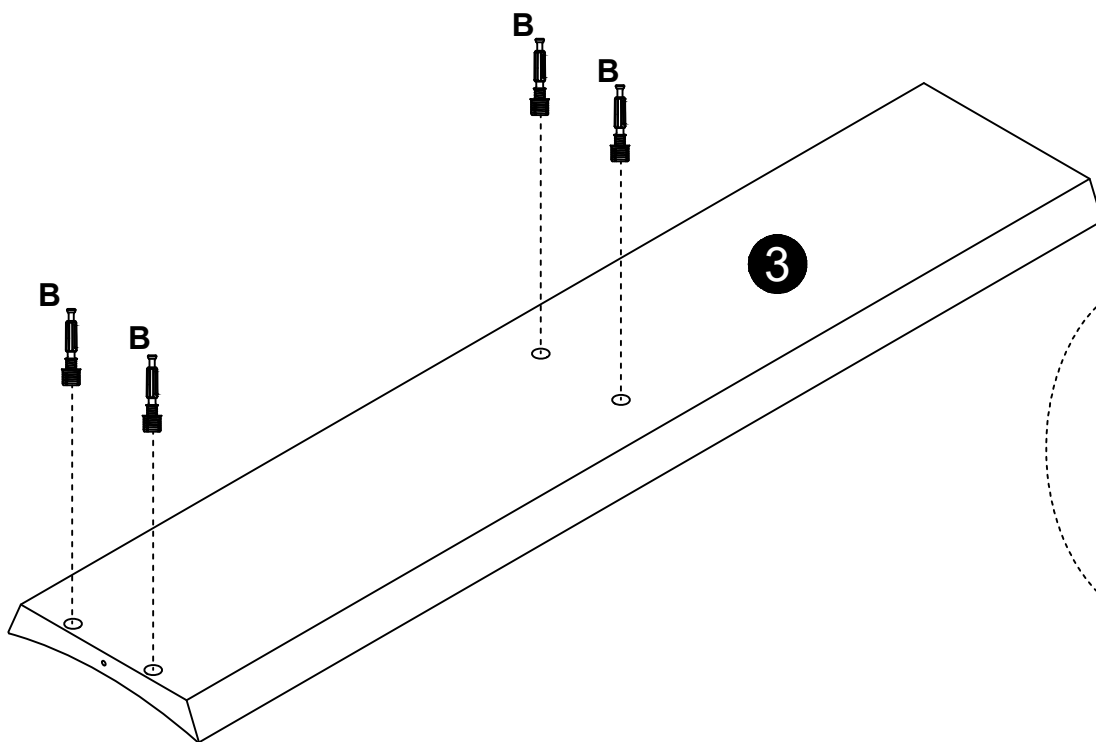


B

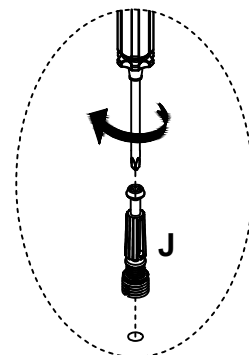Φ6x40mm
32 pcs




x8

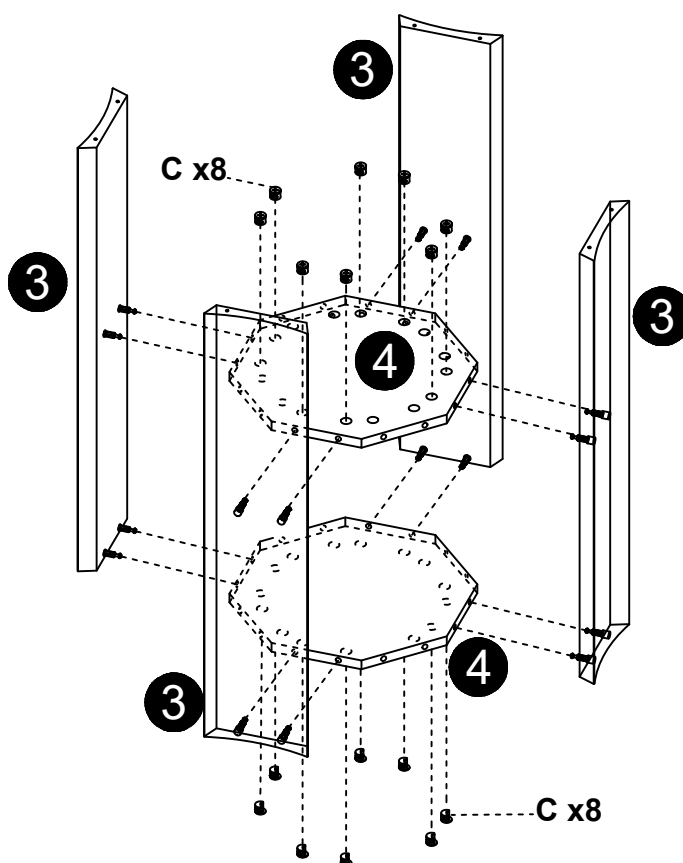2




C

Φ15x12mm
16 pcs

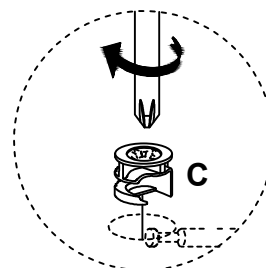


3

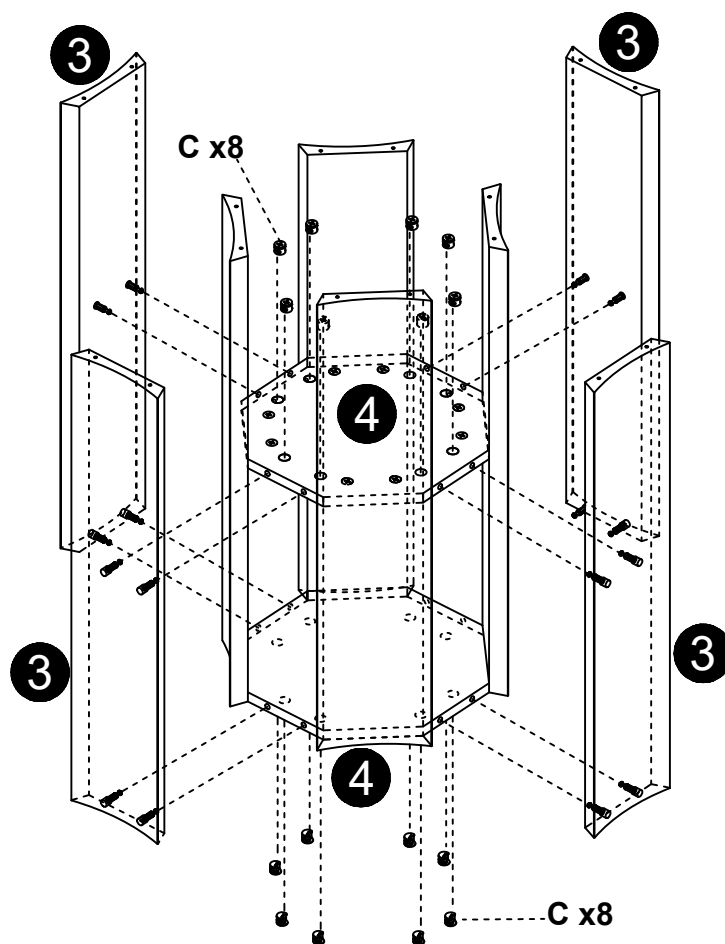



C


Φ15x12mm
16 pcs

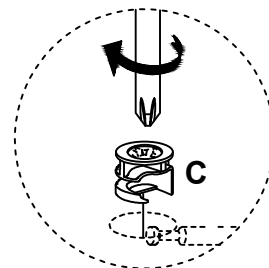


4

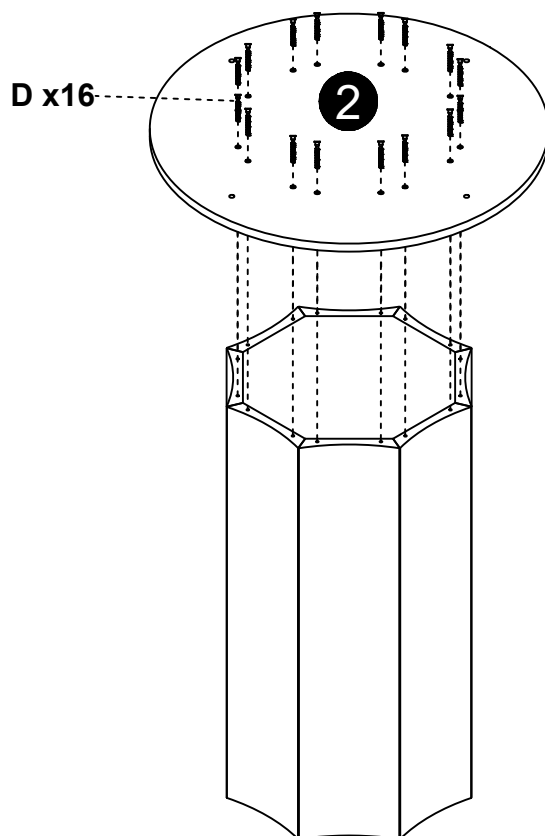


D	G
	
Φ5x40mm	M3
16 pcs	1 pc

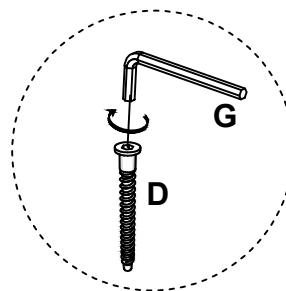


5

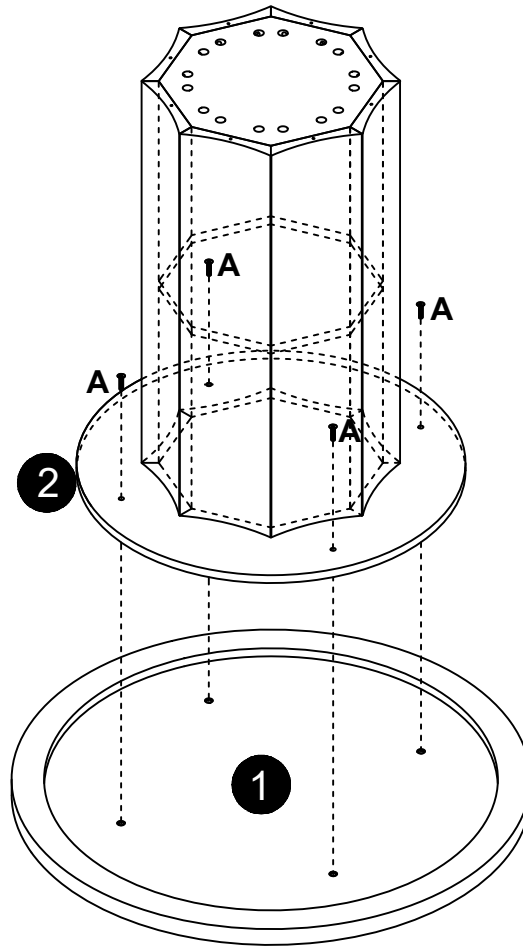

A	F
	
M6x25mm	M4
4 pcs	1 pc

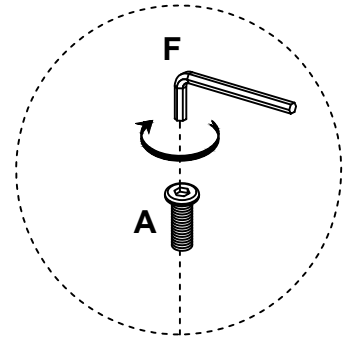


6

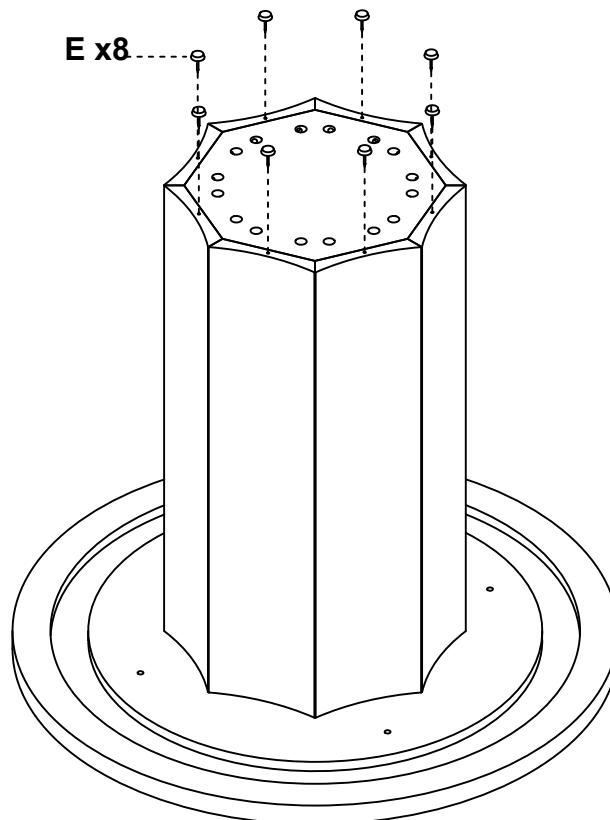

E

Φ14x4mm
8 pcs

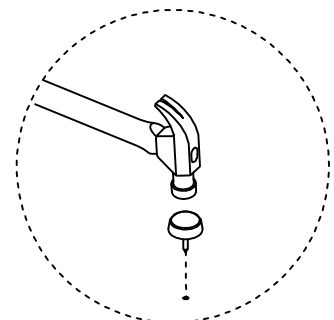

 **Caution! Tap lightly**

Thank you for your support!

