



INSTALLATION INSTRUCTIONS FOR DIRECT BURIAL MAILBOX POSTS

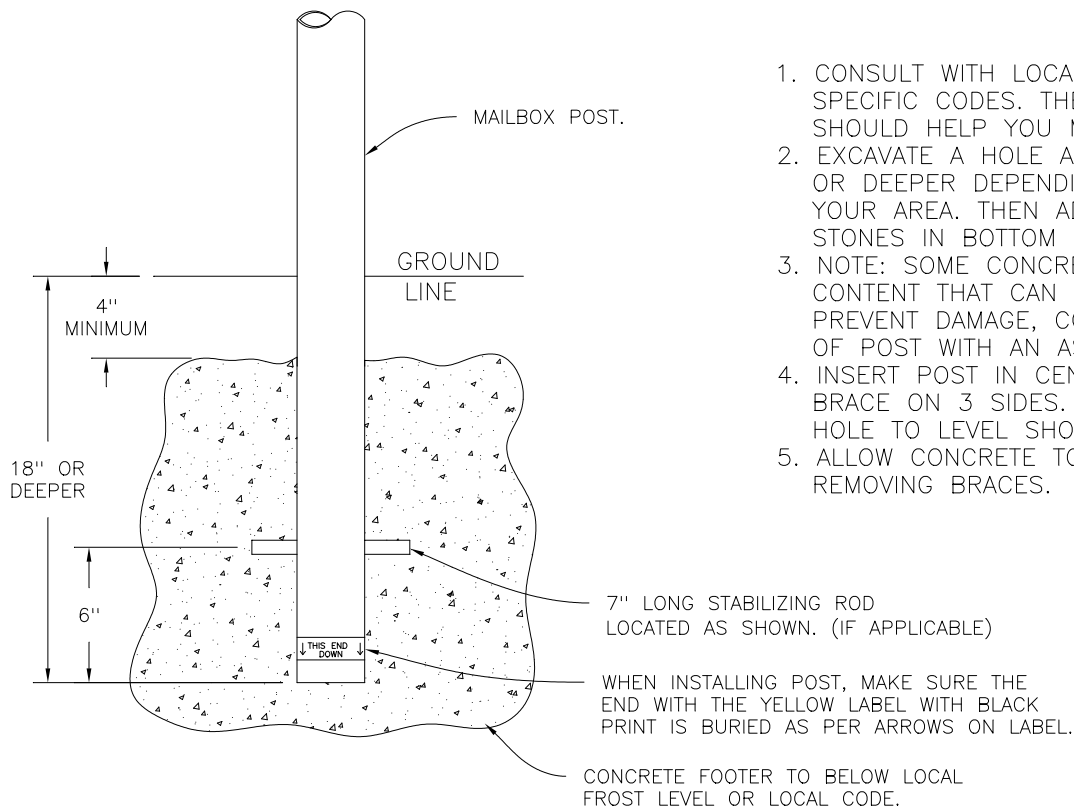


1. CONSULT WITH LOCAL AUTHORITIES AS TO SPECIFIC CODES. THE FOLLOWING STEPS SHOULD HELP YOU MEET THOSE CODES.
2. EXCAVATE A HOLE APPROXIMATELY 20" DEEP OR DEEPER DEPENDING ON FROST LINE IN YOUR AREA. THEN ADD APPROXIMATELY 2" OF STONES IN BOTTOM OF HOLE FOR DRAINAGE.
3. NOTE: SOME CONCRETES HAVE HIGH ALKALI CONTENT THAT CAN DAMAGE ALUMINUM. TO PREVENT DAMAGE, COAT IN-GROUND PORTION OF POST WITH AN ASPHALT BASE PAINT.
4. INSERT POST IN CENTER OF HOLE AND BRACE ON 3 SIDES. POUR CONCRETE INTO HOLE TO LEVEL SHOWN.
5. ALLOW CONCRETE TO HARDEN BEFORE REMOVING BRACES.

INSTALLATION INSTRUCTIONS FOR 2 PIECE WRAP-AROUND BASE

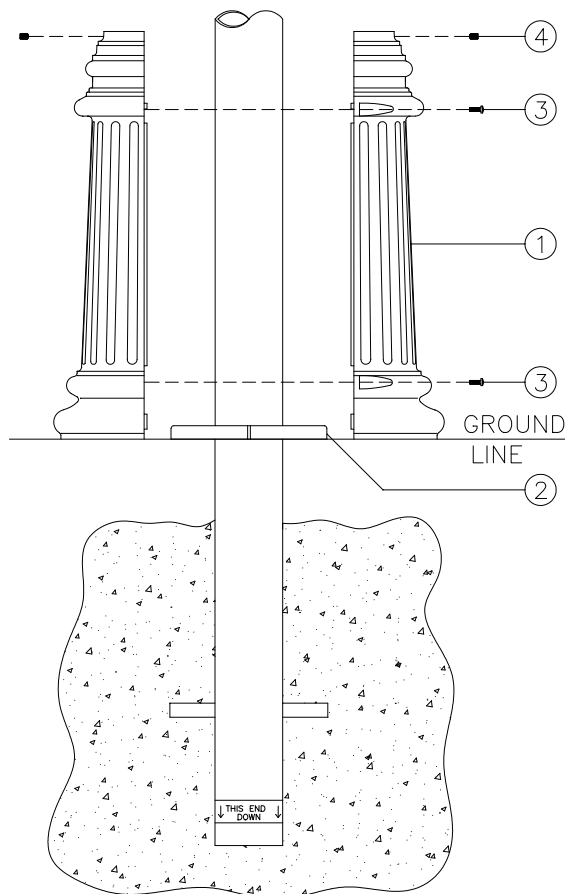


1. AFTER DIRECT BURIAL POST IS IN PLACE, INSTALL STABILIZER #2 AROUND POST ON TOP OF GROUND.
2. POSITION 2 HALVES OF WRAP-AROUND BASE #1 ON BOTH SIDES OF POST. SECURE BASE TOGETHER USING PAN HEAD SCREWS #3. BE SURE STABILIZER #2 IS IN PROPER POSITION TO PREVENT BASE FROM SHIFTING.
3. ATTACH BASE ASSEMBLY TO POST USING SET SCREWS #4.

FULL SIZE HARDWARE

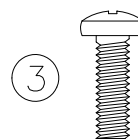

4 PIECES 8-32 X 1/2" LONG PAN HEAD SCREW.



4 PIECES 1/4-20 X 3/8" LONG SET SCREW.

Hanover
LANTERN

425 E. MIDDLE ST., HANOVER, PA. 17331
P (717) 632-6464 - F (717) 969-2930

INSTALLATION INSTRUCTIONS FOR DIRECT
BURIAL POSTS AND 2 PIECE WRAP-AROUND BASES

12/07/04

20-279-00