
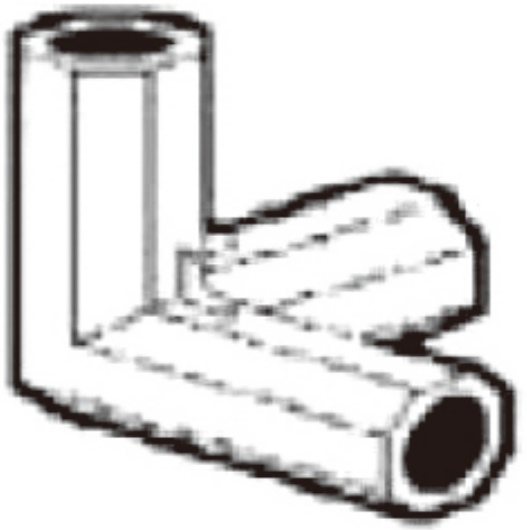
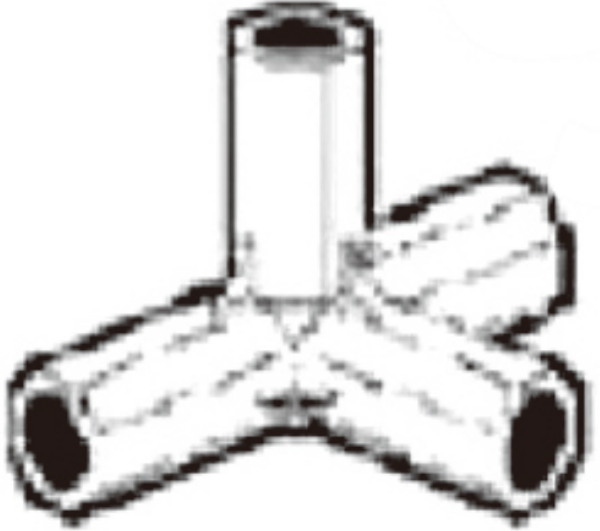
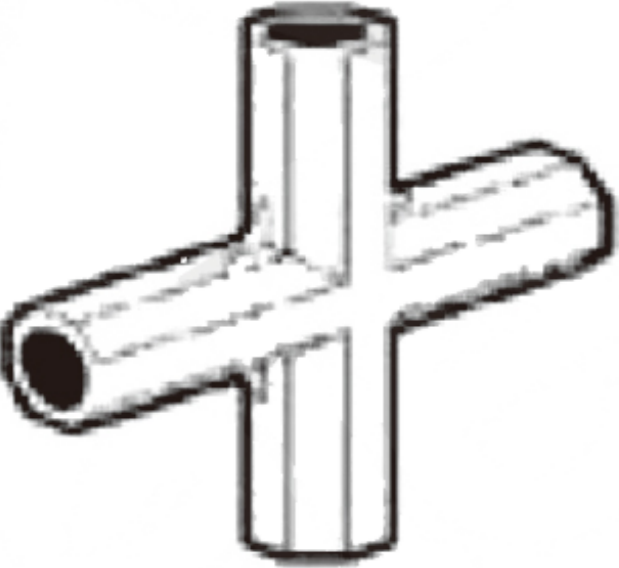



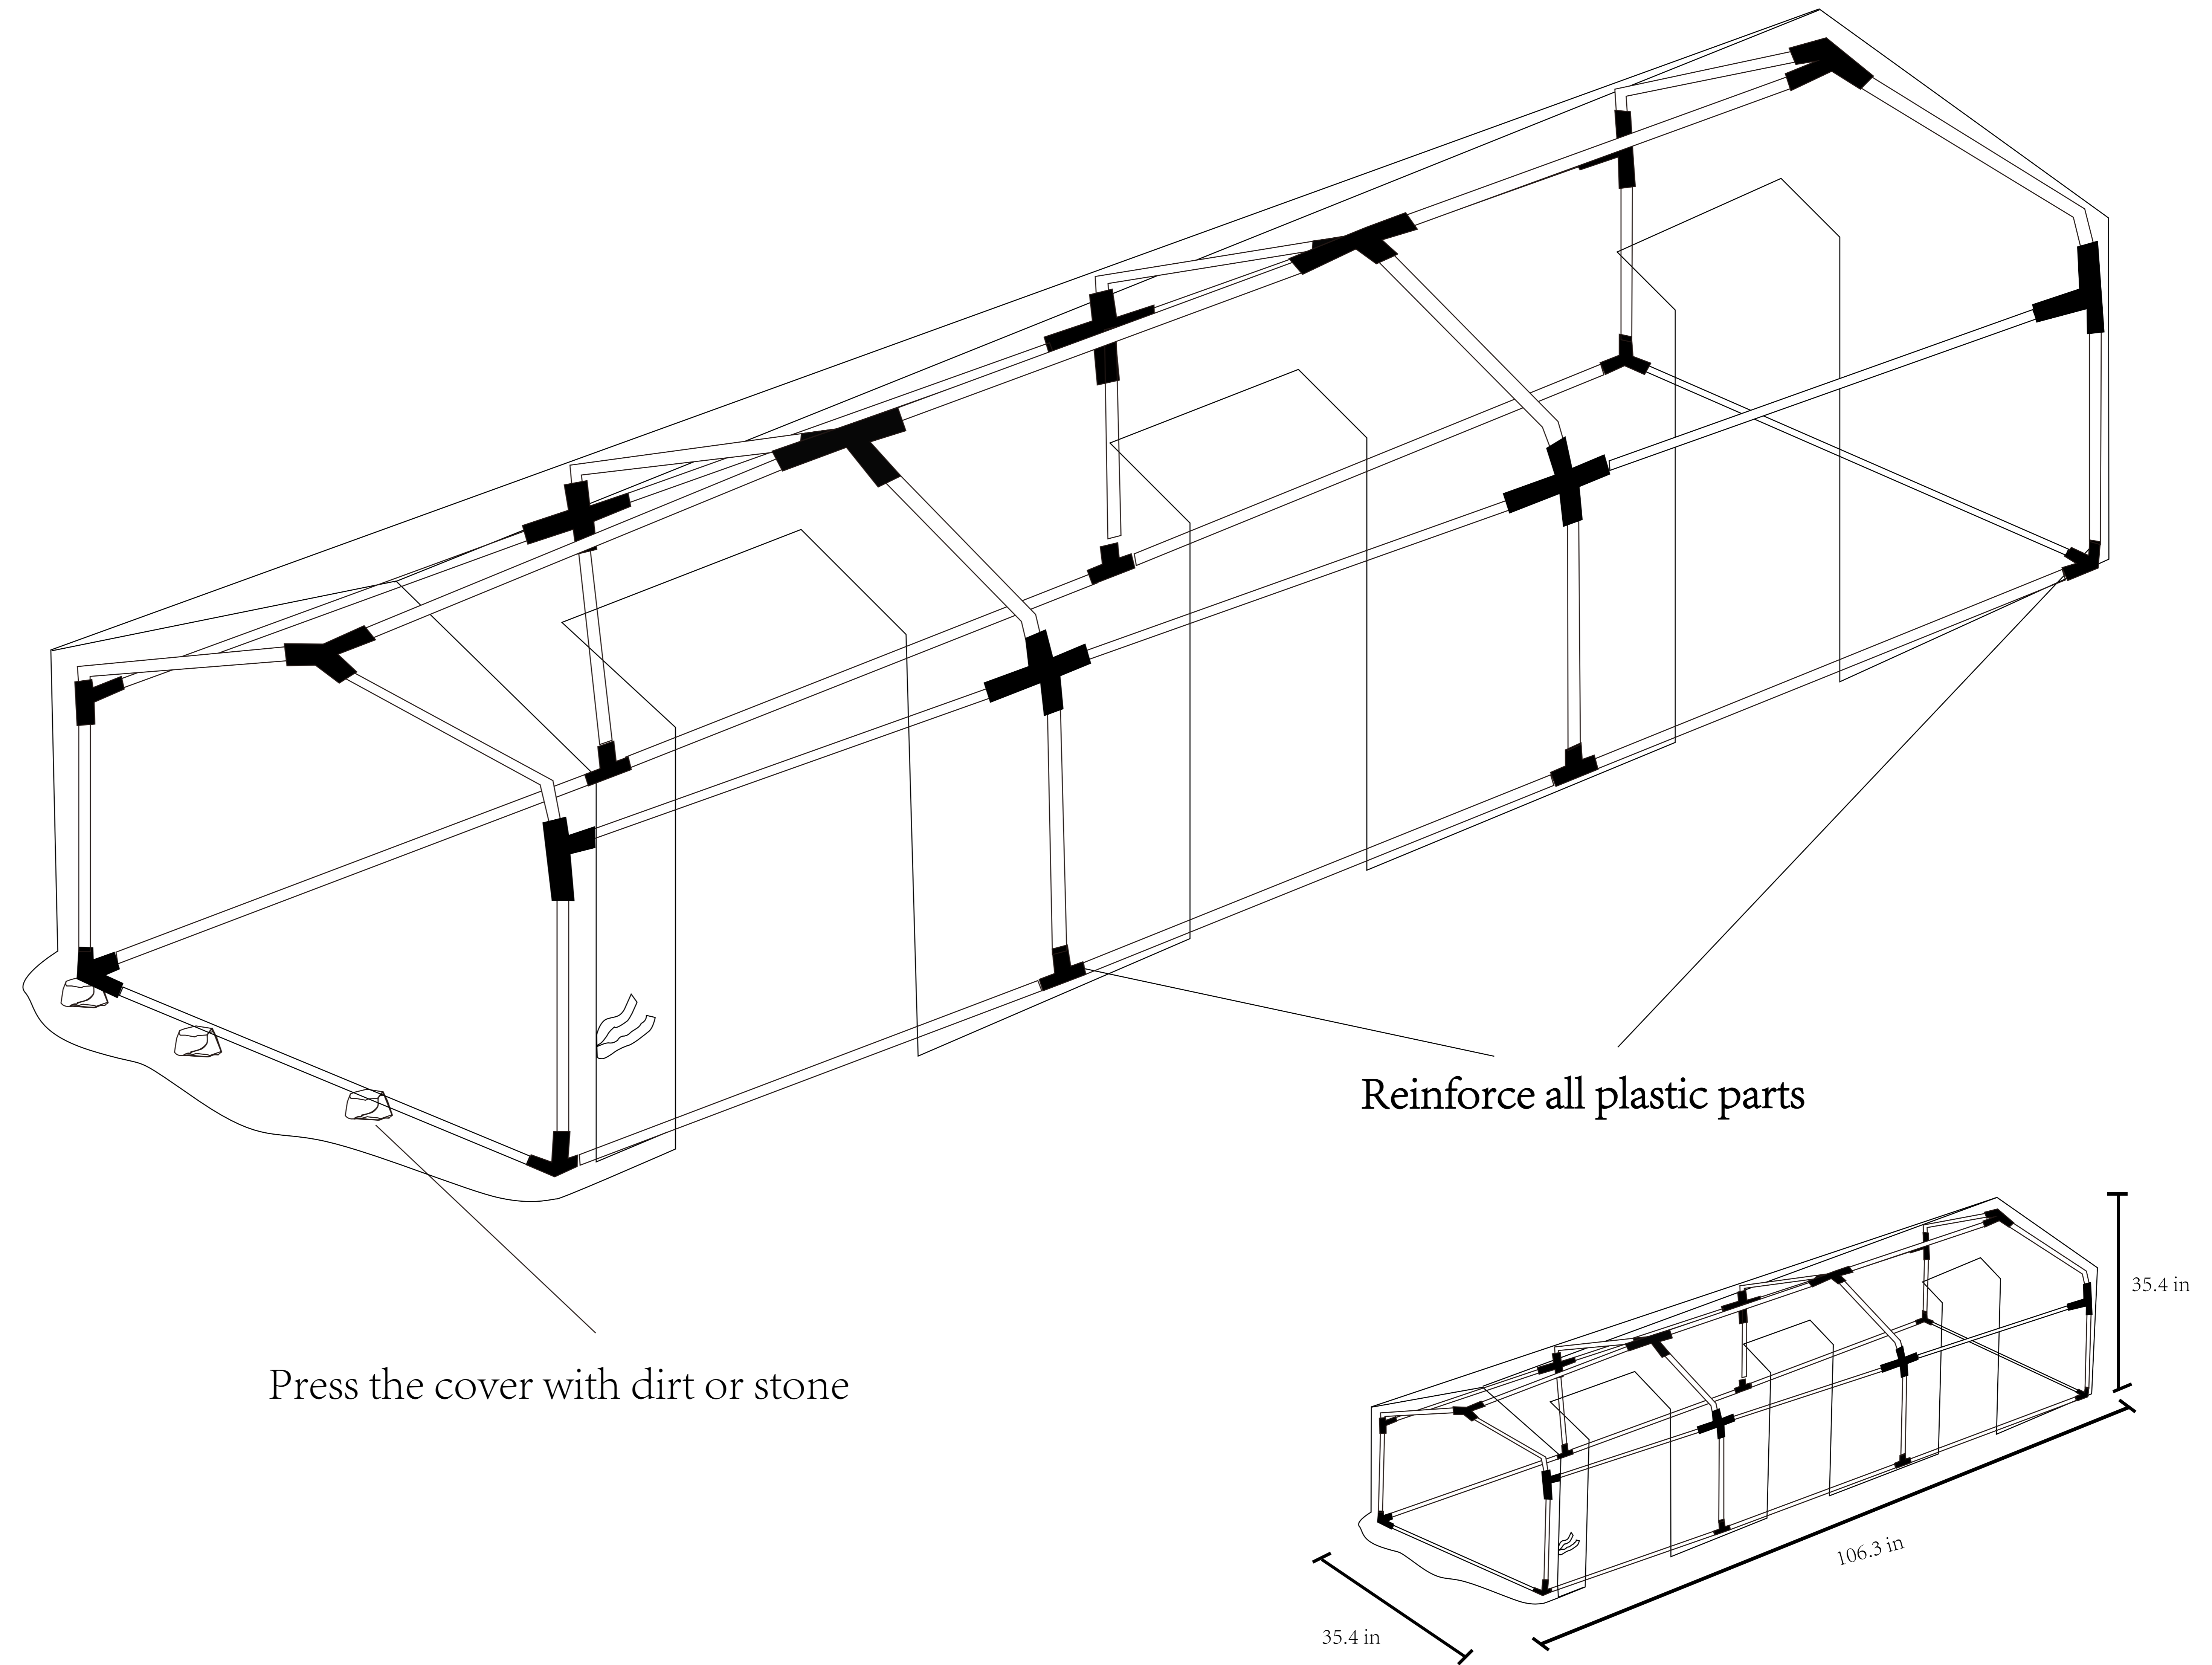


GHOSE05E

A		x6
B		x2
D		x4
E		x8
①		x17
②		x8
③		x8

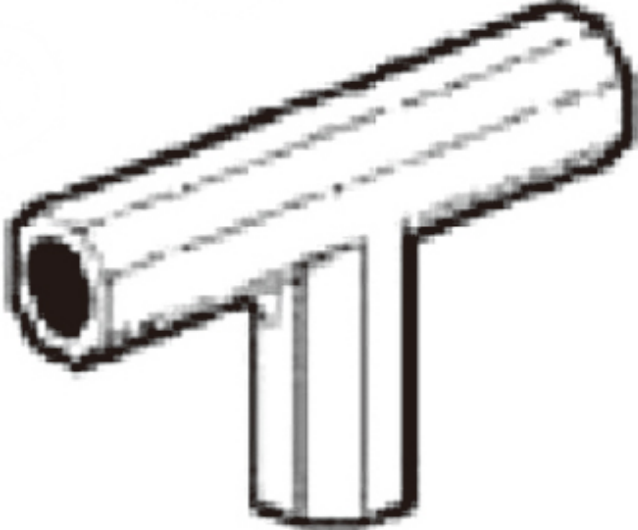

Remarks:

- 1) After installation, all the plastic parts need to be checked and tightened, preferably against the wall;
- 2) The cover is lengthened. It is better to press it with earth or stone;
- 3) When the wind is strong, we should put away the cover so that it won't be blown away.

