

Out of the box set up guide

When your new eBike is delivered by our door-to-door courier, and you have removed it from the shipping carton, the pedals will need to be attached and the handlebar aligned.

You should have a **pair of pedals** with a **15mm spanner** to tighten them in place.

There should be a tool kit containing **4mm** and/or **5mm Allen hex keys** to lock your **handlebar** in the correct position.

If any these are missing please contact us straight away on 01264 316100.

Pedals

Your pedals are "handed" with left hand (**LH**) and right hand (**RH**) threads and can only be fitted one way. First identify which pedal is LH and which is RH using the guide opposite if necessary.

The RH pedal should be attached to the RH side of the bike. ie the chainring side. This is a conventional RH thread. Tighten hard using a 15mm spanner (supplied).

The LH pedal is attached by screwing in the opposite direction. Again, tighten hard with the 15mm spanner.

Handlebar

Slacken the two horizontal screws shown with either 4mm or 5mm Allen hex key provided.


Once slack, twist the handlebar until it is straight and then retighten both screws to 7.2Nm.



LH thread pedal angled as shown.



RH thread pedal angled as shown.

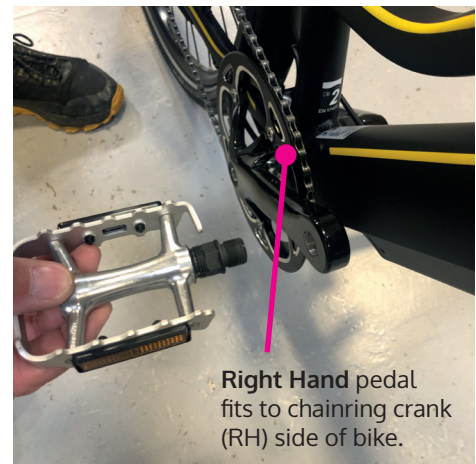

Scan QR code for 30 second video guide to straighten handlebar.