


Assembly Instructions

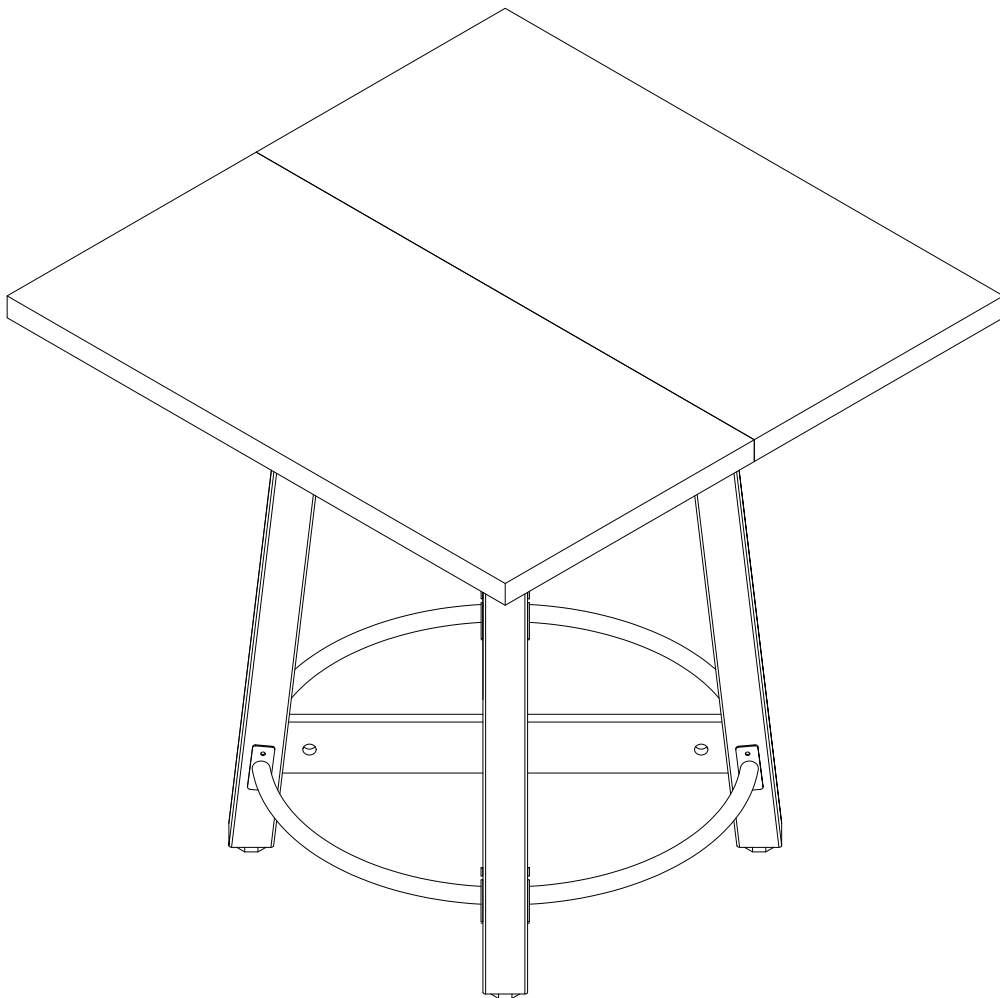

Dining Table

Model No.
HOGA-JW1217

Contact Us




We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

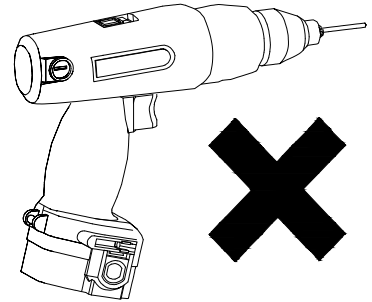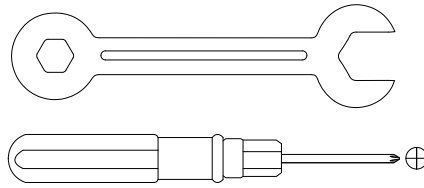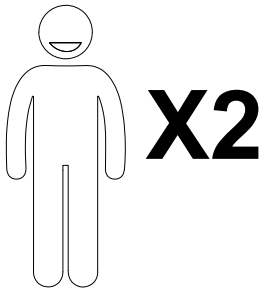



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

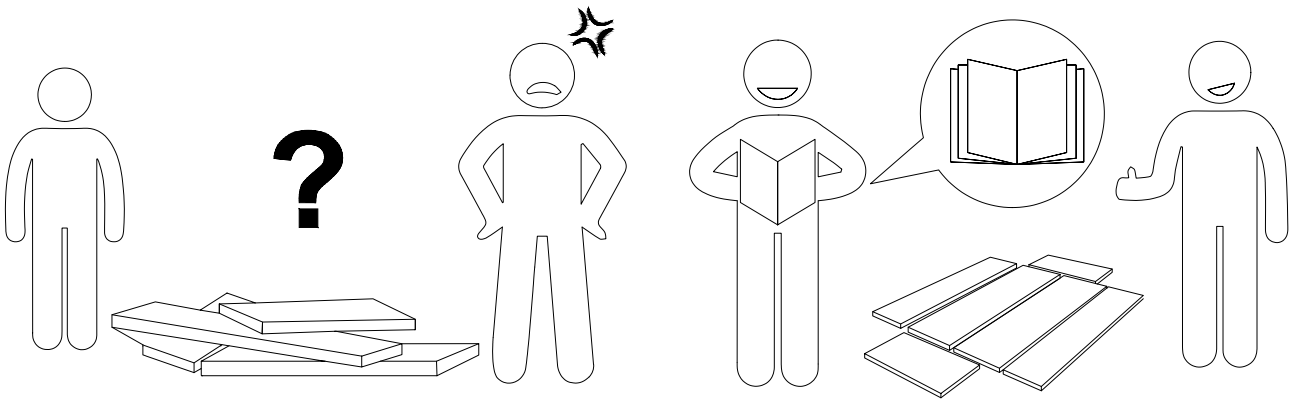

AVOID SCRATCHES

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.








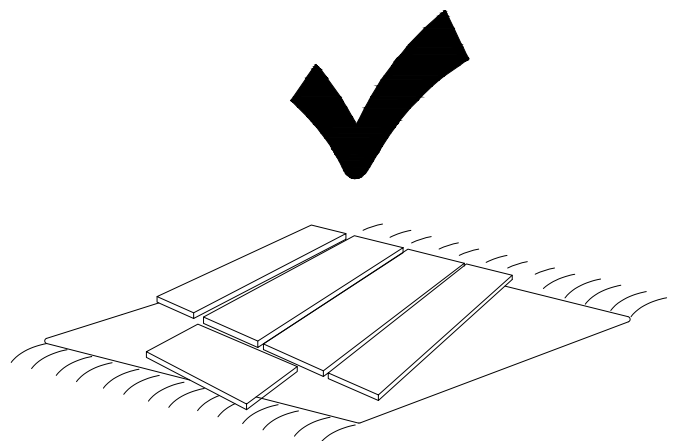
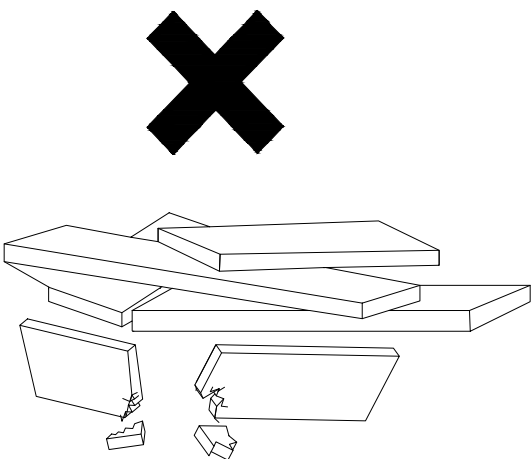


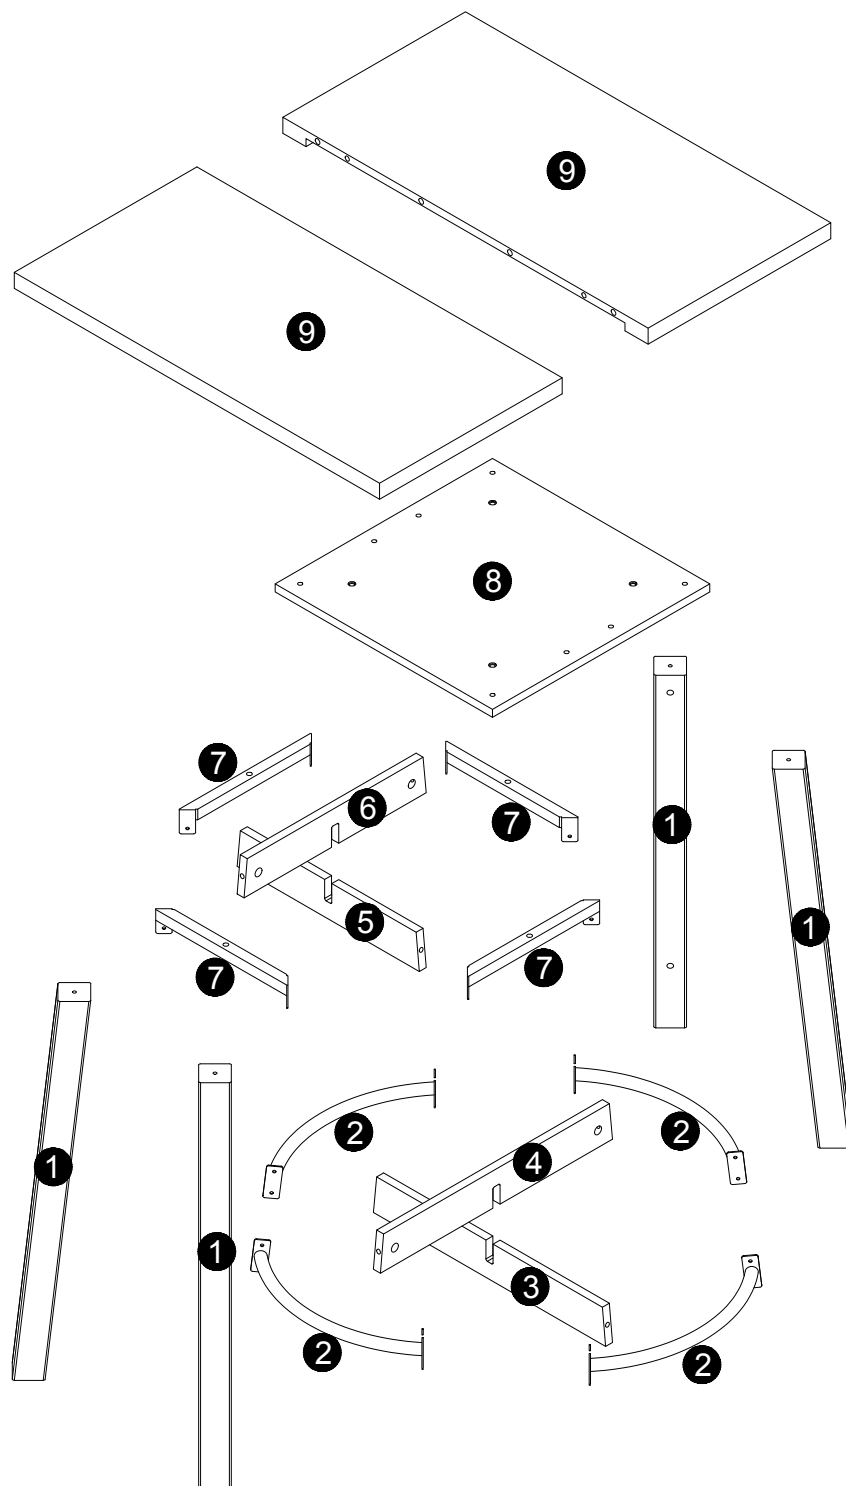







⚠ Caution






Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.





Parts List

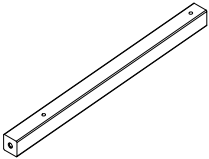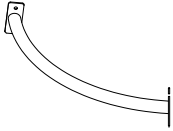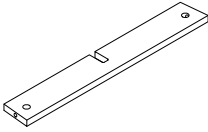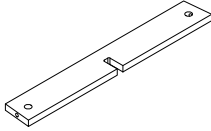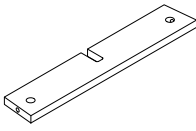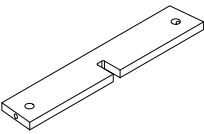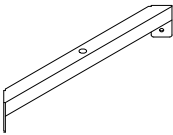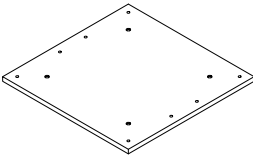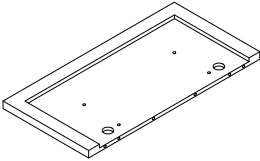1  4 pcs	2  4 pcs	3  1 pc	4  1 pc	5  1 pc
6  1 pc	7  4 pcs	8  1 pc	9  2 pcs	

Hardware List

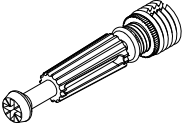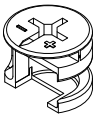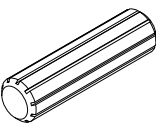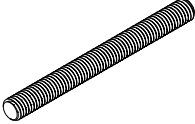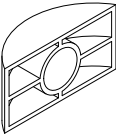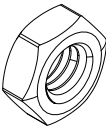A	B	C	D		E
 M6x35mm	 Ø15x12mm	 Ø8x30mm	D1	D2	 M6x95mm
				 M6	
8 pcs	8 pcs	4 pcs	4 pcs	4 pcs	2 pcs

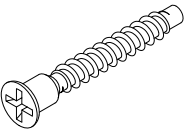F	G	H	I	J	
 Ø3.5x18mm	 M6x30mm	 M6x25mm	 Ø7x38mm	J1	J2
				 Ø3.5x14mm	
24 pcs	4 pcs	8pcs	4 pcs	4 pcs	2 pcs

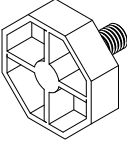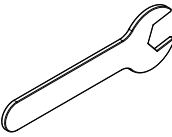

K	L	M			
 M8x18mm	 Ø50	 M6		 M4	
4pcs	4 pcs	2 pcs	1pc	1pc	

Installation of Cams and Pins


Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.




No gap

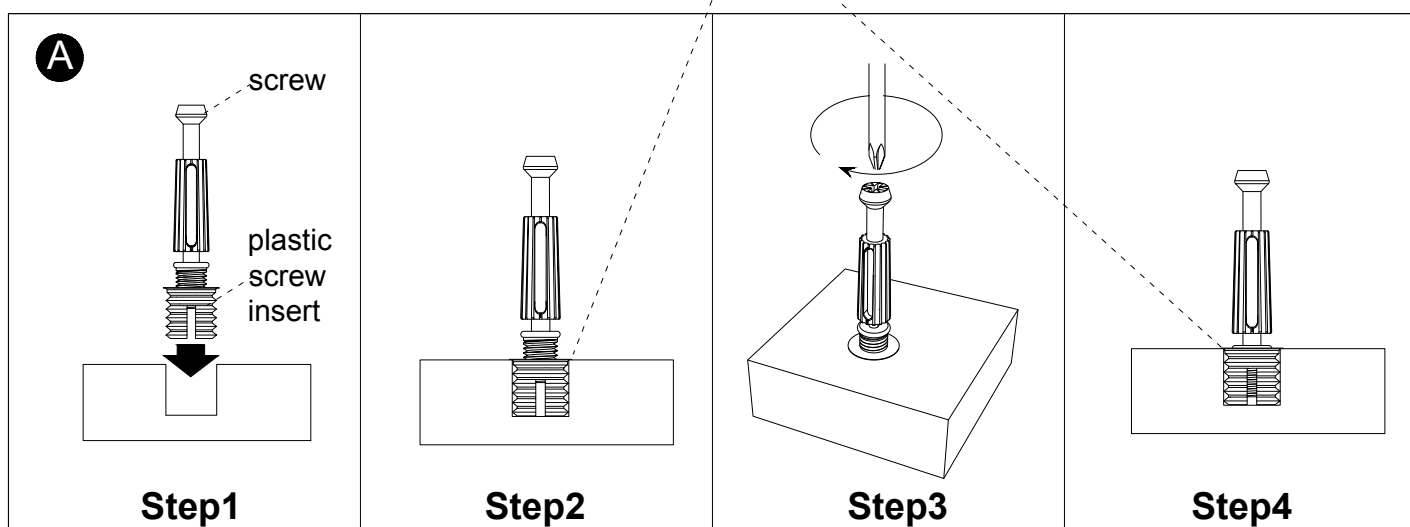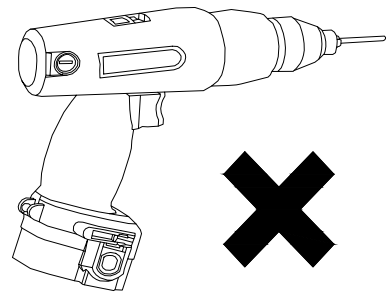

Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

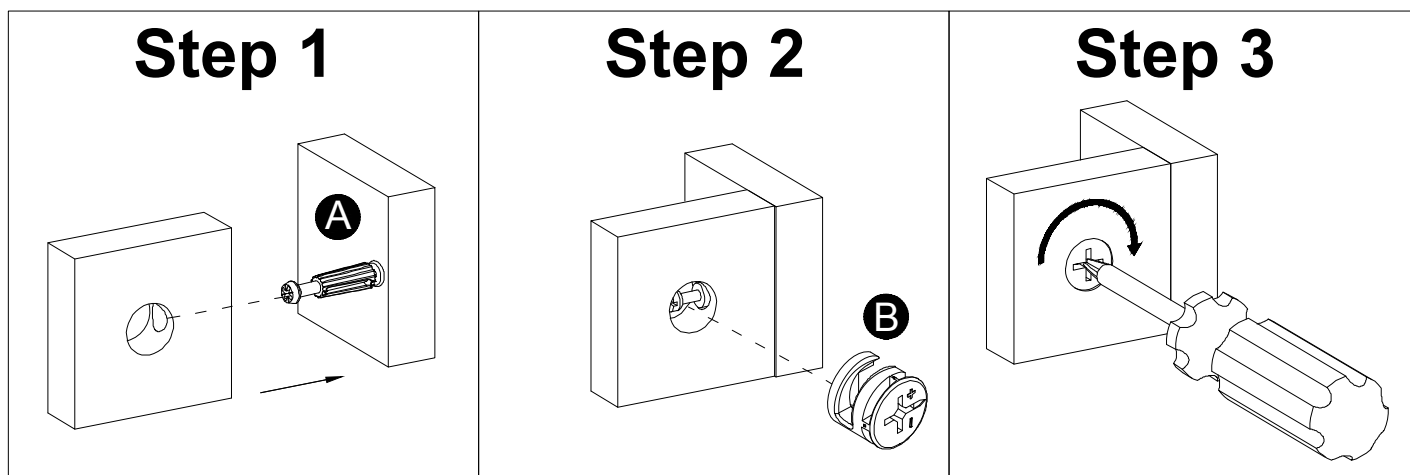


1

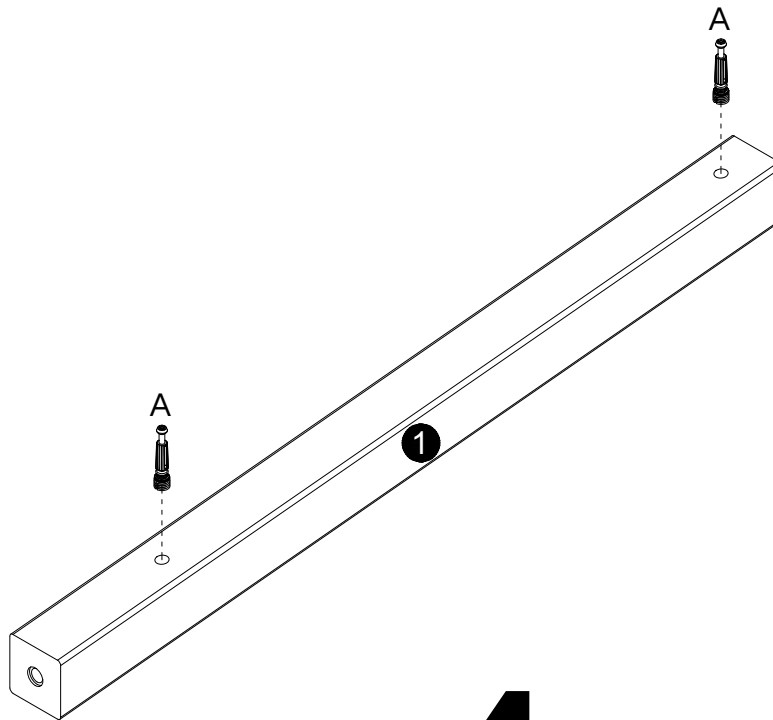



x4

A

M6x35mm
8 pcs

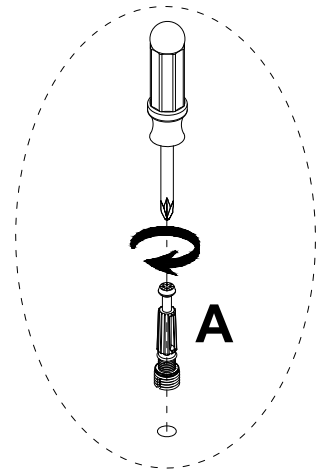


2

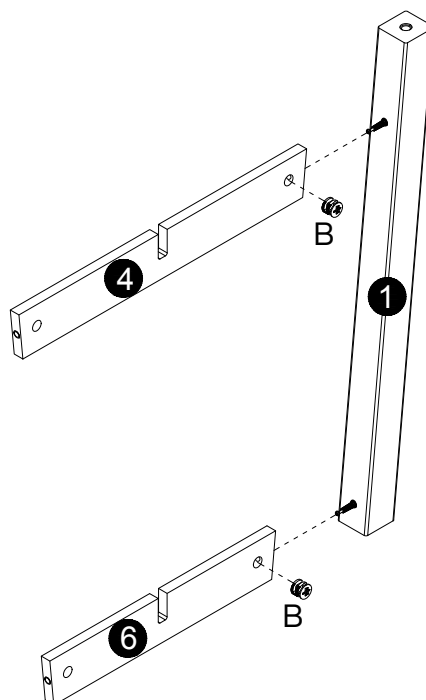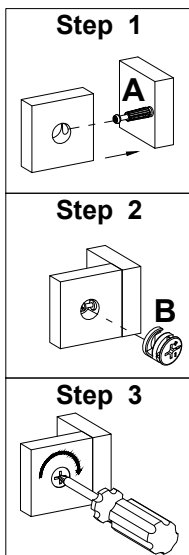


B

Ø15x12mm
2 pcs


3

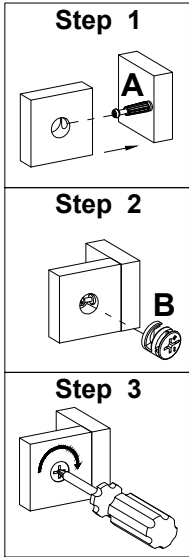



B
 Ø15x12mm 2 pcs

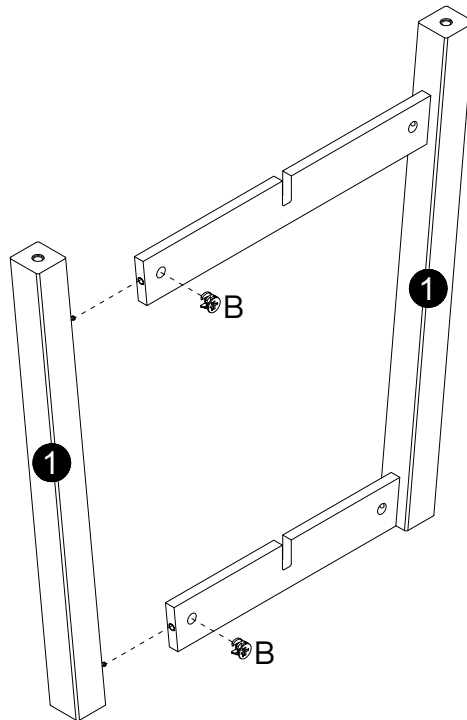

4

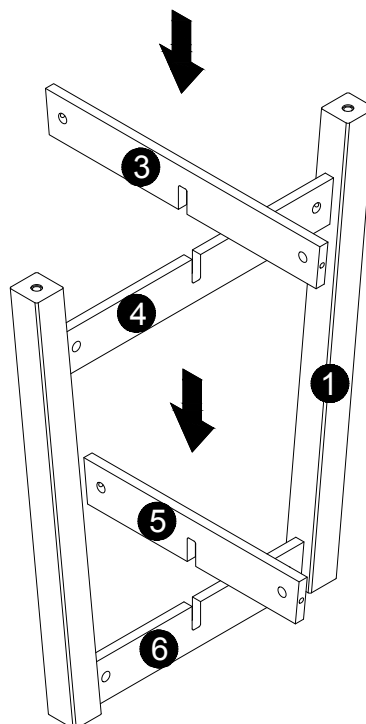



5

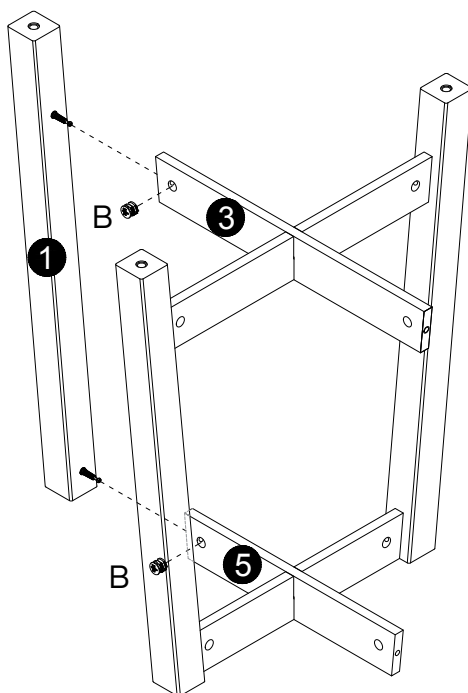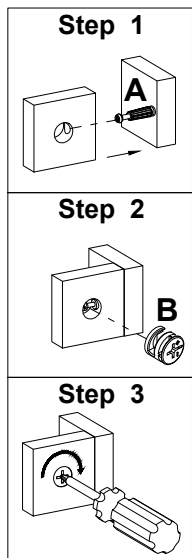

B

Ø15x12mm
2 pcs


6

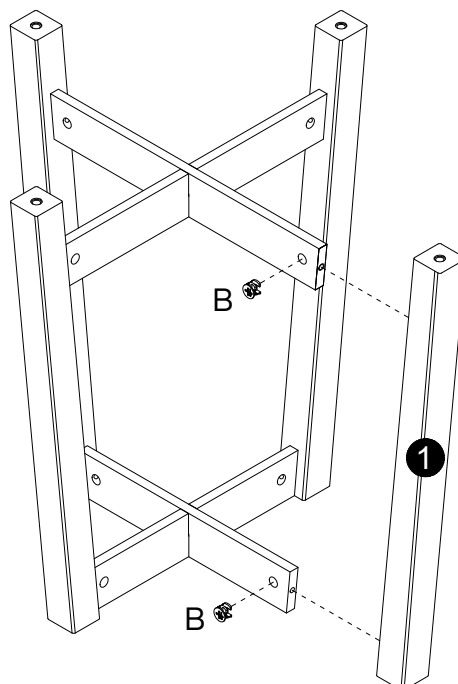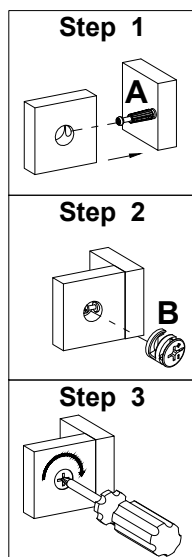




B

Ø15x12mm
2 pcs




7

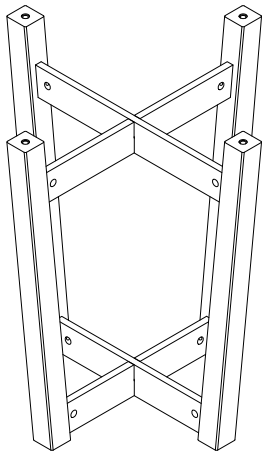


Rotate 180°

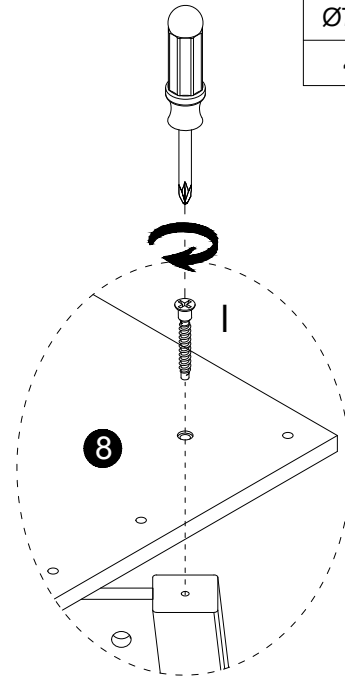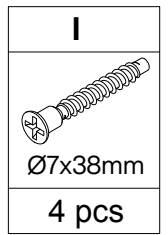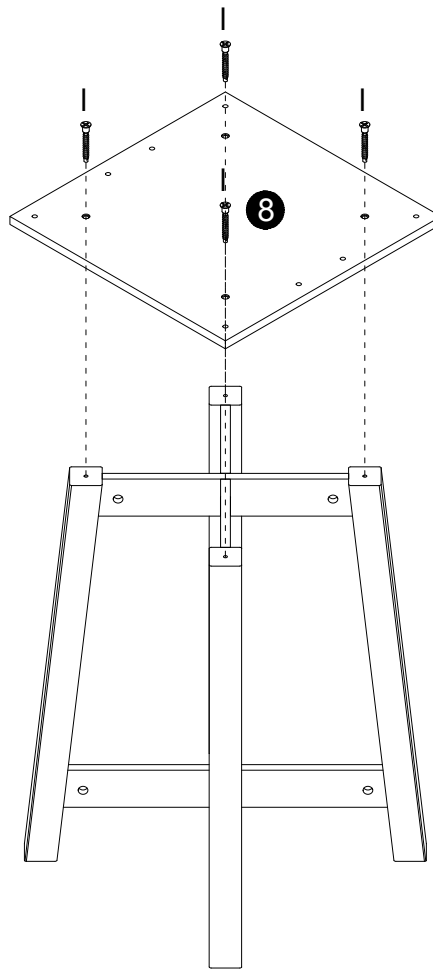


8

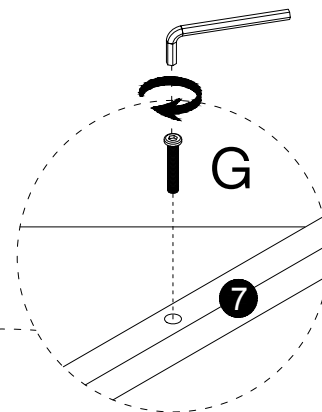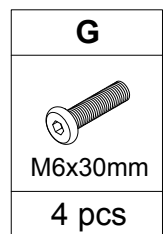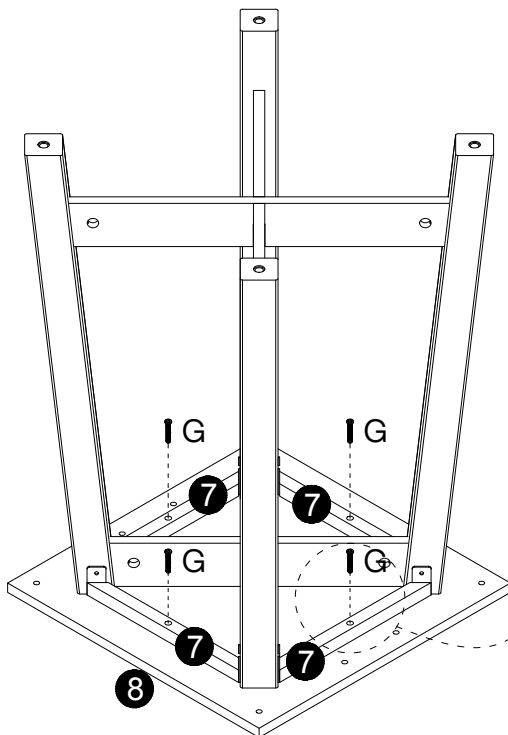




9

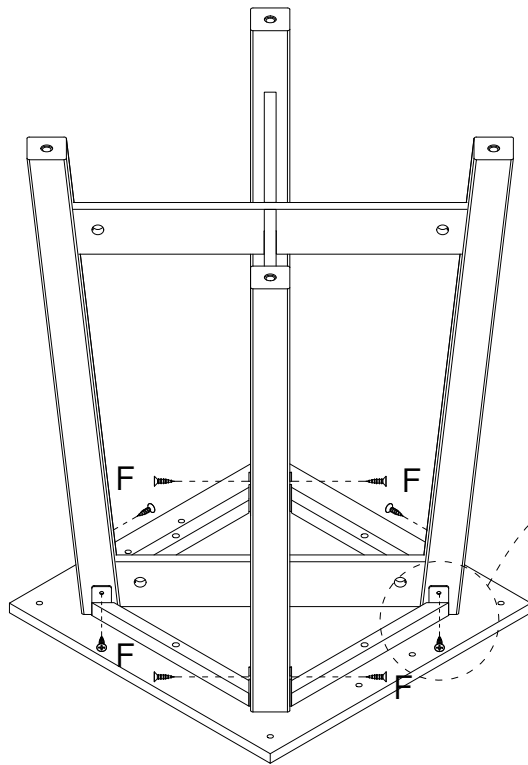

F

Ø3.5x18mm
8 pcs

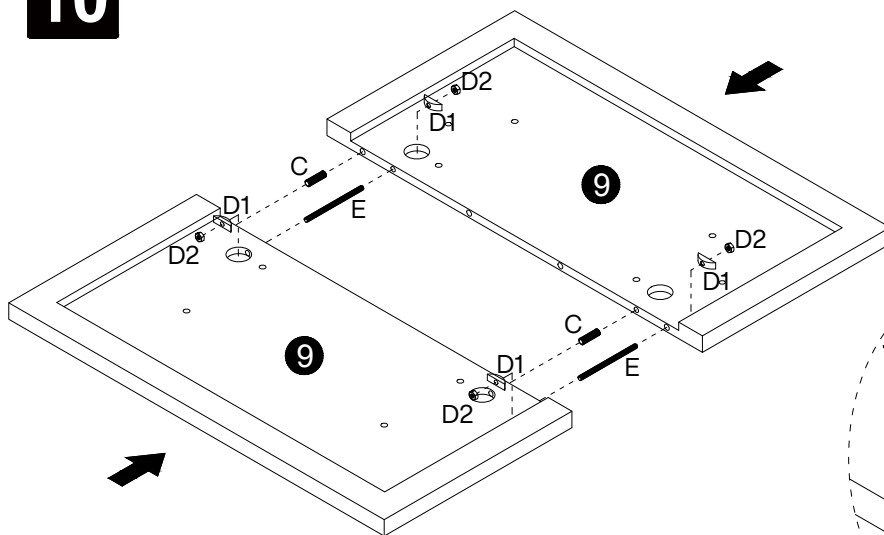10



D1	D2
	
4 pcs	4 pcs
C	E
	
Ø8x30mm	M6x95mm
4 pcs	2 pcs






Step 1

Step 2


Step 3

Step 4

Step 5

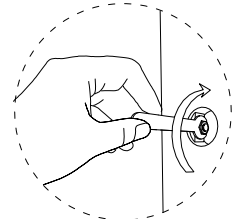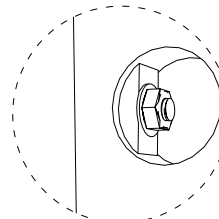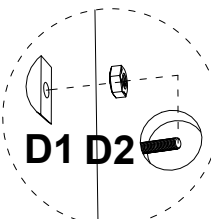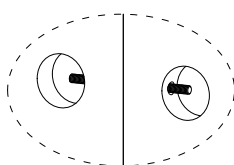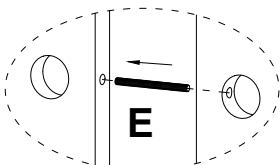


11

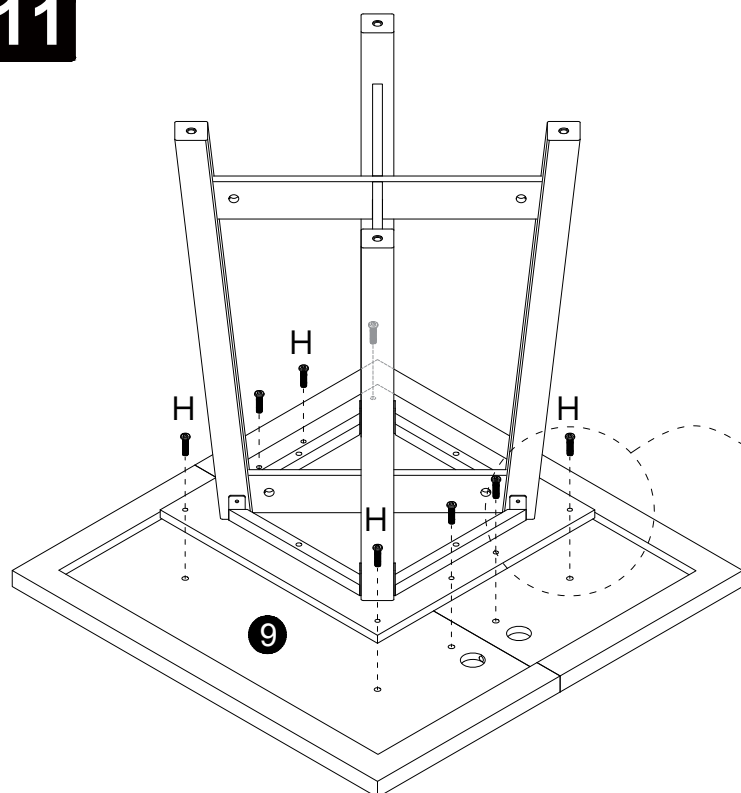



H

M6x25mm
8 pcs



12

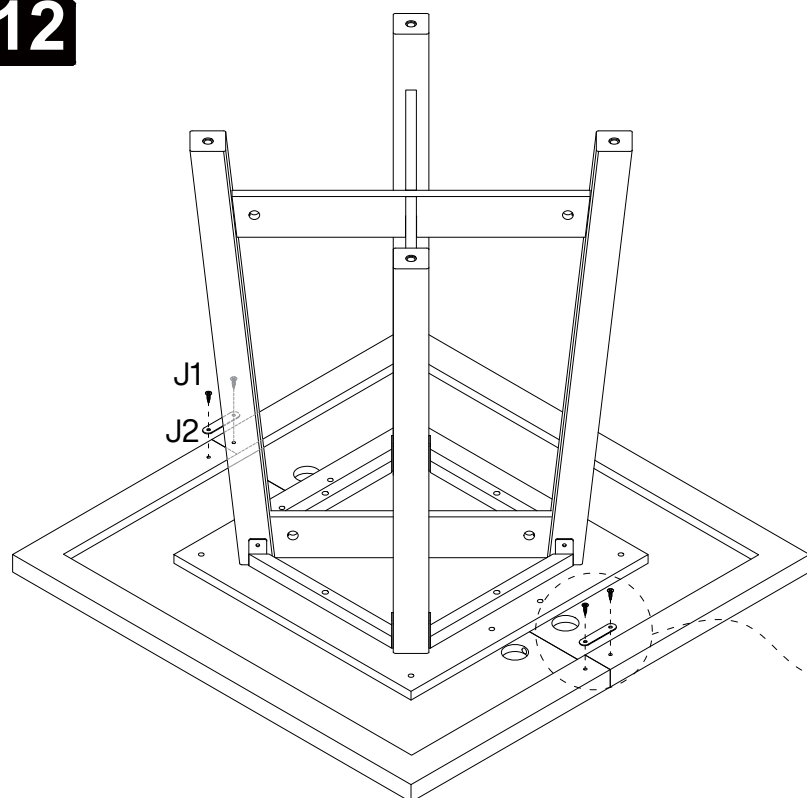


J1	J2
	
Ø3.5x14mm	
4 pcs	2 pcs


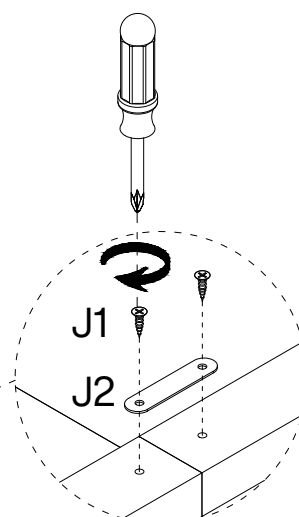


13

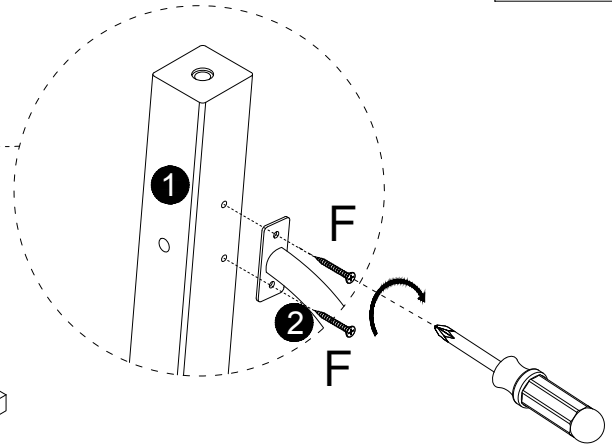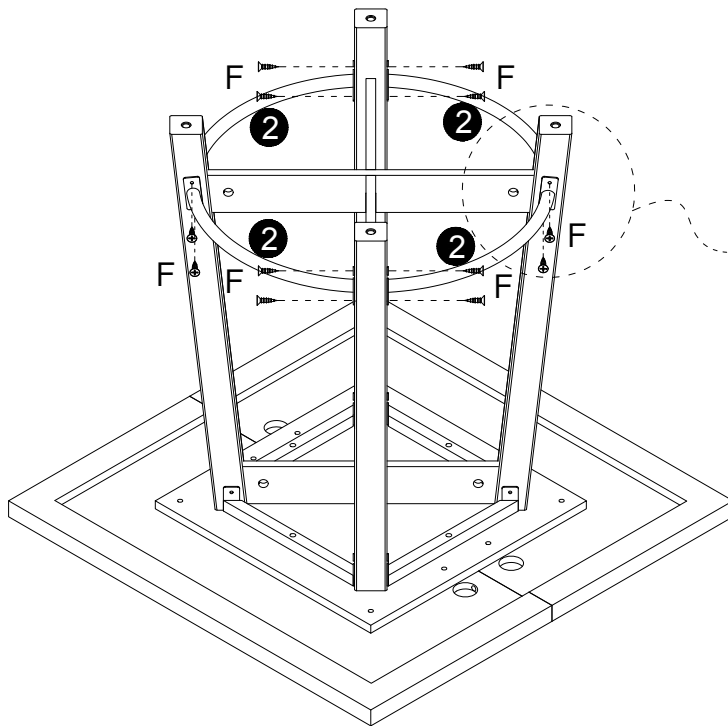

F

Ø3.5x18mm
16 pcs

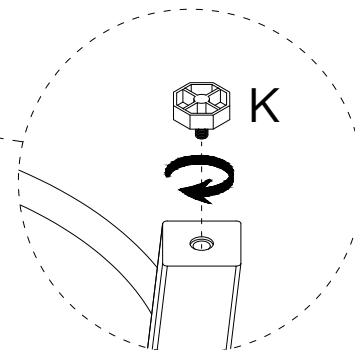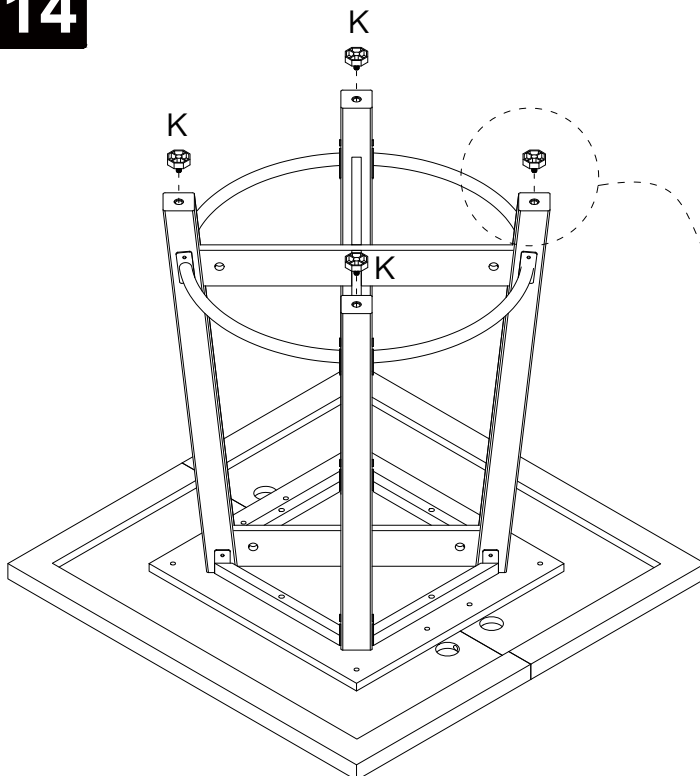14






K

M8x18mm
4 pcs

15

L

Ø50
4 pcs

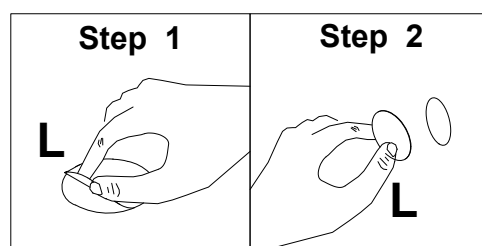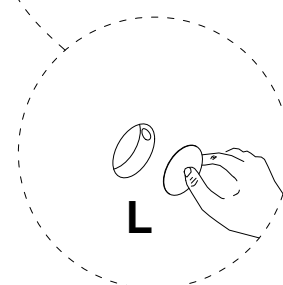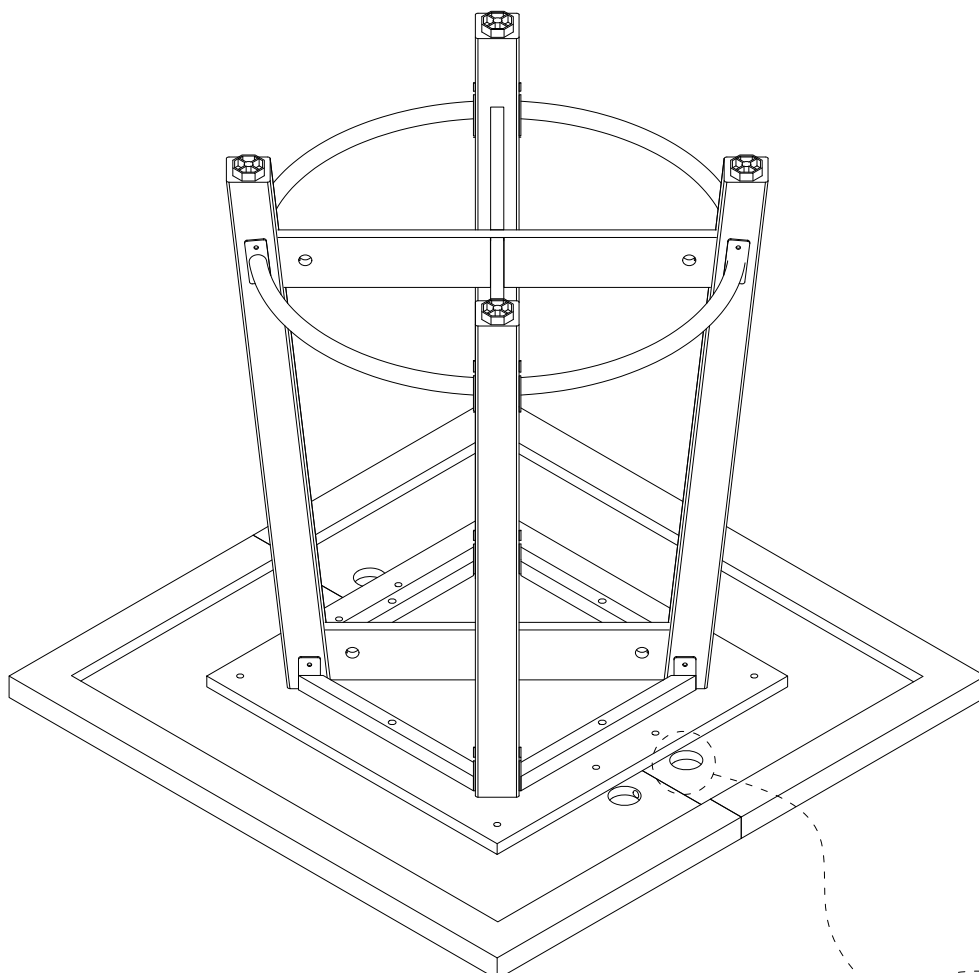

Thank you for your support !

