
ASSEMBLY INSTRUCTIONS FOR BED INSTALLATION

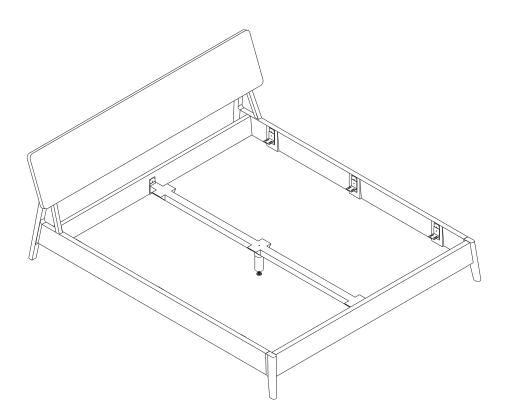

OAK AIR BED - WITHOUT SLATS

51211	OAK AIR BED - WITHOUT SLATS 180/200/95
51212	OAK AIR BED - WITHOUT SLATS 160/200/95



HARDWARE ENCLOSED



Bolt Connector (4pcs)



Screw Connector (4pcs)



Dowel



L Bracket



JCBC Screw M6x6 (8pcs)

TOOLS









(1pc)




JCBC Screw M6x20 (4pcs)

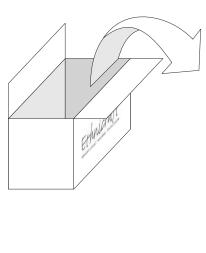




PARTS TO BE INSTALLED

- 1. SIDERAILS 2pcs
- 2. FOOTBOARD 1pc 3. HEADBOARD RAIL 1pc
- 4. HEADBOARD 1pc 5. CENTER SUPPORTS 1pc
- 6. CENTER LEG 1pc

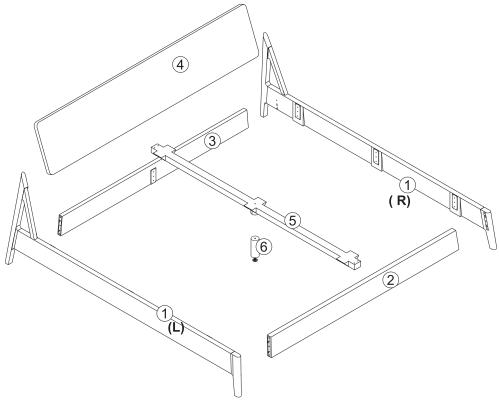

NOTICE



SYMBOLS



DIRECTION



NUMBER OF PERSONS NEEDED



USE L KEY TO TIGHTEN



USE RUBBER HAMMER




USE HAND




USE WRENCH TO TIGHTEN




A. INSTALLING SIDERAIL + FOOTBOARD + HEADBOARD RAIL

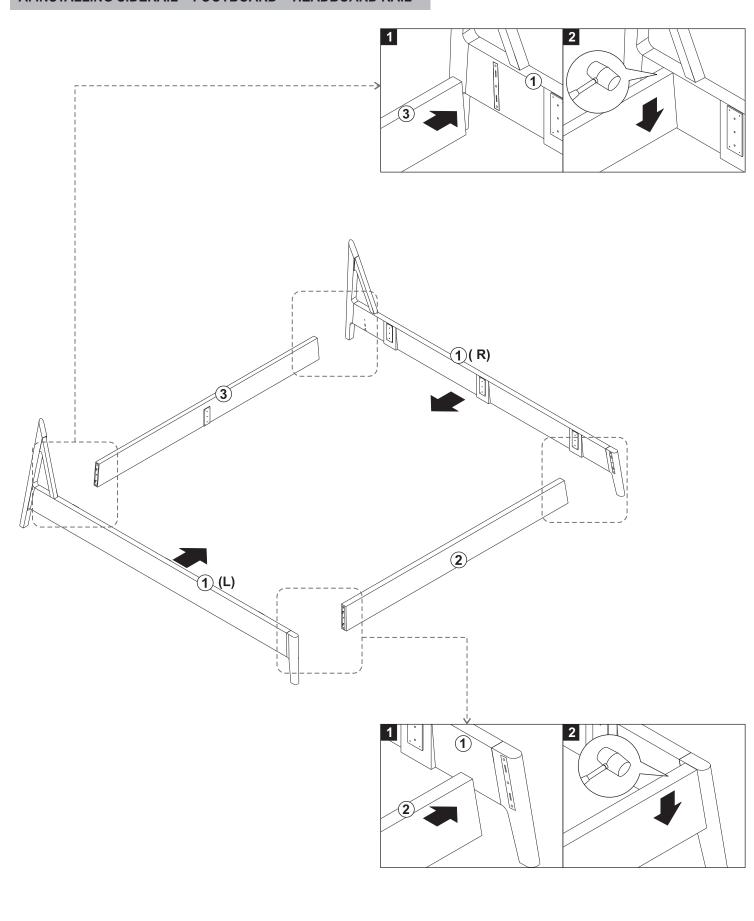

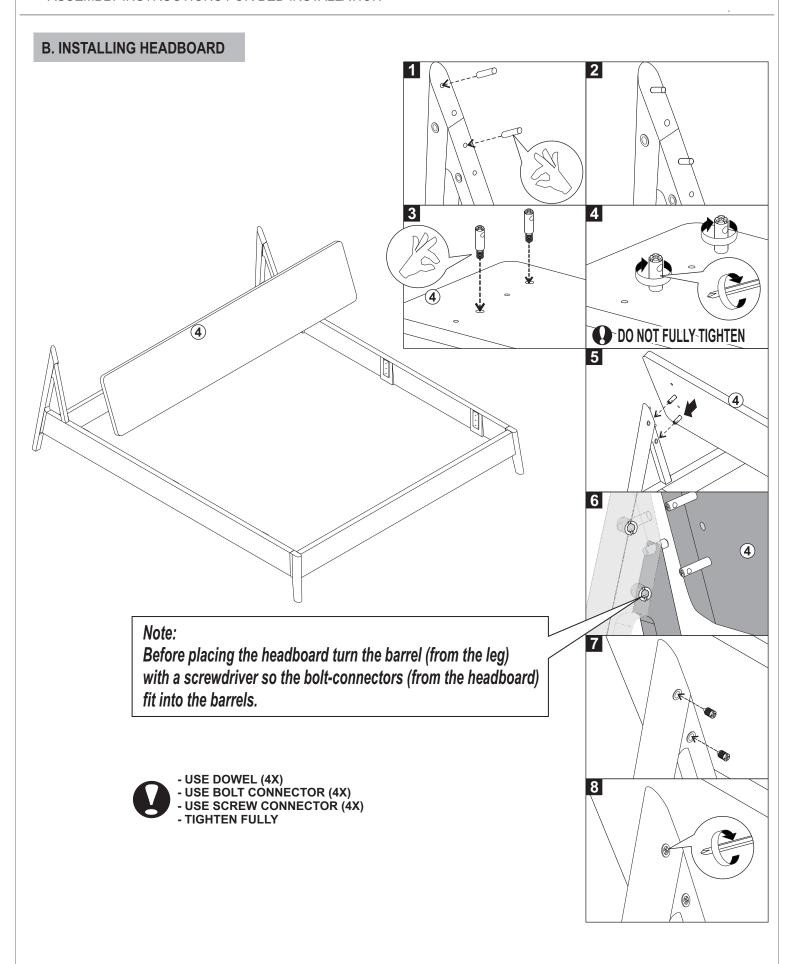




C. INSTALLING MIDDLE SUPPORT & CENTER LEG

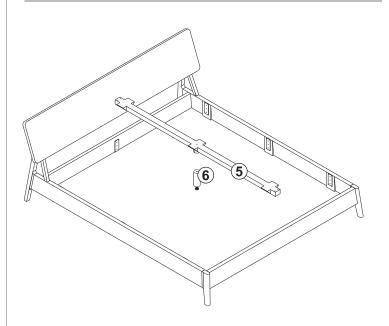





- USE JCBC SCREW M6x6mm (2X)
- USE COUNTERSUNK SCREW M6x50mm (1X)
- USE JCBC SCREW M6x20mm (4X)
- TIGHTEN FULLY ALL SCREWS

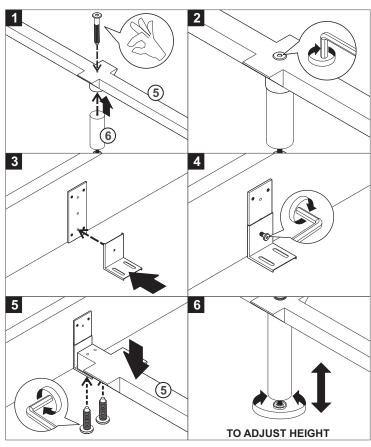

D. INSTALLING L BRACKET TO SIDE RAIL

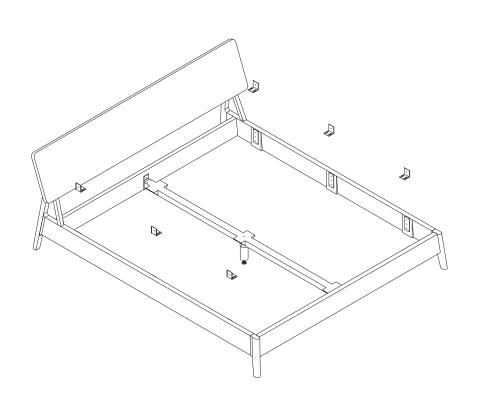

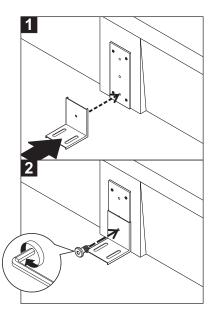



- USE JCBC SCREW M6x6mm (6X) - TIGHTEN FULLY ALL SCREWS