
Bathroom Vanity Installation



- Step1. Unpackage the vanity and place the base by your plumbing to be able to install your faucet and drain. At this point you can level the cabinet with the leg levelers
- Step2. Apply a bead of clear or white silicone sealant evenly along the top of the cabinet
- Step3.Place the vanity top onto the cabinet . Firmly apply pressure to the vanity top sealing it to the cabinet
- Step4. Apply silicone sealant evenly along the bottom of backs plash and wall
- Step5. Finally place the bottom side of backs plash with sealant onto the vanity top and check the alignment of back splash

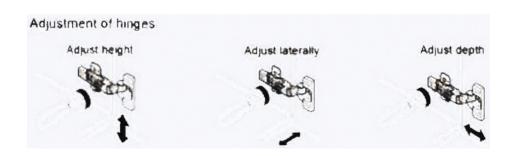

Technical Drawing

