



Assembly instructions


Bonn Solid wood bench

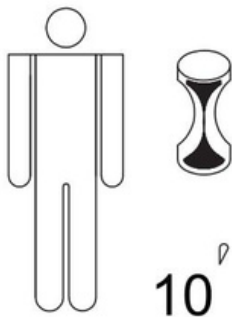

Screw set:

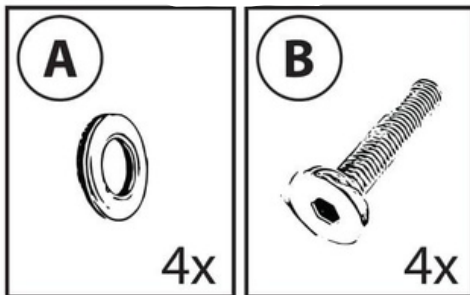

Please do not use an electric screwdriver!

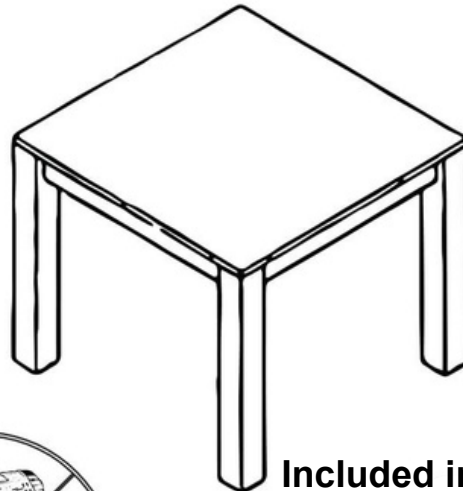

Included in delivery




Required assembly tools

The bench is mounted upside down:


1

Position bench legs

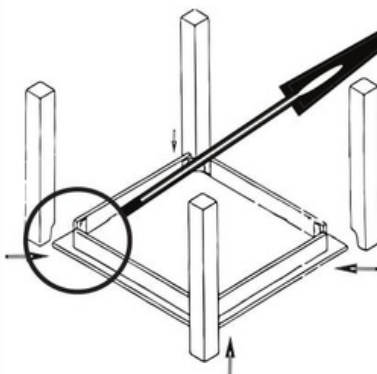

2

Mount each leg with screw and washer. Tighten the screw hand-tight.

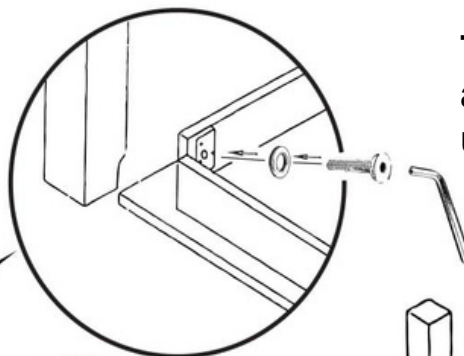

The legs can be adjusted in height up to 3mm

3

