




Assembly Diagram: 1068 - Kallax Stampin Up Punch Holder

Always dry fit first then use a suitable wood adhesive

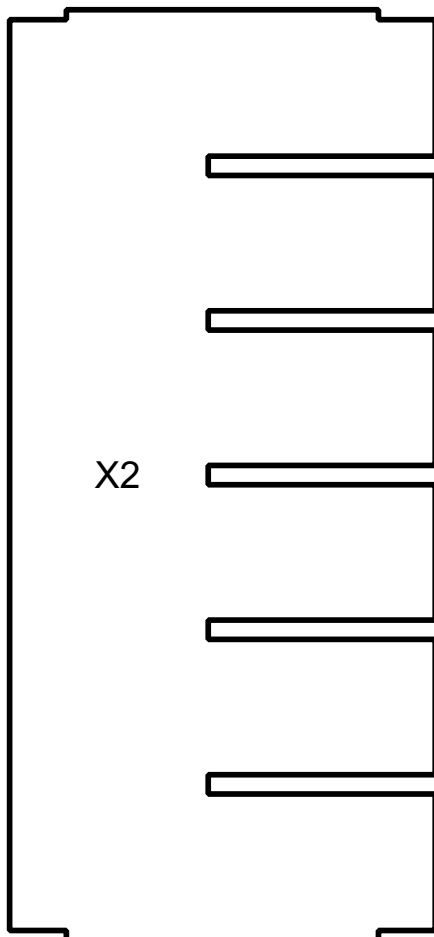

1.)

Start by forming the internal fixture first, this is done by easily sliding each of the bays together

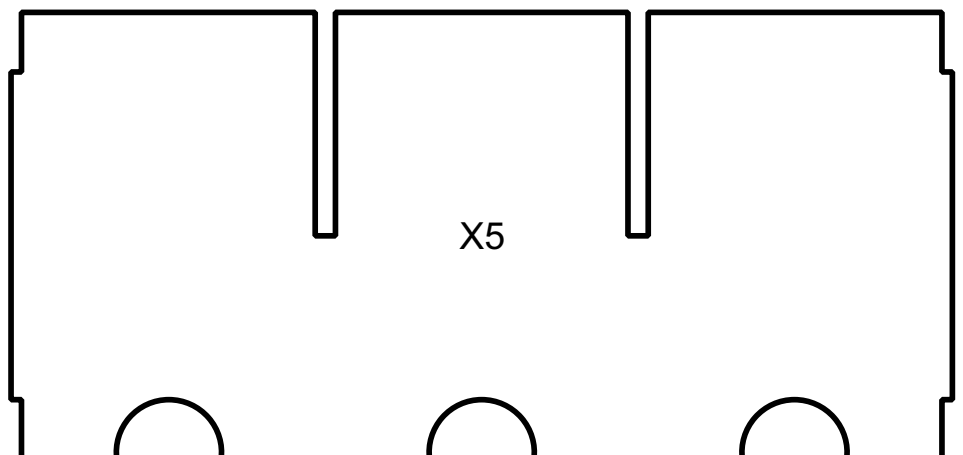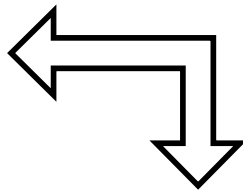

2.)

With the internal fixture complete place it and the back piece down on the rebates indicated at 1 and enclose the rest of the unit

