


Assembly Diagram: 804 - Kallax Drawer Unit (AA)

Always dry fit first then use a suitable wood adhesive

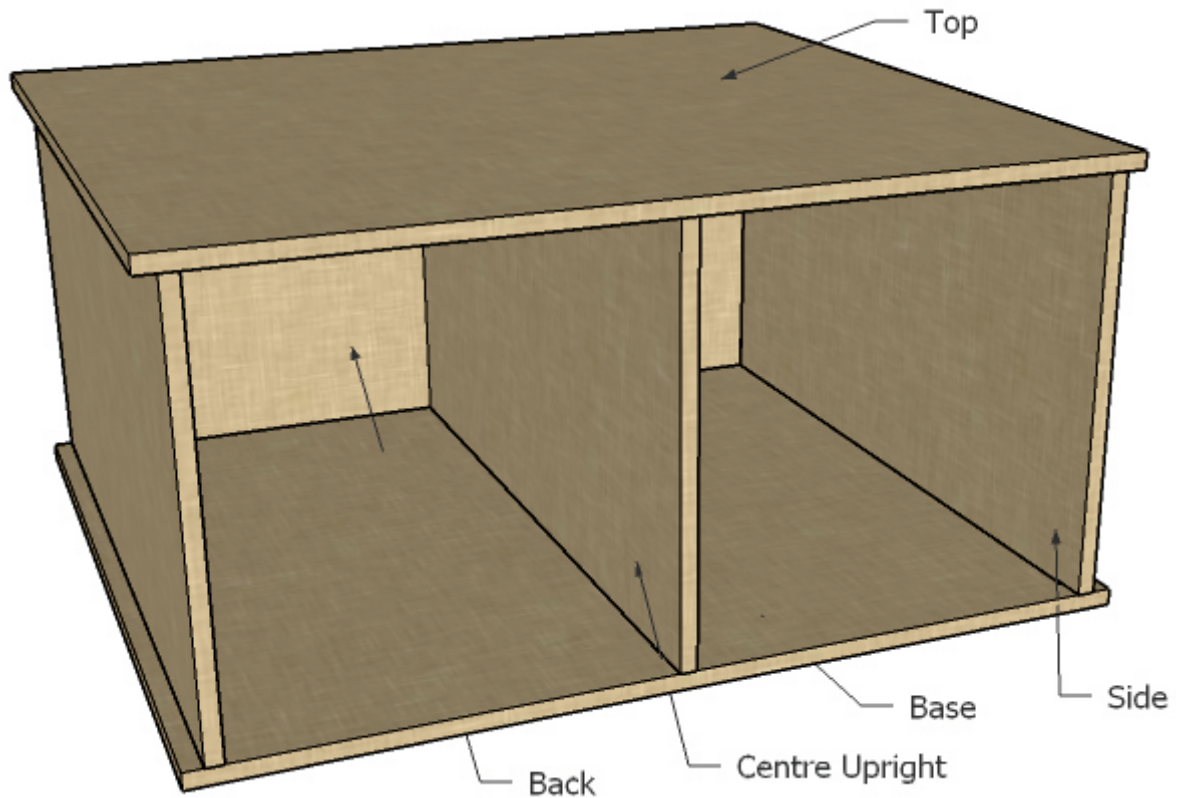

Fully assemble BEFORE painting!

